



# MG75 键盘用户手册

User Manual

Benutzerhandbuch

快速开始指南 ►

Quick Guide

# 感谢您购买及使用本产品

 


为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

## 产品概览

独立指示灯1	Caps	白光常亮
独立指示灯2	系统指示灯	MAC白光常亮/Win不亮灯
独立指示灯3	锁WIN	白光常亮

## 包装内容

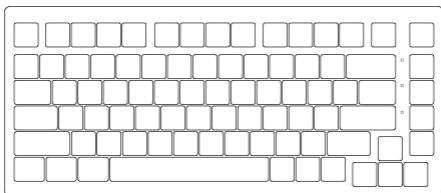


## 系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本

## 安装步骤

将键盘USB连接线插入电脑的USB接口即可开始使用。
 
## MG75组合键功能

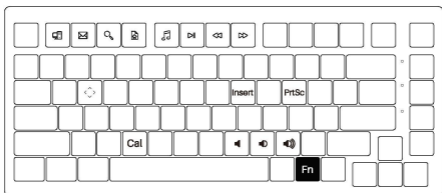


Fn+	F1	我的电脑
	F2	电子邮件
	F3	= Windows搜索
	F4	浏览器主页
	F5	多媒体播放器

Fn+	F6	播放 / 暂停
	F7	上一首
	F8	= 下一首
	I	Ins
	P	Print SCR

Fn+	C	计算器
	M	静音
	<	= 音量减小
	>	音量增加
	W	将WASD与 ↑↓←→键对调

## MG75系统功能 (Windows)

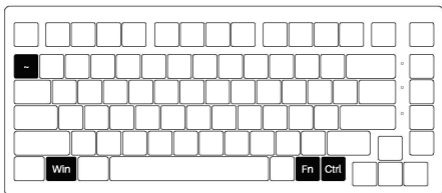 


<b>锁Win键</b>
Fn + 左Win

<b>恢复出厂设置</b>
长按 Fn + ~ 5秒

<b>切换成菜单键</b>
长按Fn + 右Ctrl 3秒

## MG75系统功能 (Mac)

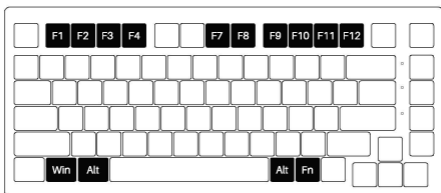 

F1 降低显示屏亮度

F2 增加显示屏亮度

F3 开放任务控制

F4 呼出Siri

F7 向后跳(音频)

F8 暂停/播放(音频)

F9 向前跳过(音频)

F10 静音

F11 调低音量

F12 调高音量

左Win Option

左Alt Command


右Alt Command

右Win Option

Fn + (F1 ~ F12)

F1 ~ F12

## MG75灯光调节

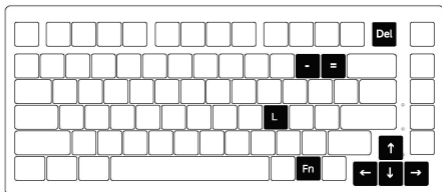 

FN+- 灯光速度变慢

FN+↑ 灯光变亮

FN+← 灯光方向向左

FN+= 灯光速度变快

FN+↓ 灯光变暗

FN+→ 灯光方向向右

FN+L 灯光关闭/开启

FN+DEL 光波 (默认)、涟漪、雨滴、蛇形、跟随、聚合、正弦波、彩泉涌动

单点灭、百花争艳、激光、峰回路转、多彩纵横、流水、流星、常亮、呼吸

## 按键/灯光自定义说明和调用说明

1. 键盘按键/灯光自定义可配合驱动进行
2. 键盘灯光可搭配驱动实现音乐律动

## MONSGEEK保修和服务声明

1. MONSGEEK为中国大陆的客户提供一个保修。对于其他地区，请联系您的卖家（MonsGeek分销商）以了解具体的保修政策。
2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，MonsGeek也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
3. 在未经制造商/卖方指示的情况下拆开键盘将立即导致保修无效
4. 官方售后服务时间为每周一至周五上午10:00至下午18:00，节假日以国家法定节日休息为准。
5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：[www.monsgeek.cn](http://www.monsgeek.cn)

产地：中国·深圳

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China



WARNING:  
Water and Beverages can't be  
poured into the keyboard.



中国制造/Made in China

**注意  
事项**

 
人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品，请按照电子产品保护方式爱惜使用。

To provide you with a better user experience, please read this manual carefully before using the product.

## LED Indicator

LED Indicator 1	<b>Caps</b>	Steady White
LED Indicator 2	<b>System Indicator</b>	Mac OSX (Steady White) / Windows (OFF)
LED Indicator 3	<b>Lock Win</b>	Steady White

## Packing List

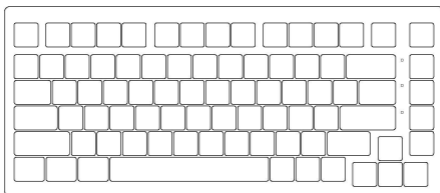


## System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version

## Connectivity Method

Connect the keyboard to your computer by plugging in the USB cable into an available USB port to start using it.
 
## MG75 HotKeys

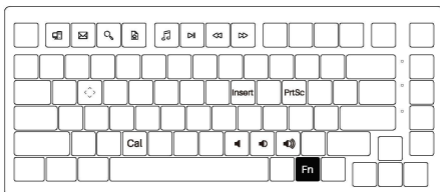


Fn+	F1	=	My Computer
	F2		E-mail
	F3		Windows Search
	F4		Browser Homepage
	F5		Multimedia Player

Fn+	F6	=	Play/Pause
	F7		Previous Song
	F8		Next Song
	I		Ins
	P		Print SCR

Fn+	C	=	Calculator
	M		Mute
	<		Decrease Volume
	>		Increase Volume
	W		Swap WASD with ↑ ↓ ← →

## MG75 System Commands (Windows)

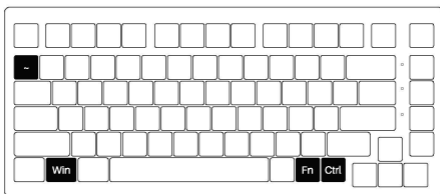 

### Lock Win key

Press Fn  
and left Win key

 
### Restore Factory Settings

Hold down Fn  
and ~ key for 5s

### Evert Ctrl into Menu (APP) Key (Memorable)


Hold down Fn  
and right Ctrl key for 3s

## MG75 System Commands (Mac)

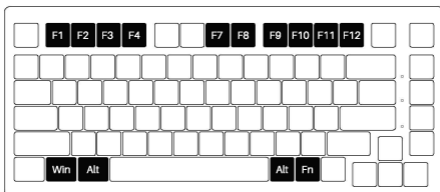

F1	Decrease display brightness	F7	Skip back (Audio)	F11	Volume down
F2	Increase display brightness	F8	Pause/Play (Audio)	F12	Volume up
F3	Open mission control	F9	Skip forward (Audio)	Left Win	Option
F4	Activate Siri	F10	Mute	Left Alt	Command
Right Alt	Command	<b>Fn + (F1 ~ F12)</b>			
Right Win	Option	F1 ~ F12			

## MG75 Backlight Settings

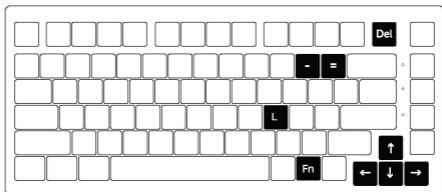 

FN+-	Slower Animation	FN+ ↑	Bright	FN+←	Set Animation Direction to Left
FN+=	Faster Animation	FN+ ↓	Dim	FN+→	Set Animation Direction to Right
FN+L	Light On / Off				

FN+Del 17 different lighting effects will be changed:

Wave (default) \ Ripple \ Raindrop \ Serpentine \ Effect A \ Effect B \ Effect C \ Effect D \ Effect E \ Effect F \ Effect G \ Effect H \ Effect I \ Effect J \ Effect K \ Effect L \ Effect M



## Customization Instruction

1. The key/ lighting effects customization can be programmed with MonsGeek Cloud Driver.
2. The lighting effects can also achieve music rhythm effects with MonsGeek driver.
3. Please visit [mongsgeek.com/download/](https://mongsgeek.com/download/) to download the driver.

## MONSGEEK Warranty and Service Statement

1. MONSGEEK provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (MonsGeek distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. MONSGEEK will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Company: Shenzhen Yinchon Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: [www.mongsgeek.com](http://www.mongsgeek.com)

Origin: Shenzhen, China



**WARNING:**  
Water and beverages can't be  
poured into the Keyboard.



中国制造/Made in China

### Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.

