

## CONNECTED

# SMART FOUR

 
## User Manual

Read this manual carefully before use, and retain it for future reference

### Introduction

Smart Four Connected is an AI featured 3D board game. With the integrated referee, the board records your moves and gives flashing indications where the goal is reach. You can fire up a head to head competition, challenge against the infused robot or play the mini game designed unique to the board. Connect with the SmartFour app, users can play against the adaptive AI and improve from the advanced stats, battle with players from around the world!

### In the Box

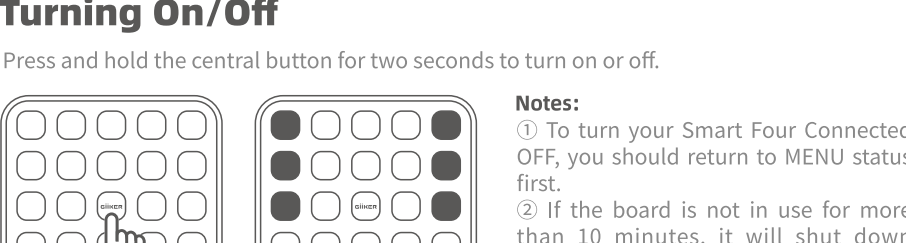

### Specifications

<b>Name</b>	Smart Four Connected	<b>Model</b>	JKSZQ001
<b>Material</b>	ABS	<b>Ages</b>	6 years+
<b>Packing Weight</b>	approx. 1.5 kg	<b>Board Dimensions</b>	245*245*28.5mm
<b>Battery Type</b>	3.7V lithium battery	<b>Capacity</b>	500 mAh
<b>Wireless Connection</b>	Bluetooth 4.0	<b>Rating</b>	5V=1A
<b>Charging Time</b>	approx. 1.5 hours	<b>Working Hours</b>	approx. 9 hours*

\* The working hours were tested playing the Connect Four game offline continuously in a lab environment, and should be taken as a reference only.

### Turning On/Off

Press and hold the central button for two seconds to turn on or off.



**Notes:**  
 ① To turn your Smart Four Connected OFF, you should return to MENU status first.  
 ② If the board is not in use for more than 10 minutes, it will shut down automatically.

### Charging the Board


Make sure the battery is fully charged before each use, it takes approximately 90 minutes. Charge the board when not in use. The central button blinks slowly to indicate charging and becomes solid when fully charged.



**Notes:**  
 ① The USB charger is not included in the package.  
 ② Only use the provided charging cable to charge the board.  
 ③ If the board prompts low power, please charge it as soon as possible.


### Menu

The Smart Four Connected has two built-in games: Connect Four and Lights Out. There are seven lighten up buttons in MENU status to indicate different game modes and difficulty levels. You can press the corresponding button to start a game.

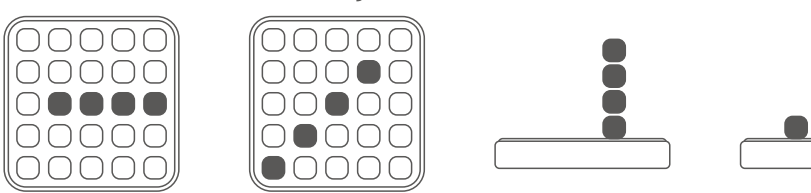


### Mute Settings

Press and hold ANY corner button for two seconds in MENU status, you should notice four corner buttons blink twice to indicate setting successful.

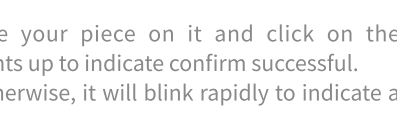

### Connect Four

**How to win**  
 Connect four in a row in any direction!

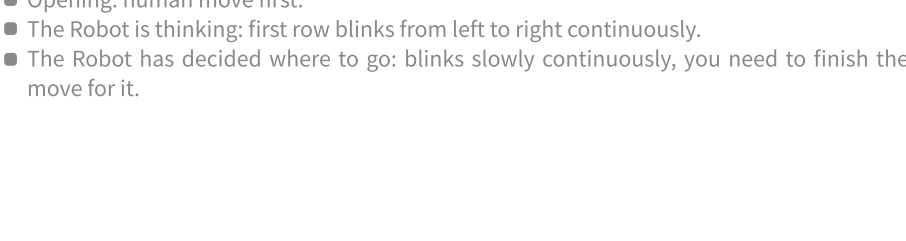

**How to play**  
 ■ Choose piece color and move in turn.  
 ■ When you have decided where to go, place your piece on it and click on the corresponding button to confirm. The button lights up to indicate confirm successful.  
 ■ Up to 5 pieces can be placed on one button. Otherwise, it will blink rapidly to indicate a wrong move.  
 ■ The board will record each move and flash where the goal is reached.

### Head to Head Mode

■ Opening: either party can move first.


### Robot Mode

■ Opening: human move first.  
 ■ The Robot is thinking: first row blinks from left to right continuously.  
 ■ The Robot has decided where to go: blinks slowly continuously, you need to finish the move for it.

### Lights Out

**How to win**  
 Turn off all the lights!

**How to play**  
 ■ Clicking on a button will toggle its state and adjacent buttons' state: lights that are on turn off, and lights that are off turn on.  
 ■ The inner circle buttons will blink twice quickly to indicate level passed.

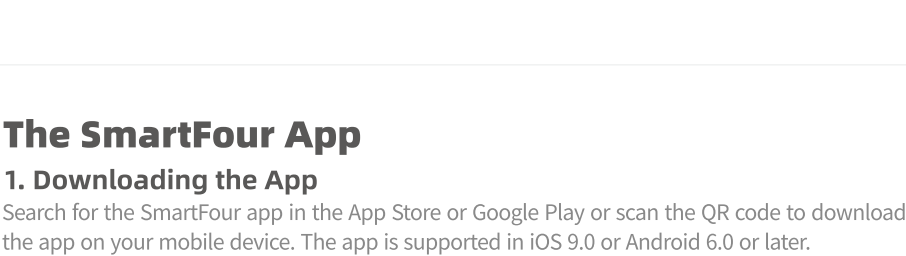

### Exit the Game

 
To exit the game and return to MENU status, you should press and hold the central button for two seconds.

### The SmartFour App

**1. Downloading the App**  
 Search for the SmartFour app in the App Store or Google Play or scan the QR code to download the app on your mobile device. The app is supported in iOS 9.0 or Android 6.0 or later.



**2. Connecting to the App**  
 ① Turn on your Smart Four Connected and stay in the MENU status.  
 ② Then launch the SmartFour app and click the Bluetooth logo in the homepage to connect.  
 ③ The board shows solid diamond pattern to indicate connecting successful.

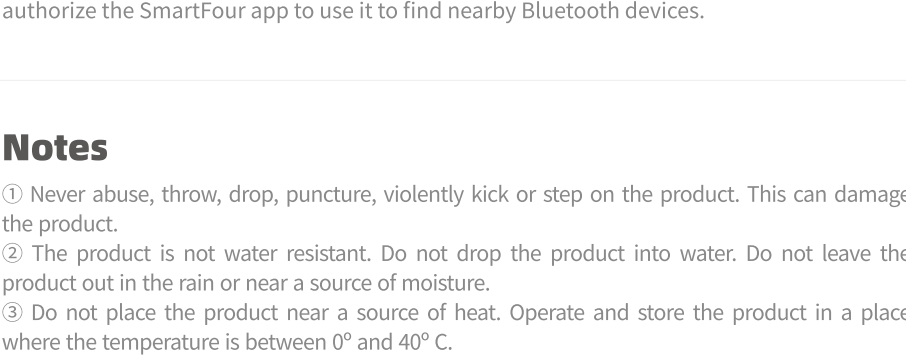

**Notes:**  
 ① The Smart Four Connected is only discoverable when it is in MENU status. Be sure to exit game mode and return to MENU status before connecting to app.  
 ② If you are using an Android device, you might need to enable location service and authorize the SmartFour app to use it to find nearby Bluetooth devices.

### Notes

- Never abuse, throw, drop, puncture, violently kick or step on the product. This can damage the product.
  - The product is not water resistant. Do not drop the product into water. Do not leave the product out in the rain or near a source of moisture.
  - Do not place the product near a source of heat. Operate and store the product in a place where the temperature is between 0° and 40° C.
  - Discharge and charge the battery completely once every 3 months to keep it in good condition.
  - Examine the charger regularly for damage to the cord, plug, enclosure or other parts. Never use a damaged charger or power adapter.
  - Do not charge the battery near inflammable materials or on an inflammable surface (carpet, wooden flooring, wooden furniture, etc.) or construction surface. Do not leave the product unattended during charging.
  - Batteries are only to be charged under adult supervision.
  - Do not cover your product or its charger while the battery is charging.
  - Disconnect the charger when you are not charging the battery.
  - Clean only with dry cloth.
  - Read the user manual and keep it for future use.
- WARNING: Choking Hazards. Not for children under 3 years of age.**

### FAQ

- Q1: What should I do if the board cannot be turned on?**  
 The board may be out of power. Please fully charge the battery, it takes approximately 1.5 hours. You can connect it to the SmartFour app to check battery level.
- Q2: What should I do if the board cannot be charged?**  
 ① Check if the charging cable and power adapter are working properly.  
 ② ONLY use the provided USB type-C charging cable and be sure that it is in good contact with the charging port.  
 ③ When the battery is exhausted, you need to charge it for a few minutes before you can reactivate it.
- Q3: What should I do if the app cannot find my board?**  
 ① Check if the board is in MENU status when connecting to app.  
 ② Be sure that your board is closed to the device you want to connect.  
 ③ Turn off the Bluetooth and back on to make sure it is working properly.  
 ④ For Android devices, check if the location service is enabled.  
 ⑤ Keep away from other wireless devices which might lead to wireless interference.  
 ⑥ Try on other smartphones or tablets.

### Limited Warranty

GIKER warrants that your GIKER hardware product ("the Product") will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase ("the Warranty Period"). If a defect in the Product arises under normal and intended use within the Warranty Period, please contact the authorized GIKER dealer in your country. The authorized GIKER dealer in your country will, at its option and subject to applicable laws, replace or repair the Product with new or reconditioned parts.

This warranty is only valid to the original retail purchaser, accompanied by a receipt or proof of purchase. GIKER does not warrant that the operation of the Product will be uninterrupted or error-free. This Warranty does not apply to: a) Products you purchase from unauthorized dealer; b) Defects in consumables, such as protective coatings designed to diminish over time; c) Defects caused by misuse or failure to follow the product directions, improper installation; product alteration or modification; improper or unauthorized repair; d) Defects caused by accidents, neglect, fire, water, lightning, or other acts of nature; incorrect electrical line voltage, fluctuations or surges; e) Normal wear and tear or otherwise due to the normal aging, other causes beyond GIKER's reasonable control.

### Statements

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by GIKER is under license.  
 Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.  
 Google Play is a trademark of Google Inc.  
 GIKER and the GIKER logo are registered trademarks of GIKER Limited; All other trademarks mentioned in this manual are the property of their respective owners.

### Declaration of Conformity

GIKER Technology Co., Ltd. declares that this product is in compliance with the relevant requirements of Directive 2014/53/EU. This declaration of conformity is published on our website [www.giiker.cn/compliance](http://www.giiker.cn/compliance).

### EUROPEAN UNION-DISPOSAL INFORMATION

The symbol above means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Keep these instructions for future reference as they contain important information.

### TECHNICAL SPECIFICATION

- frequency band(s) in which the radio equipment operates: 2402-2480 MHz.
- maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: <10 dBm.

### BATTERY INFORMATION

Each product has a Lithium-ion battery. Attempting to remove the battery will void the warranty and may result in injury. Protect the environment by not disposing of this product with household waste. Check your local authority for recycling advice and facilities.

