




Cupboard

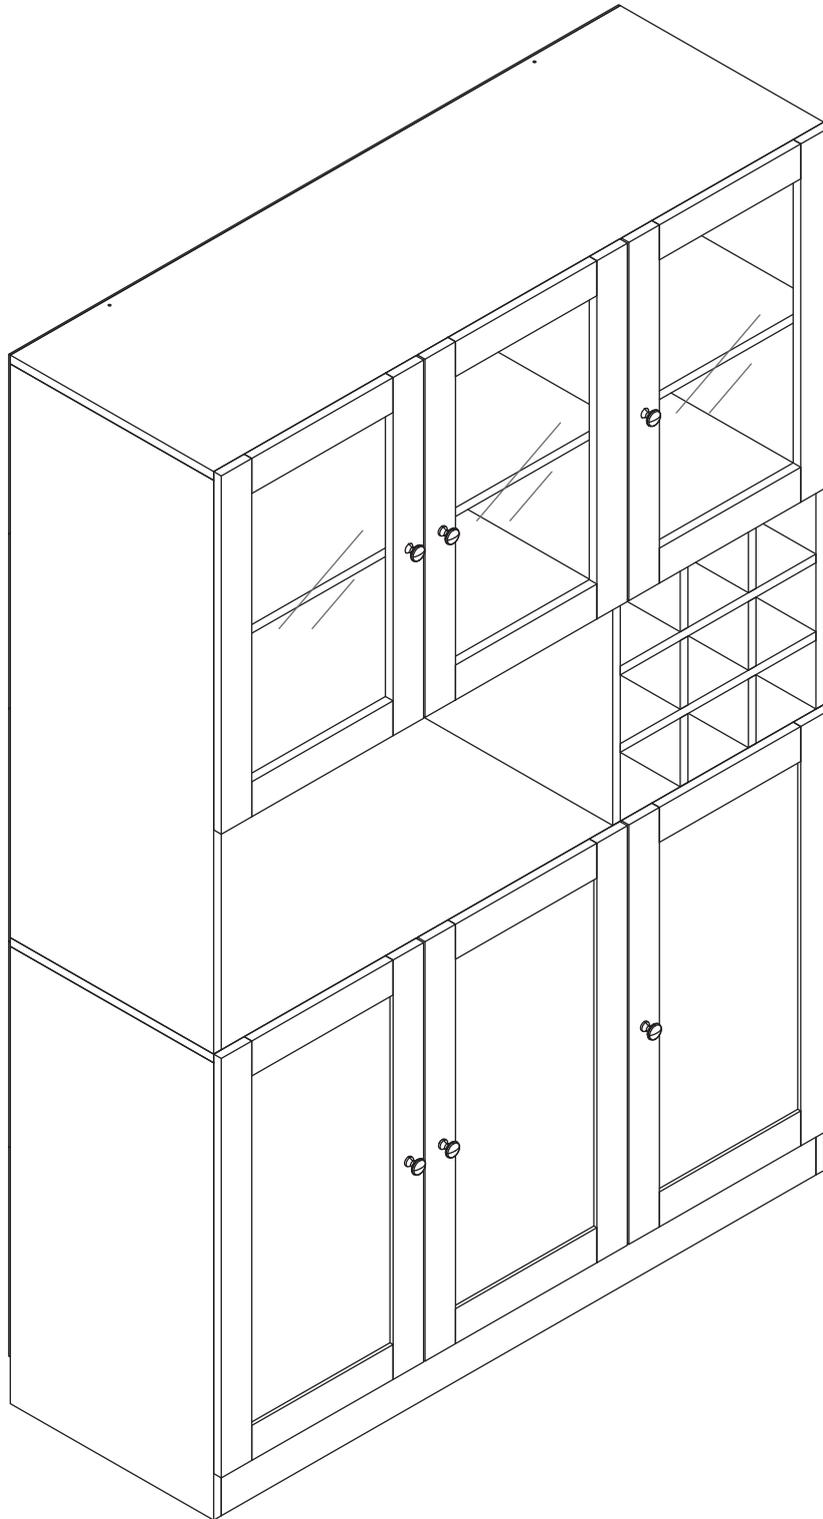

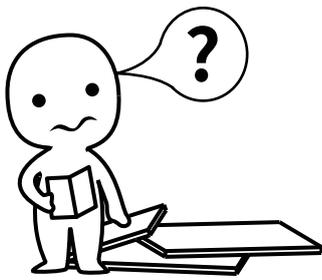


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

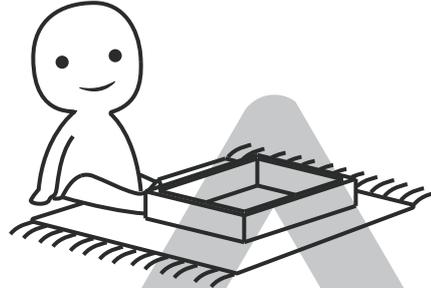



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

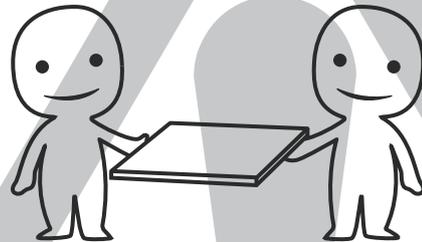

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

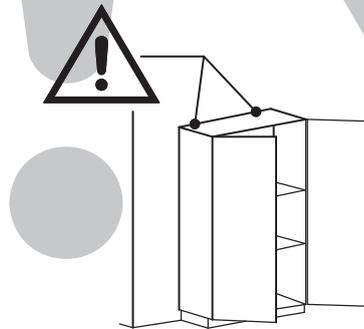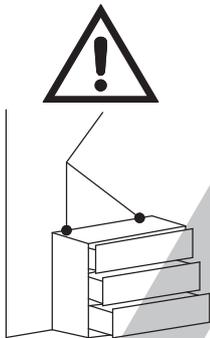

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

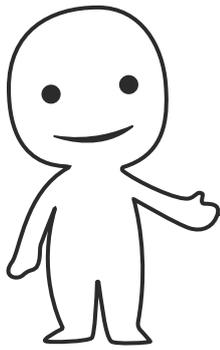


Please prepare the following tools

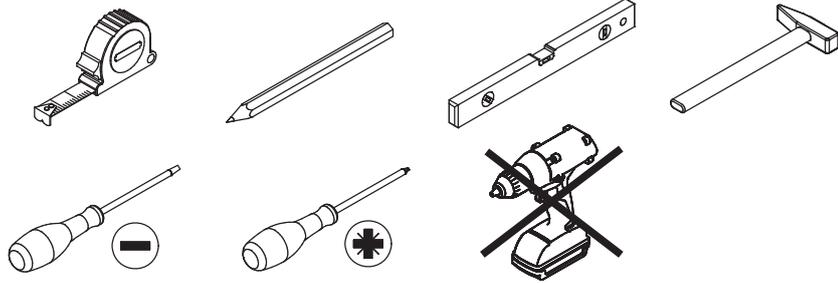


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

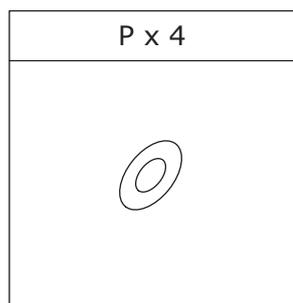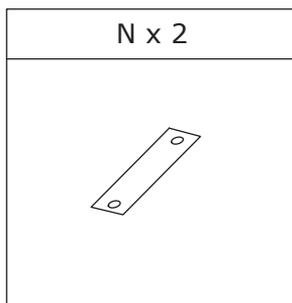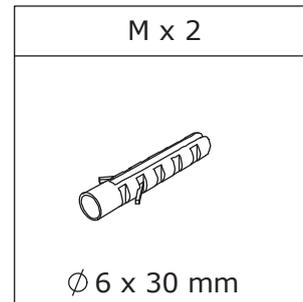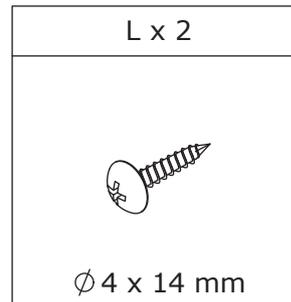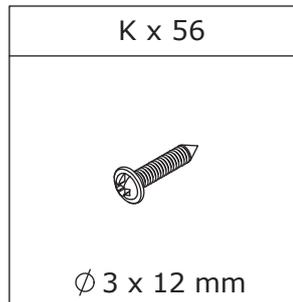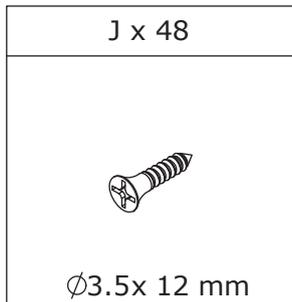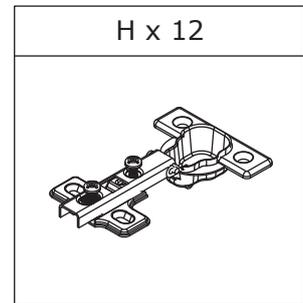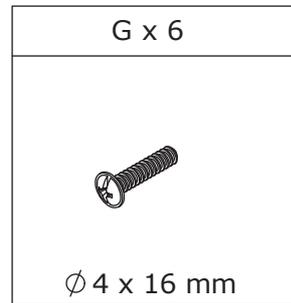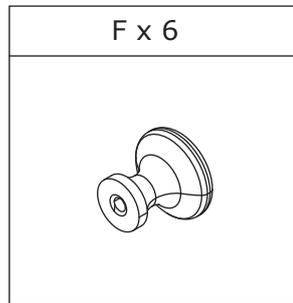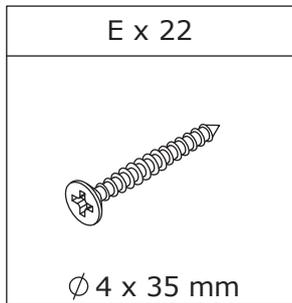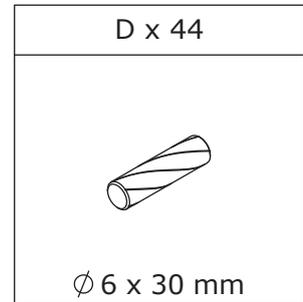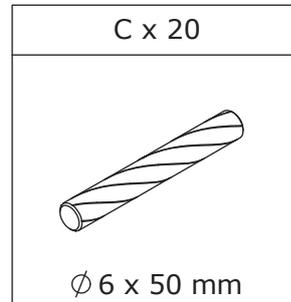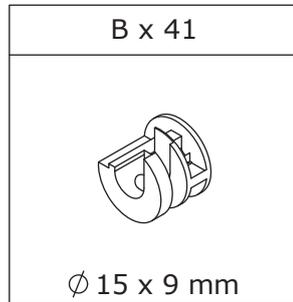
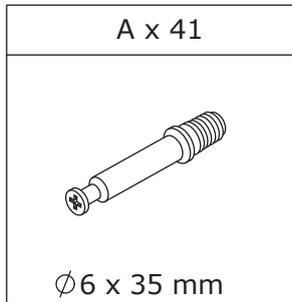


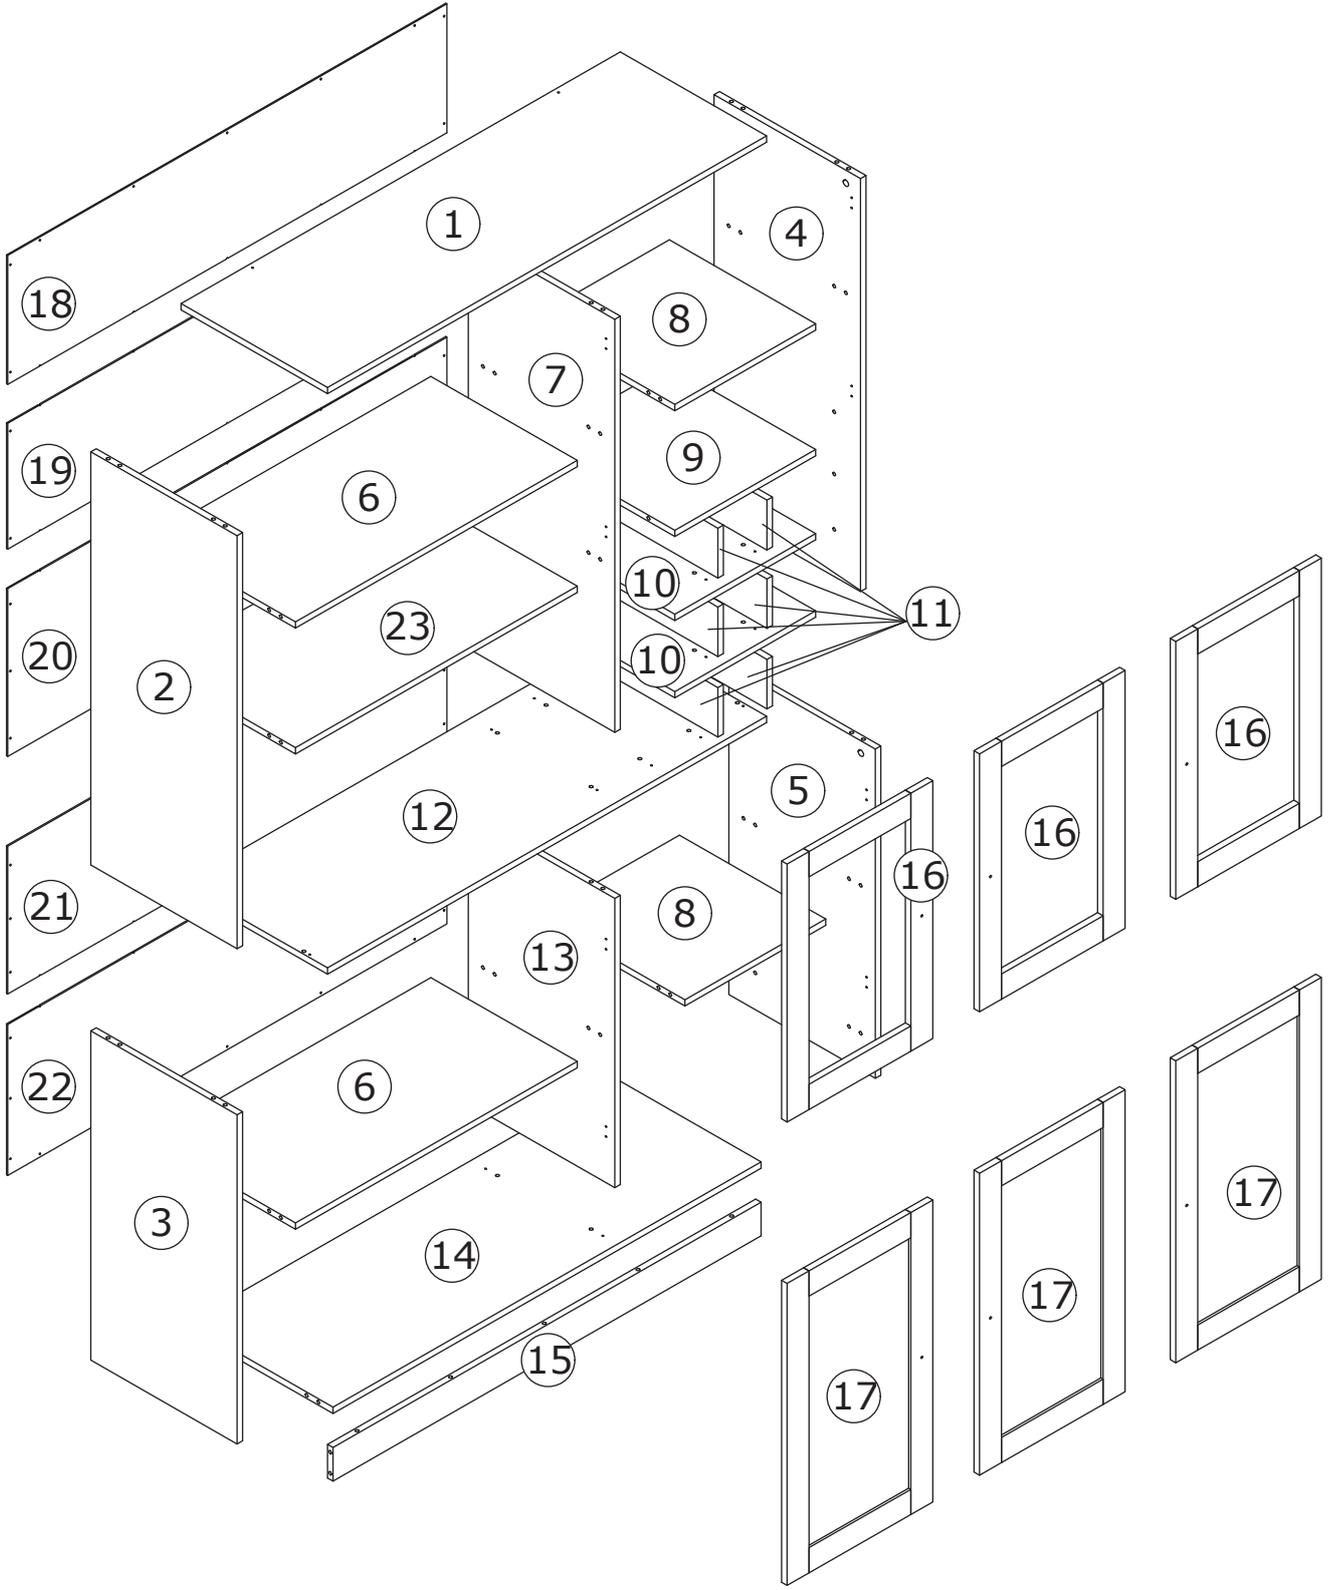


1

 







Insert quickfit screw(A) into corresponding holes in board 1,2,4,14 with a screwdriver as shown.

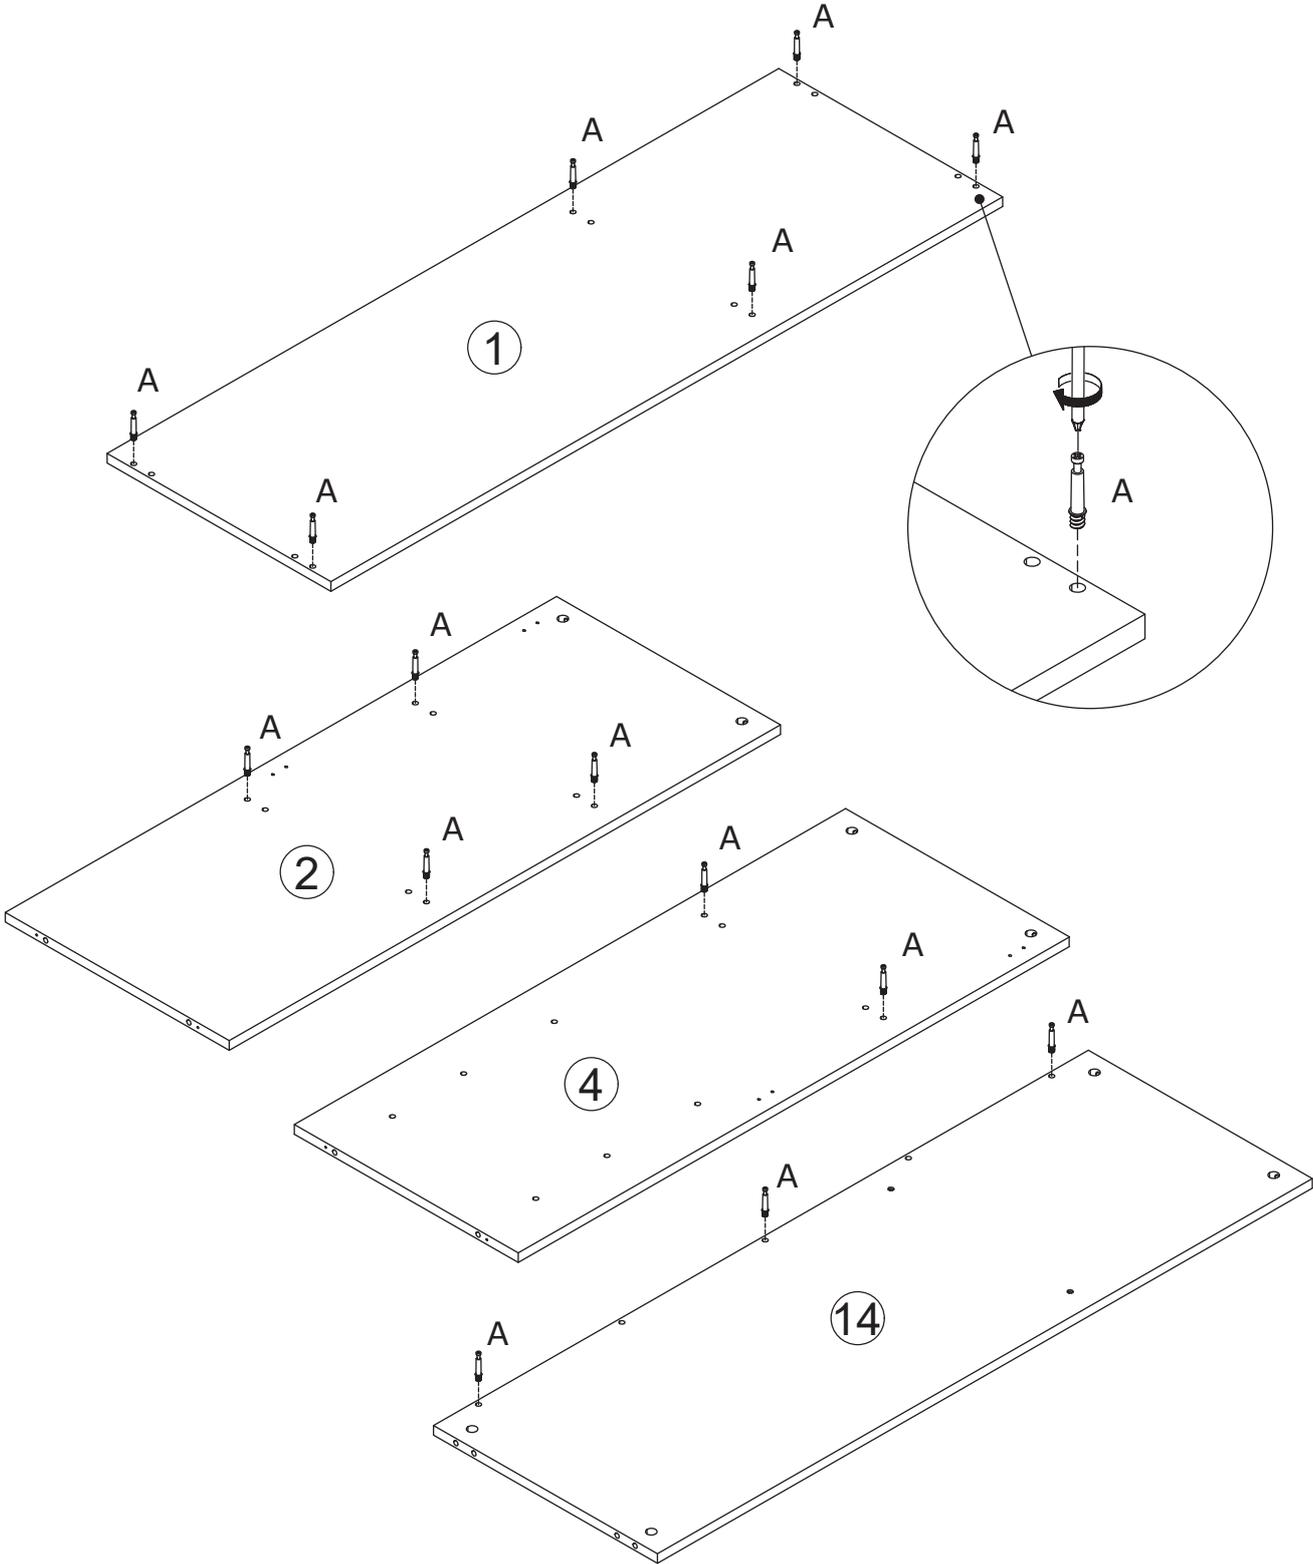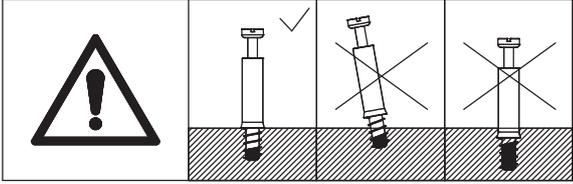




2

 




Insert quickfit screw(A) into corresponding holes in board 3,5,7,13 with a screwdriver as shown.

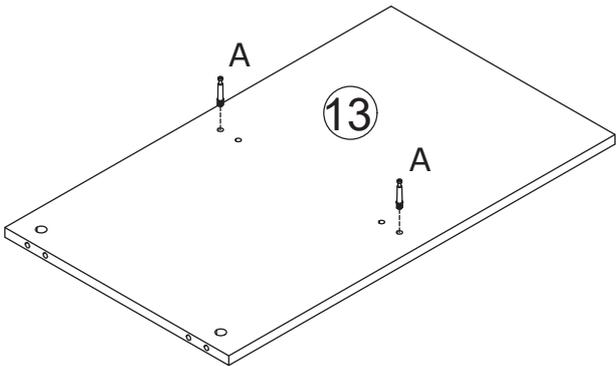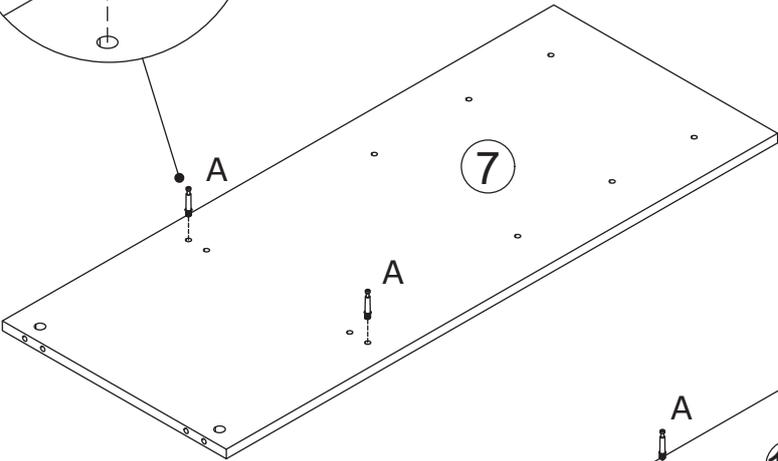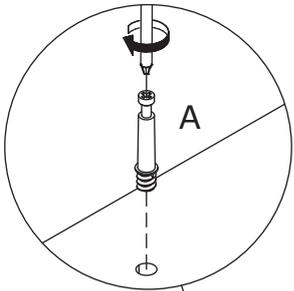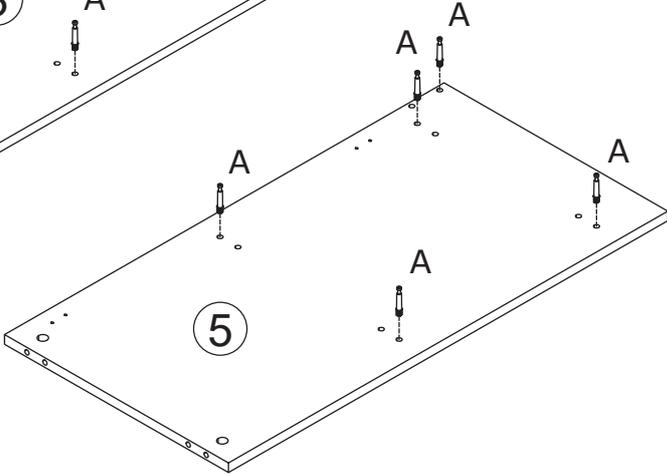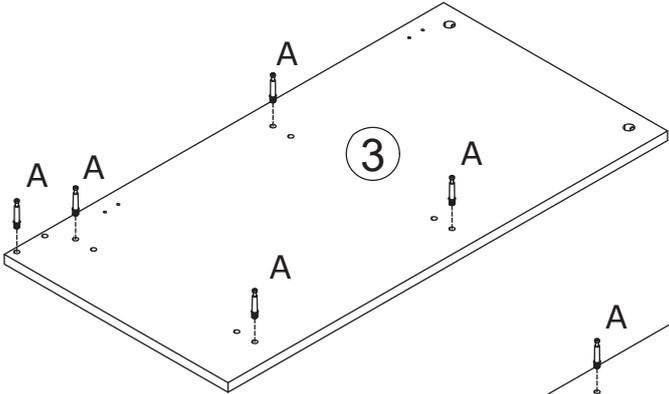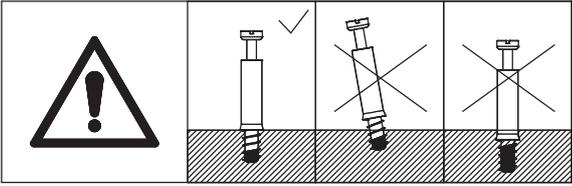

3

 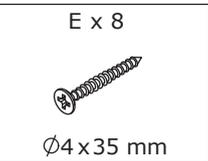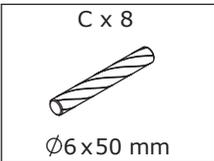


Attach another two board 11 to board 10, repeat the previous step.

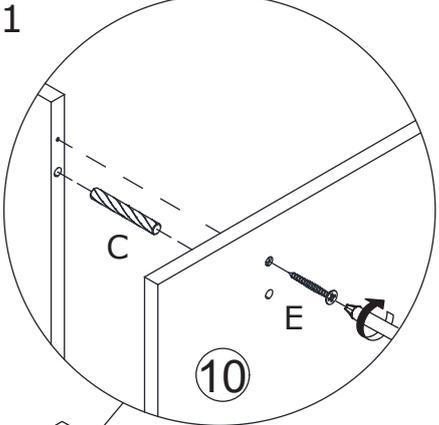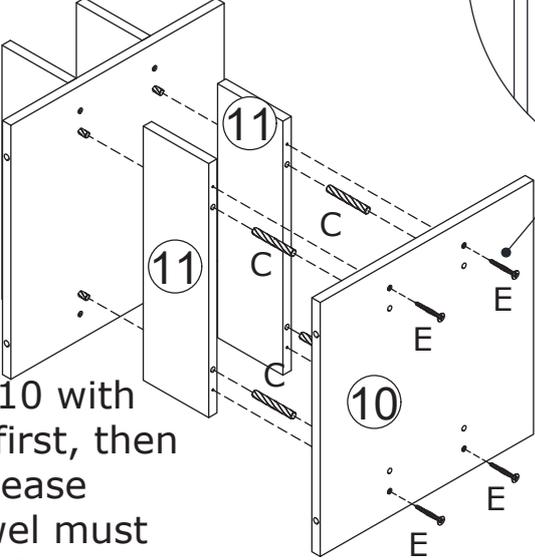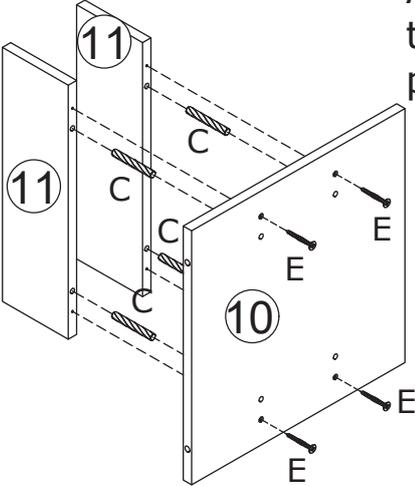


Attach board 11 to board 10 with long wooden dowel(C) at first, then fix with screw(E) again. Please note the long wooden dowel must penetrate through board 10.


4




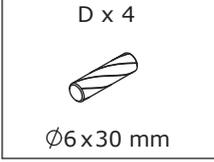


Attach board 9 to board 11 with short wooden dowel(D) as shown.
Attach board 11 to board 10 as shown.

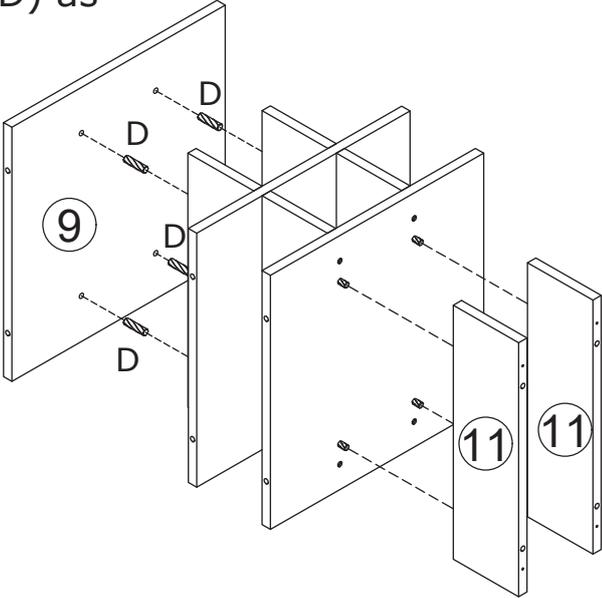

5
 
<p>B x 4</p>  <p>Ø15x9mm</p>	<p>C x 4</p>  <p>Ø6x50 mm</p>	<p>D x 12</p>  <p>Ø6x30 mm</p>	
---------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

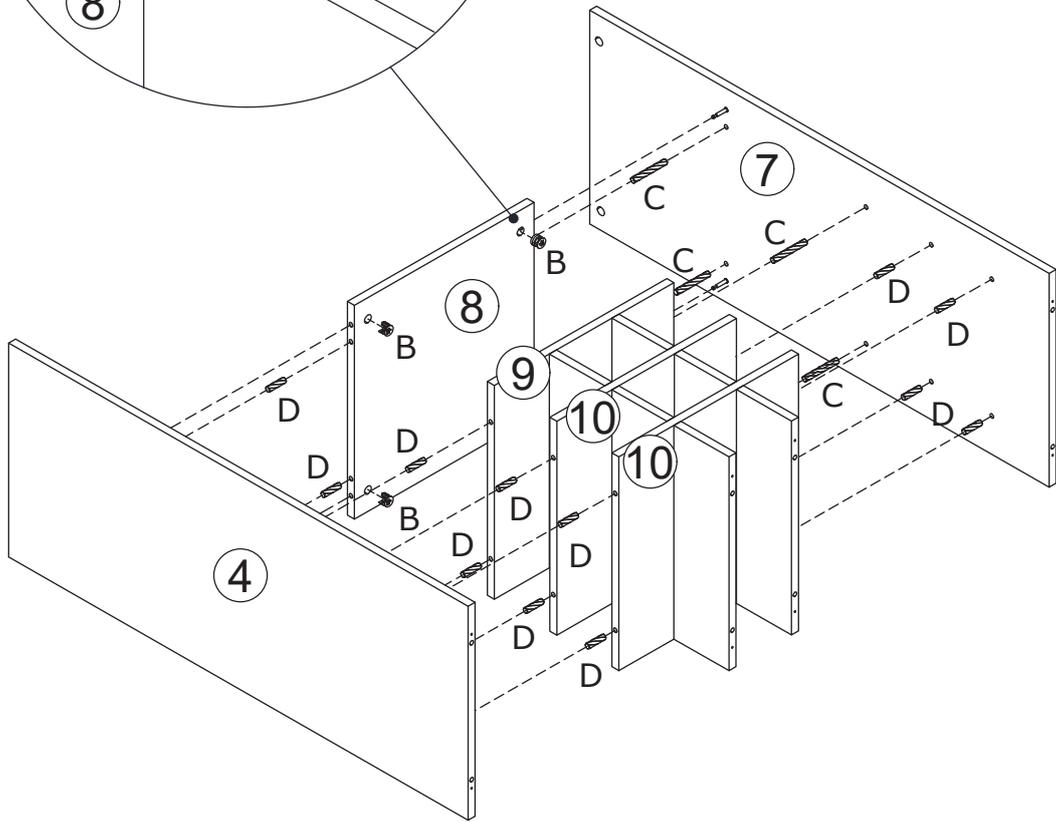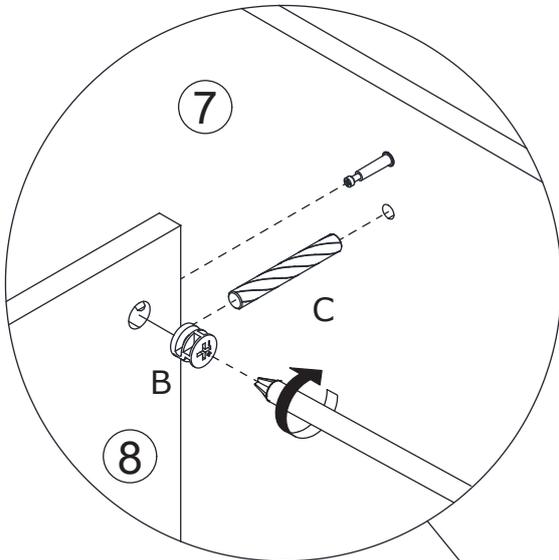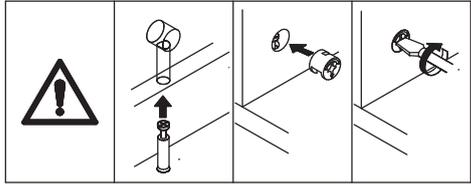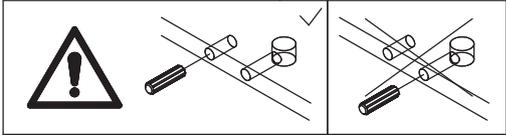




Attach board 4 to board 8,9,10 with short wooden dowel(D) and turn cam locks(B) clockwise to tighten as shown.

Attach board 7 to board 8,9,10 with long wooden dowel(C), insert cam lock(B) into board 8, and turn clockwise to tighten as shown.


Please note the long wooden dowel must penetrate through board 7.

6

 A x 4
Ø 6 x 35 mm

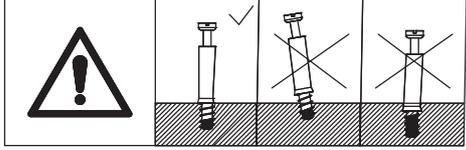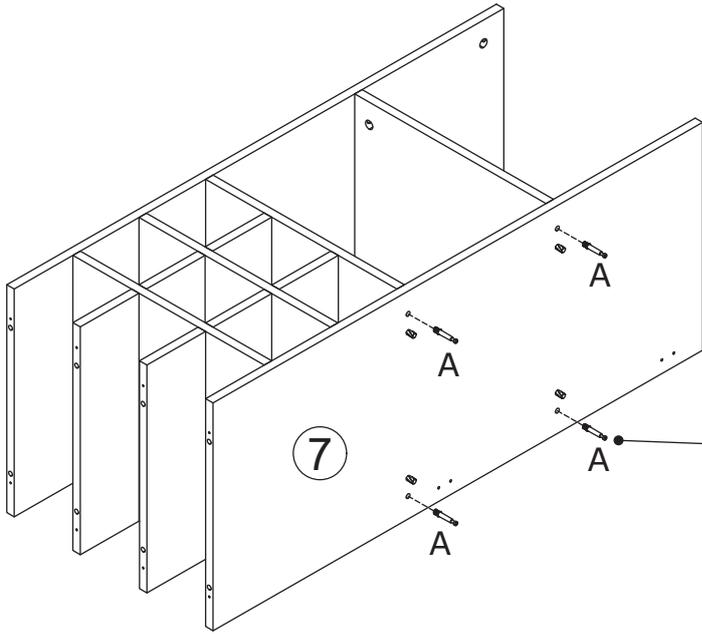


Insert quickfit screw(A) into corresponding holes in board 7 as shown.




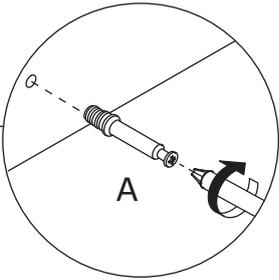


7


 
B x 4
Ø 15x9mm







Attach board 6,23 to board 7 and turn cam locks(B) clockwise to tighten as shown.

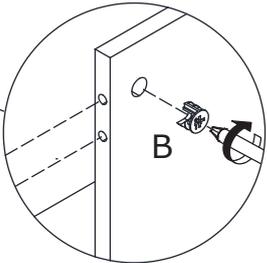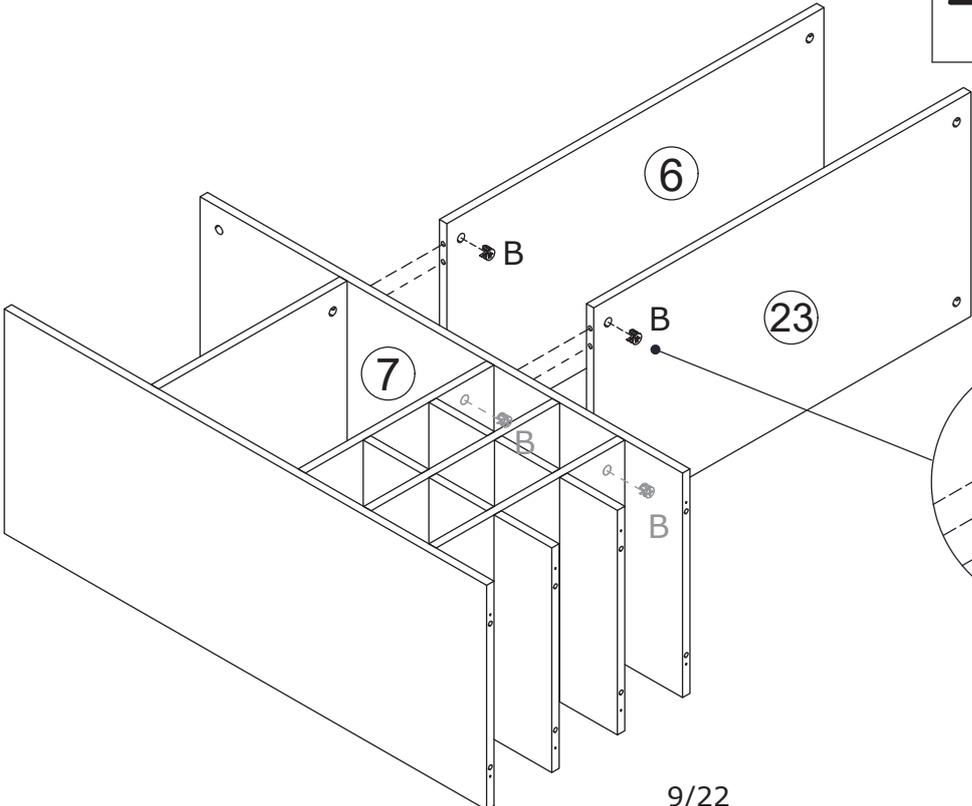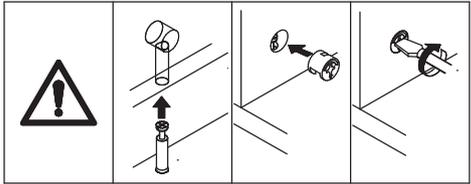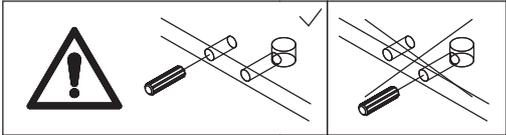



8

 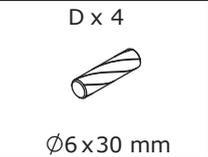





Attach board 2 to board 6,23 with wooden dowel(D) and turn cam locks(B) clockwise to tighten as shown.

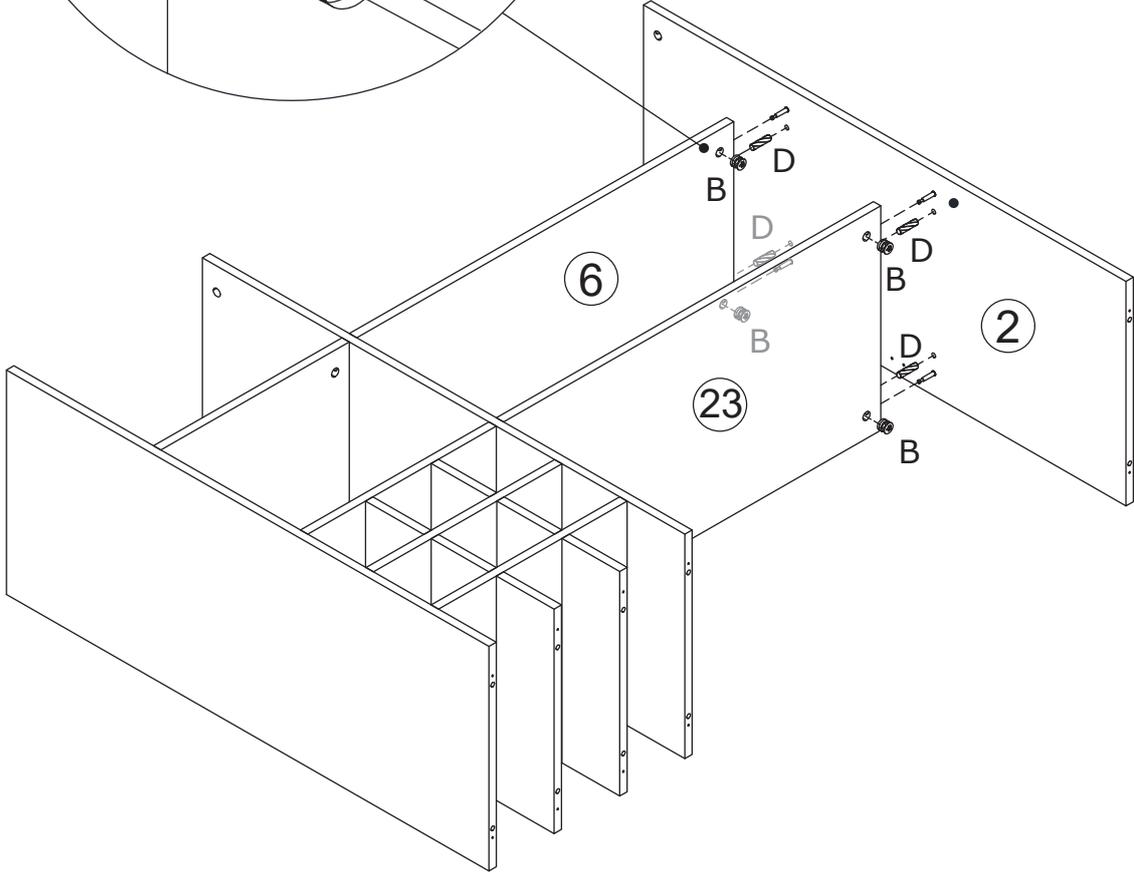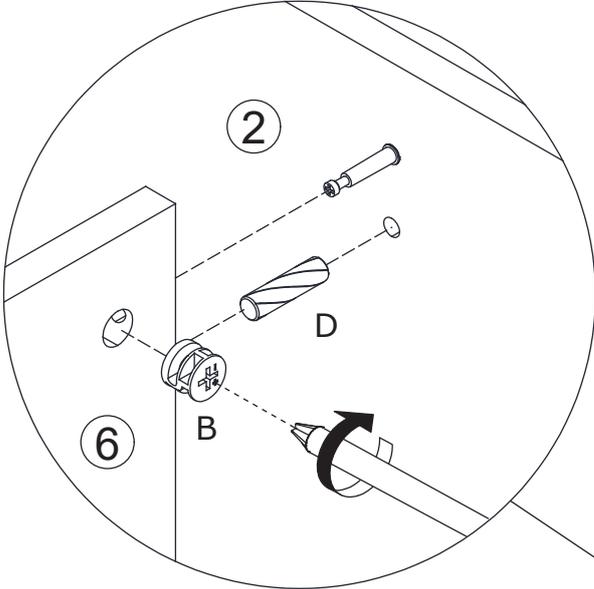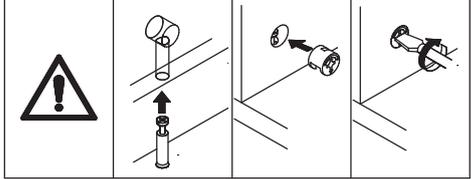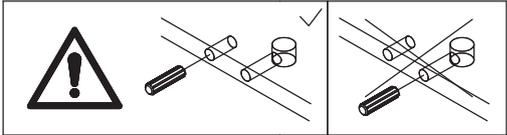

9

 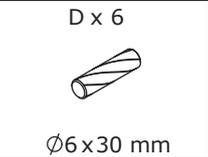


Cover board 1 to the unit with wooden dowel(D) and turn cam locks(B) clockwise to tighten as shown.

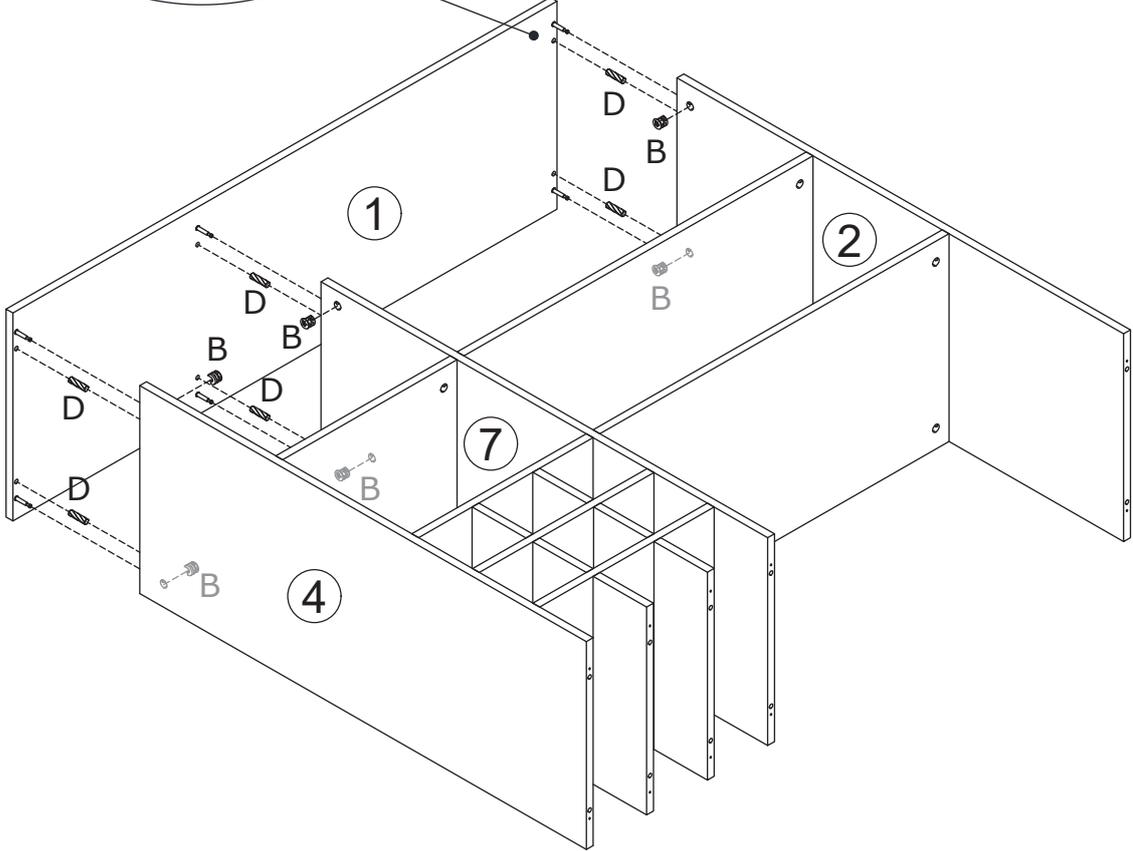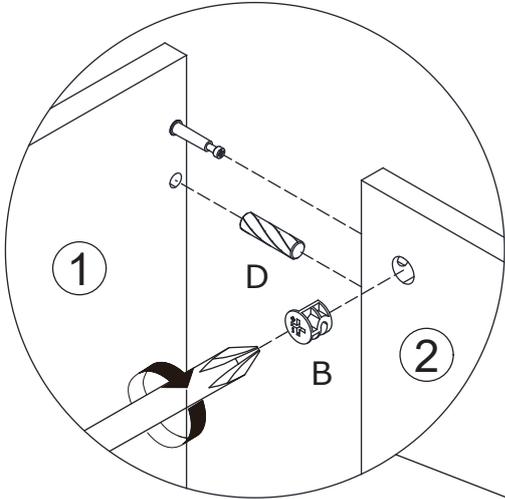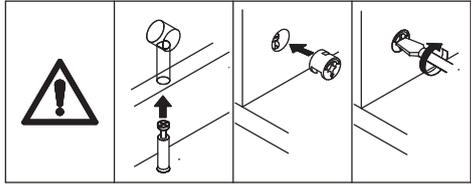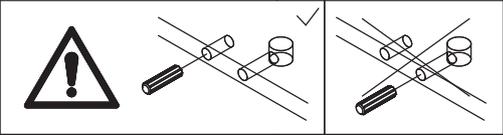


10




Insert long wooden dowel(C)
into board 4,7,2.
Insert short wooden
dowel(D) into board
11.

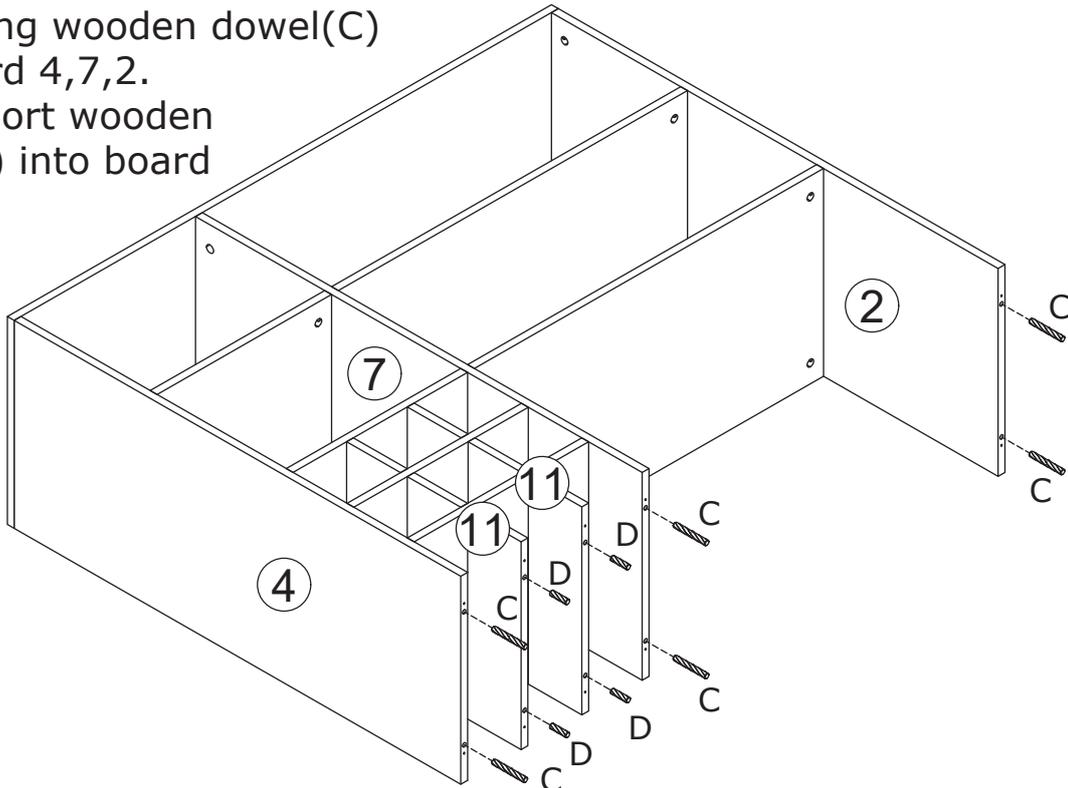

11


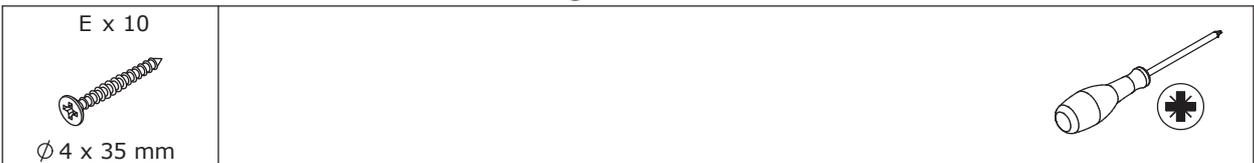


Attach board 12 to the
component with
screw(E).


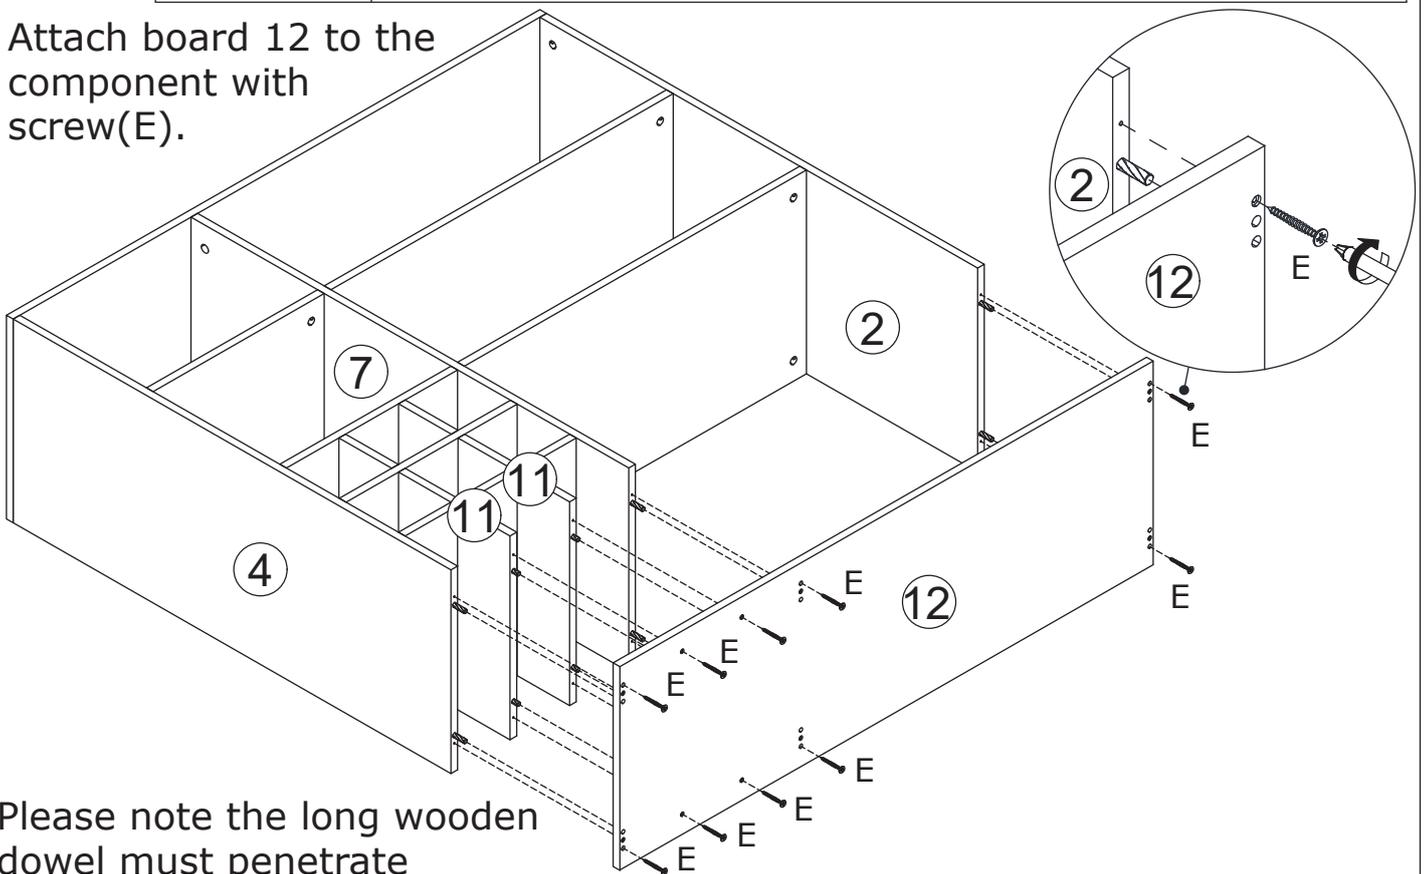


Please note the long wooden
dowel must penetrate
through board 12.

 
12

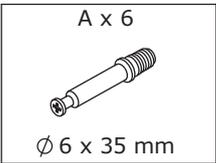



Insert quickfit screw(A) into corresponding holes in board 12 as shown.

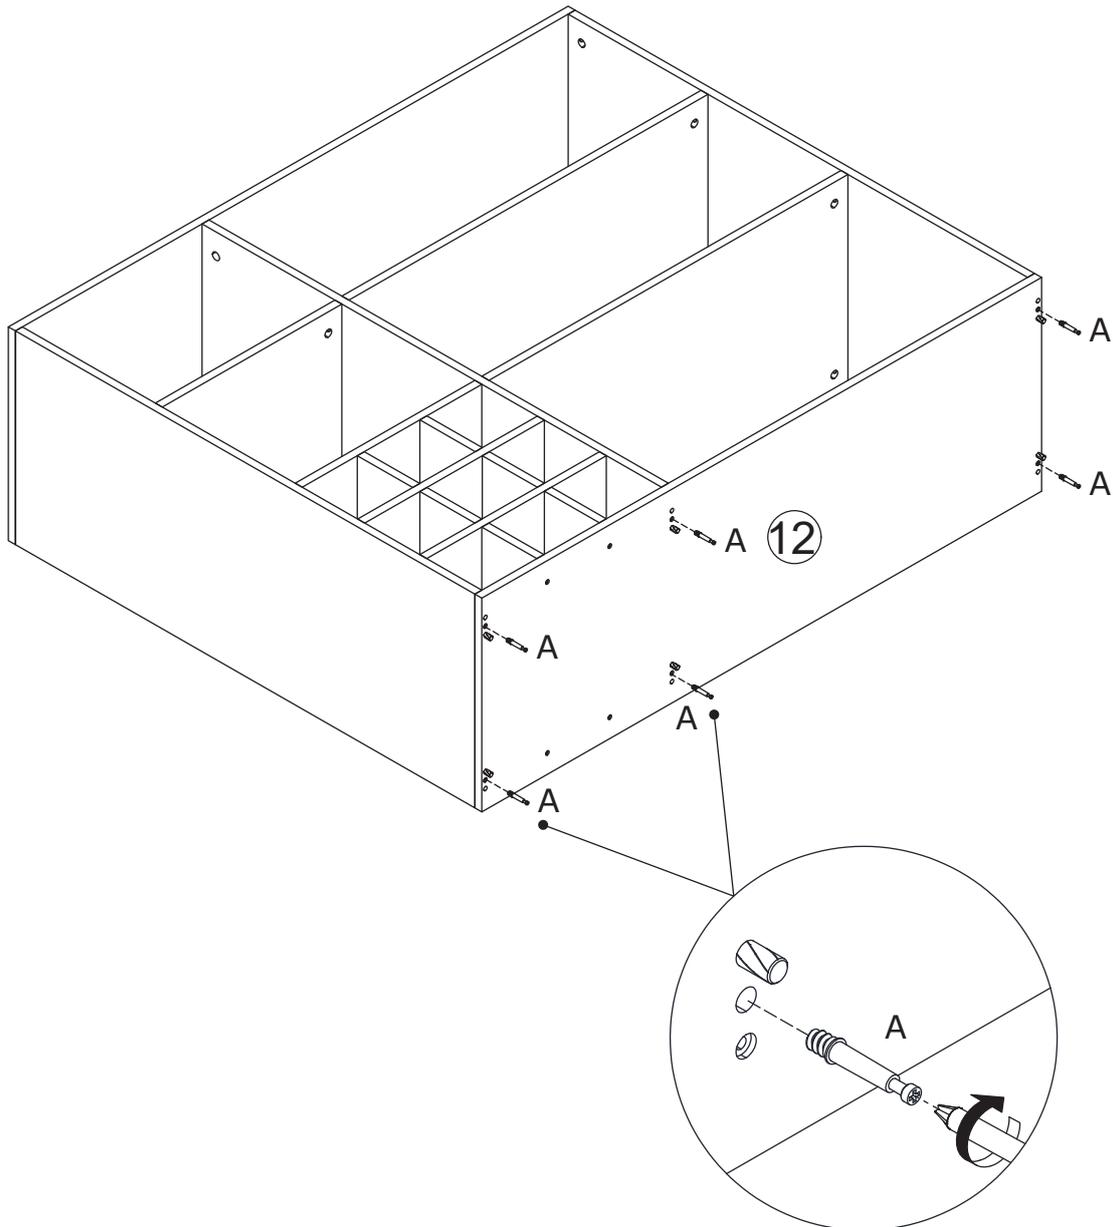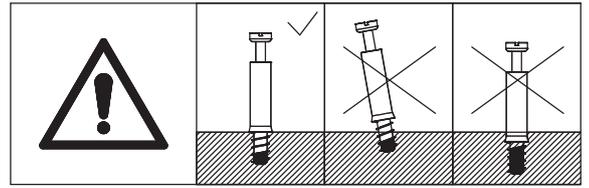


13



 
<p>B x 3</p>  <p>Ø15x9mm</p>	<p>D x 4</p>  <p>Ø6x30 mm</p>	<p>E x 2</p>  <p>Ø4x35 mm</p>	
---------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

Attach board 13 to board 14 with wooden dowel(D) at first, then fix with screw(E) again. Attach board 15 to board 14 with wooden dowel(D) and turn cam locks(B) clockwise to tighten as shown.

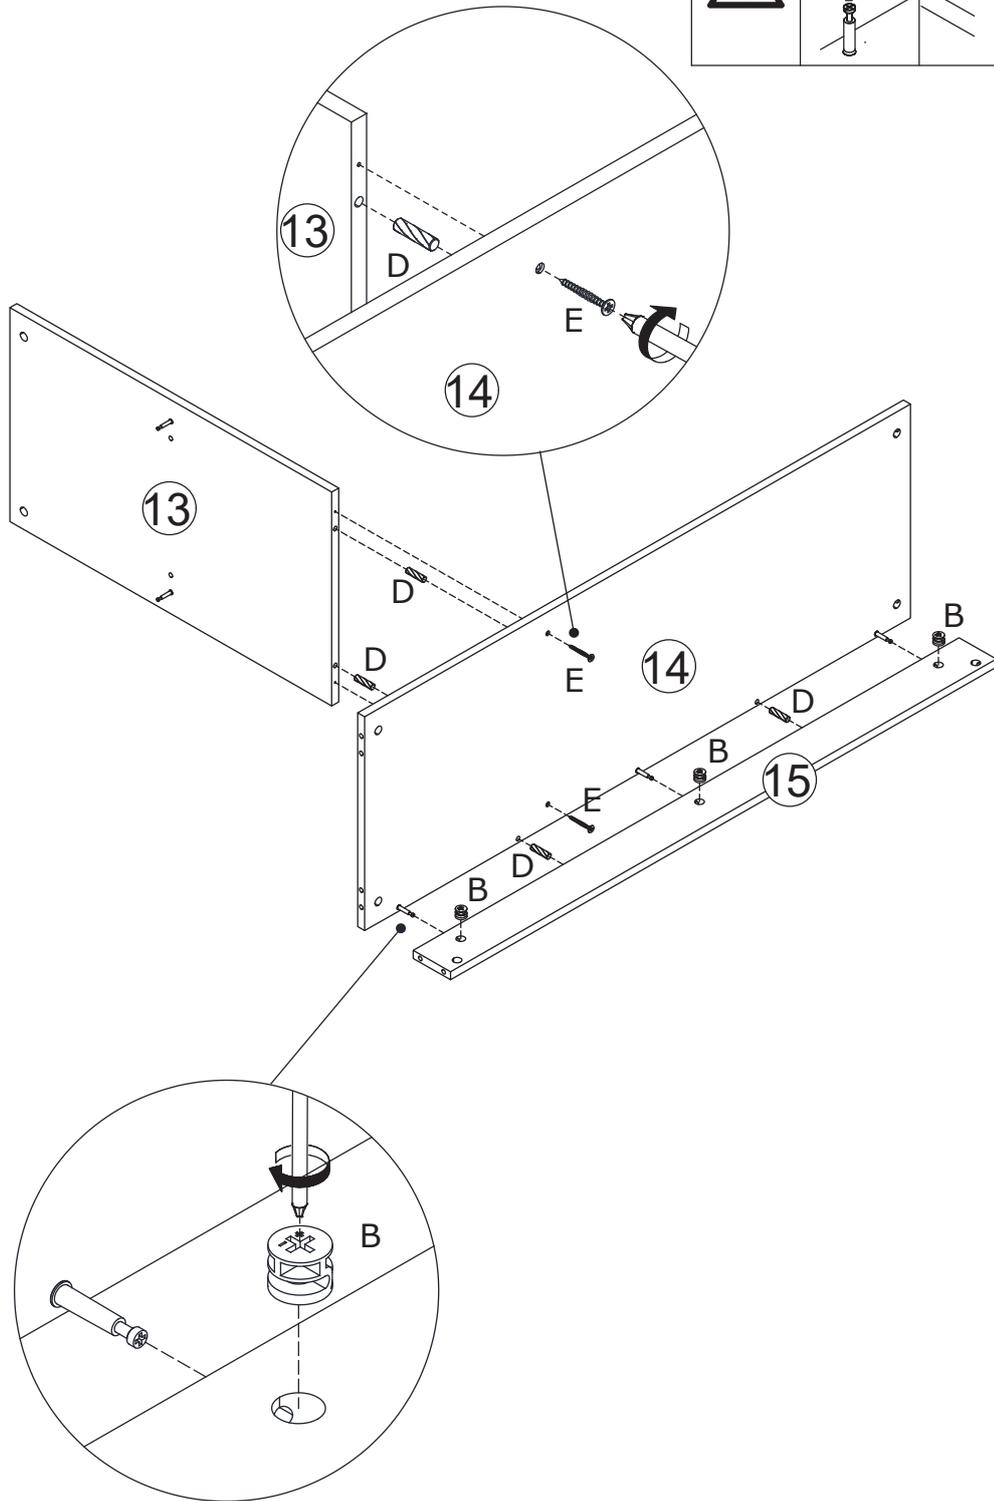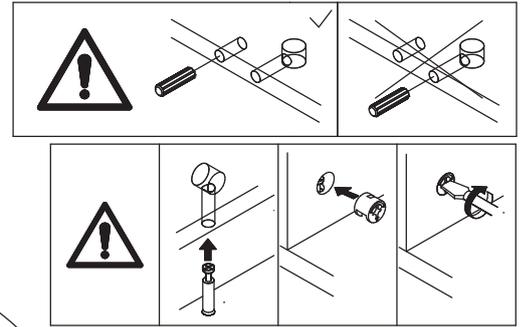

14



 
B x 7  Ø15x9mm	C x 2  Ø6x50 mm	D x 5  Ø6x30 mm	
--------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

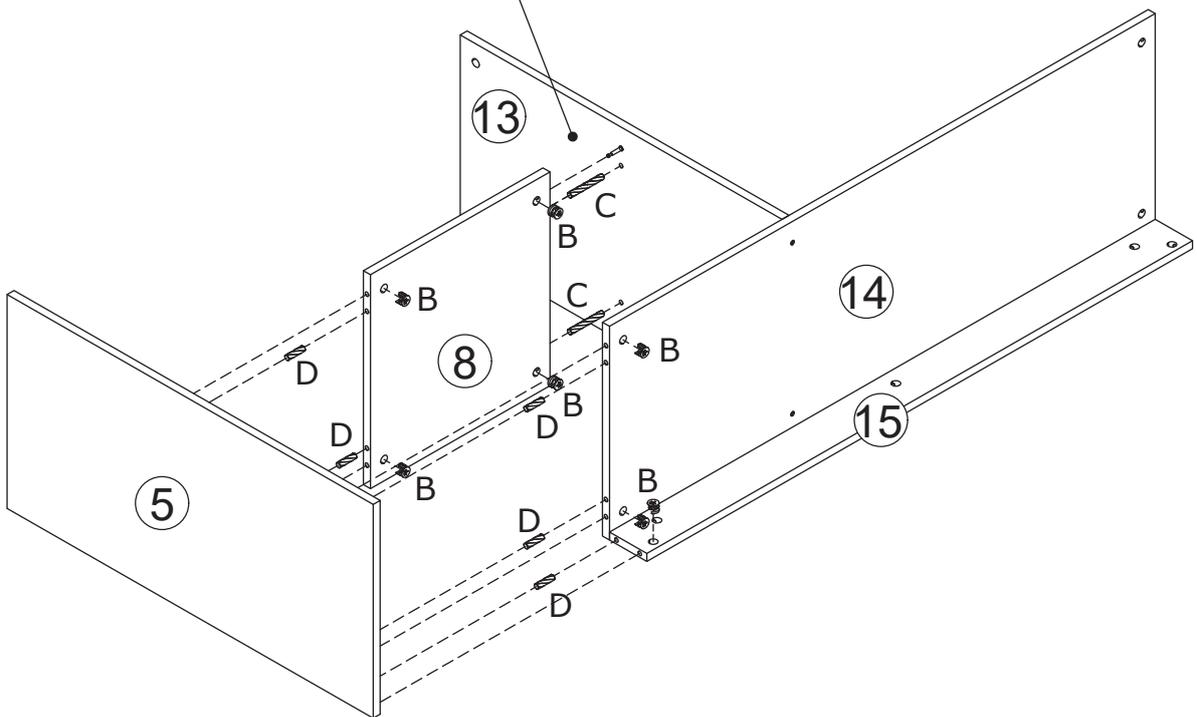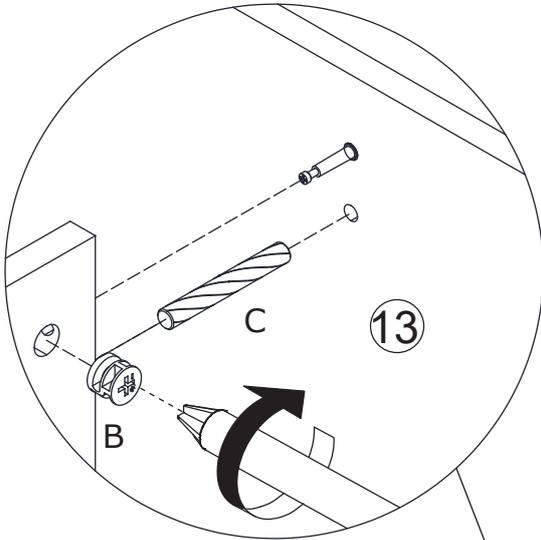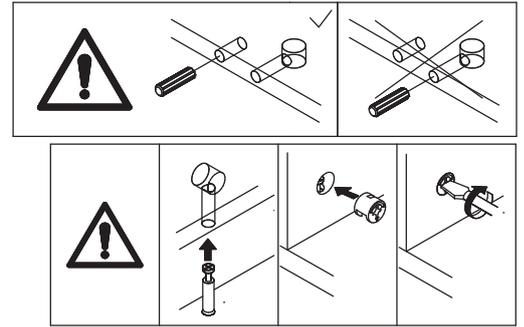

Attach board 8 to board 13 with long wooden dowel(C) and turn cam locks(B) clockwise to tighten as shown.
Please note the long wooden dowel must penetrate through board 13.





Attach board 5 to board 8 with short wooden dowel(D) and turn cam locks(B) clockwise to tighten as shown.

15

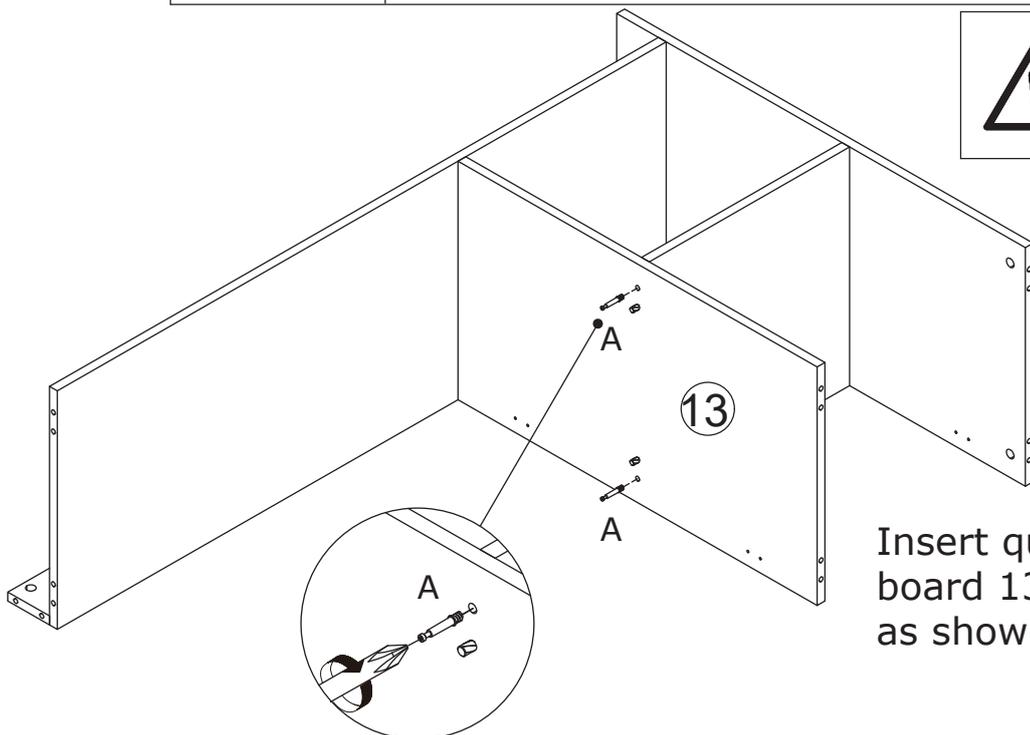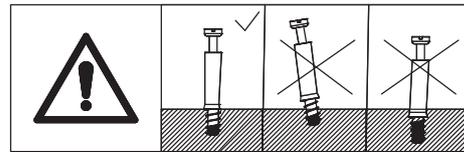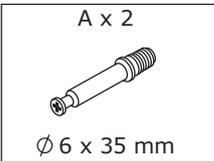

Insert quickfit screw(A) into board 13 with a screwdriver as shown.

16

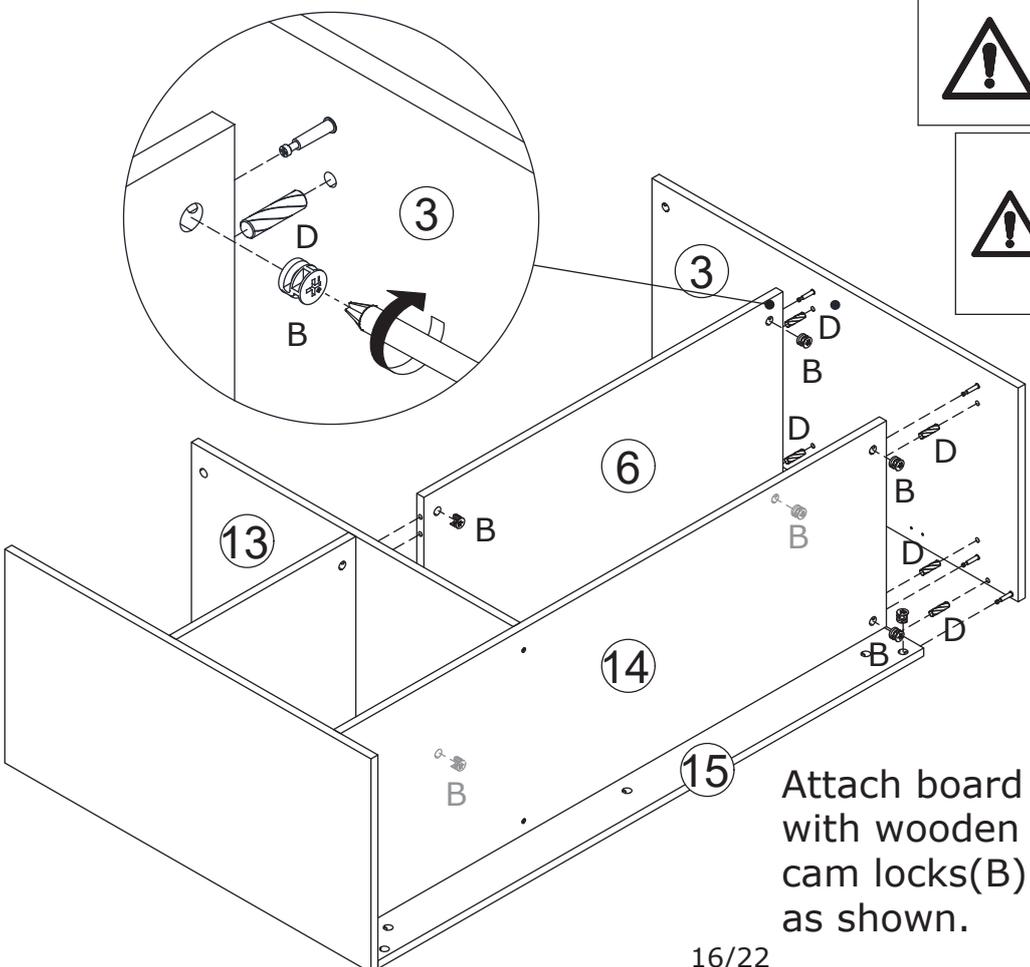
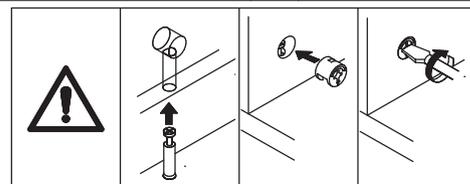
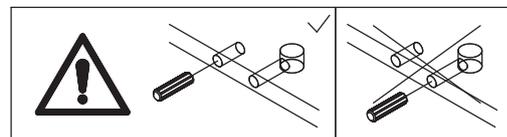
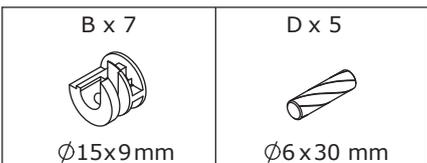


Attach board 6 to board 13 and turn cam locks(B) clockwise to tighten as shown.

Attach board 3 to board 6,14,15 with wooden dowel(D) and turn cam locks(B) clockwise to tighten as shown.

17


 
B x 6
Ø15x9mm

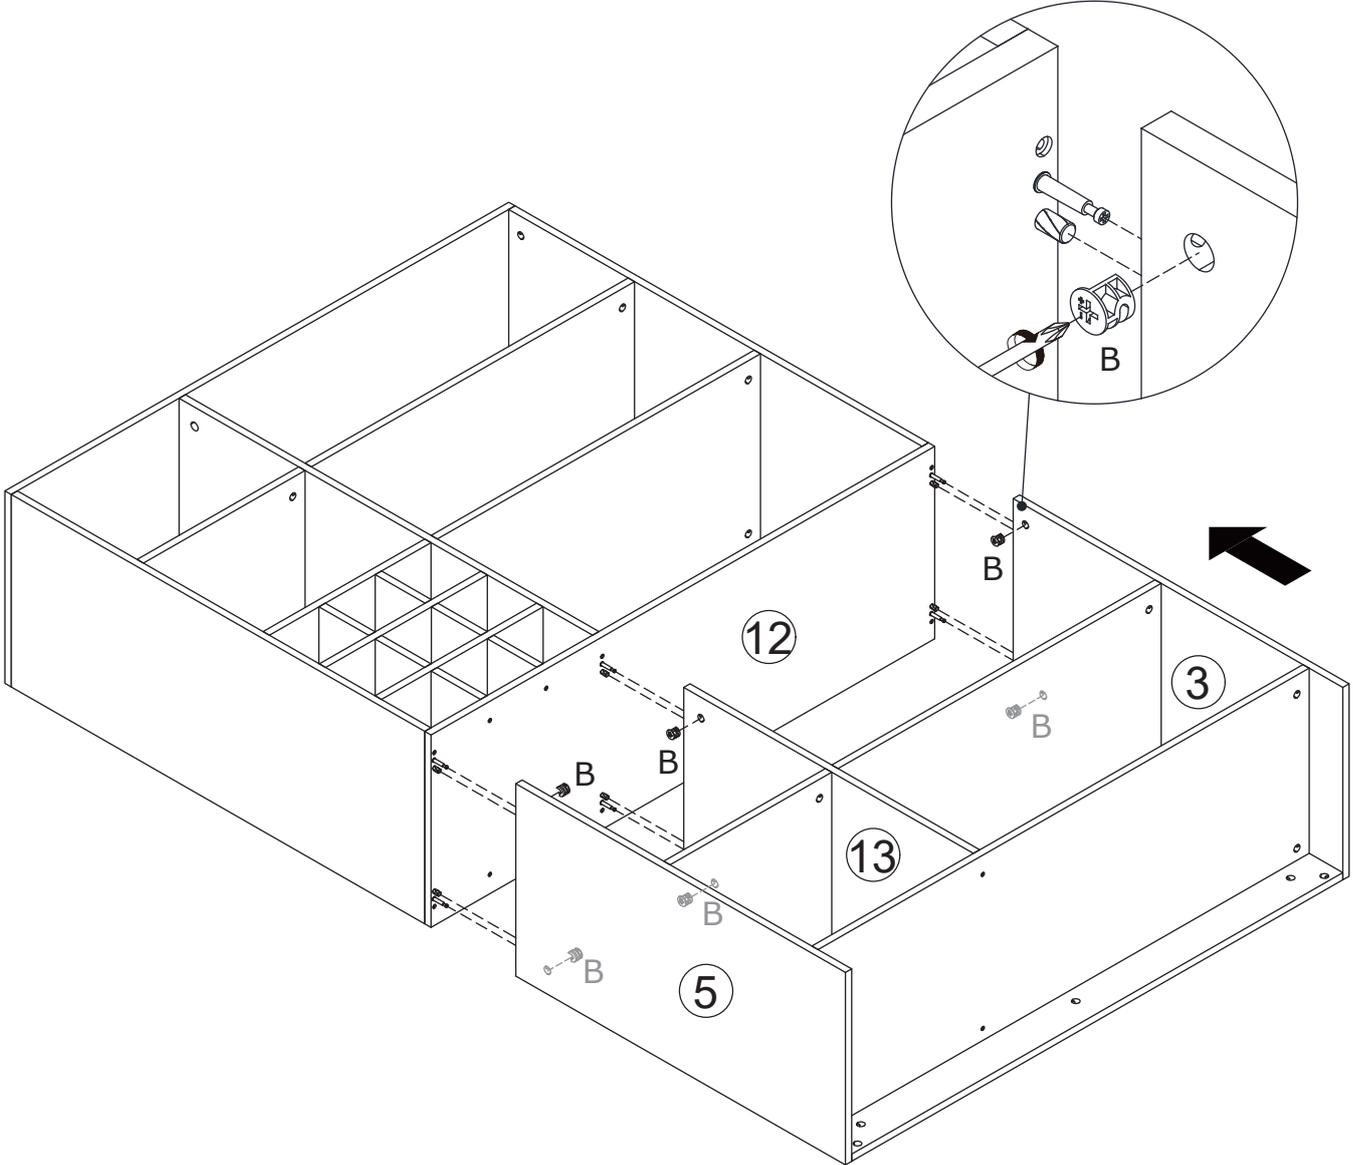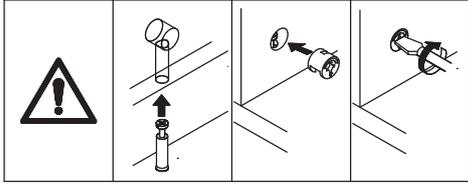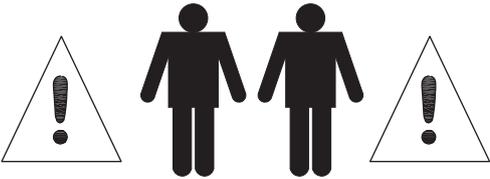



Connect two assembled components and turn cam locks(B) clockwise to tighten as shown.

Recommend more than 2 people to assemble!!

 

18

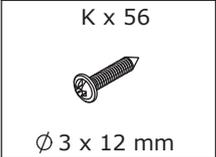









Fix back board 18,19,20,21,22 with nail(K) as shown.

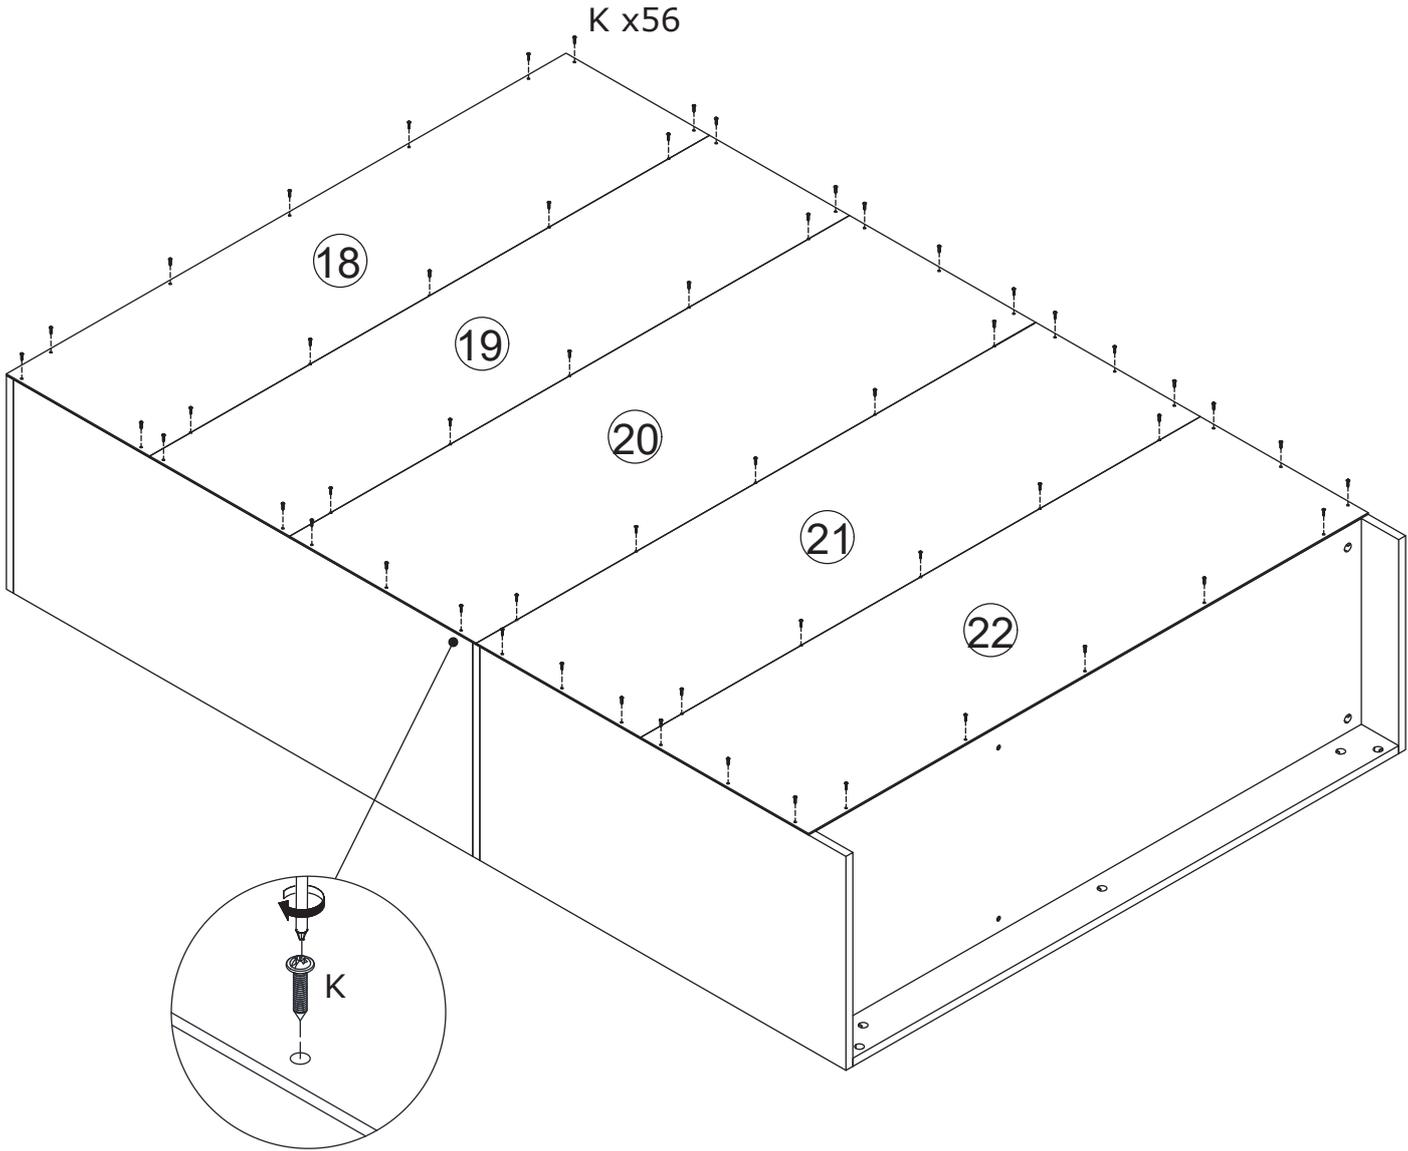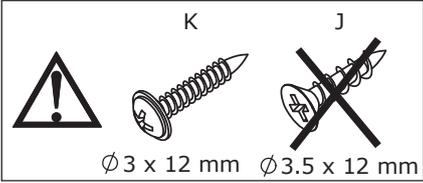

19

  F x 6 	G x 6  Ø4 x 16 mm	H x 12 	J x 24  Ø3.5x12 mm	
--------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

Fix hinge(H) to board 16,17 with screw(J) as shown.
Fix knob(F) with screw(G) as shown.

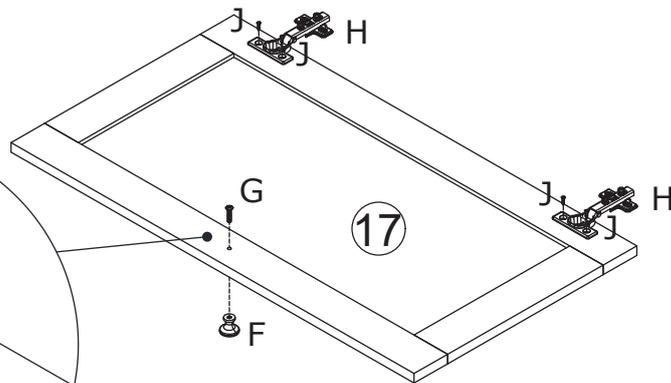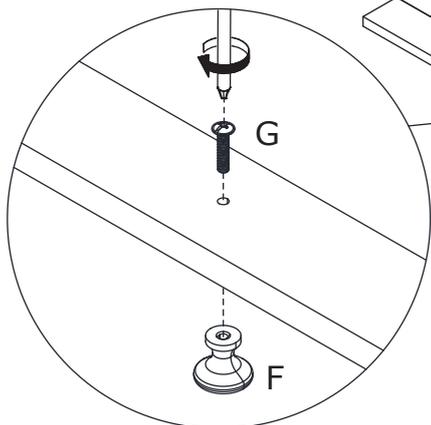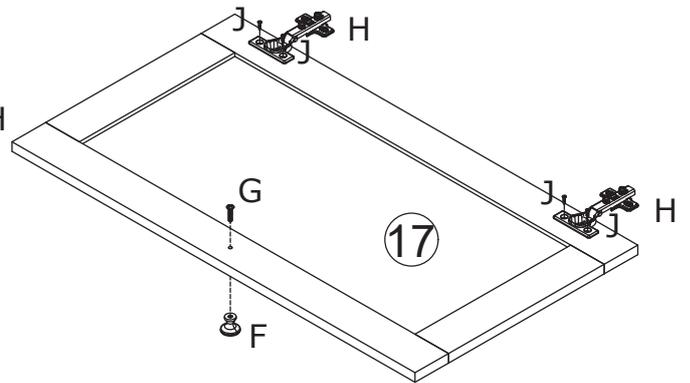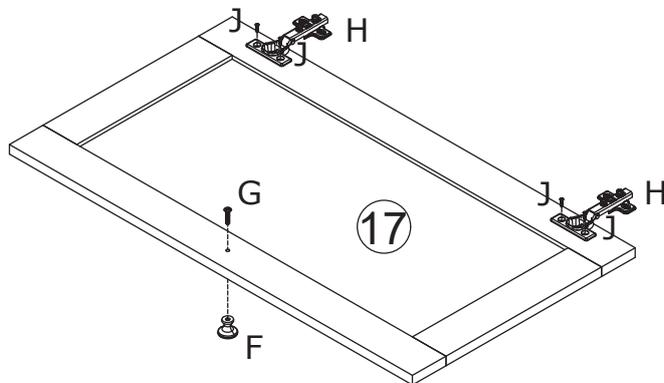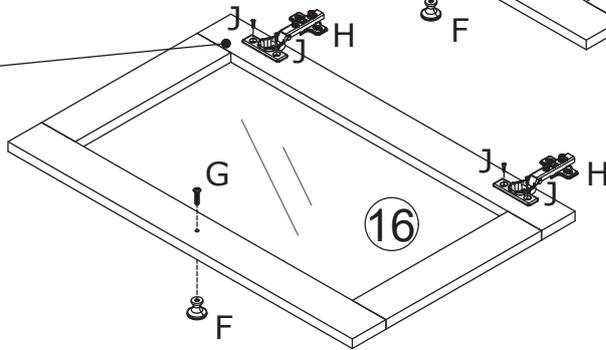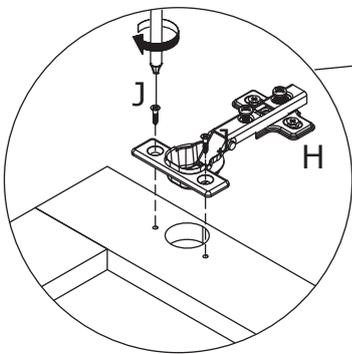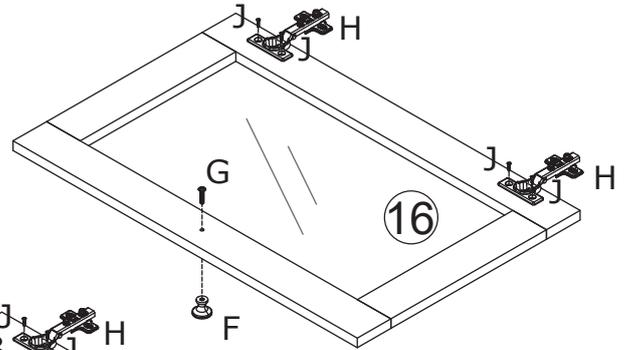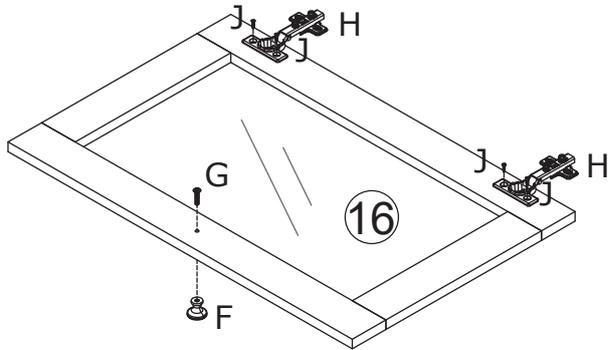


20


J x 24




 
Ø3.5x12 mm














Attach board 16 to upper cabinet by fixing hinge with screw(J) as shown.

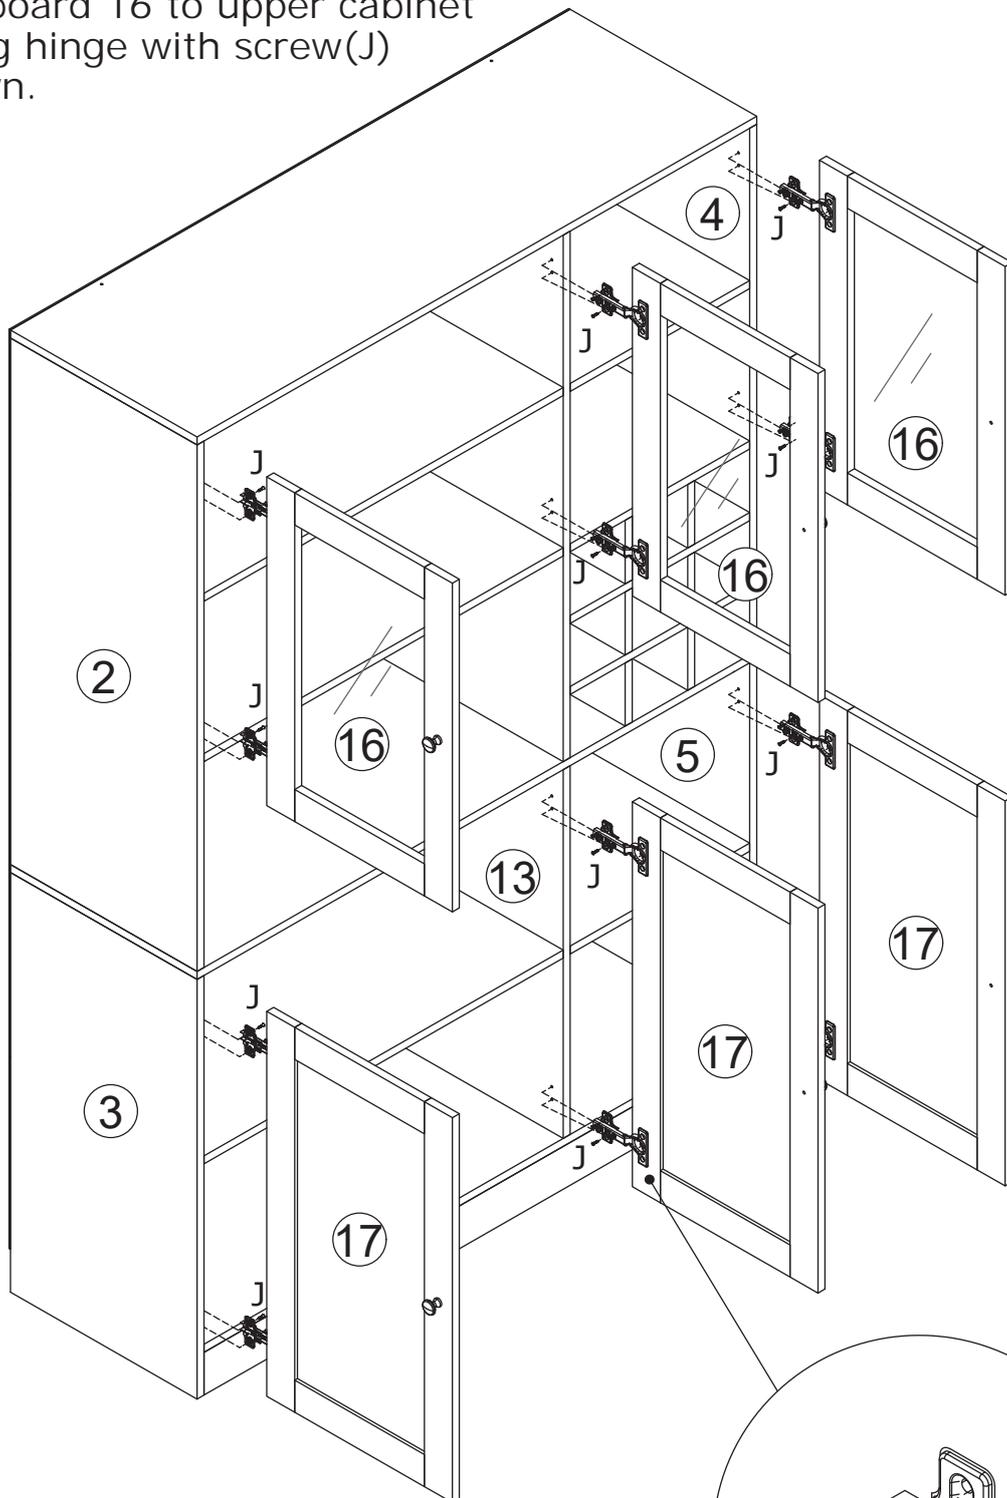








 
Attach board 17 to lower cabinet by fixing hinge with screw(J) as shown.

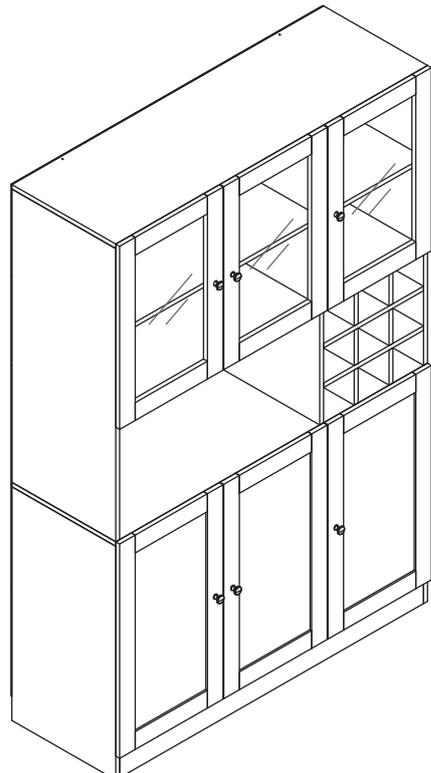

If there is misalignment after you install, adjust the screw to the best condition

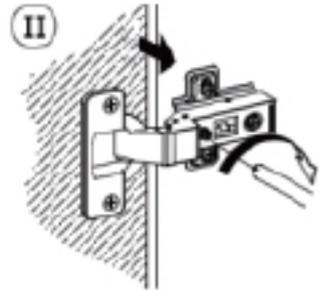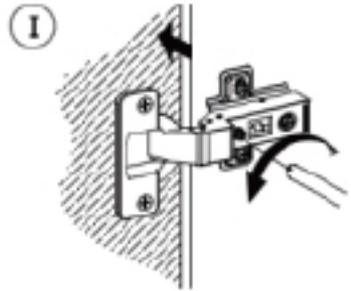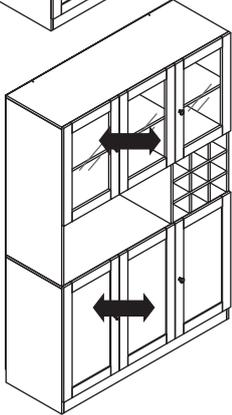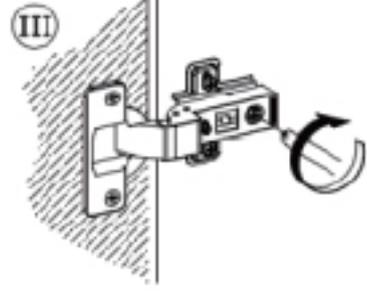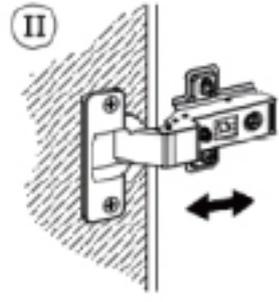
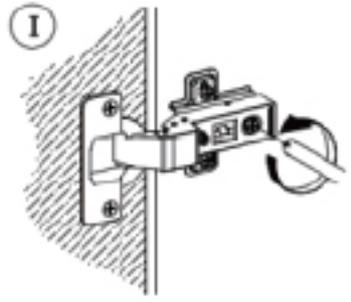
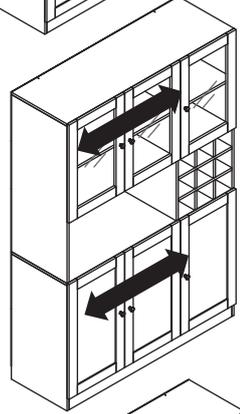
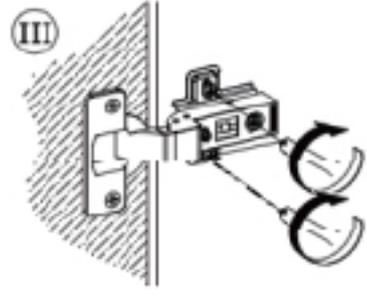
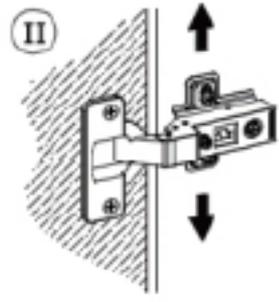
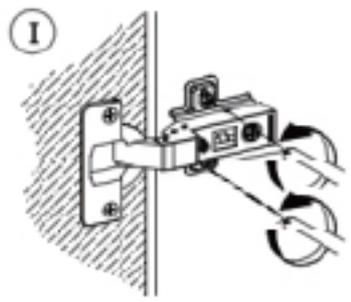
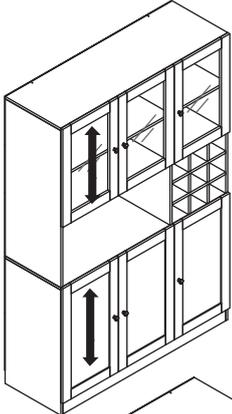


22

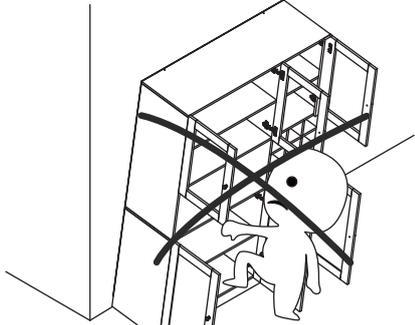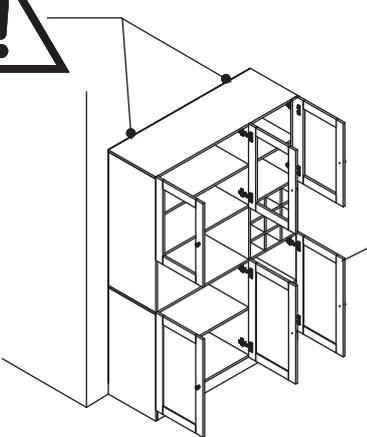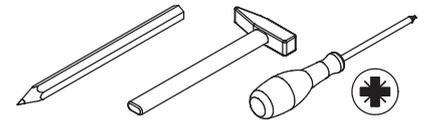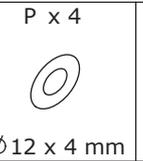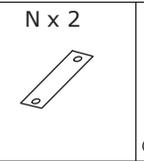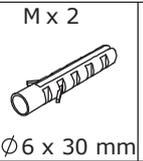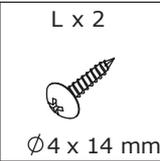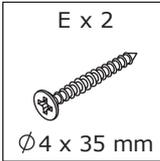

Fix part(N) to board 1 with washer(P) and screw(L) at first.

Fix part(M) to a proper position on your wall, fix part(N) to part(M) with washer(P) and screw(E) as shown.

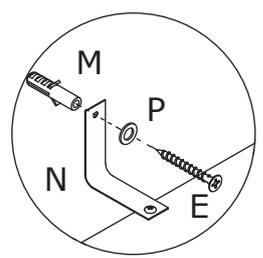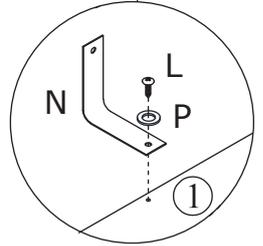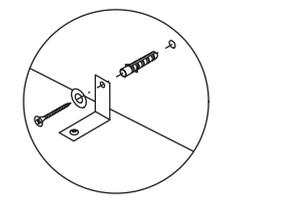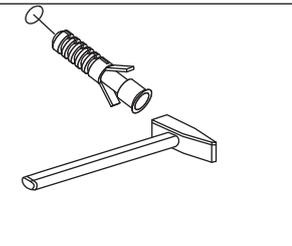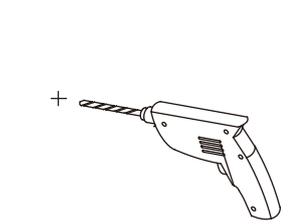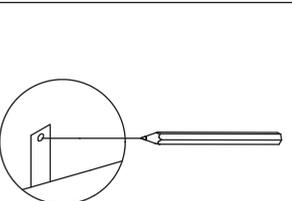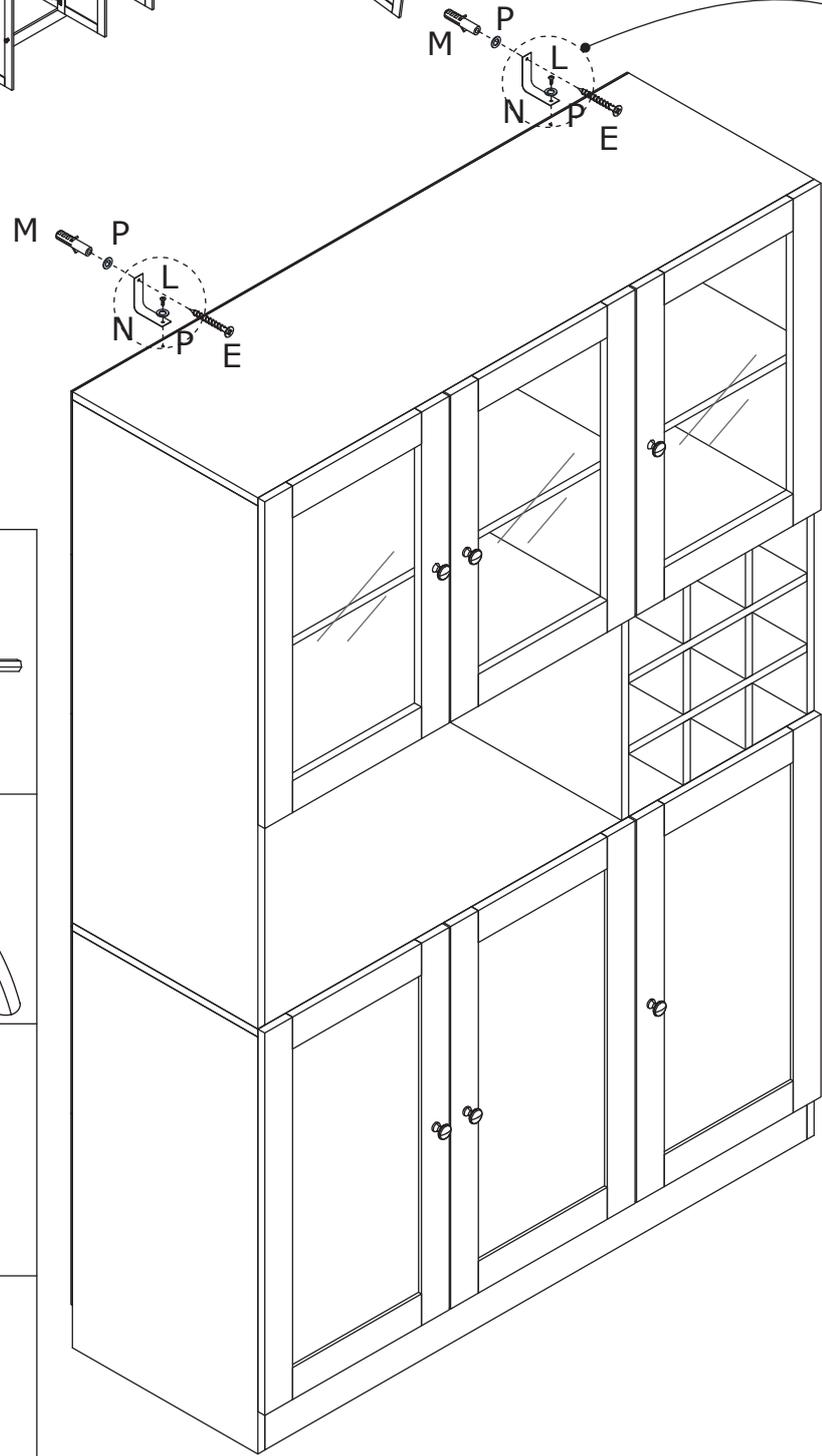

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.