



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

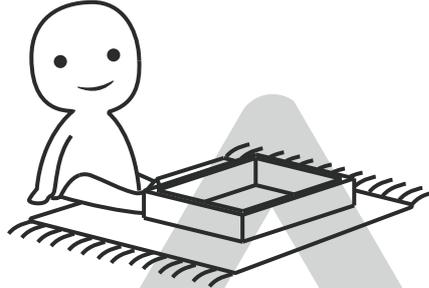




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

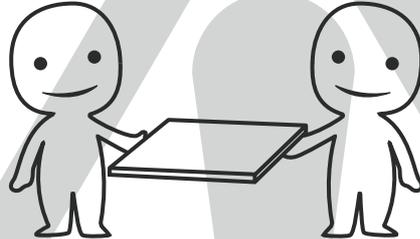

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

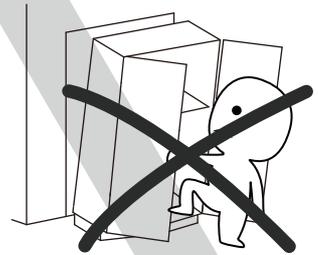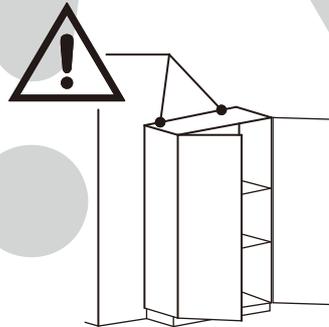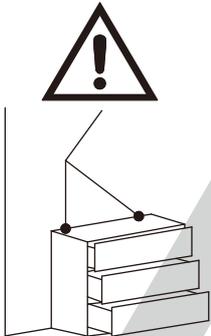

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.








Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

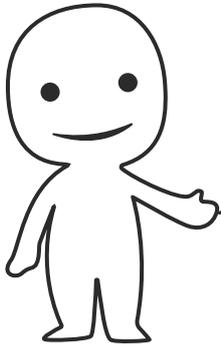


Please prepare the following tools

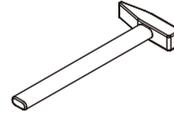

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size
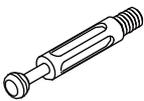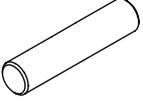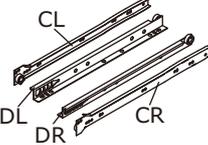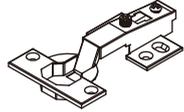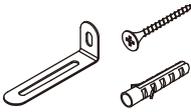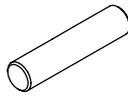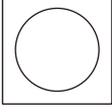
<p>A x 78+5</p>  <p>Ø6 x 35 mm</p>	<p>B x 14+1</p>  <p>Ø15 x 11 mm</p>	<p>C x 9</p>  <p>Ø8 x 30 mm</p>	<p>D x 4</p>  <p>CL DL DR CR L=300 mm</p>	<p>E x 32+4</p>  <p>Ø3 x 12 mm</p>
<p>F x 64+5</p>  <p>Ø15 x 9.5 mm</p>	<p>G x 2</p> 	<p>H x 1</p>  <p>x2</p>	<p>J x 2</p>  <p>Ø4 x 20 mm</p>	<p>K x 5</p>  <p>Ø4 x 18 mm</p>
<p>L x 10</p> 	<p>M x 16+1</p>  <p>Ø4 x 30 mm</p>	<p>N x 1</p> 	<p>P x 21+2</p>  <p>Ø6 x 30 mm</p>	<p>Q x 51+5</p>  <p>Ø3.5 x 14 mm</p>
<p>R x 78+5</p> 	<p>S x 12+1</p> 			

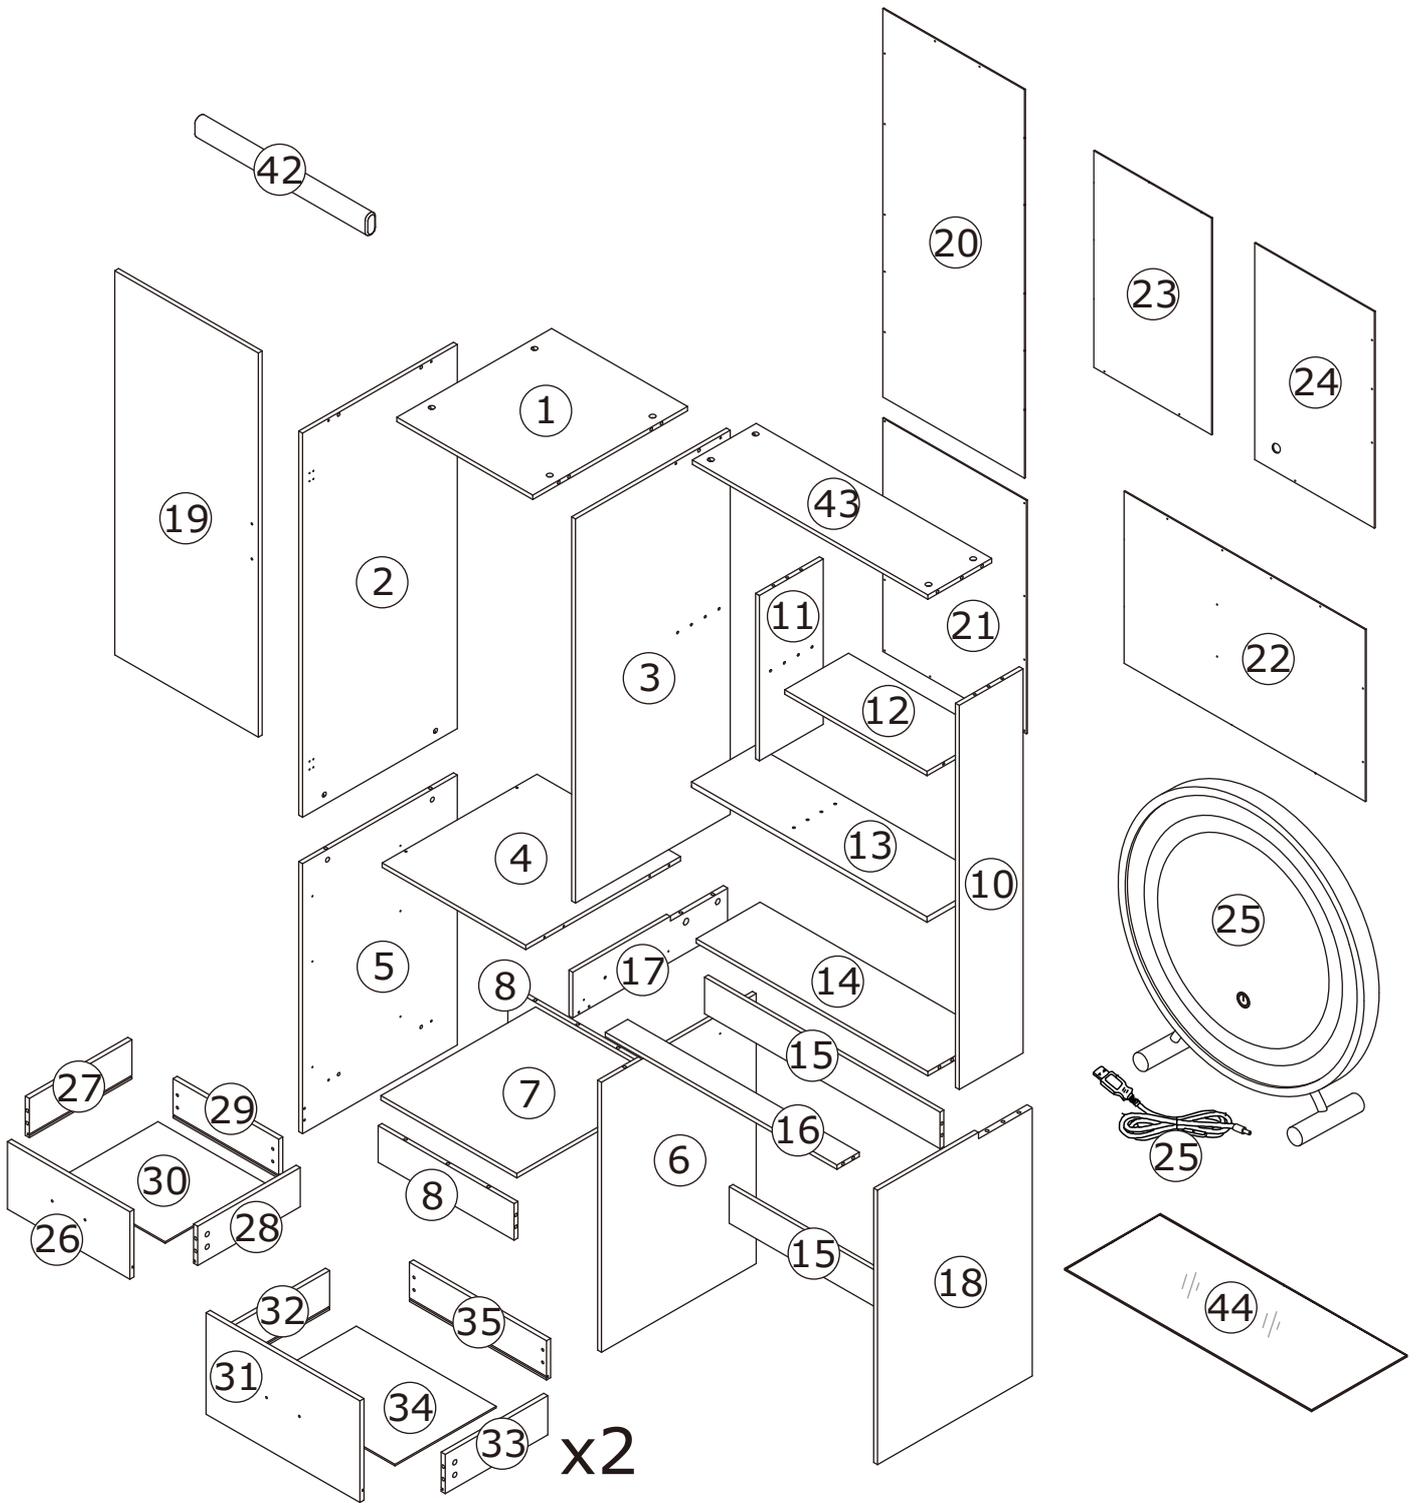


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




This is a permanent label. Do not remove!

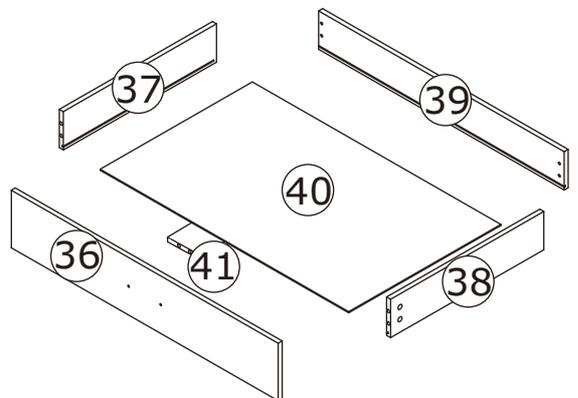




1

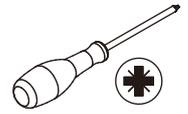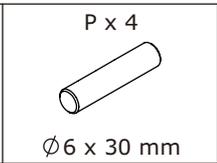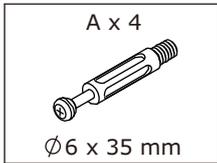




Screw eccentric rod(A) and insert wooden dowel(P) into board 2 and 3 at first.

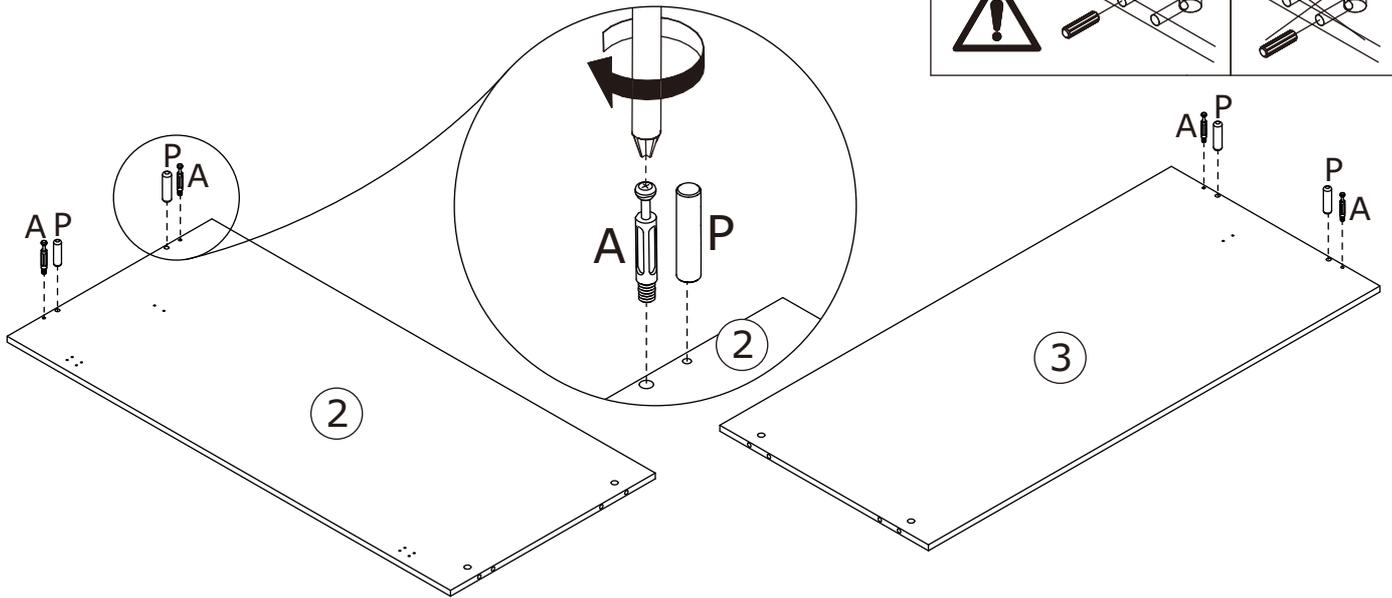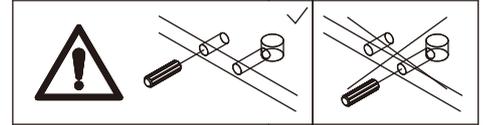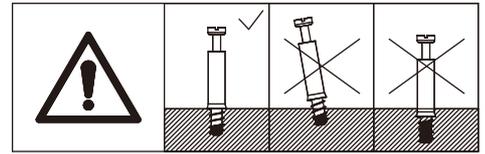



2

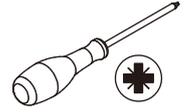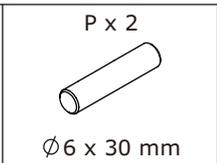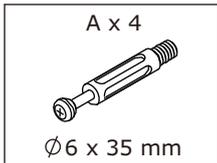


Flip board 3 to back, screw eccentric rod(A) and insert wooden dowel(P) into board 3 at first.

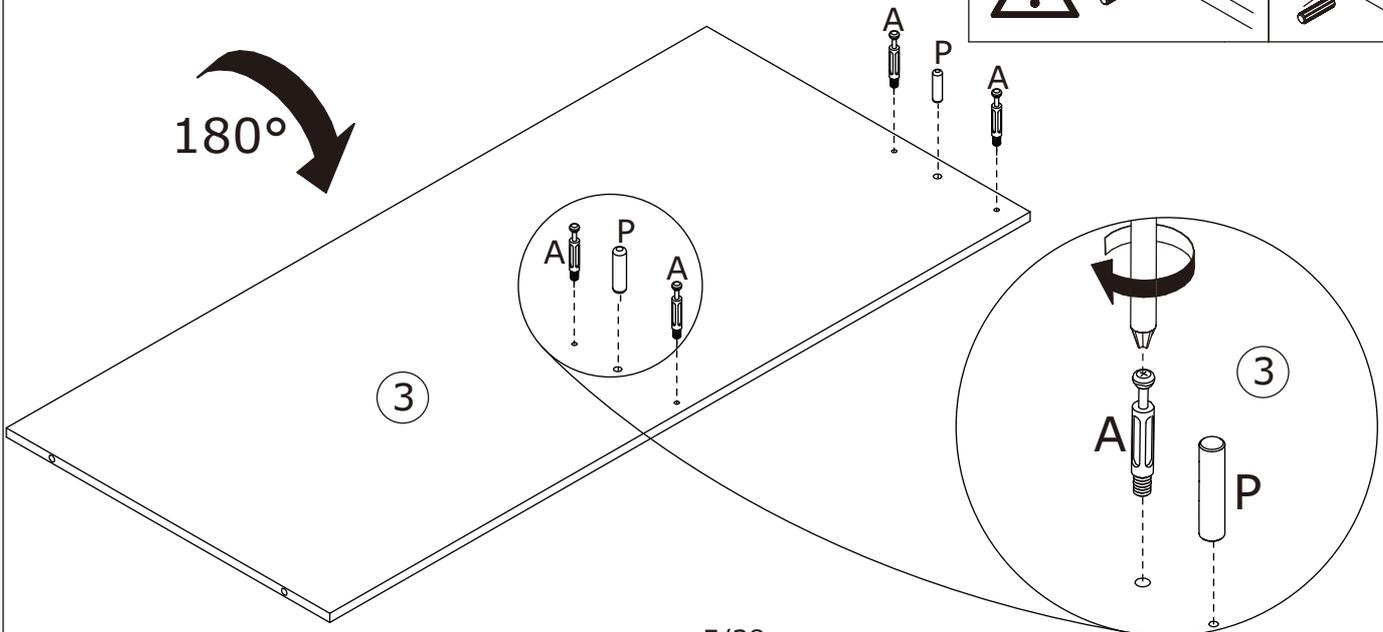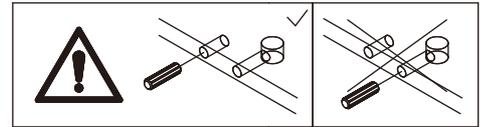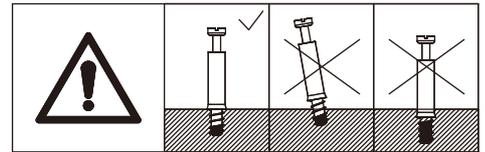





3

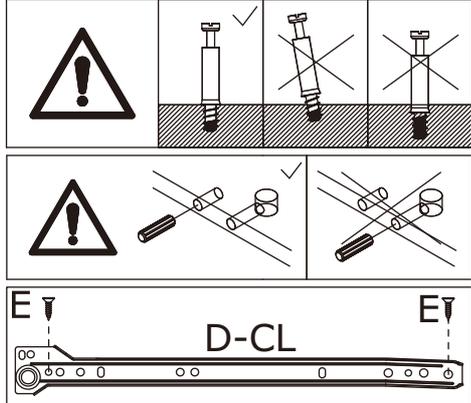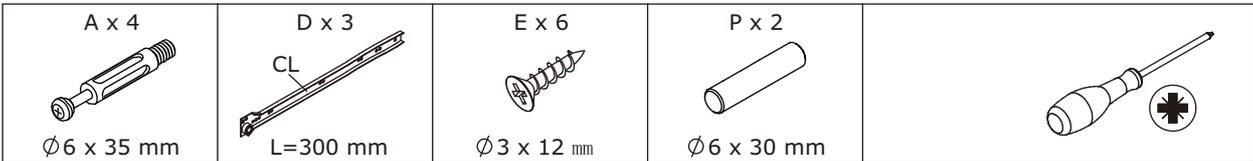



Screw eccentric rod(A) and insert wooden dowel(P) into board 5 at first.
Fix rail(D-CL) to board 5 with screw(E) as shown.

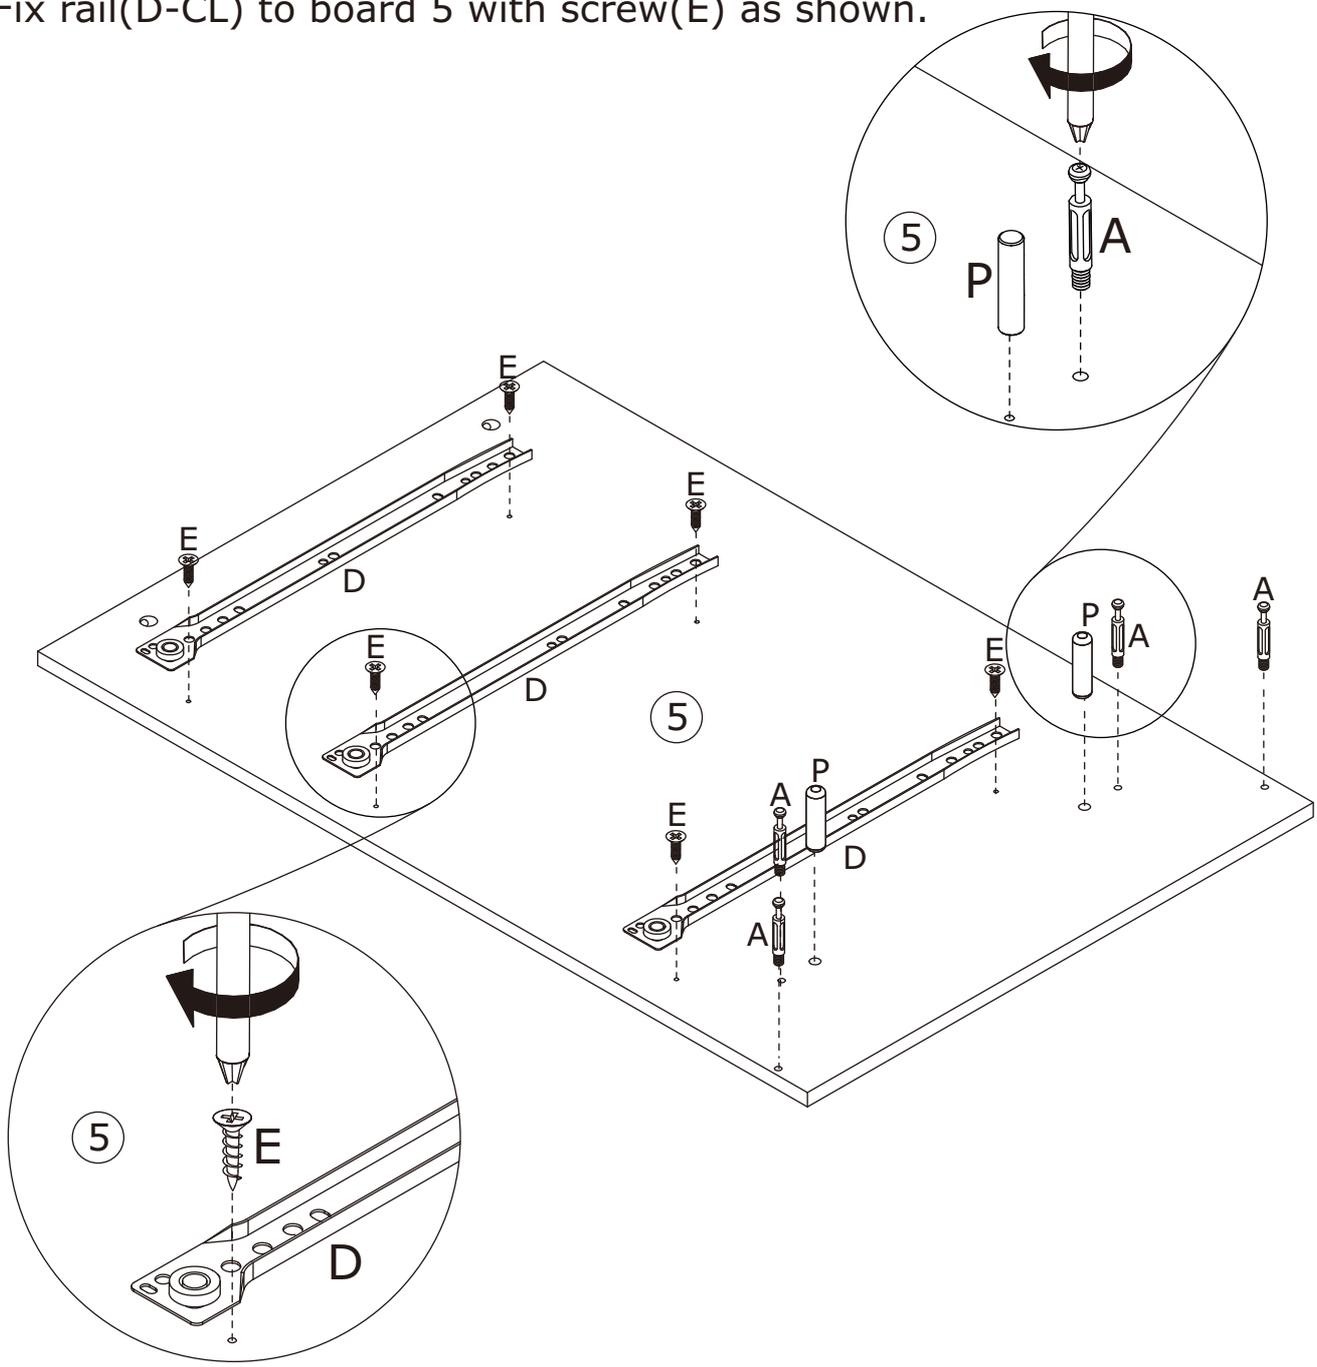



4

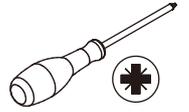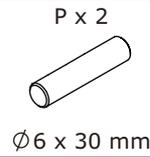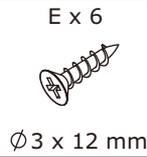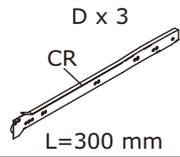




Screw eccentric rod(A) into board 6 at first. Flip to back, screw eccentric rod(A) and insert wooden dowel(P) into, fix rail(D-CR) with screw(E) as shown.

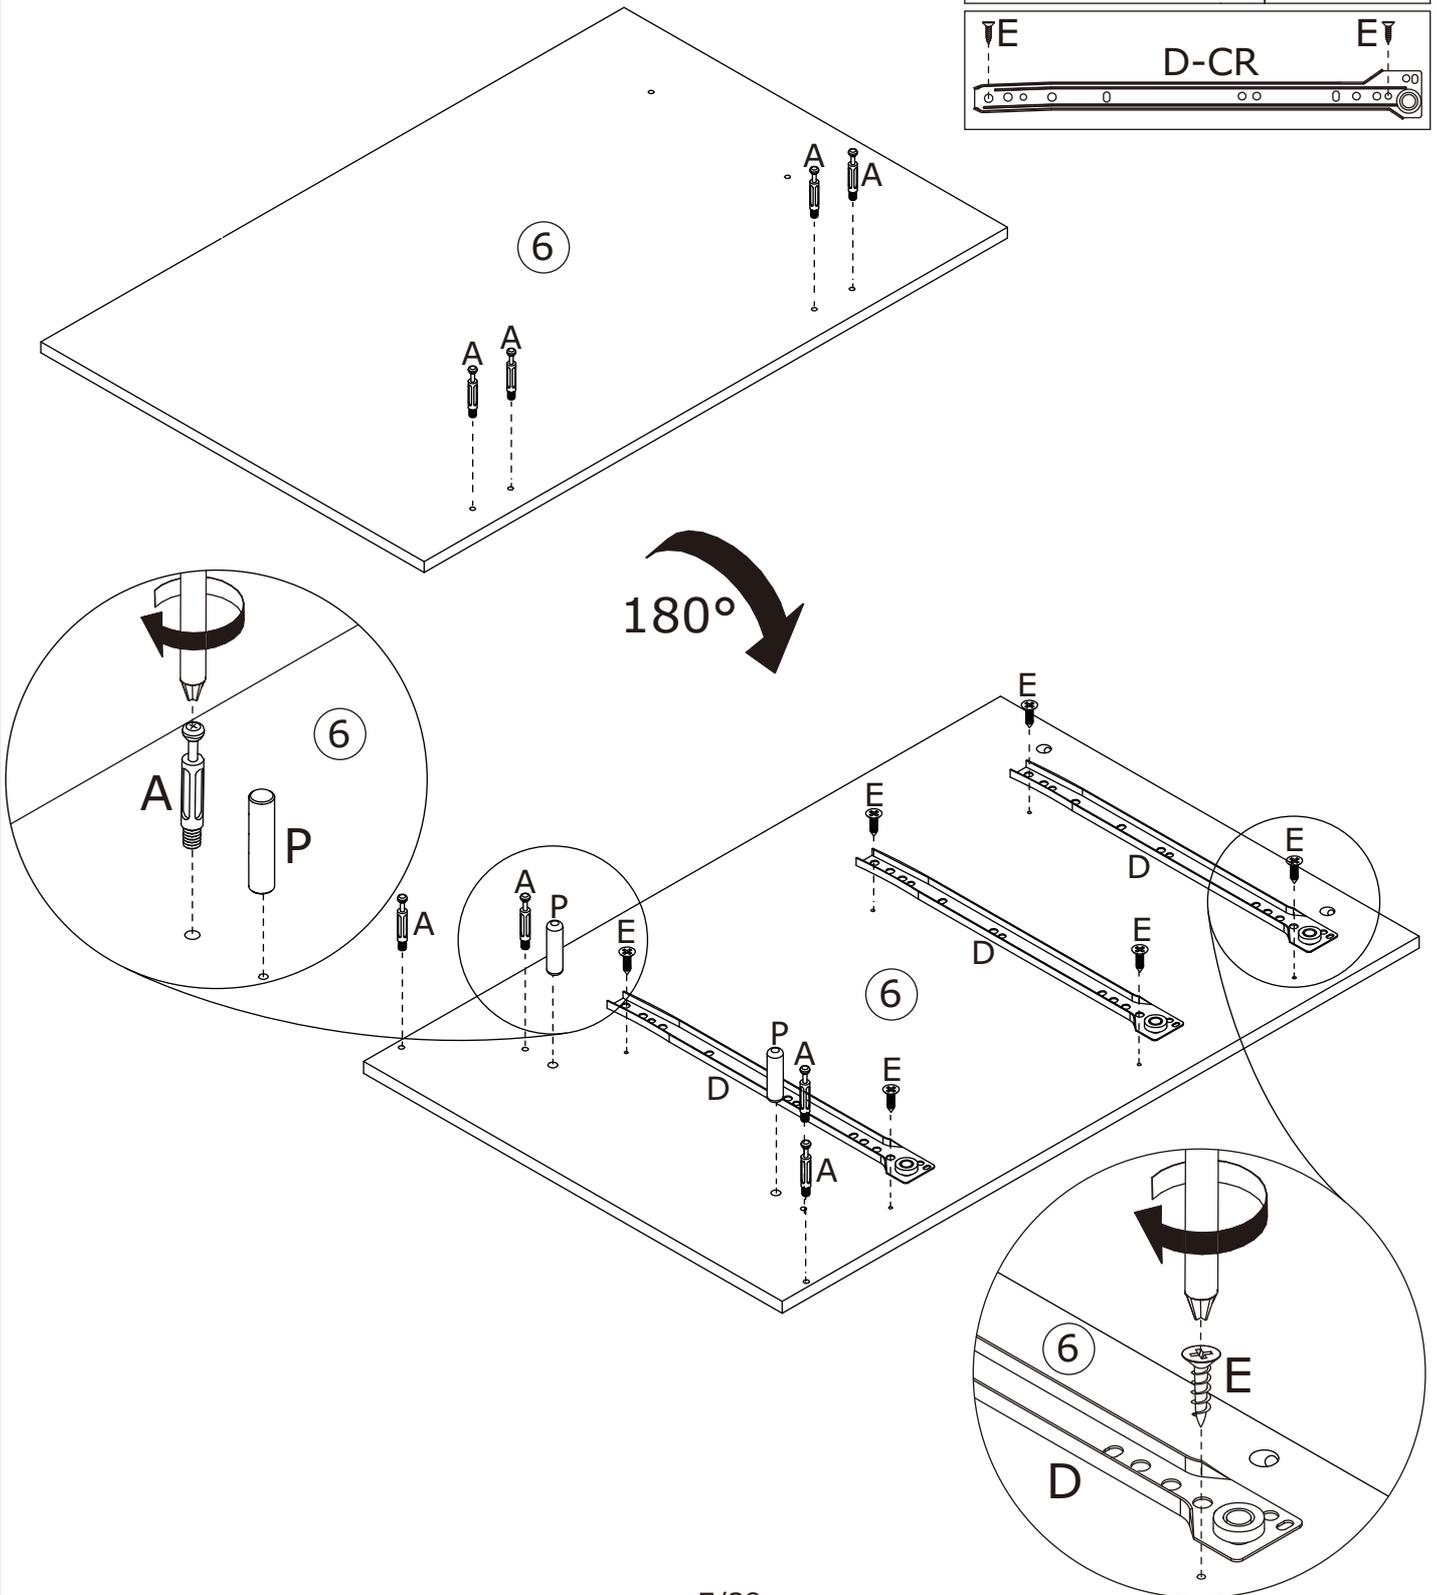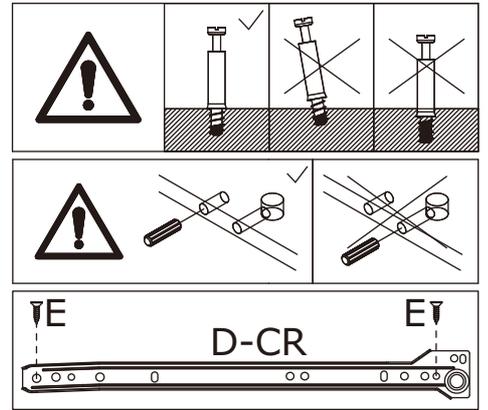



7

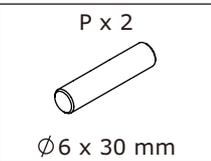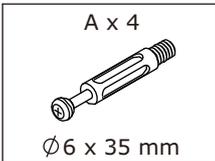




Screw eccentric rod(A) and insert wooden dowel(P) into board 11 and 13 at first.

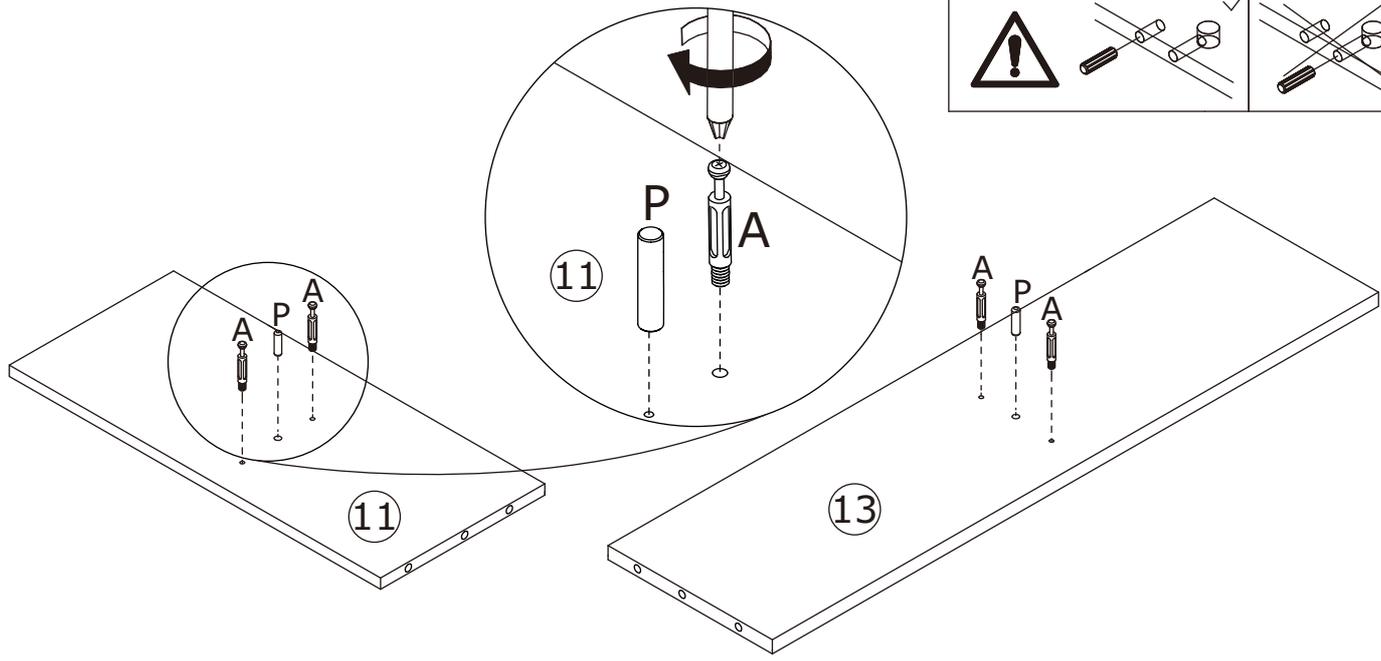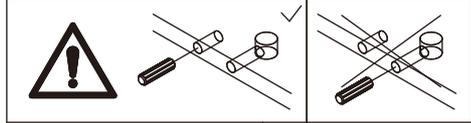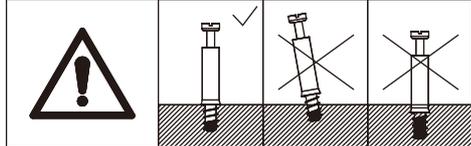




8

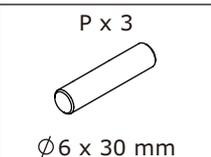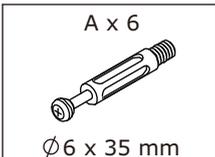




Screw eccentric rod(A) and insert wooden dowel(P) into board 10 at first.

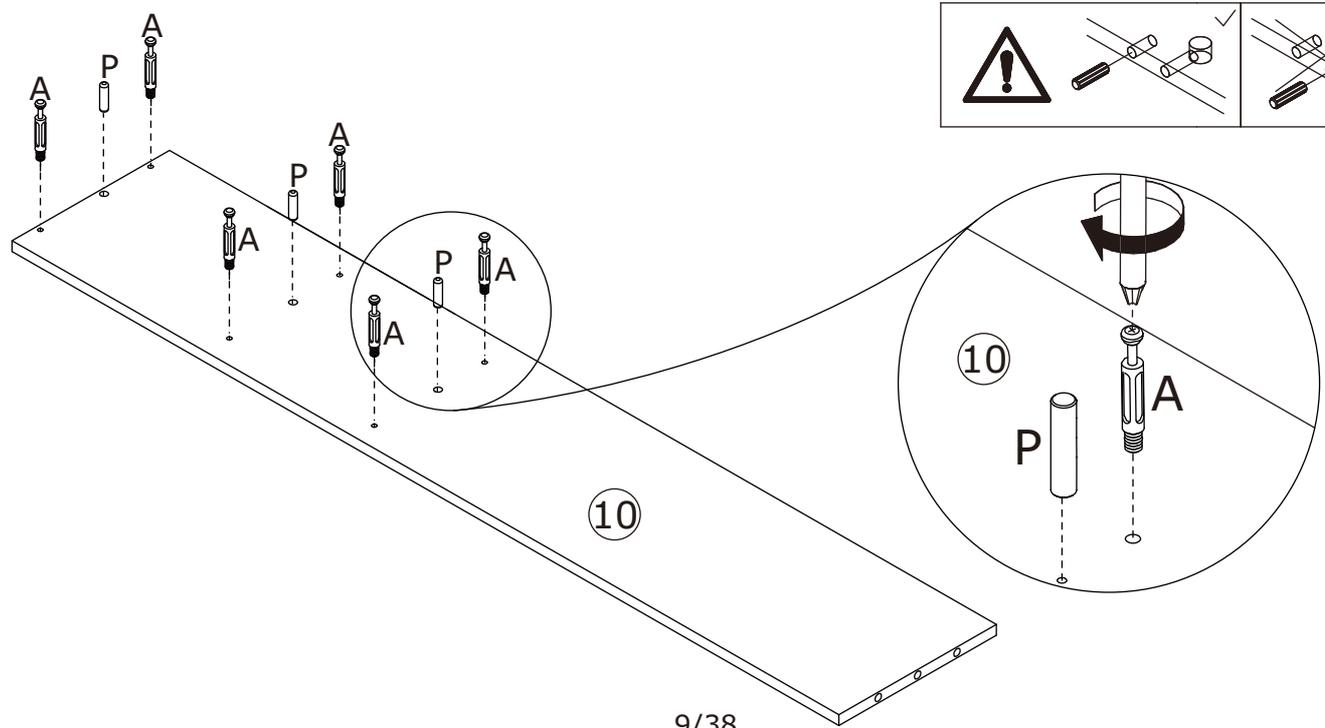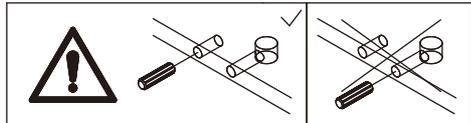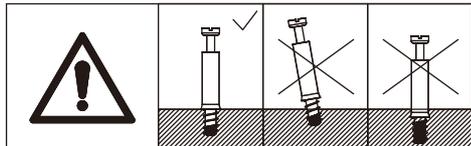



9

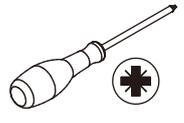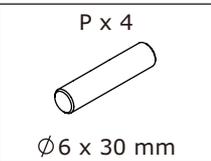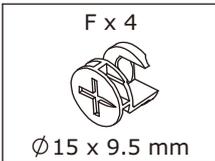




Attach board 8 to board 7 using wooden dowel(P), add cam lock(F) into board 8 and turn clockwise to tighten as shown.

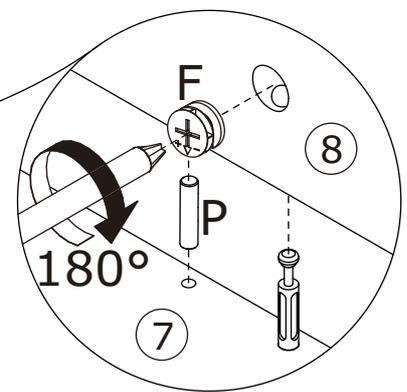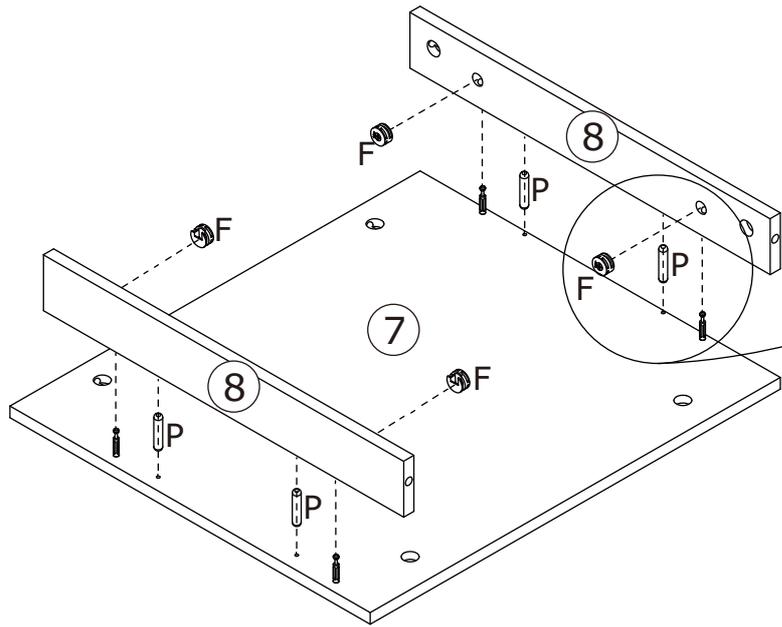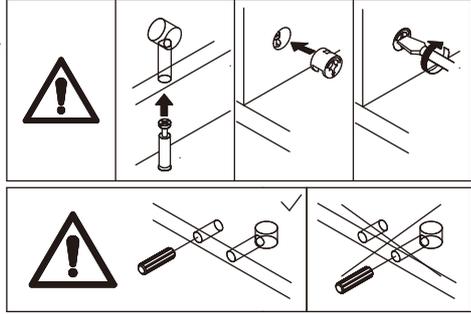



10

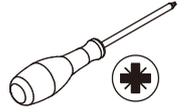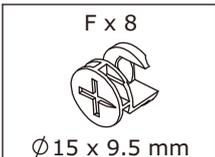



Connect board 5 and 6 to board 8 and 7, add cam lock(F) into board 8,7 and turn clockwise to tighten as shown.

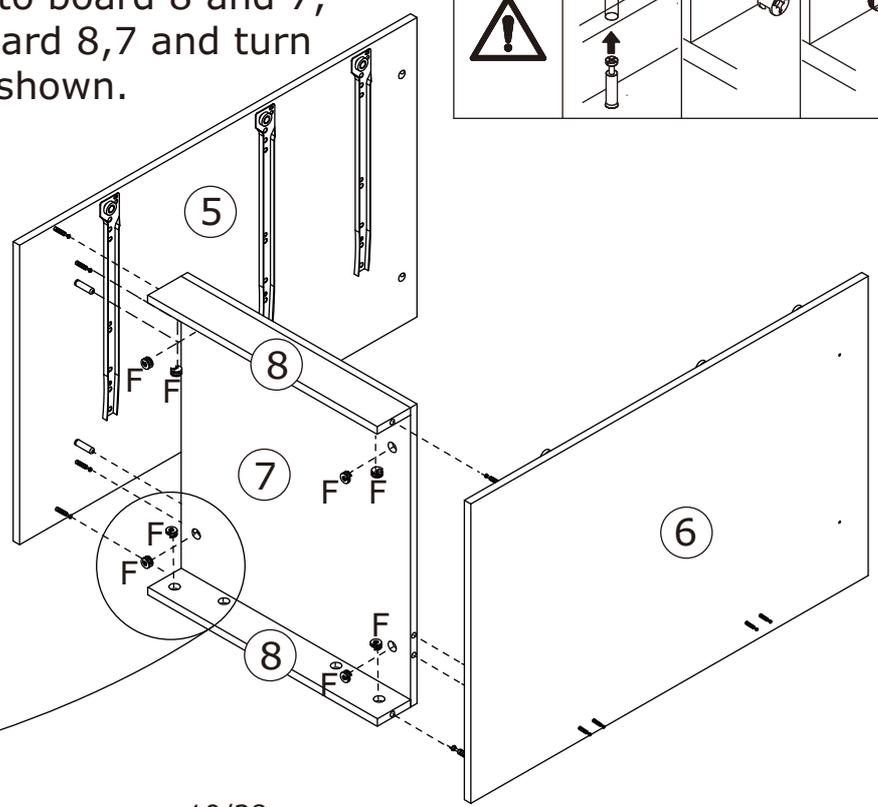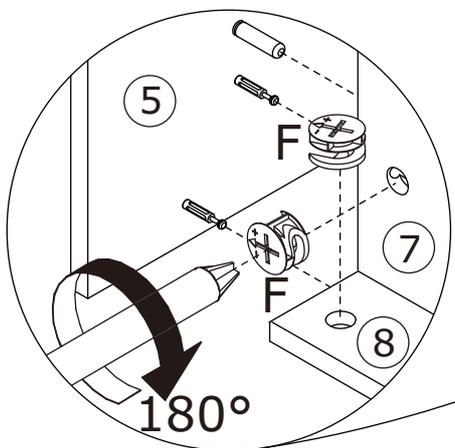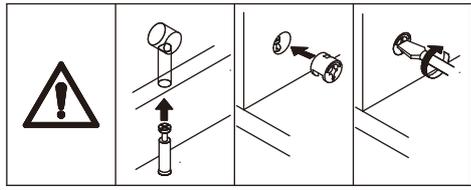




11

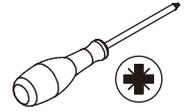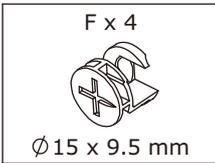




Connect board 2 and 3 to board 1, add cam lock(F) into board 1 and turn clockwise to tighten as shown.

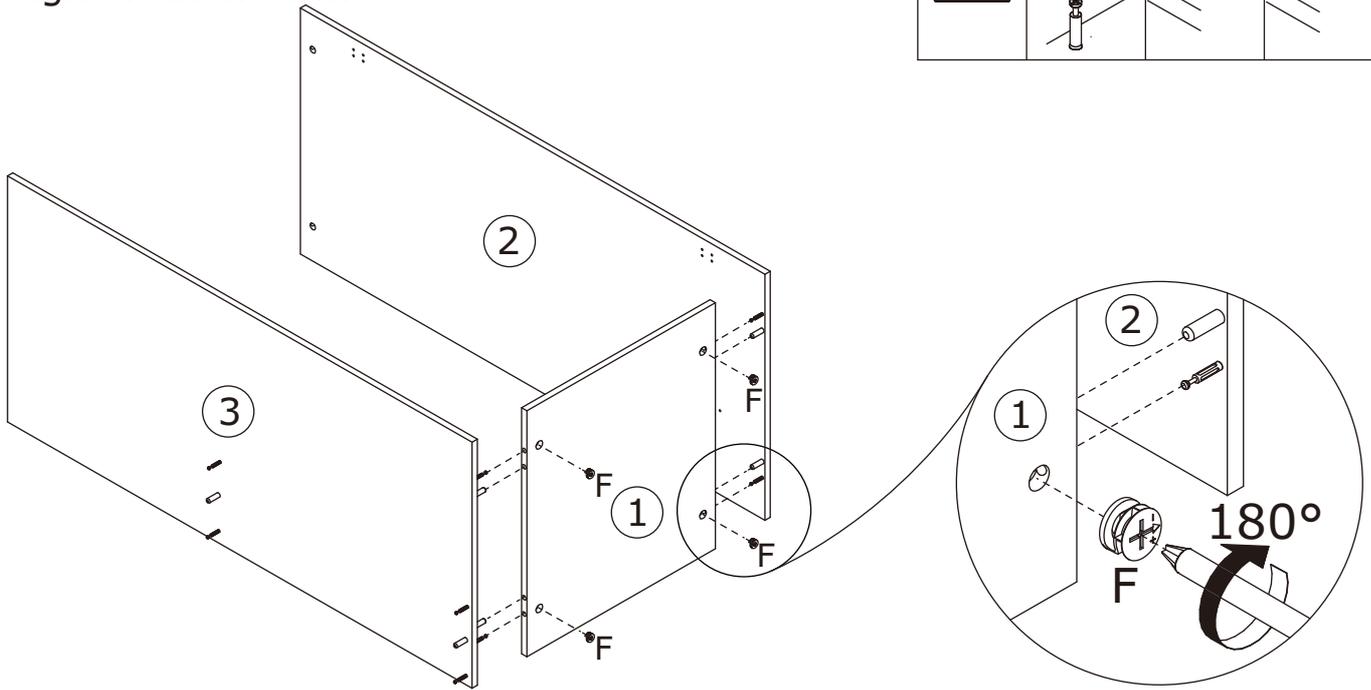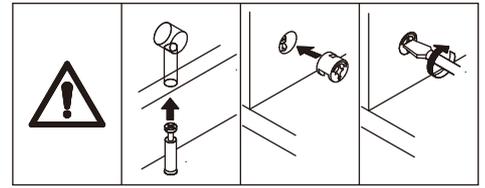



12

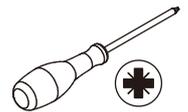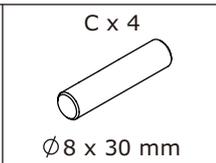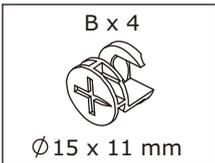




Attach board 4 to board 2 and 3 using wooden dowel(C), add cam lock(B) into board 2,3 and turn clockwise to tighten as shown.

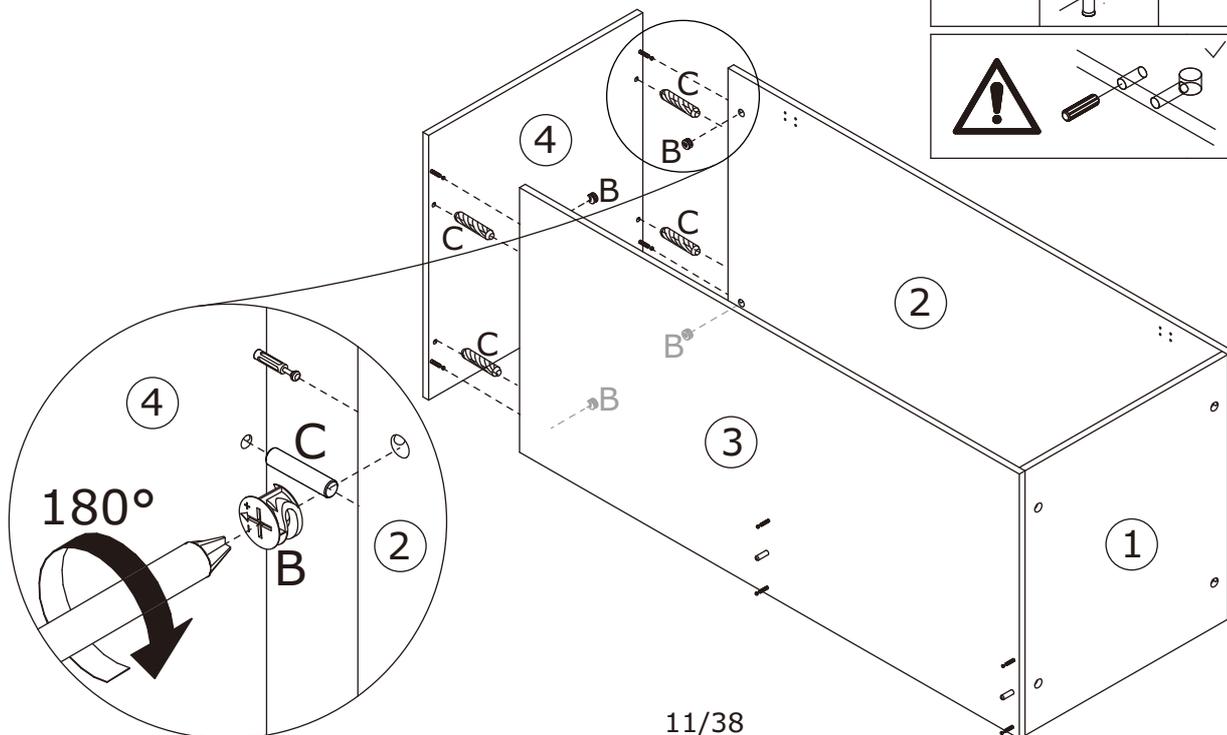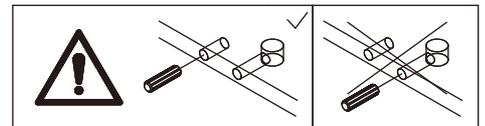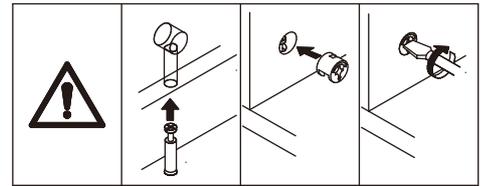








13
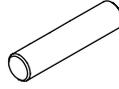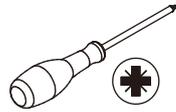
<p>A x 4</p>  <p>Ø6 x 35 mm</p>	<p>B x 4</p>  <p>Ø15 x 11 mm</p>	<p>C x 4</p>  <p>Ø8 x 30 mm</p>	
--	---	--	---

Screw eccentric rod(A) and insert wooden dowel(C) into board 4 at first. Attach board 4 to board 5 and 6, add cam lock(B) into board 5,6 and turn clockwise to tighten as shown.



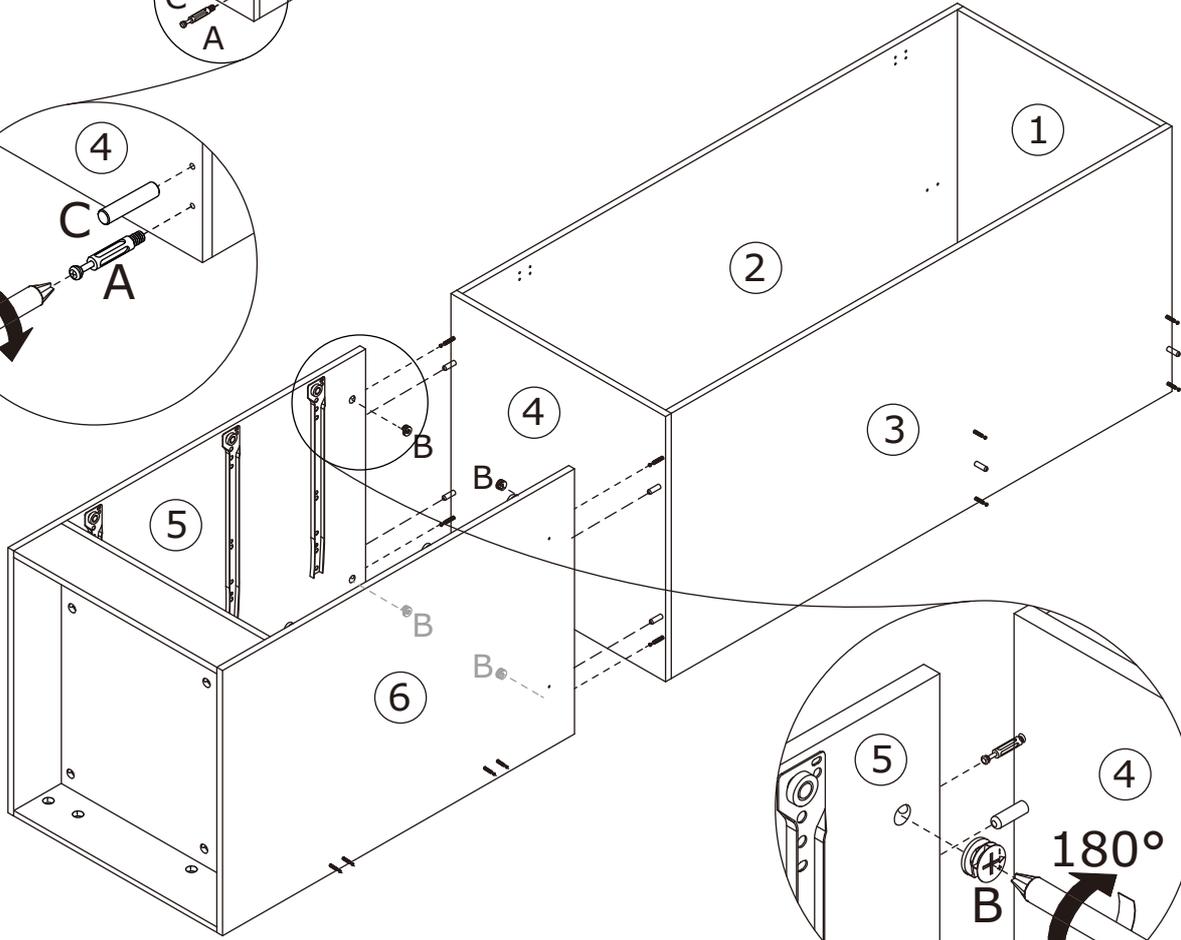
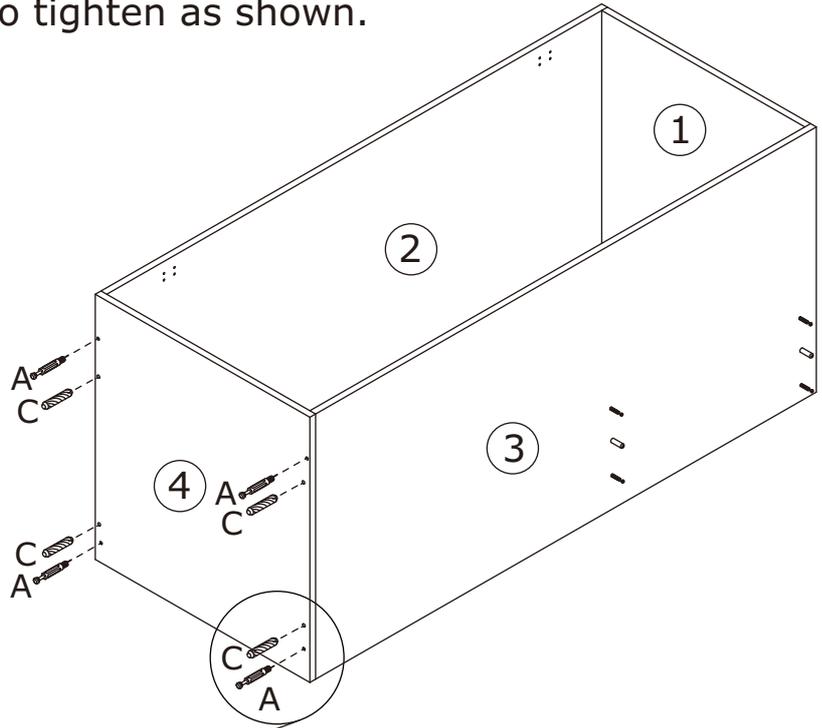
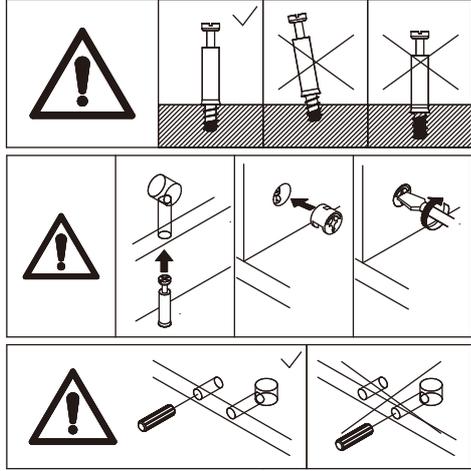


14

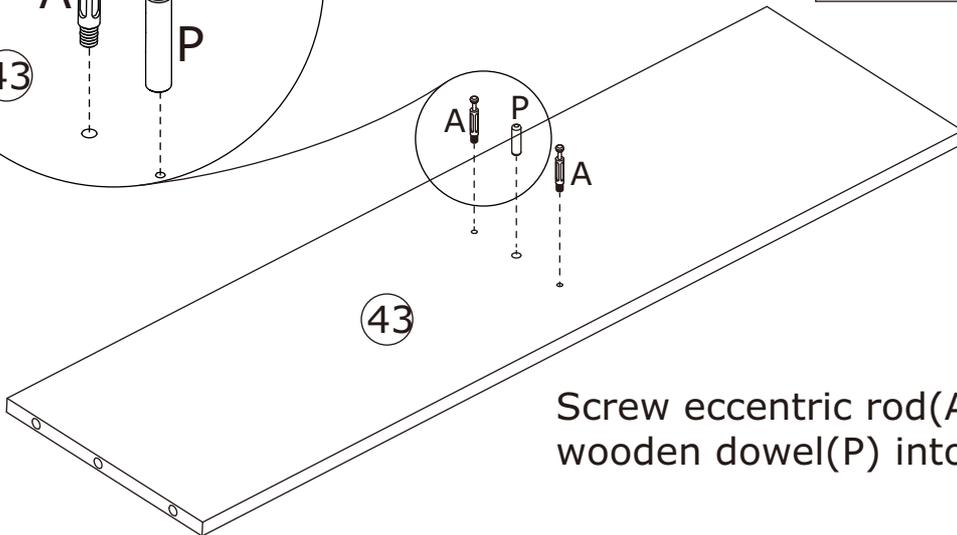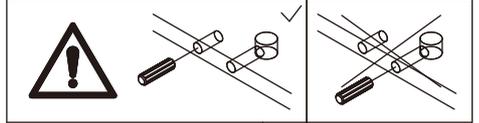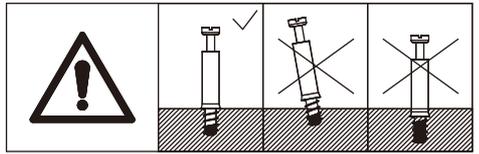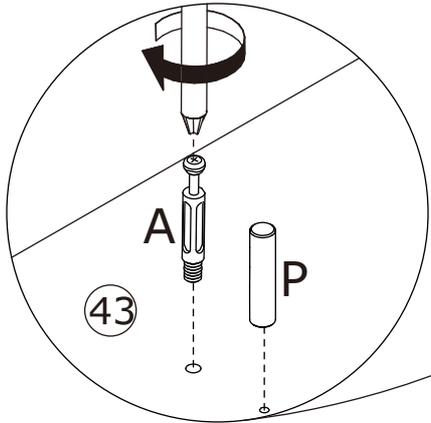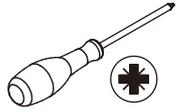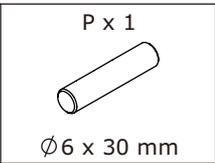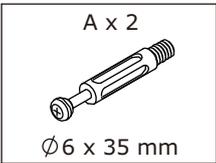




Screw eccentric rod(A) and insert wooden dowel(P) into board 43 at first.

15

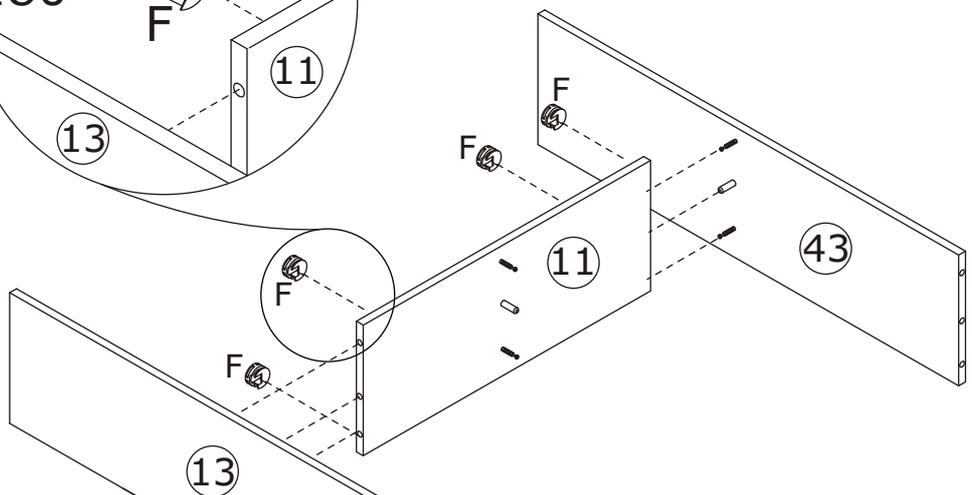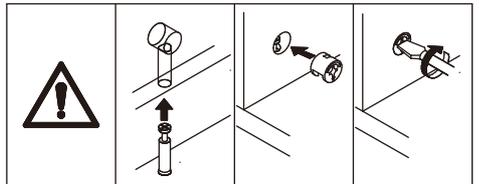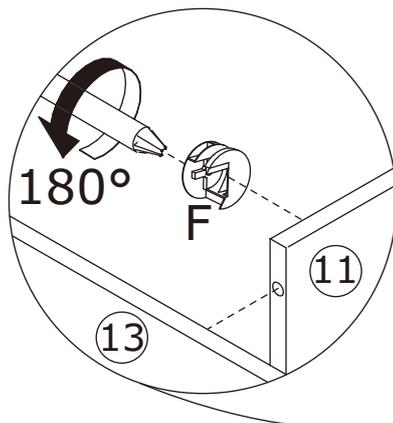
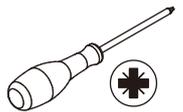
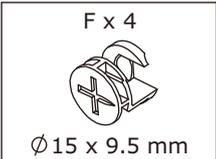


Connect board 43 and 13 to board 11, add cam lock(F) into board 11 and turn clockwise to tighten as shown.



16

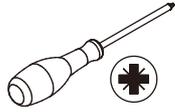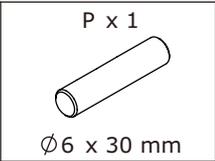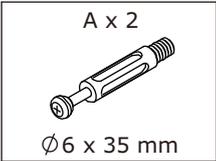




Screw eccentric rod(A) and insert wooden dowel(C) into board 14 at first.

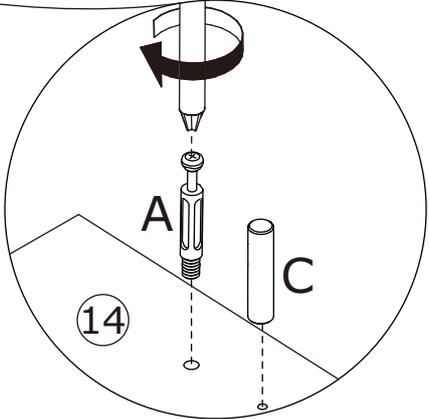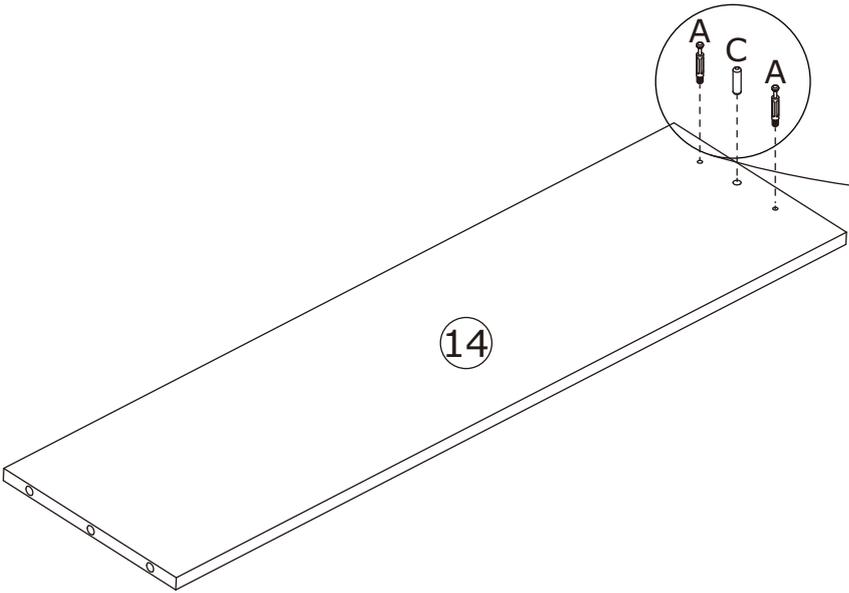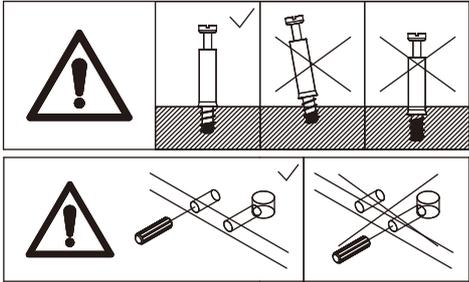

17

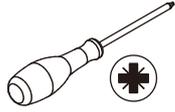
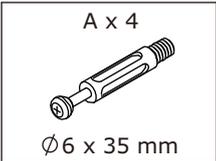


Flip board 14 to back, screw eccentric rod(A) at first.

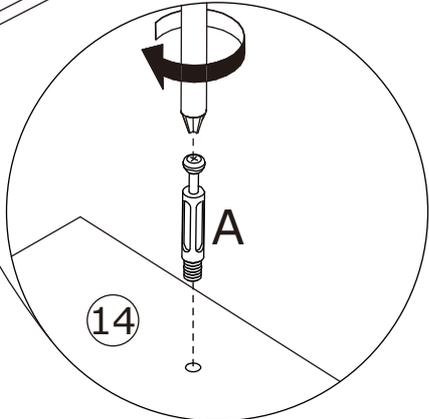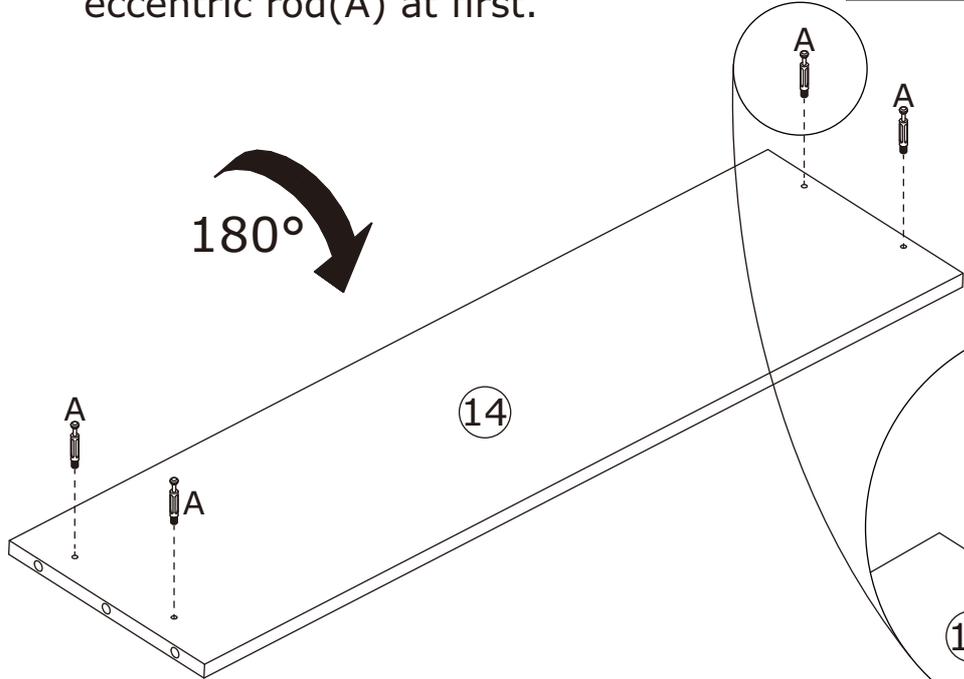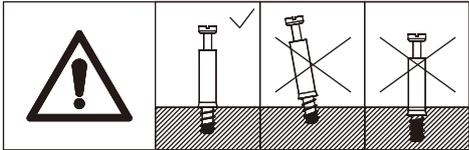


18

<p>F x 4</p>  <p>Ø 15 x 9.5 mm</p>	<p>J x 2</p>  <p>Ø 4 x 20 mm</p>
---	---

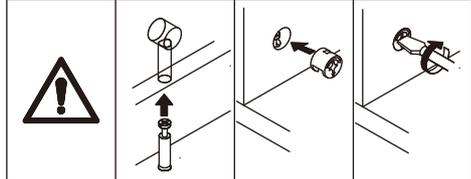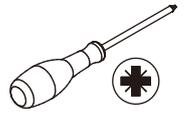




Fix board 17 to board 6 with screw(J) as shown.
Attach board 43 and 13 to board 3, add cam lock(F)
into board 43, 13 and turn clockwise to tighten as shown.

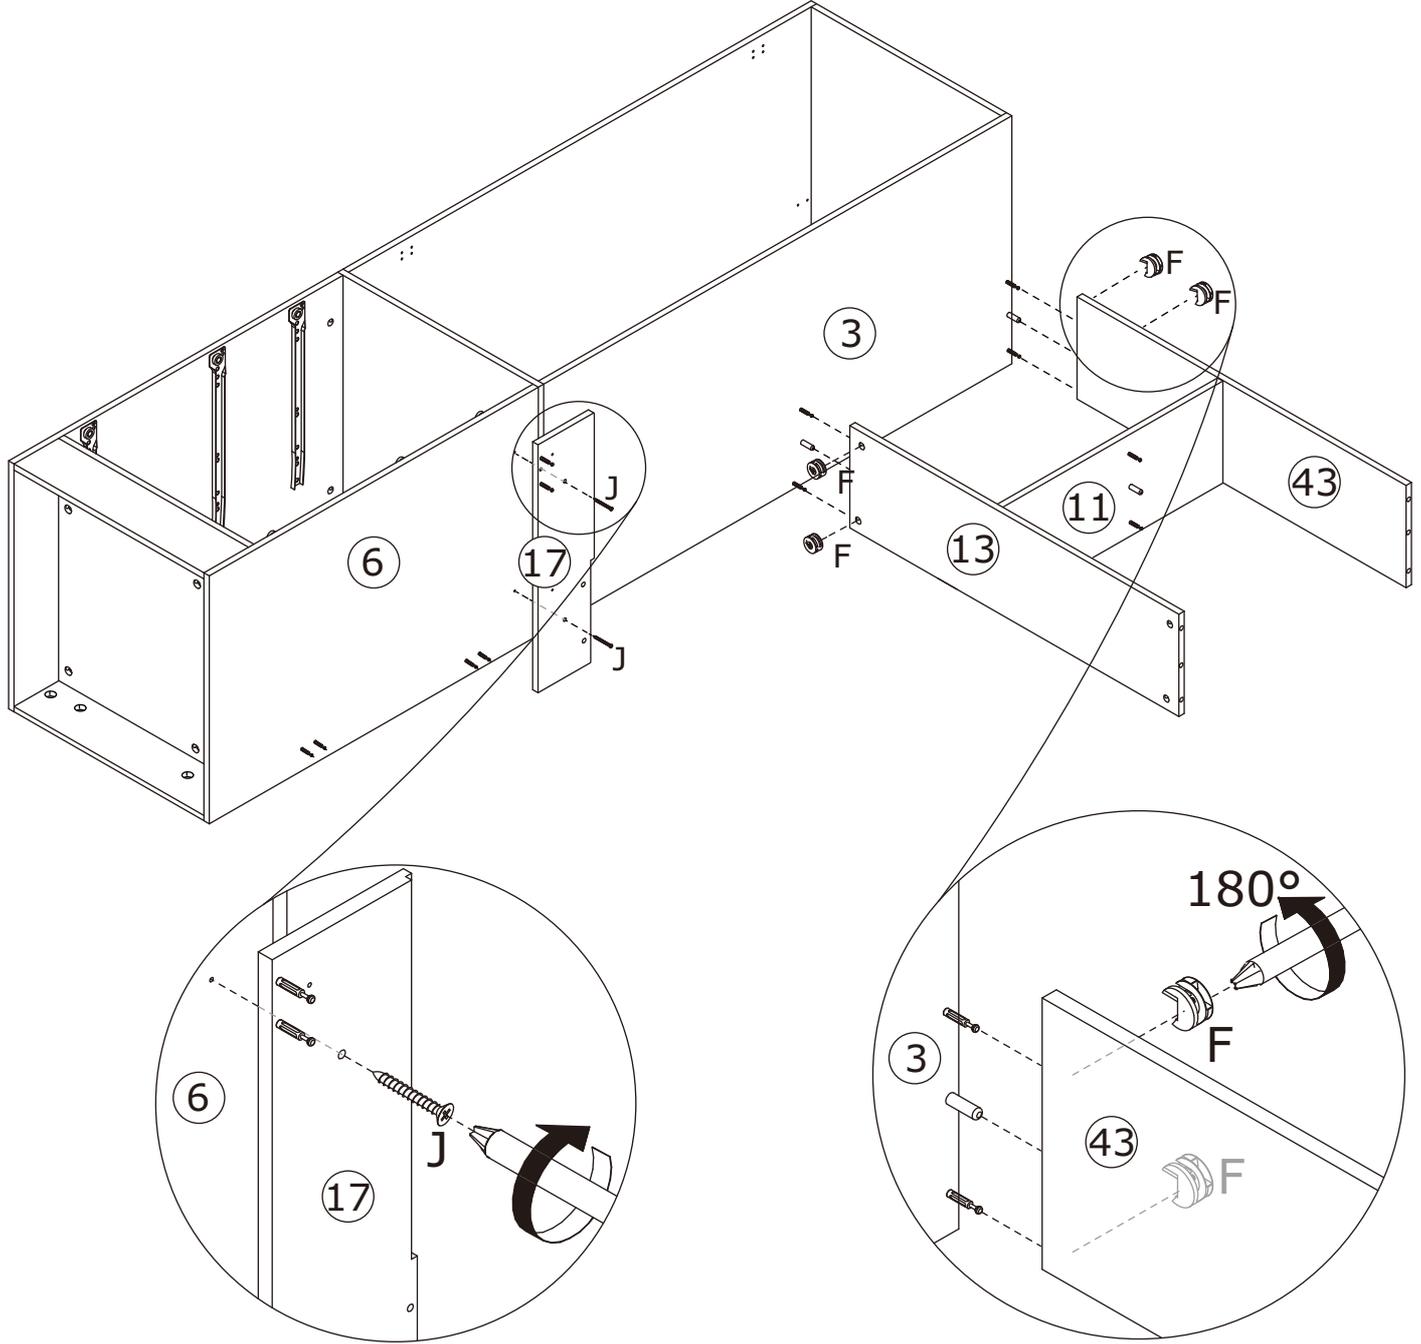

19

D x 1 CL L=300 mm	E x 2 Ø3 x 12 mm	F x 2 Ø15 x 9.5 mm	
-------------------------	---------------------	-----------------------	--



E	D-CL		E

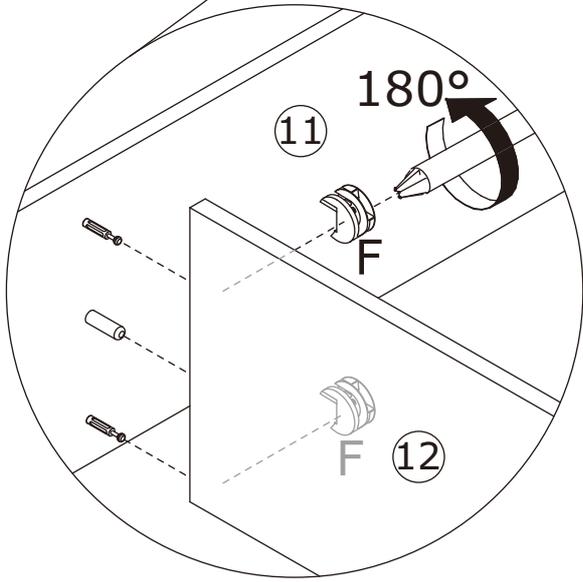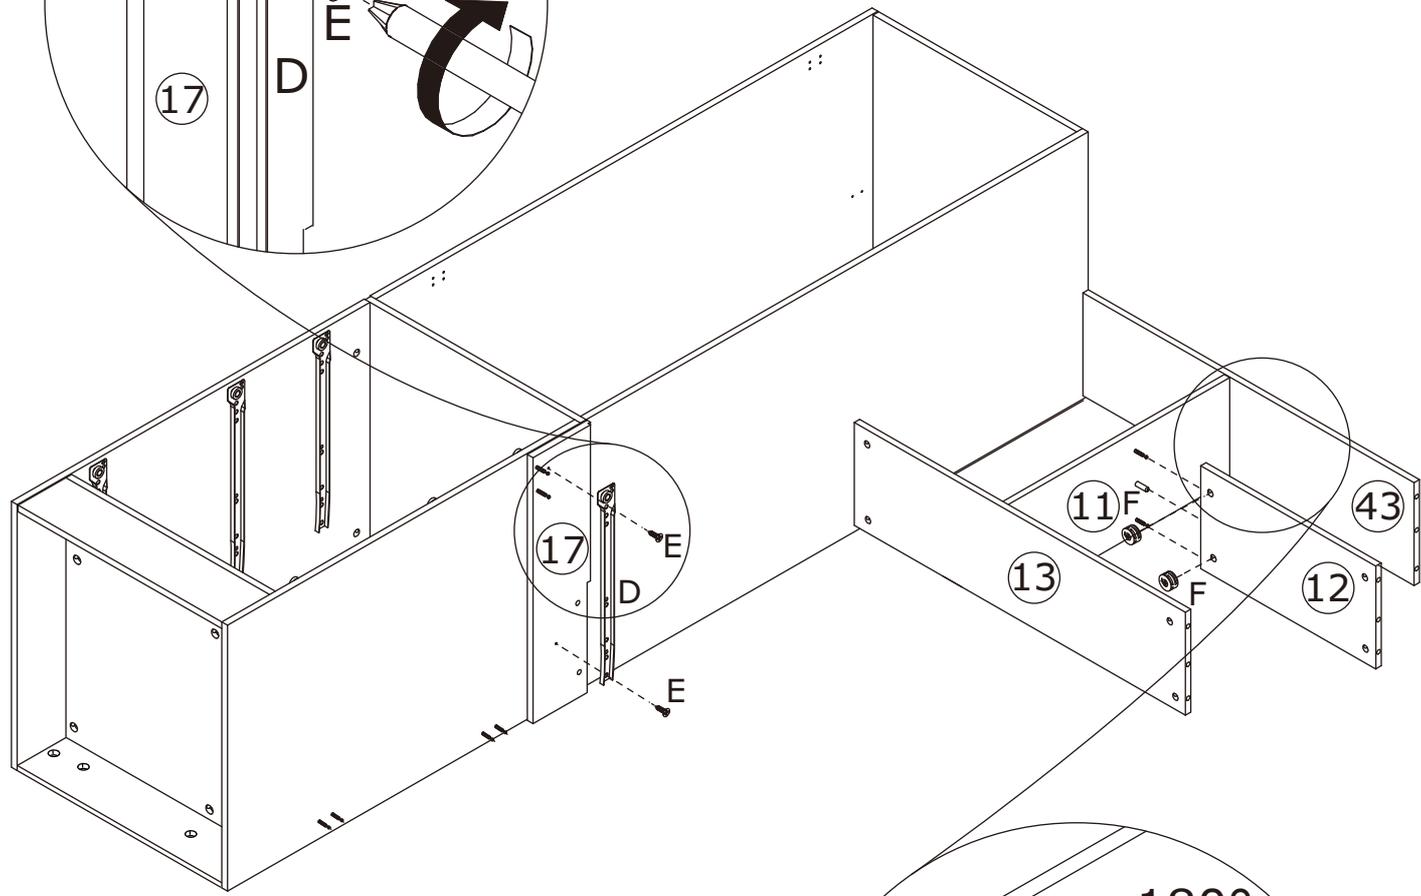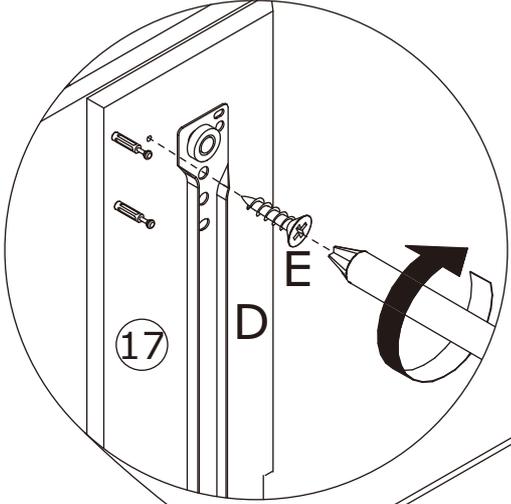



Fix rail(D-CL) to board 17 with screw(E) as shown. Attach board 12 to board 11, add cam lock(F) into board 12 and turn clockwise to tighten as shown.

20

B x 2
Ø 15 x 11 mm

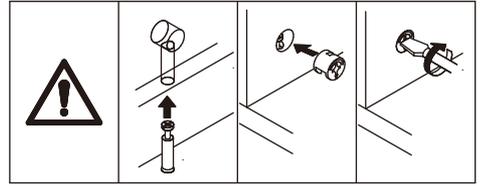
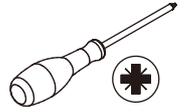


Attach board 14 to board 17, add cam lock(B) into board 17 and turn clockwise to tighten as shown.

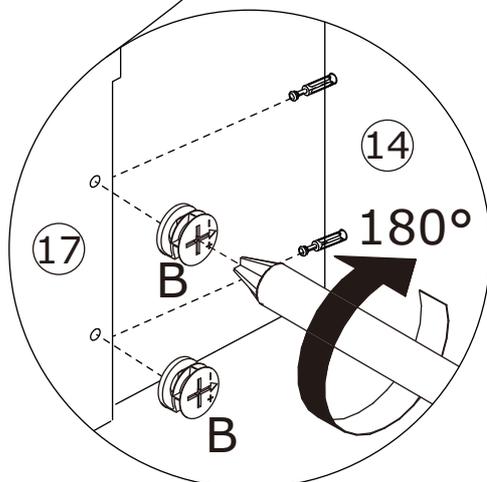
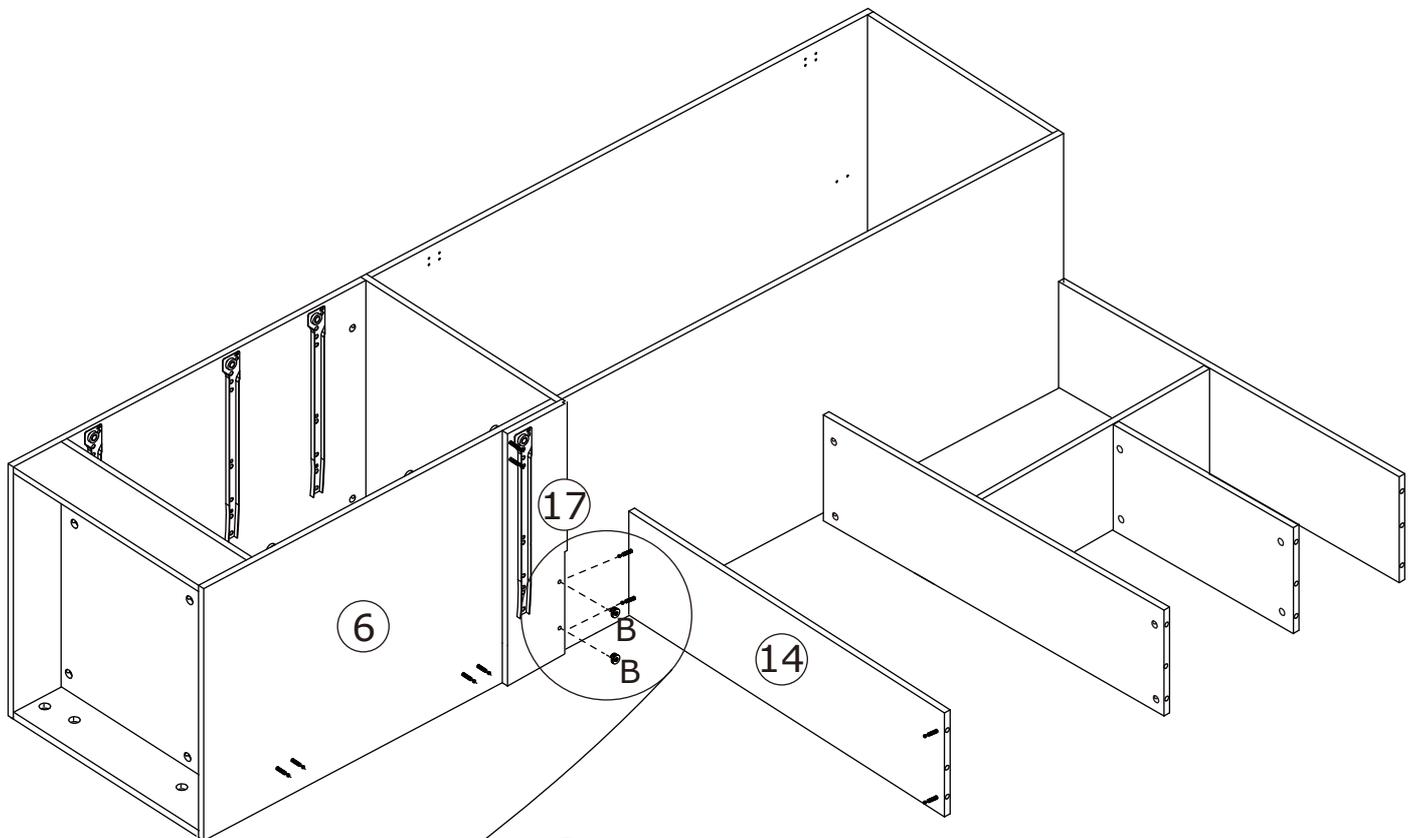


21





F x 2
Ø 15 x 9.5 mm

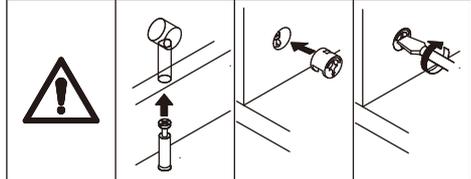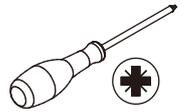



Attach board 16 to board 17, add cam lock(F) into board 16 and turn clockwise to tighten as shown.

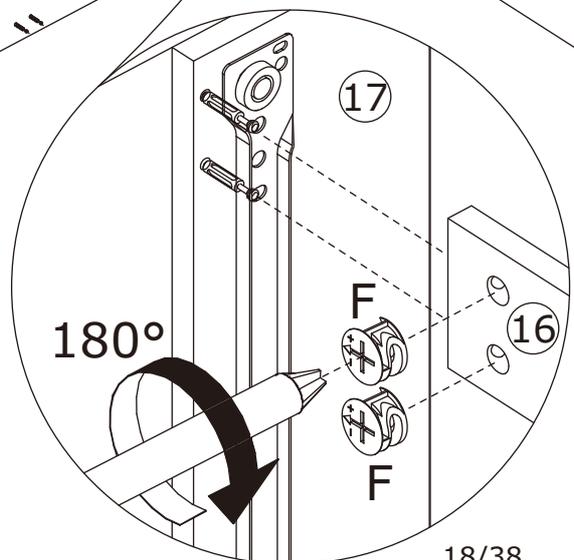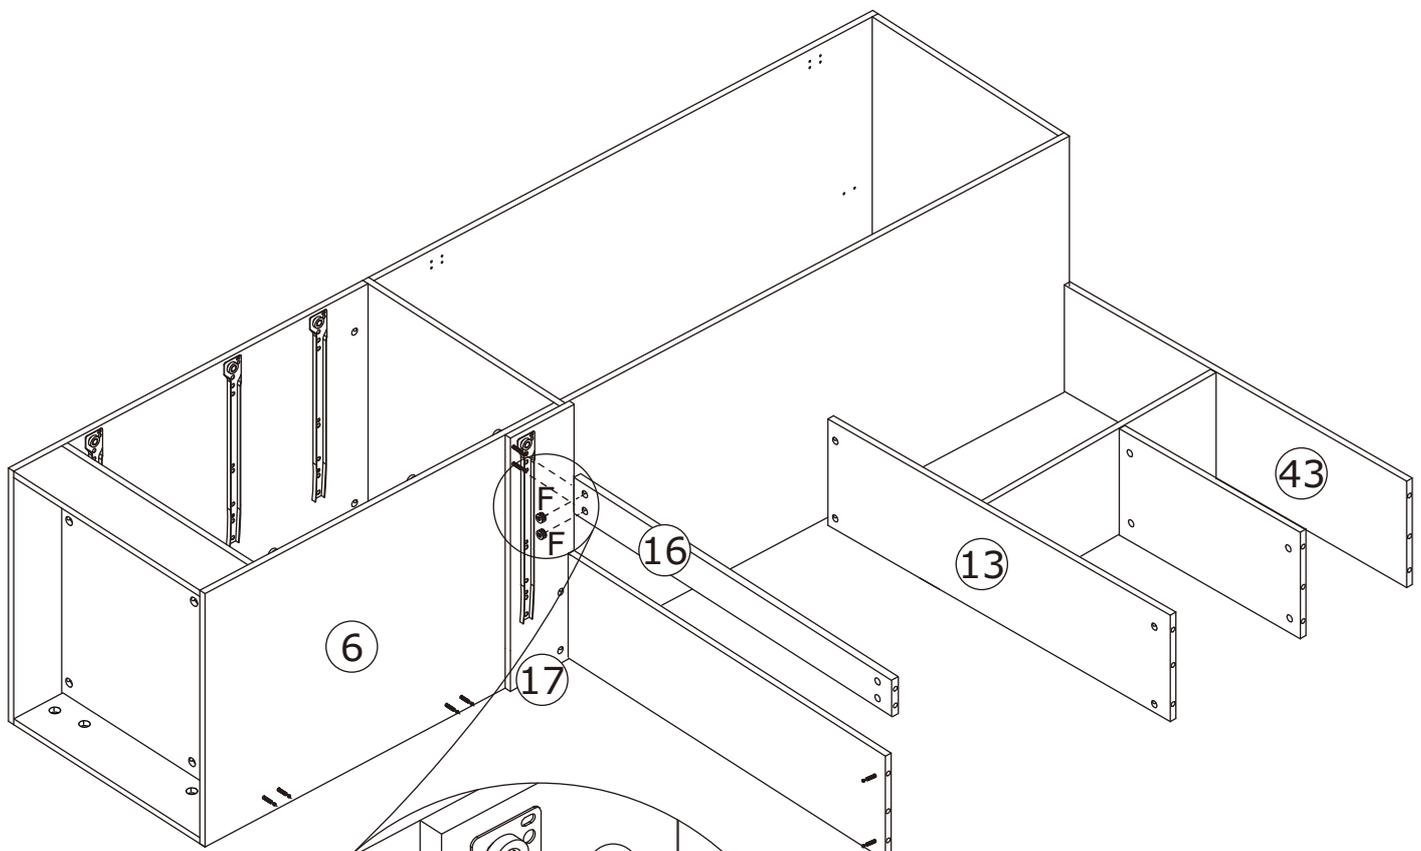

22

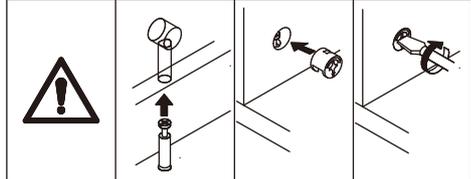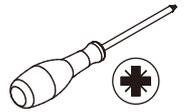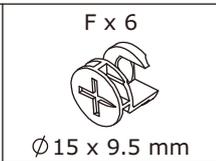
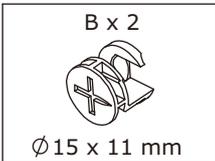


Attach board 10 to board 43, 12, 13 and 14, add cam lock(F) into board 9,12,13; cam lock(B) into board 10 and turn clockwise to tighten as shown.

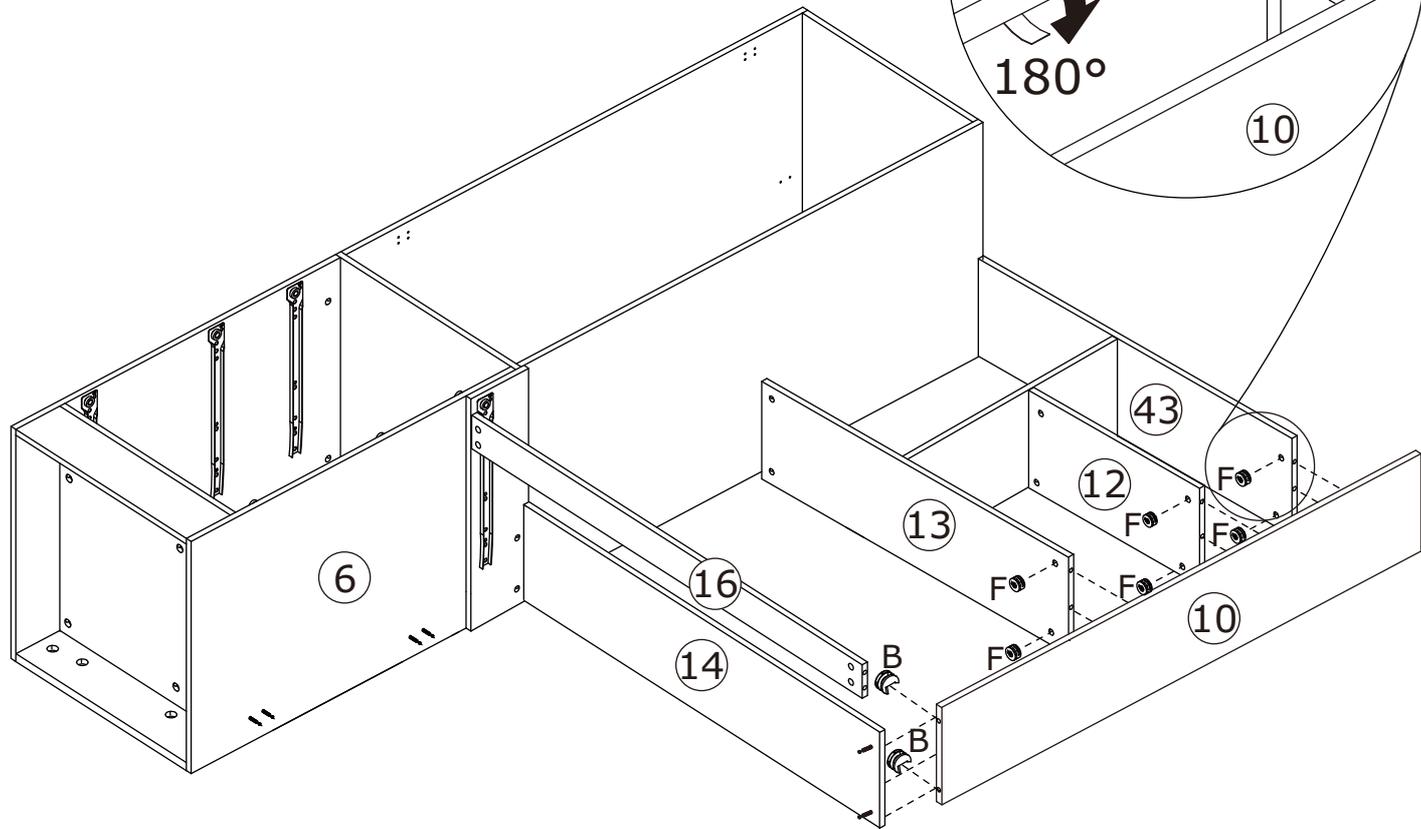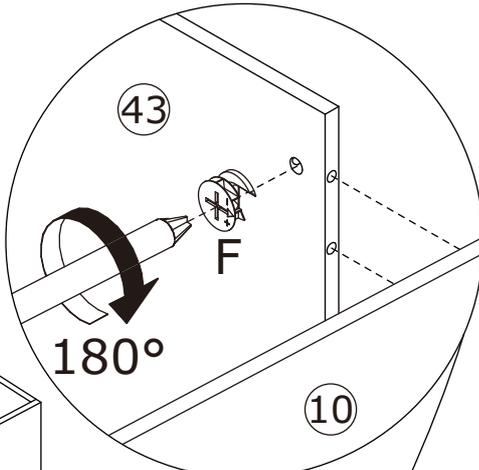


23


F x 4
Ø 15 x 9.5 mm

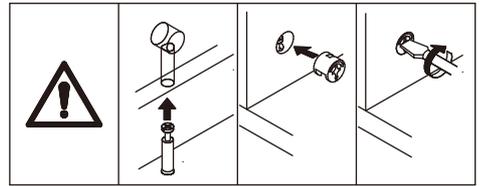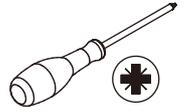


Attach board 15 to board 18, add cam lock(F) into board 15 and turn clockwise to tighten as shown.

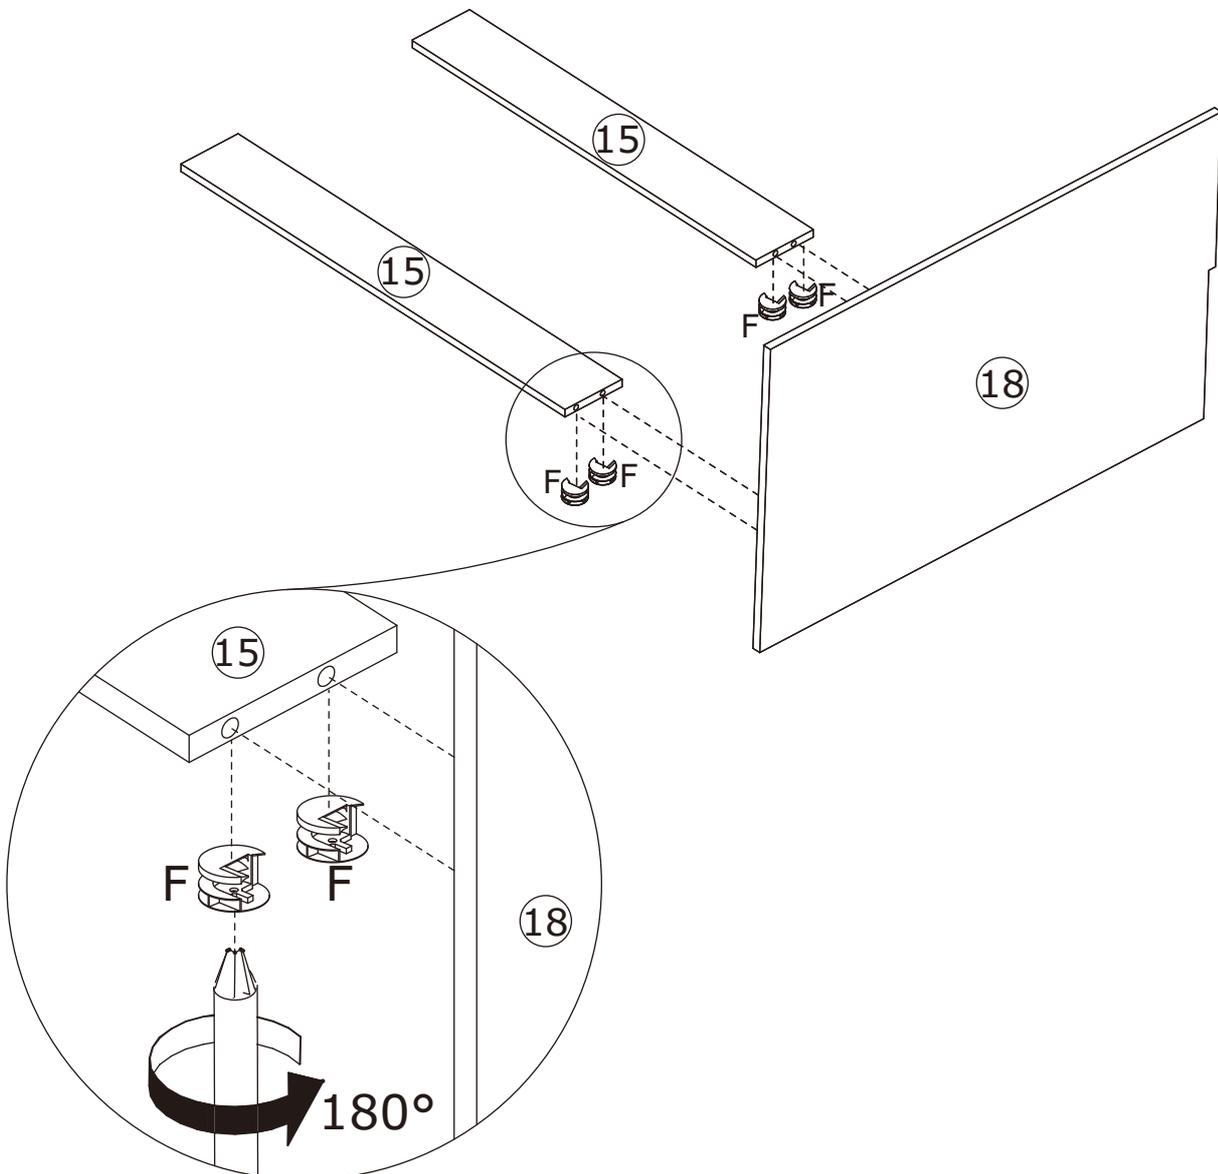




24

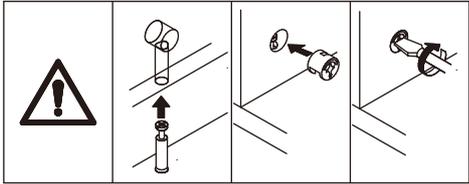





Attach board 15 to board 6 and 16, add cam lock(F) into board 15,16 and turn clockwise to tighten as shown.
Attach board 18 to board 10, add cam lock(B) into board 18 and turn clockwise to tighten as shown.

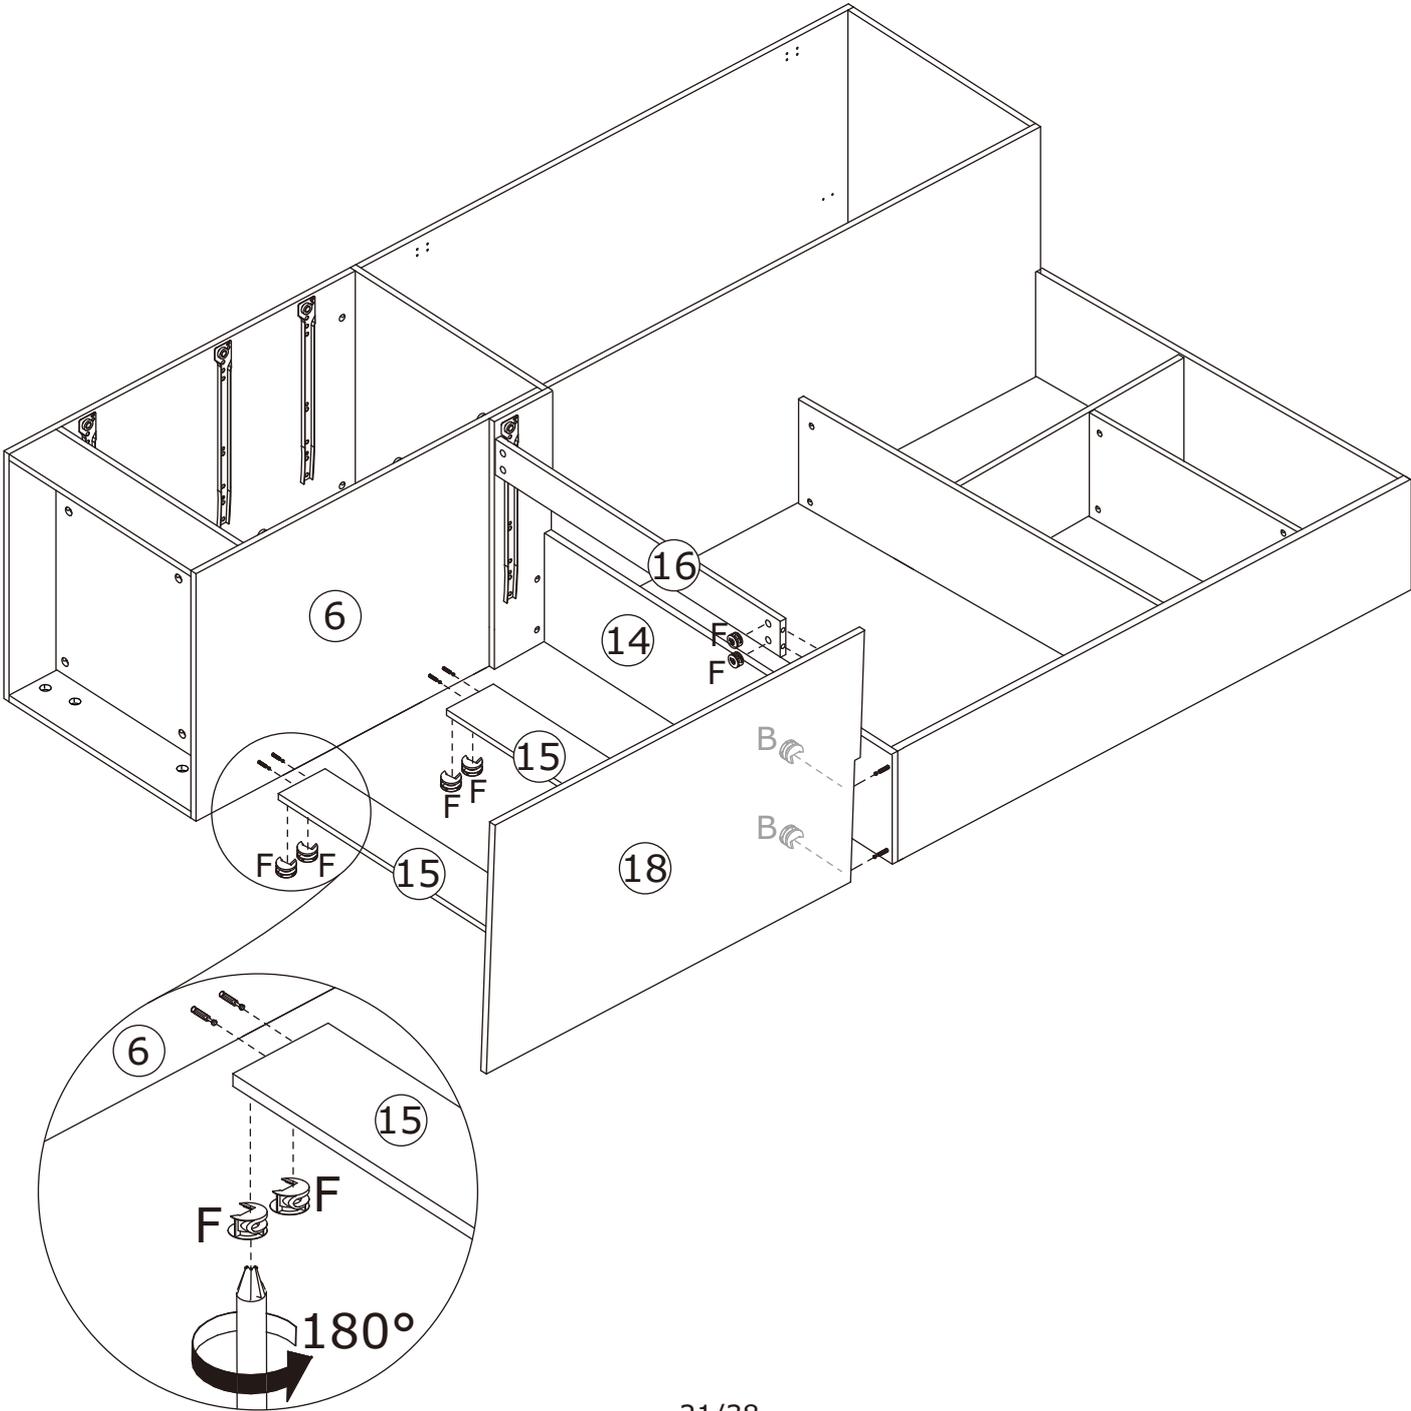





25

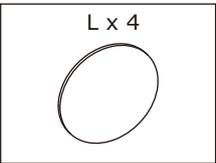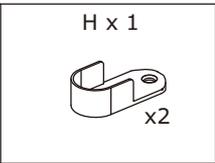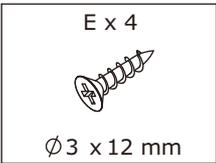





Fix part(H) to board 2 and 3 with screw(E), then place clothing rod 42 as shown. Place glass panel 44 on board 17 and 18 as shown.

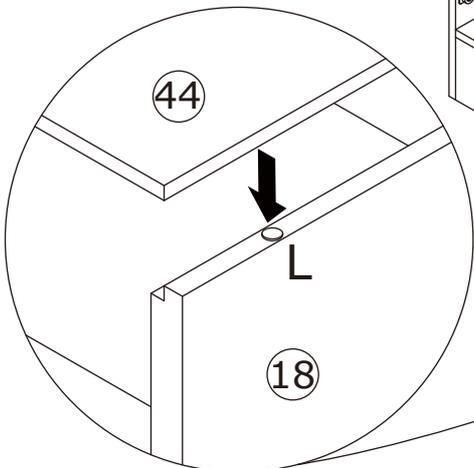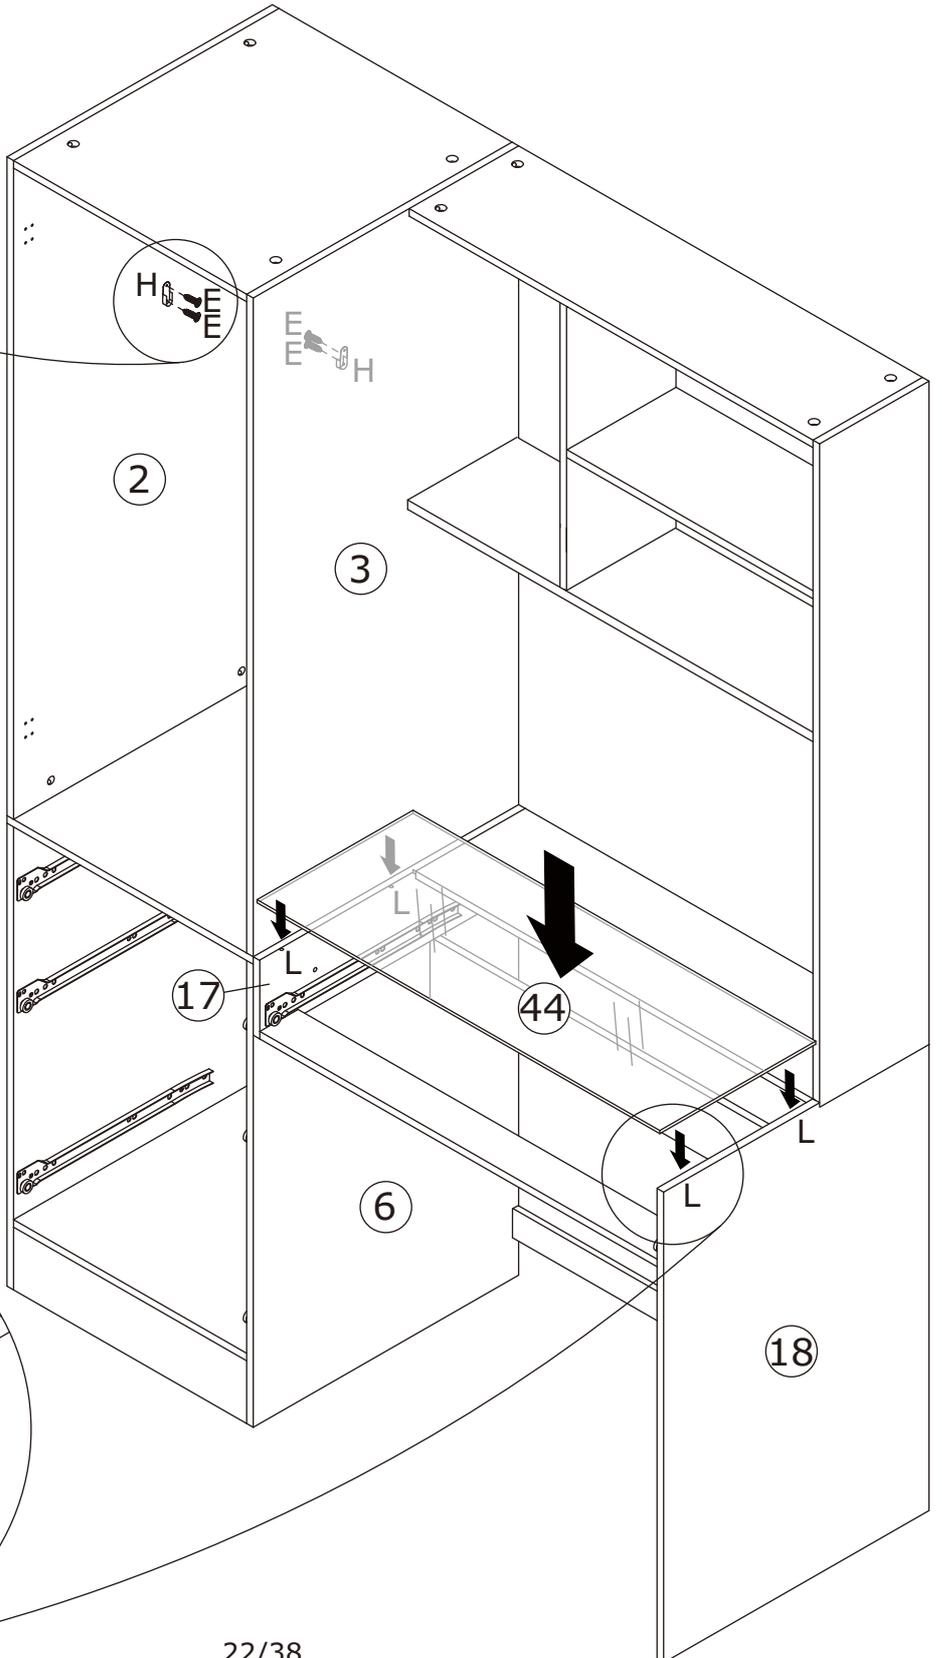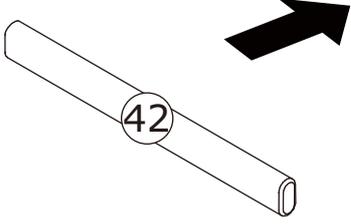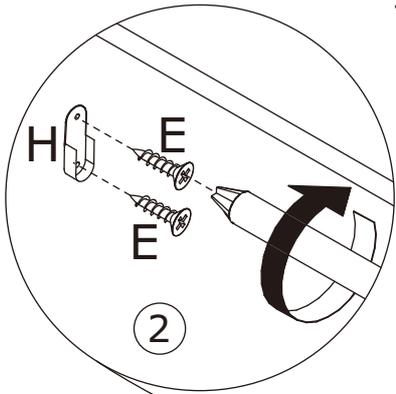





26

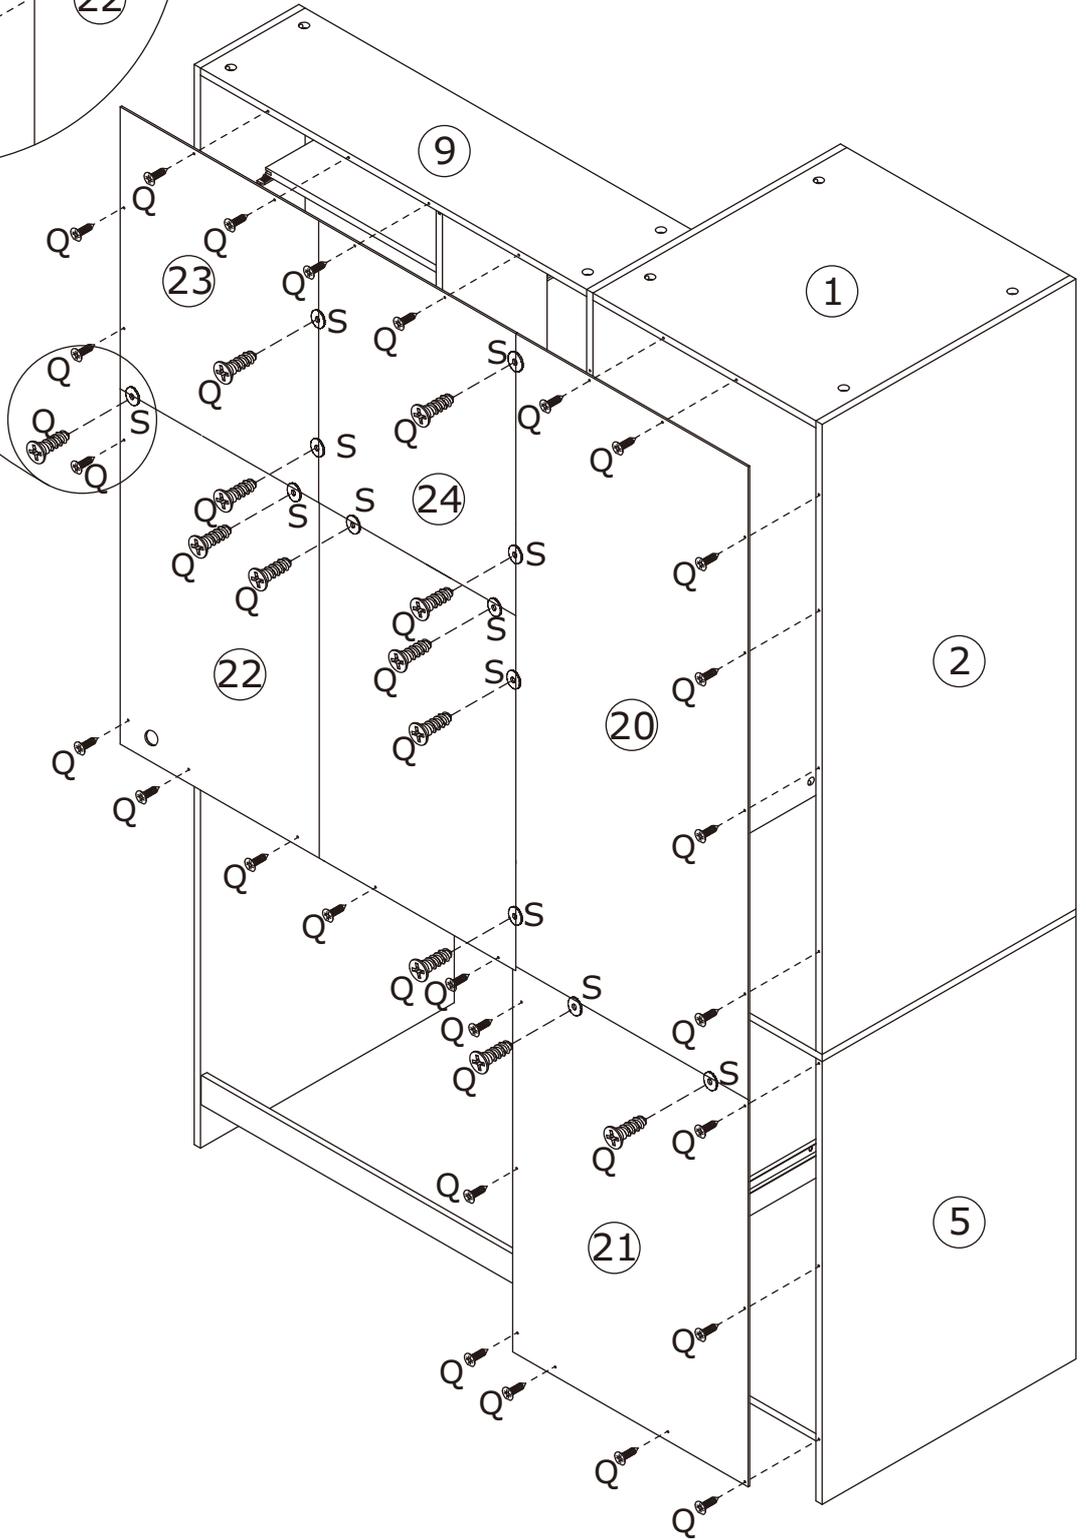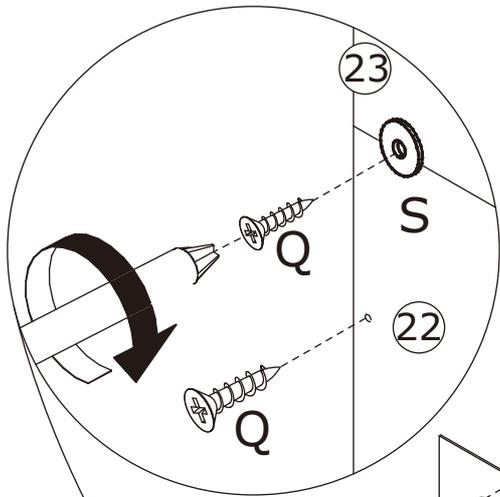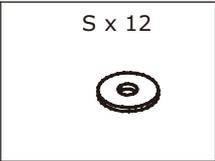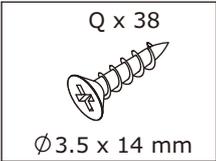

27

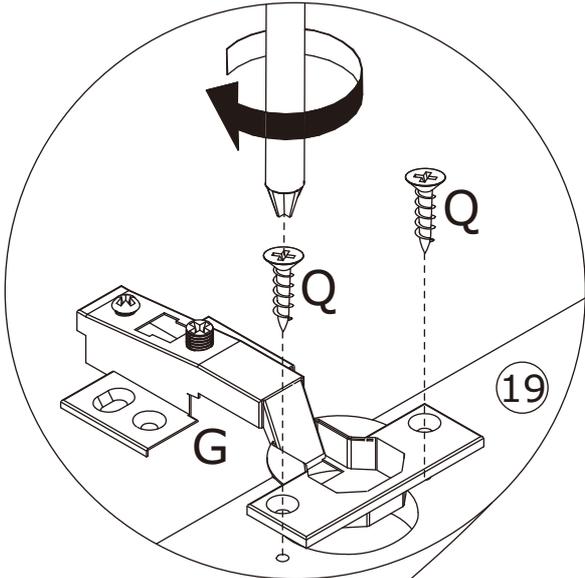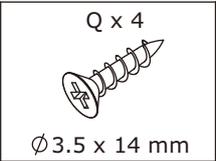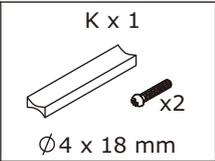
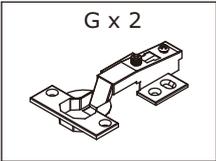


Fix hinge(G) to board 19 with screw(Q) as shown.
Fix handle(K) as shown.

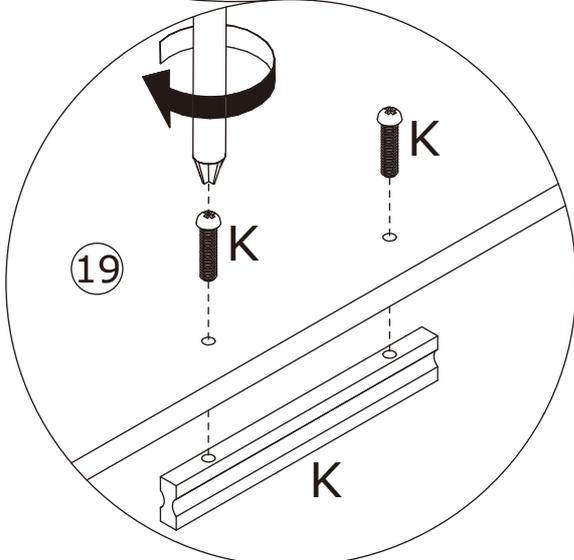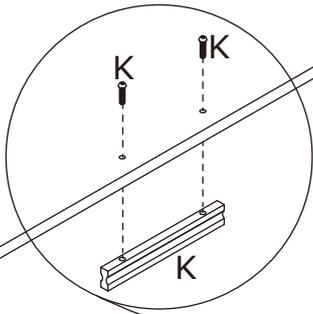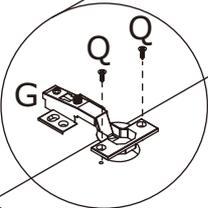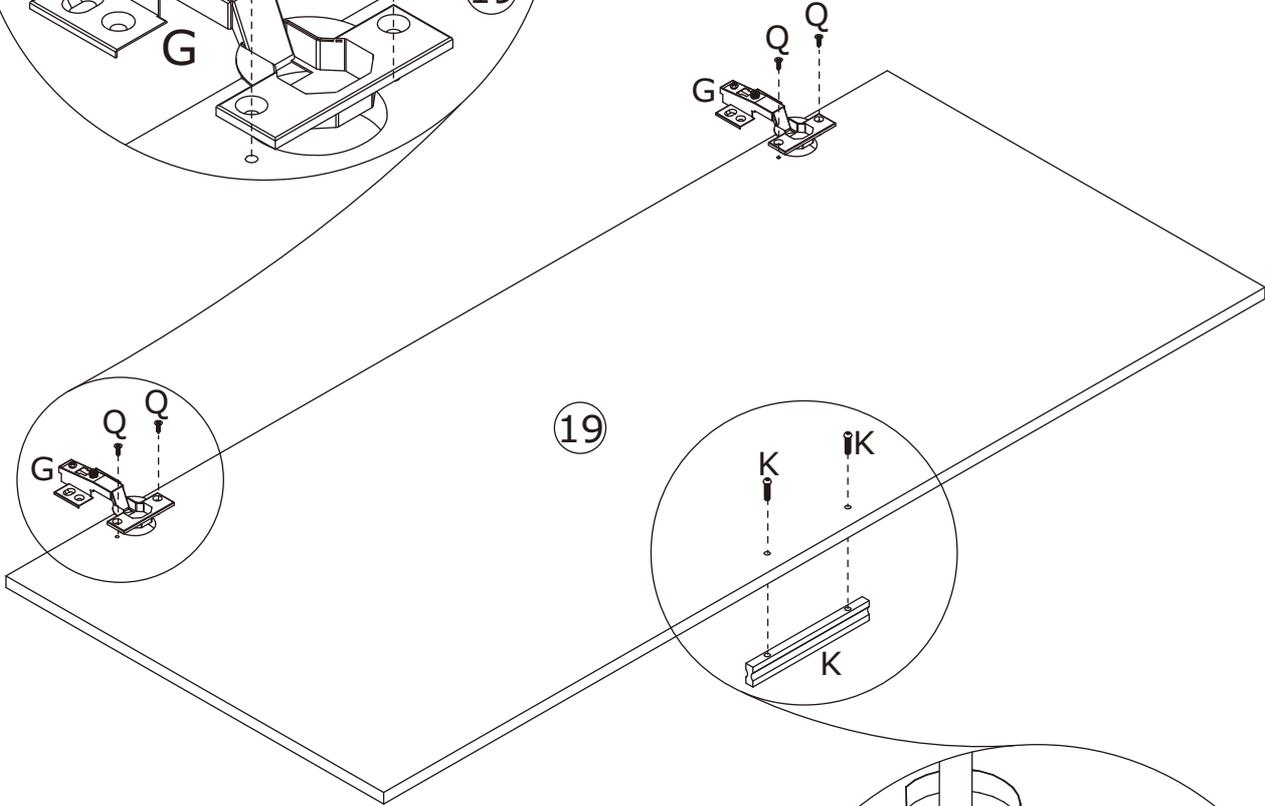


28



Q x 8
Ø 3.5 x 14 mm

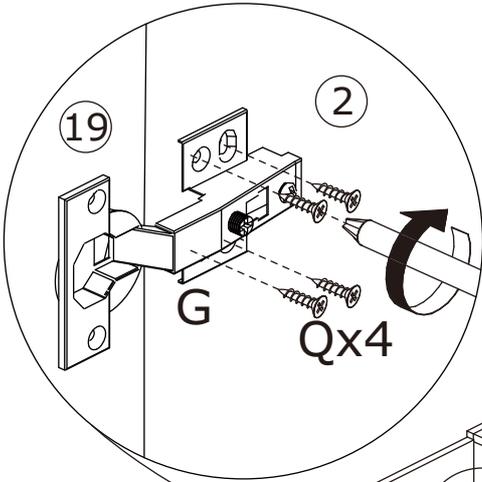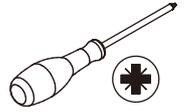



Assemble door panel 19 to board 2 by fixing hinge with screw(Q) as shown.

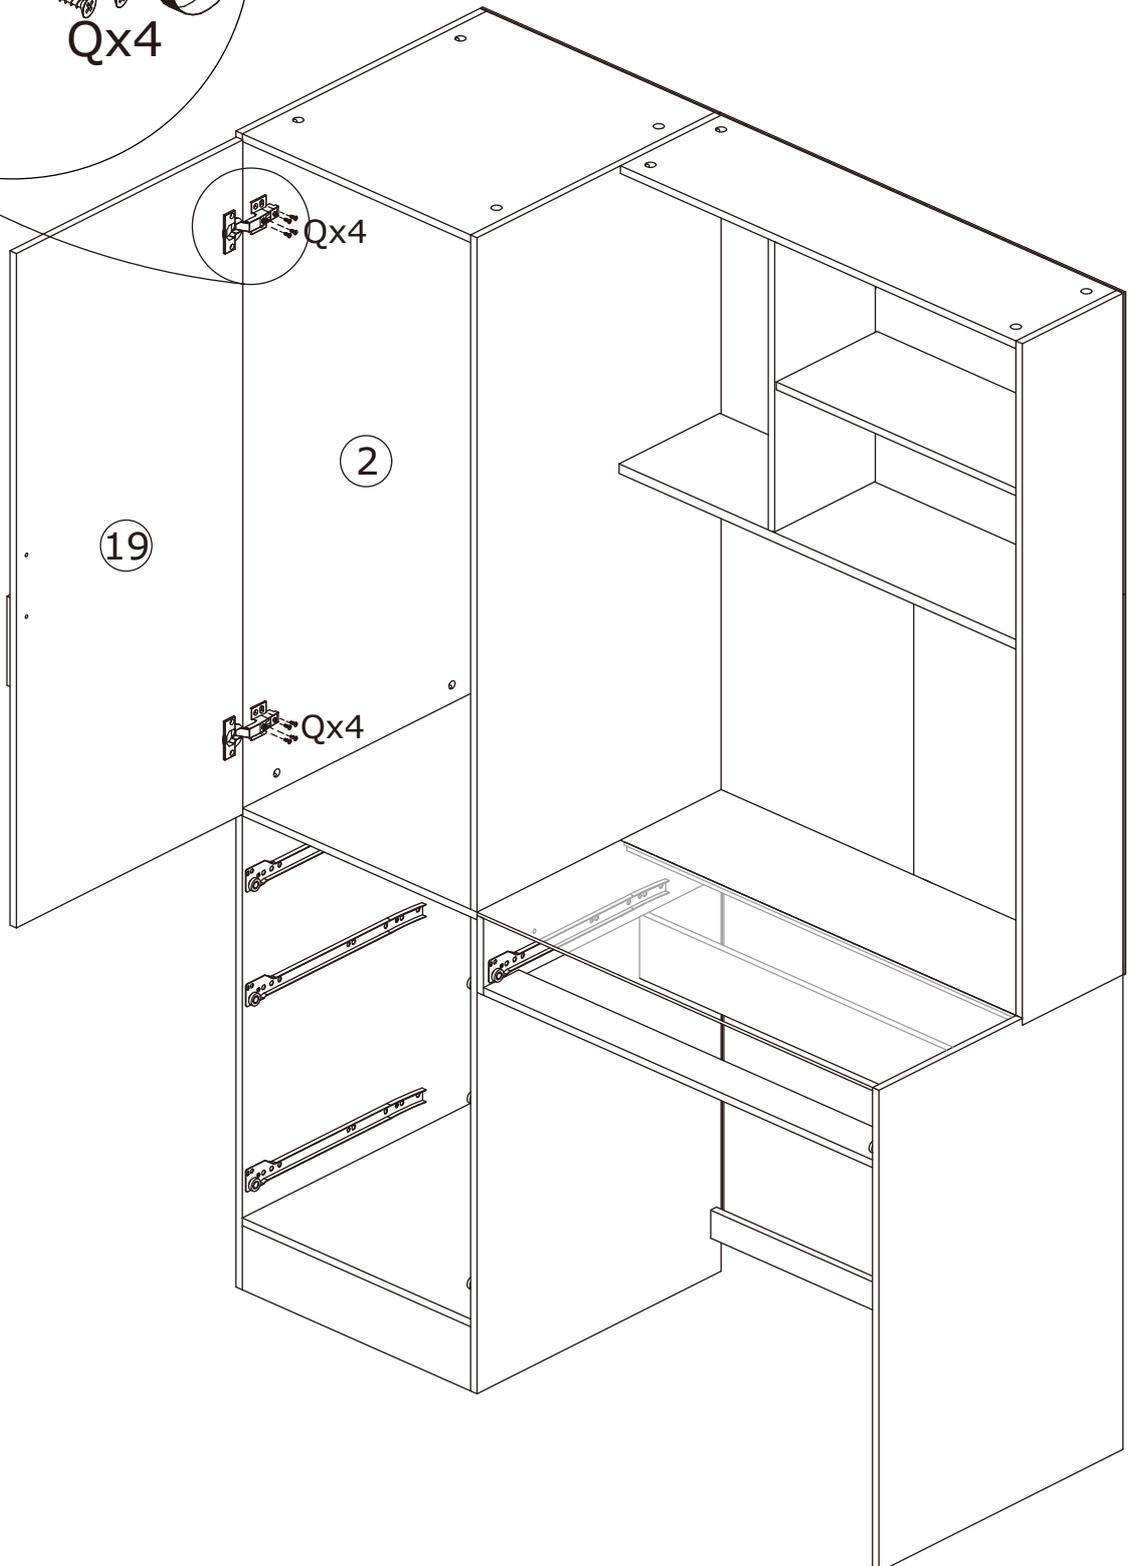



29

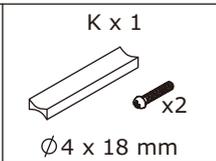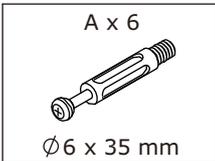


Screw eccentric rod(A) into board 36 as shown.
Fix handle(K) as shown.

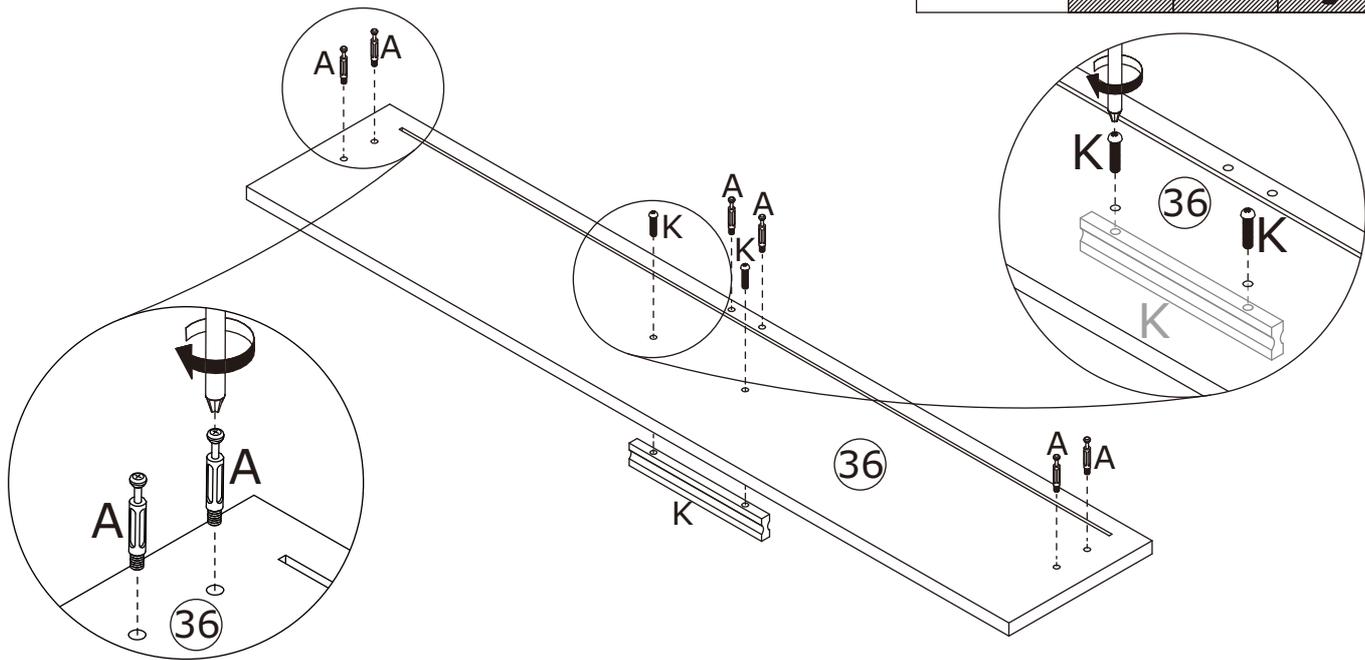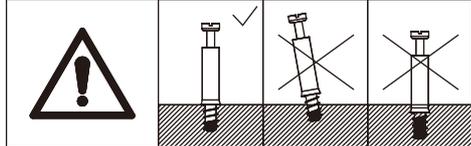

30

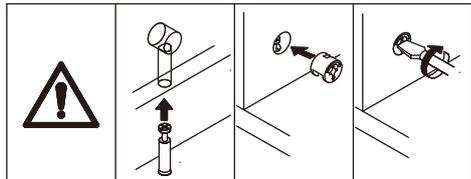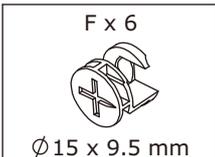


Attach board 36 to board 37, 41 and 38, add cam lock(F) into and turn clockwise to tighten as shown.

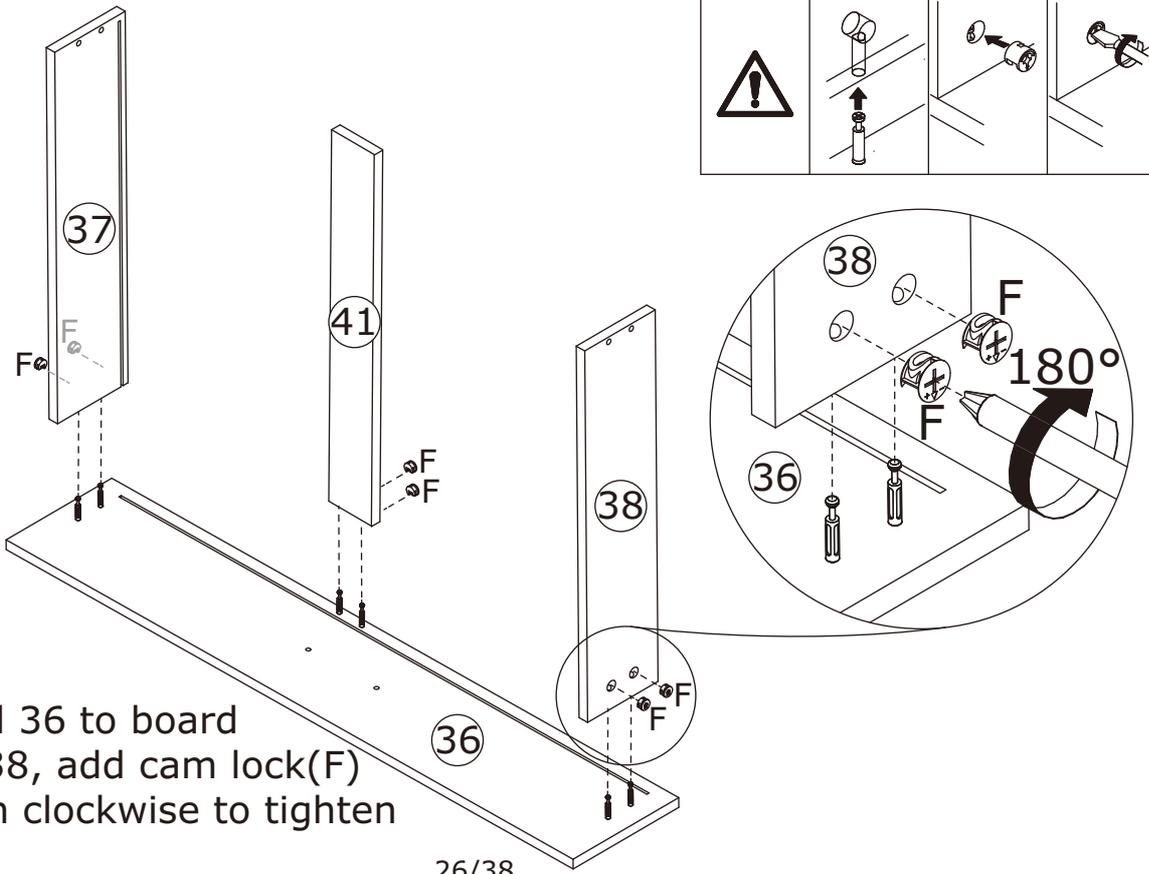


31



Insert bottom board 40 along available grooves as shown.

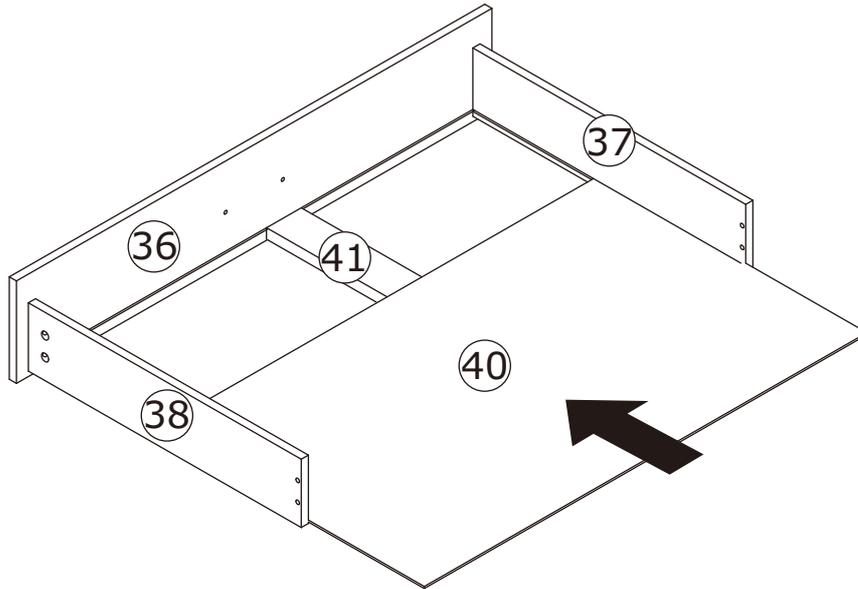






32

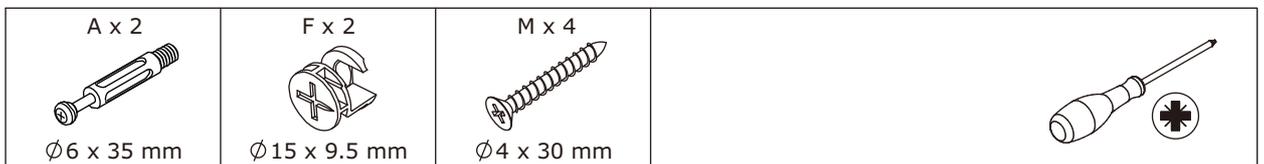

Screw eccentric rod (A) into board 39 as shown. Attach board 39 to board 41, add cam lock (F) and turn clockwise to tighten as shown. Fix board 37 and 38 to board 41 with screw (M) as shown.




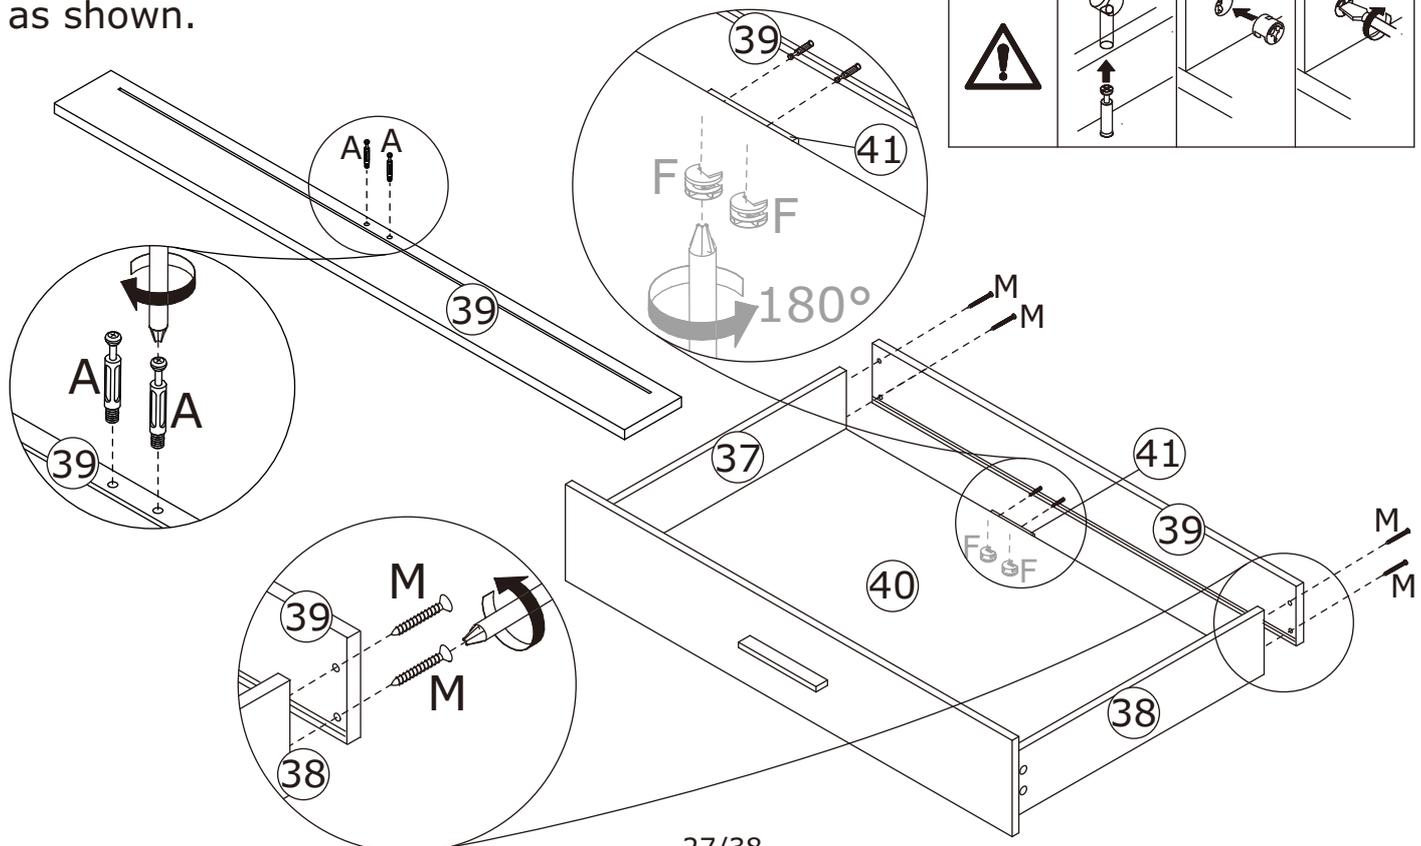
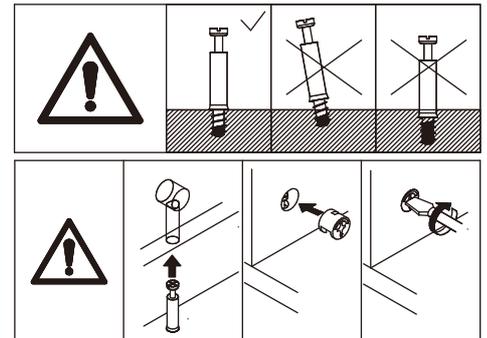


33

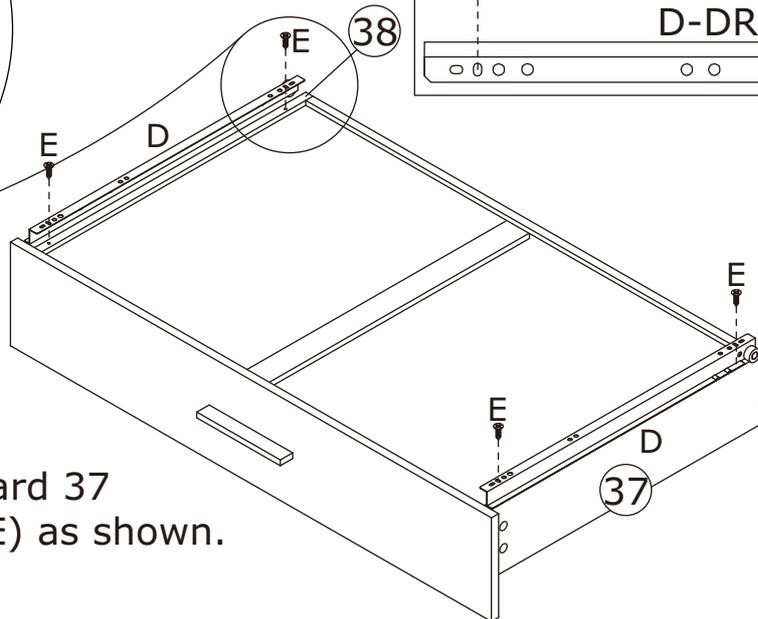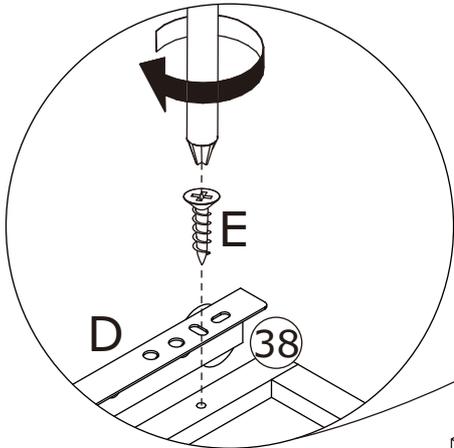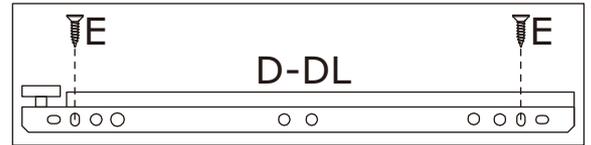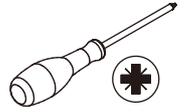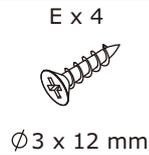


Fix runner(D) to board 37 and 38 with screw(E) as shown.

34

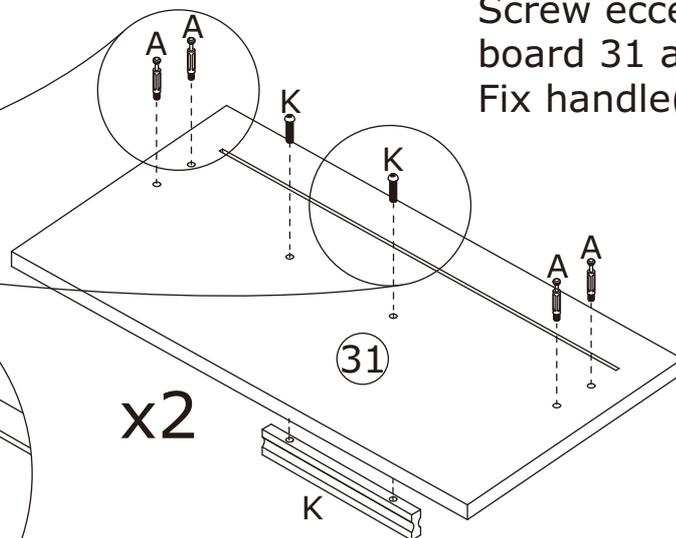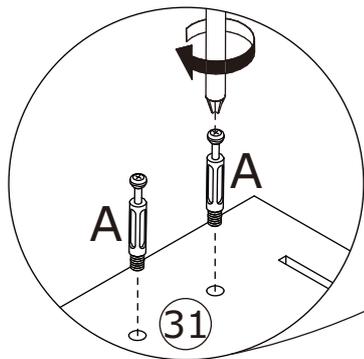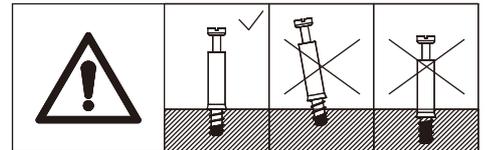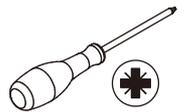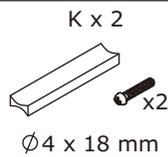


Screw eccentric rod(A) into board 31 as shown.
Fix handle(K) as shown.



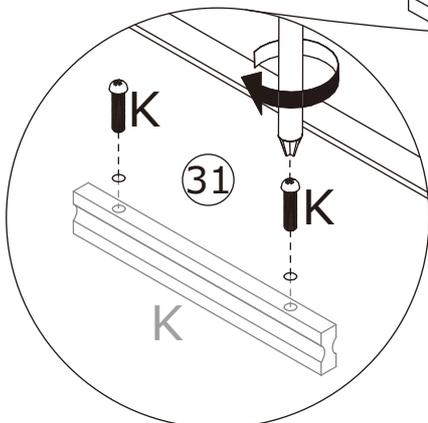


35

F x 8
Ø 15 x 9.5 mm

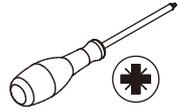


Attach board 31 to board 32 and 33, add cam lock(F) into and turn clockwise to tighten as shown.

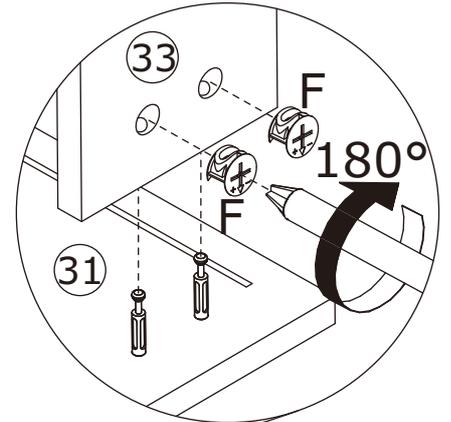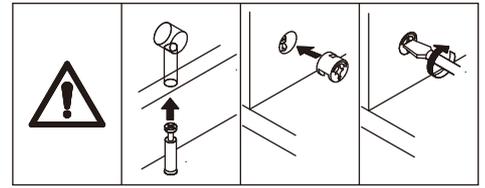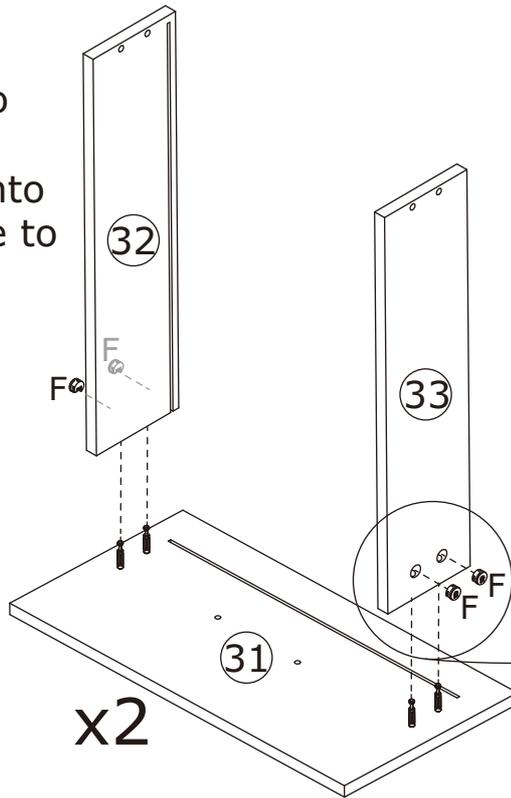



36

Insert bottom board 34 along available grooves as shown.

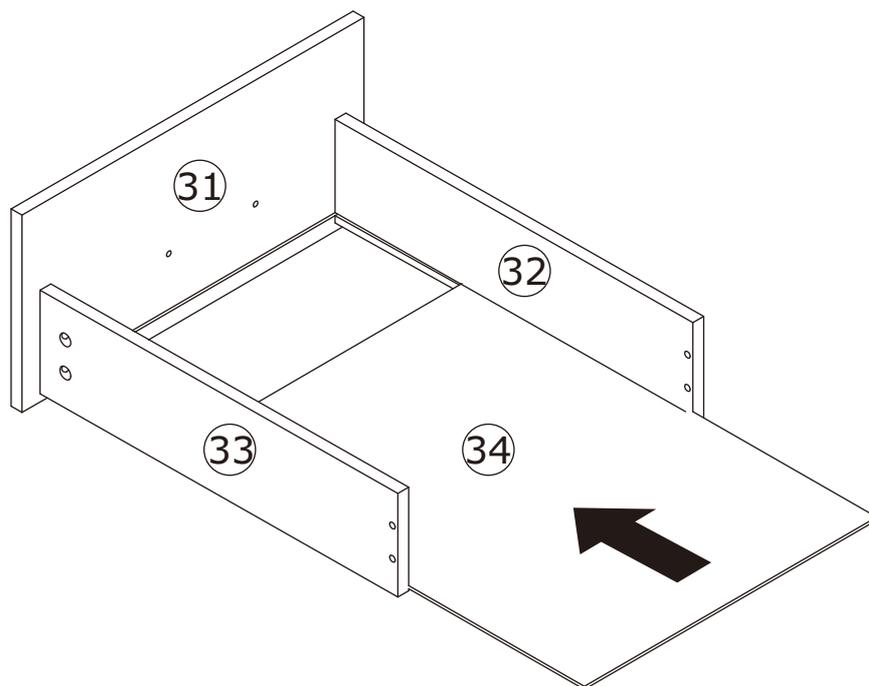


x2




37

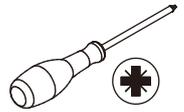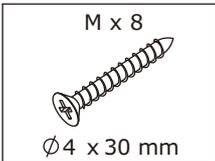

Fix board 32 and 33 to board 35 with screw(M) as shown.



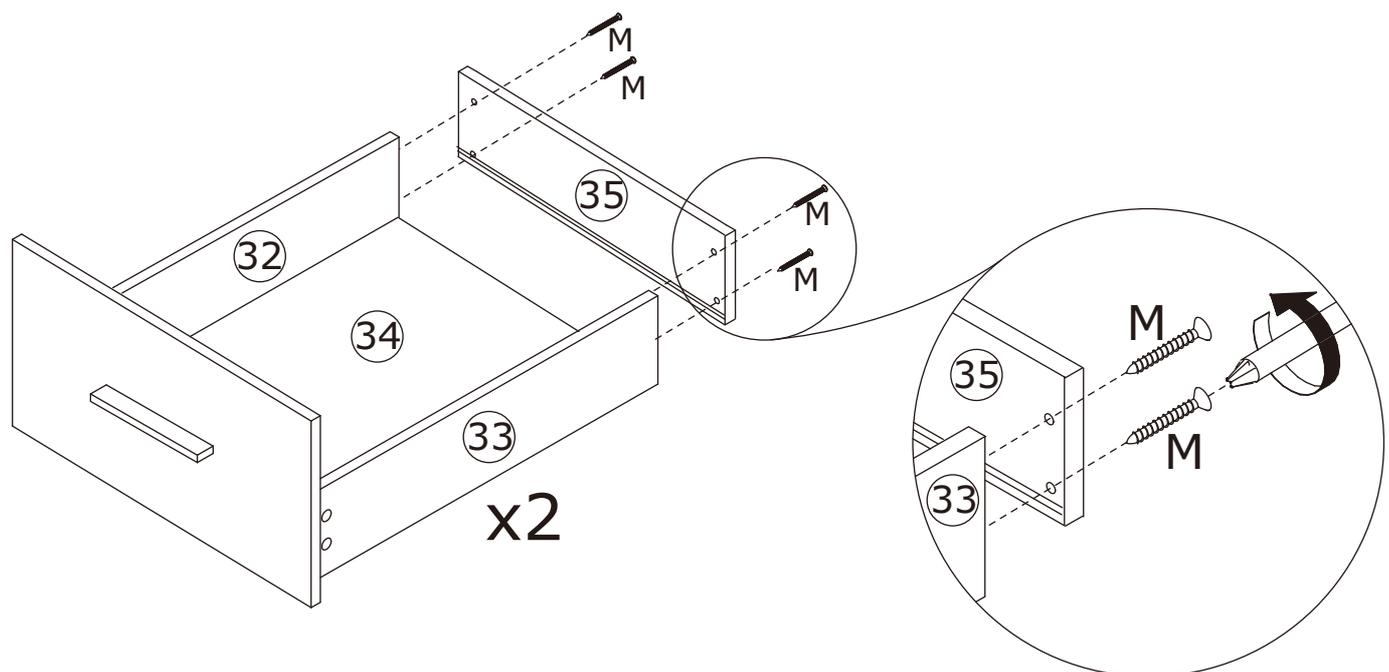


38

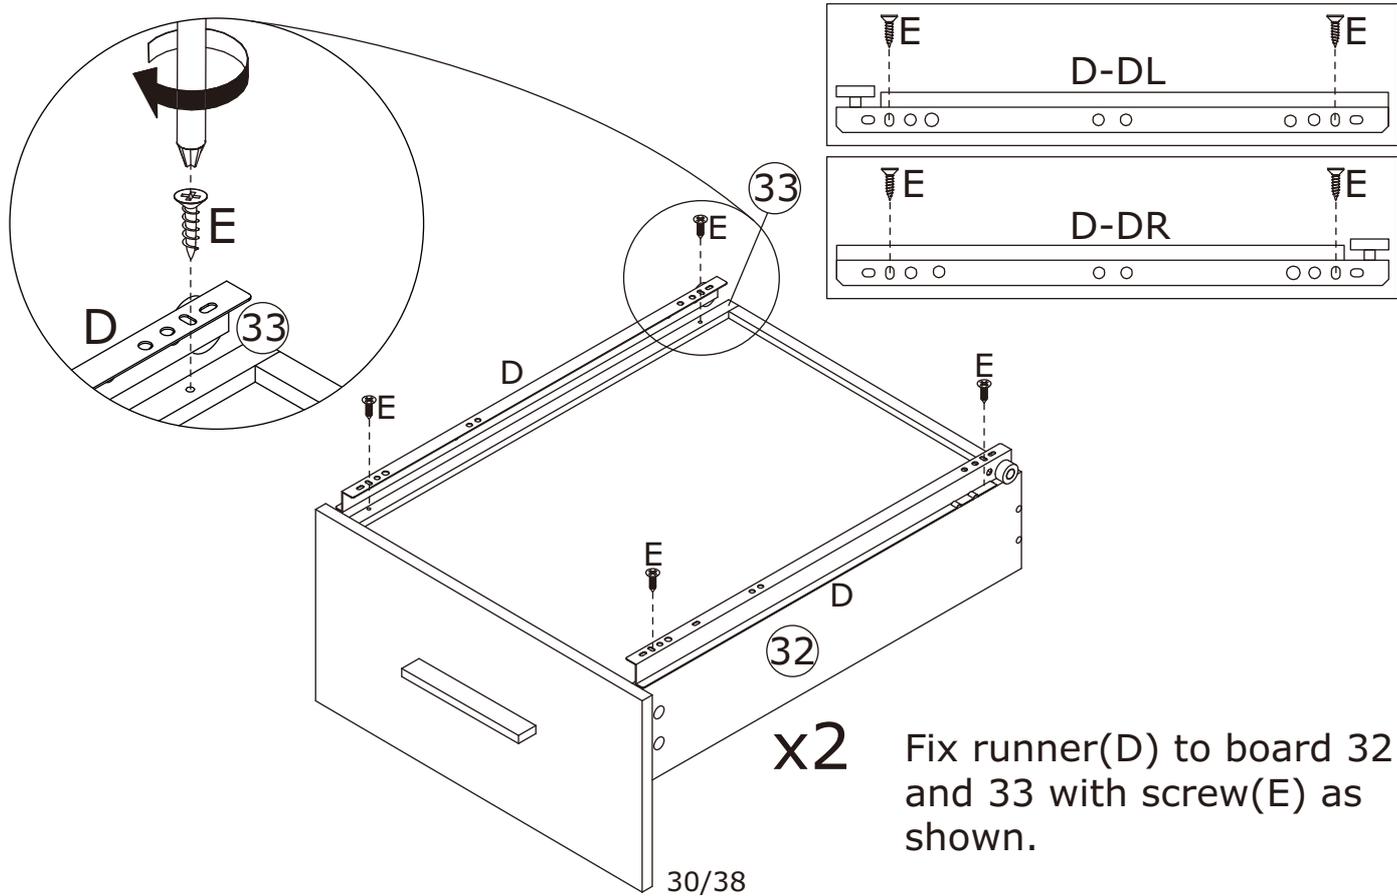
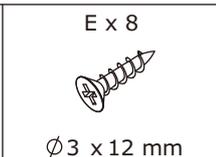
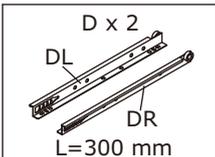


x2 Fix runner(D) to board 32 and 33 with screw(E) as shown.


39

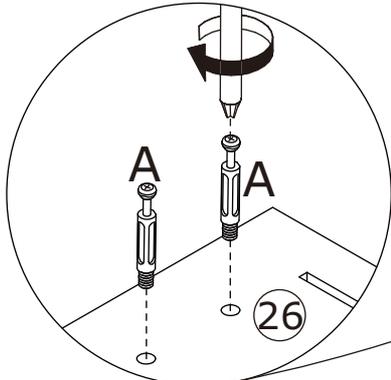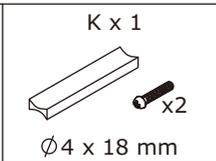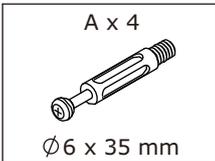





Screw eccentric rod(A) into board 26 as shown. Fix handle(K) as shown.

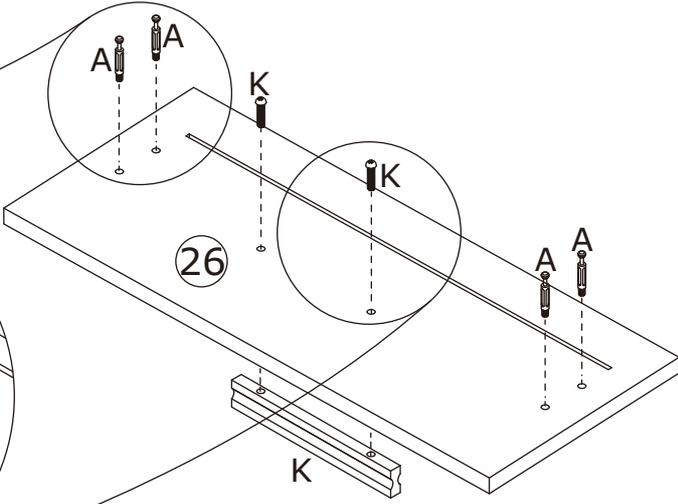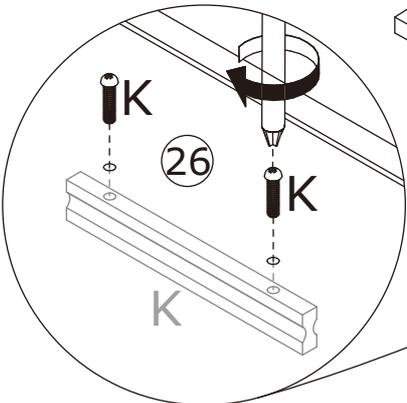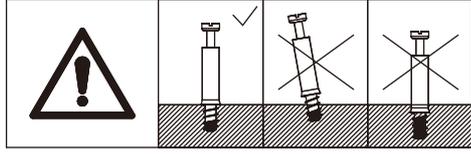

40


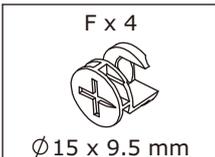


Attach board 26 to board 27 and 28, add cam lock(F) into and turn clockwise to tighten as shown.

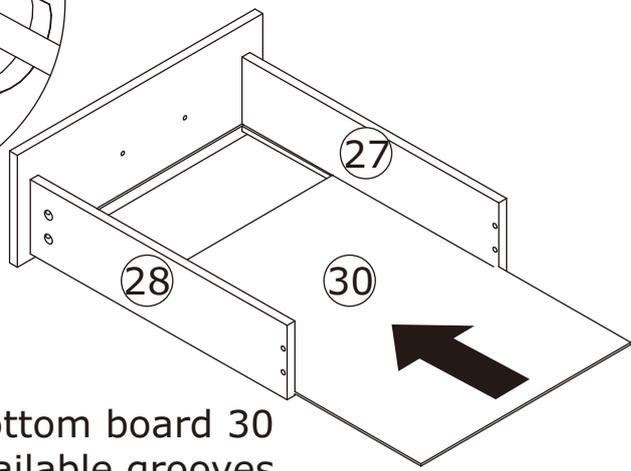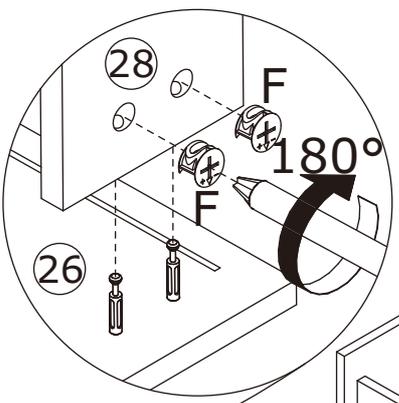
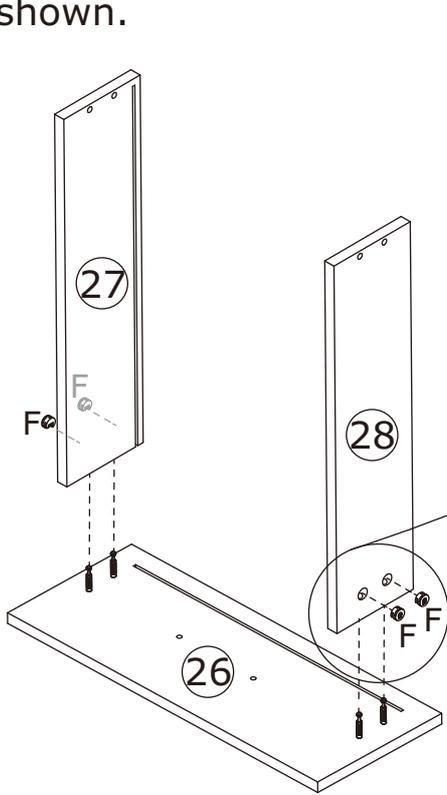
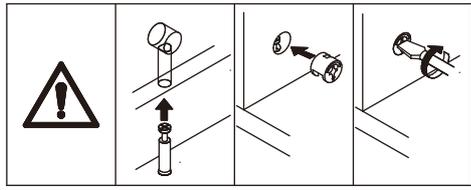


Insert bottom board 30 along available grooves as shown

41

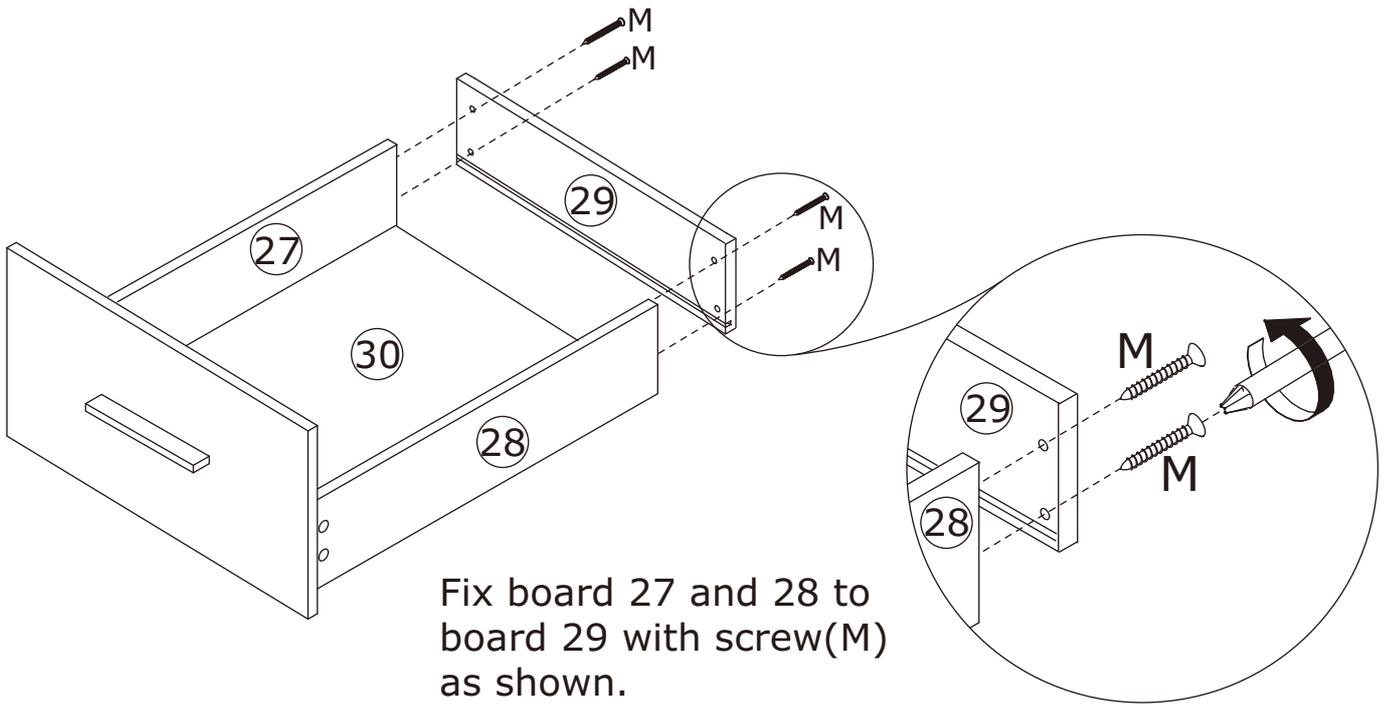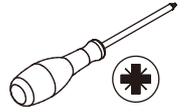


42


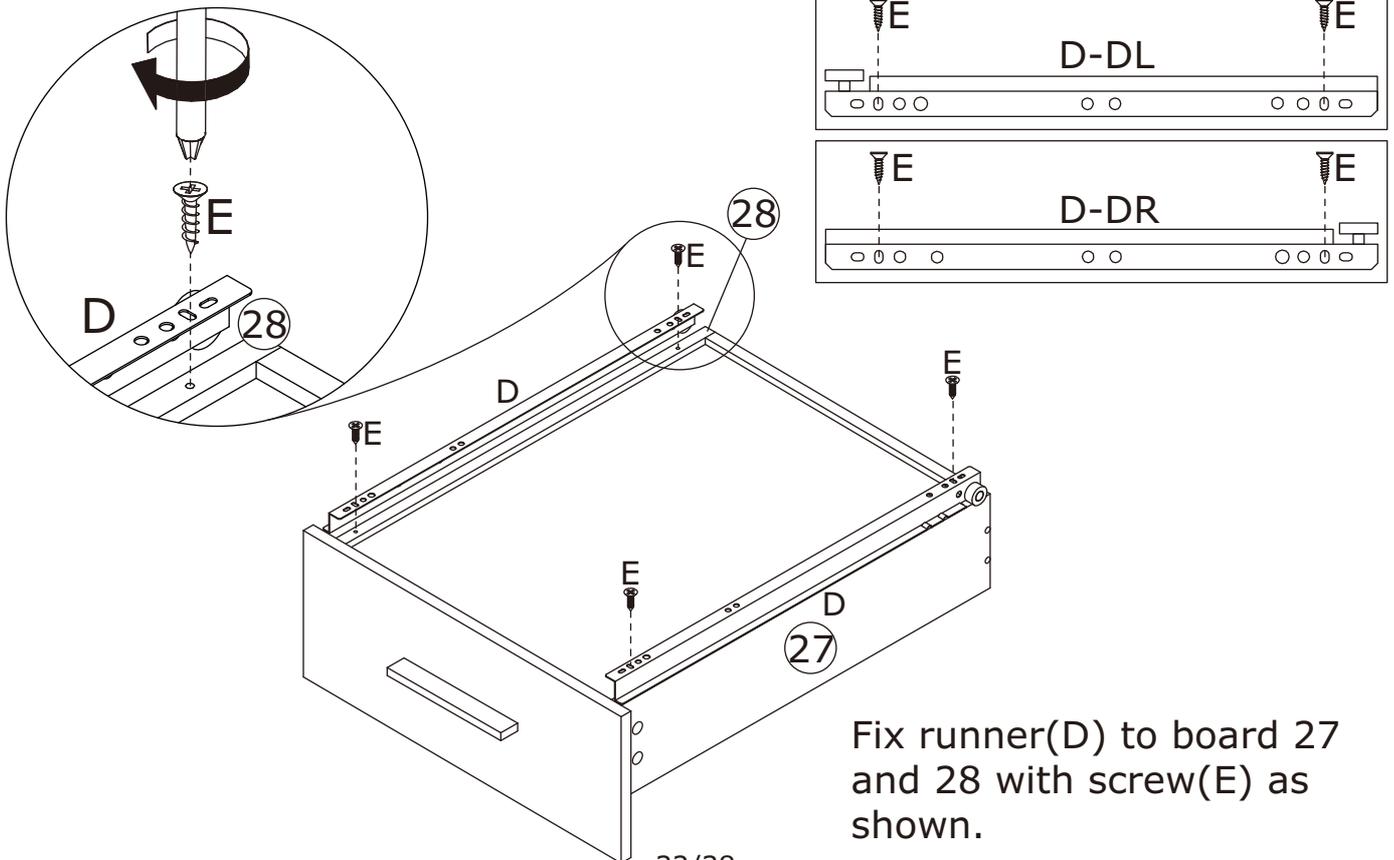
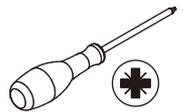
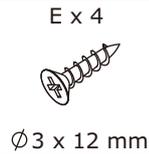


43





Align rails, insert all drawers.

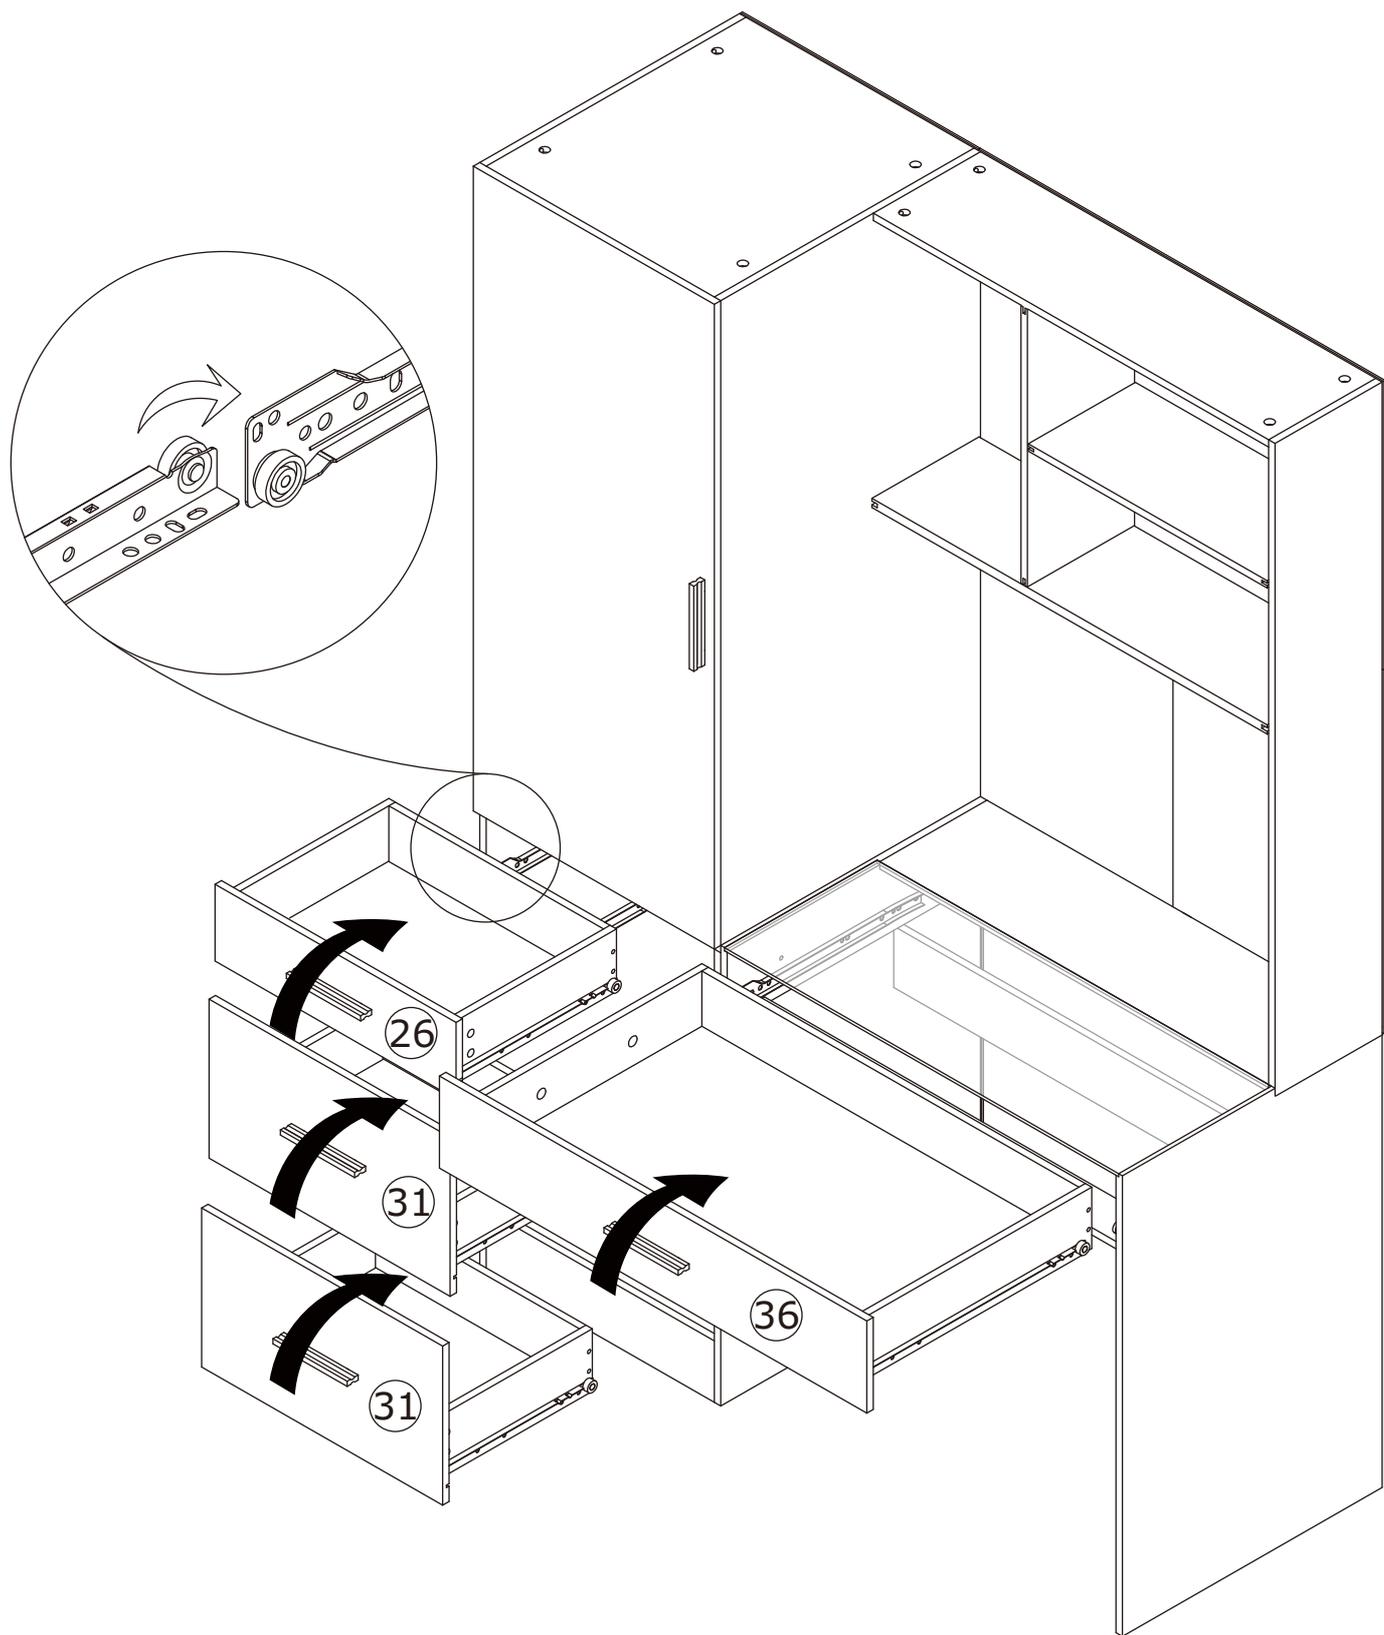


44

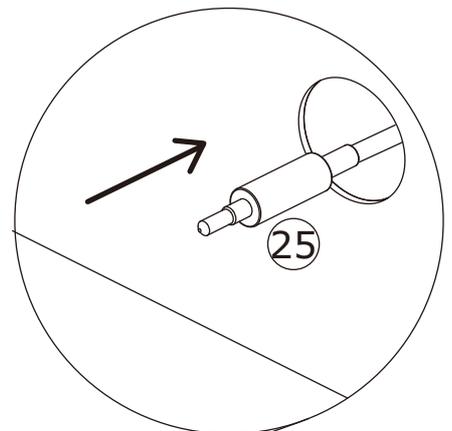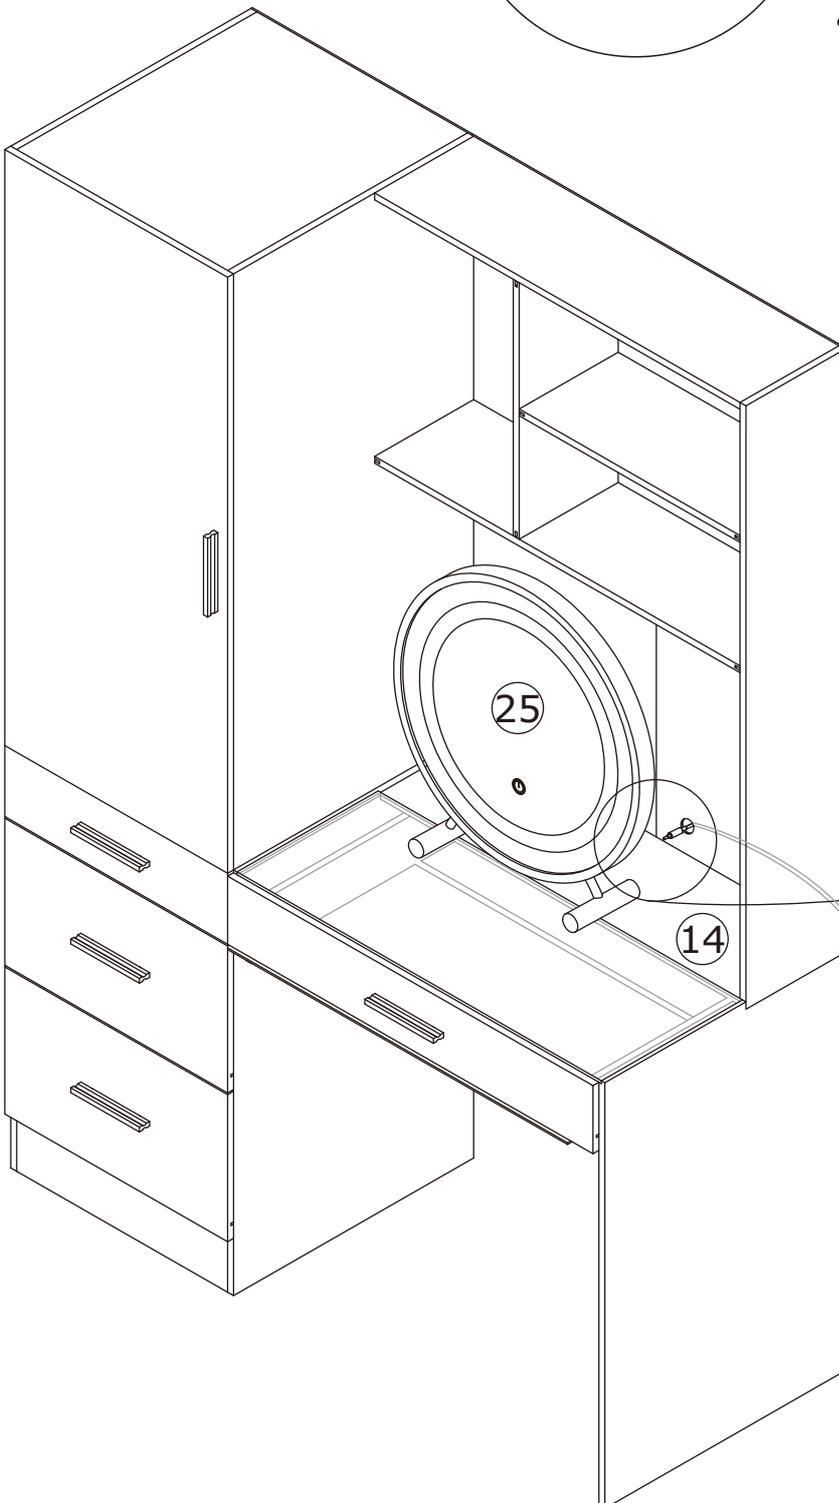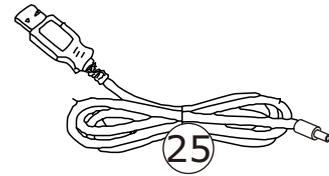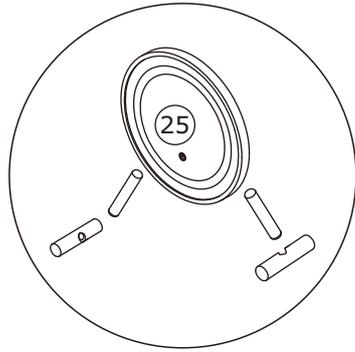


45

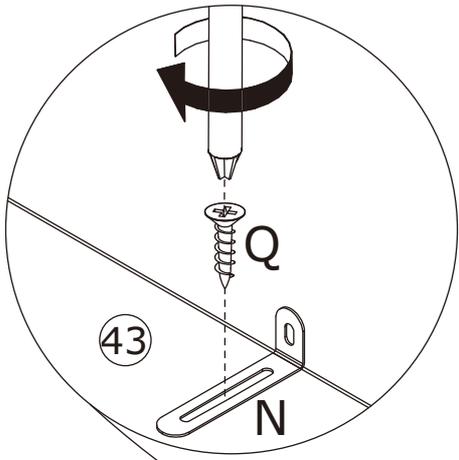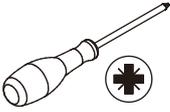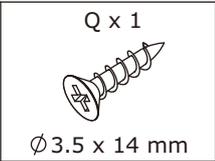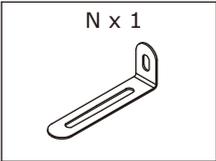







Fix iron part(Q) to the cabinet as shown.

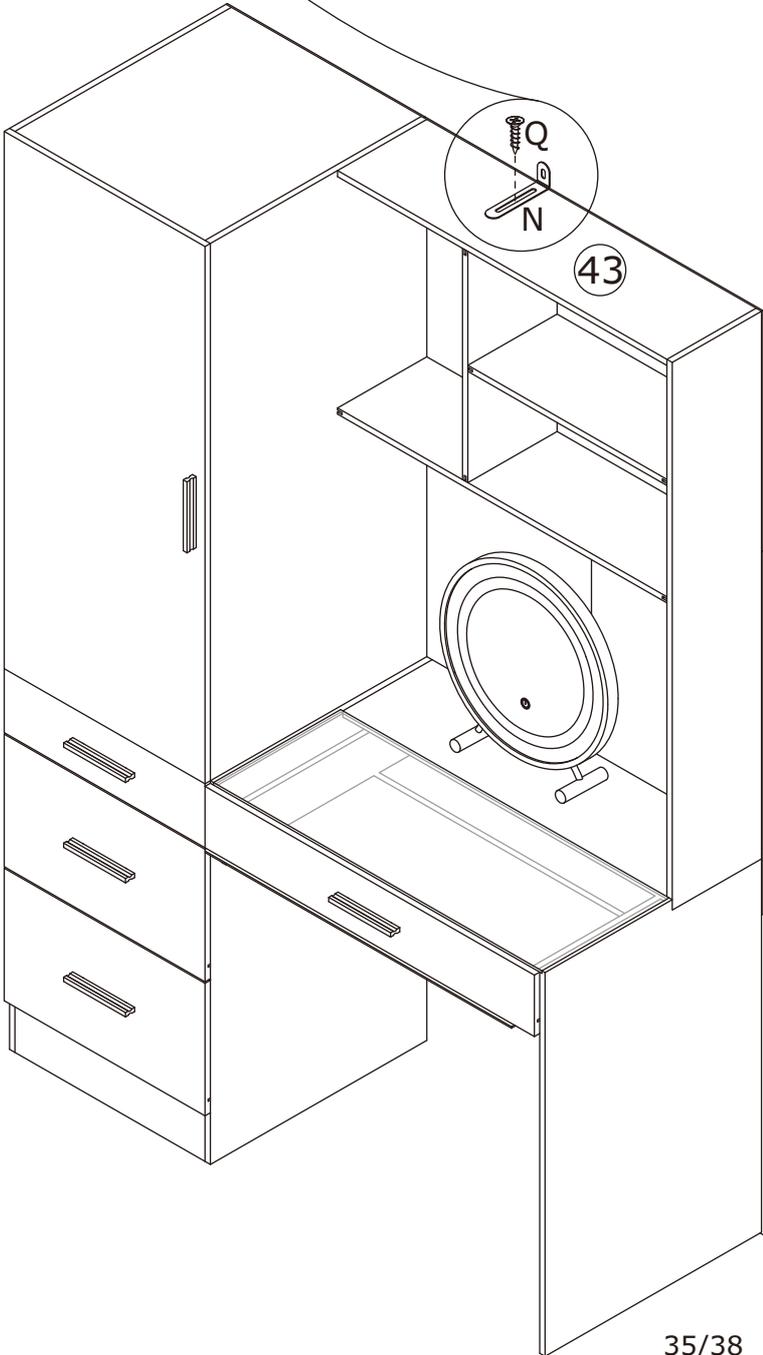






46

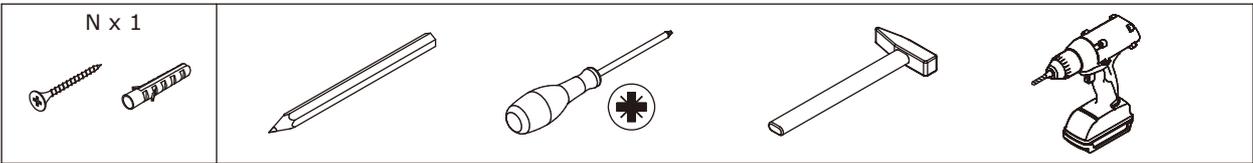


Drill holes on w all, knock plastic part(N) into.
Fix iron part(N) to the plastic part.

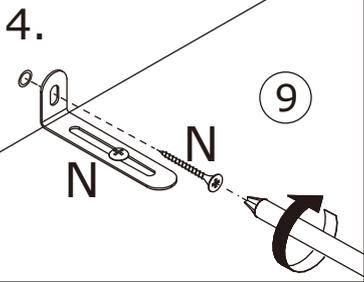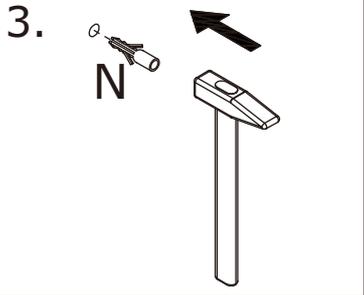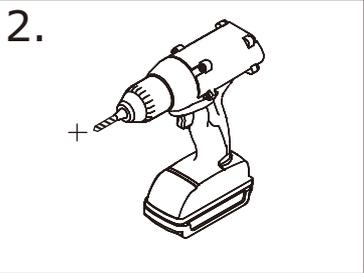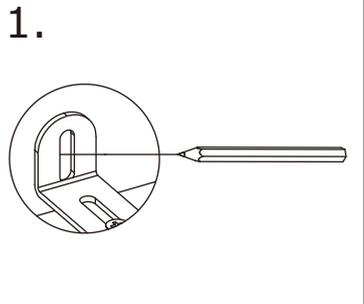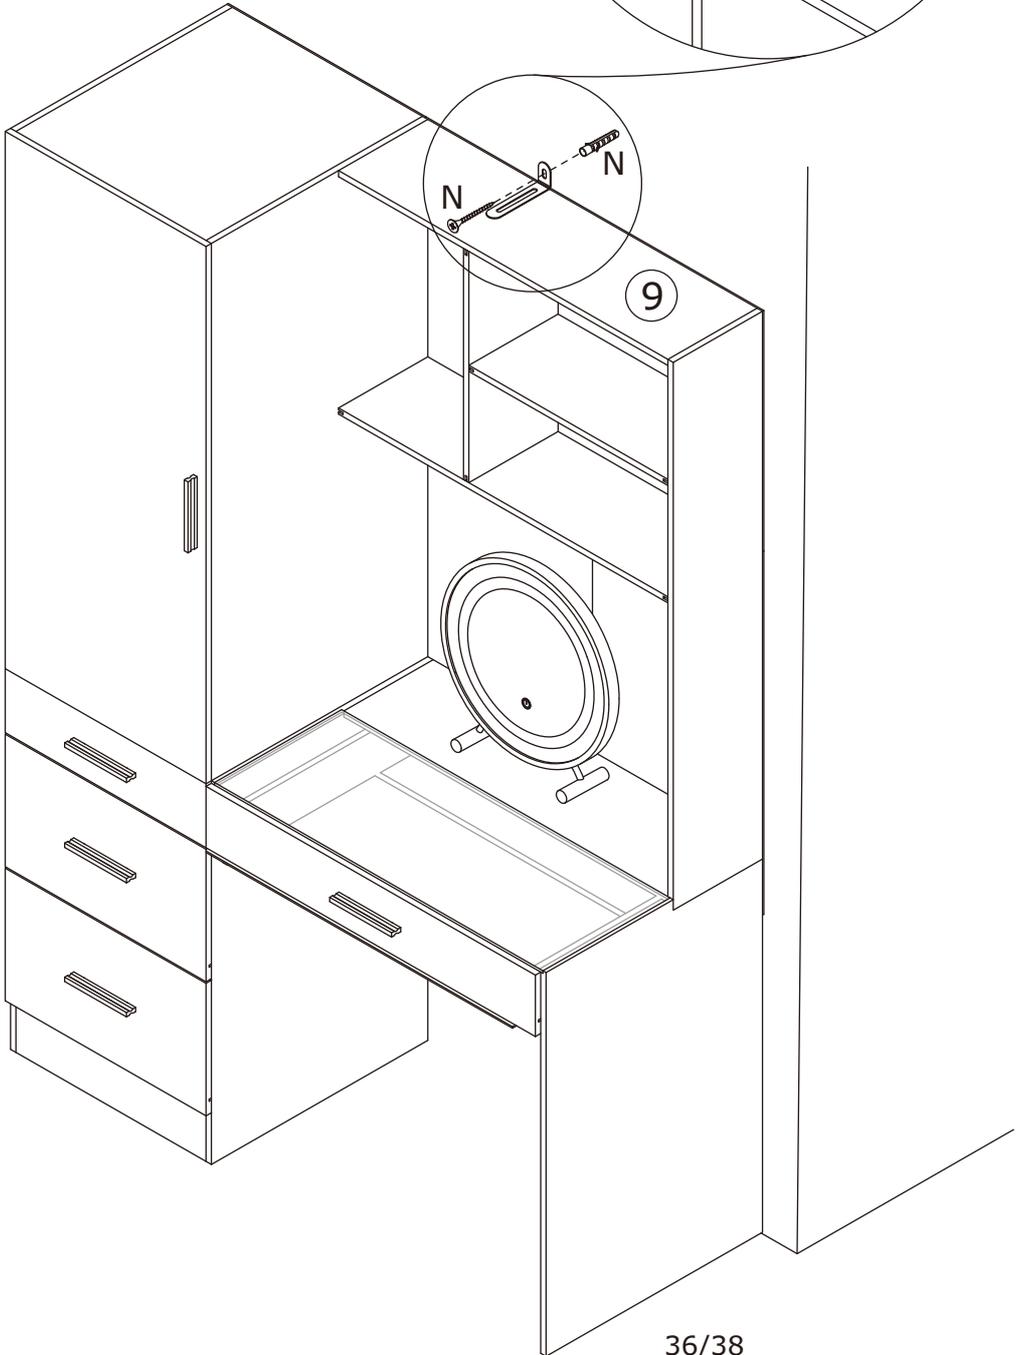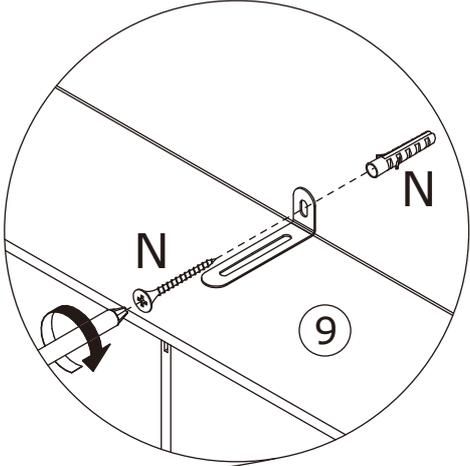













47

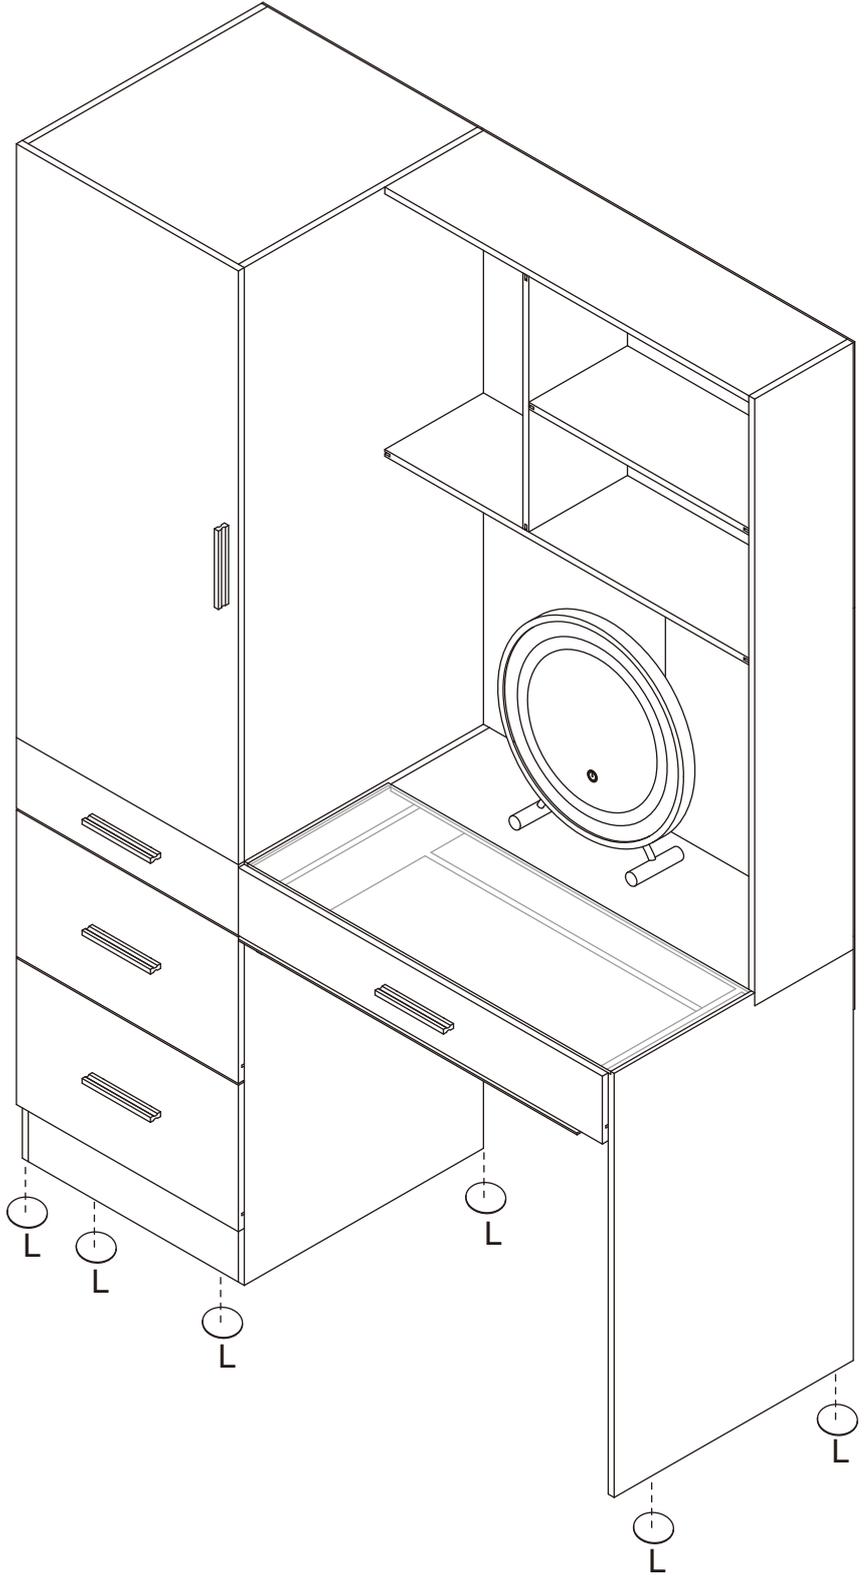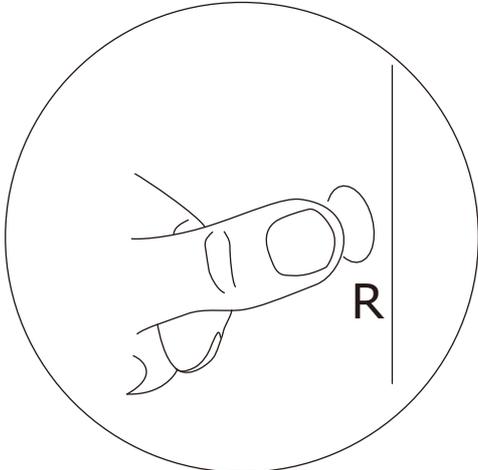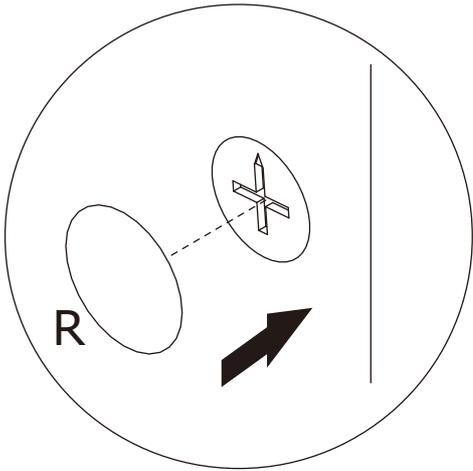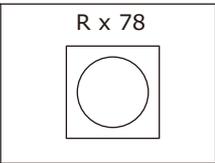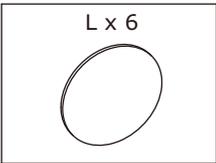

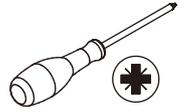

If there is misalignment after you install, adjust the screw to the best condition
 If doors are still not aligned if the hinges are properly correctly, please watch the video.

<https://youtu.be/n0Lb36SoODM>

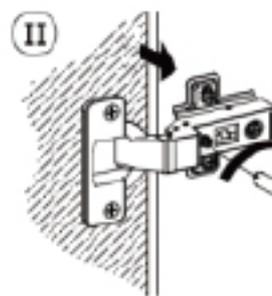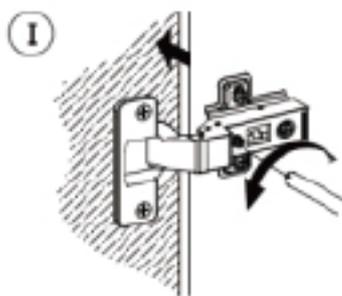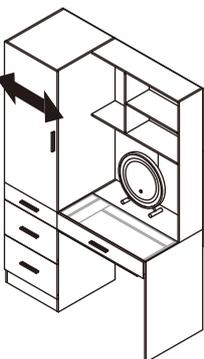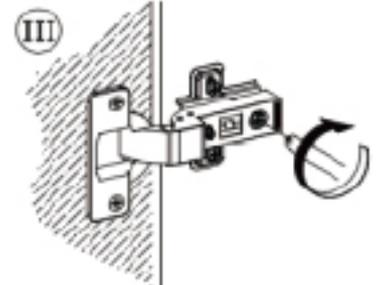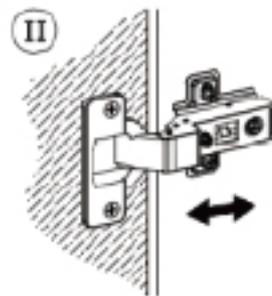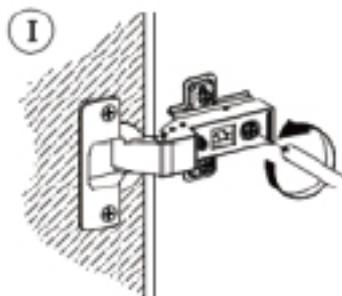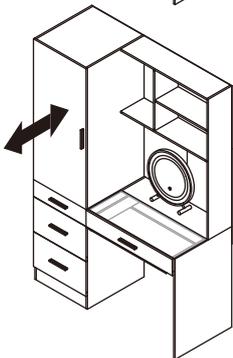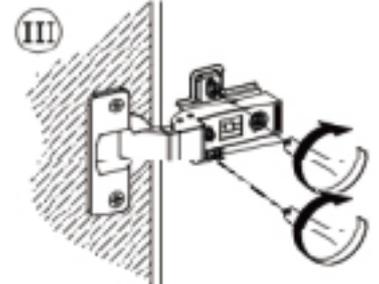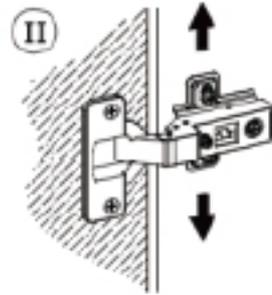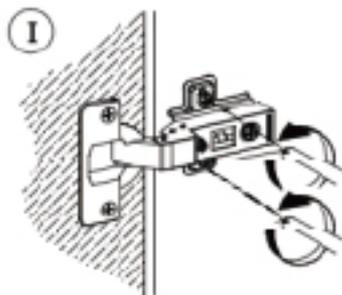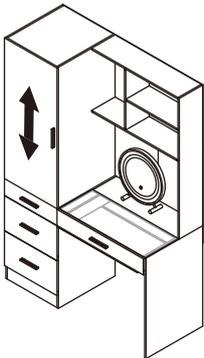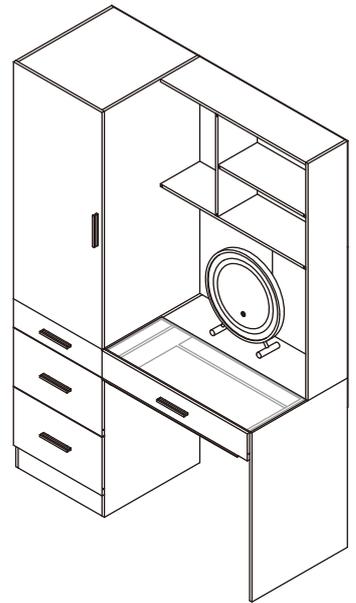

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387