 
 


Vanity

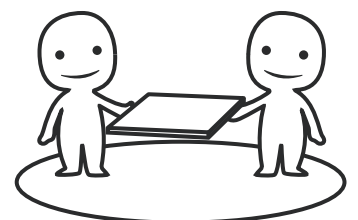

ASSEMBLED BY 2 ADULTS

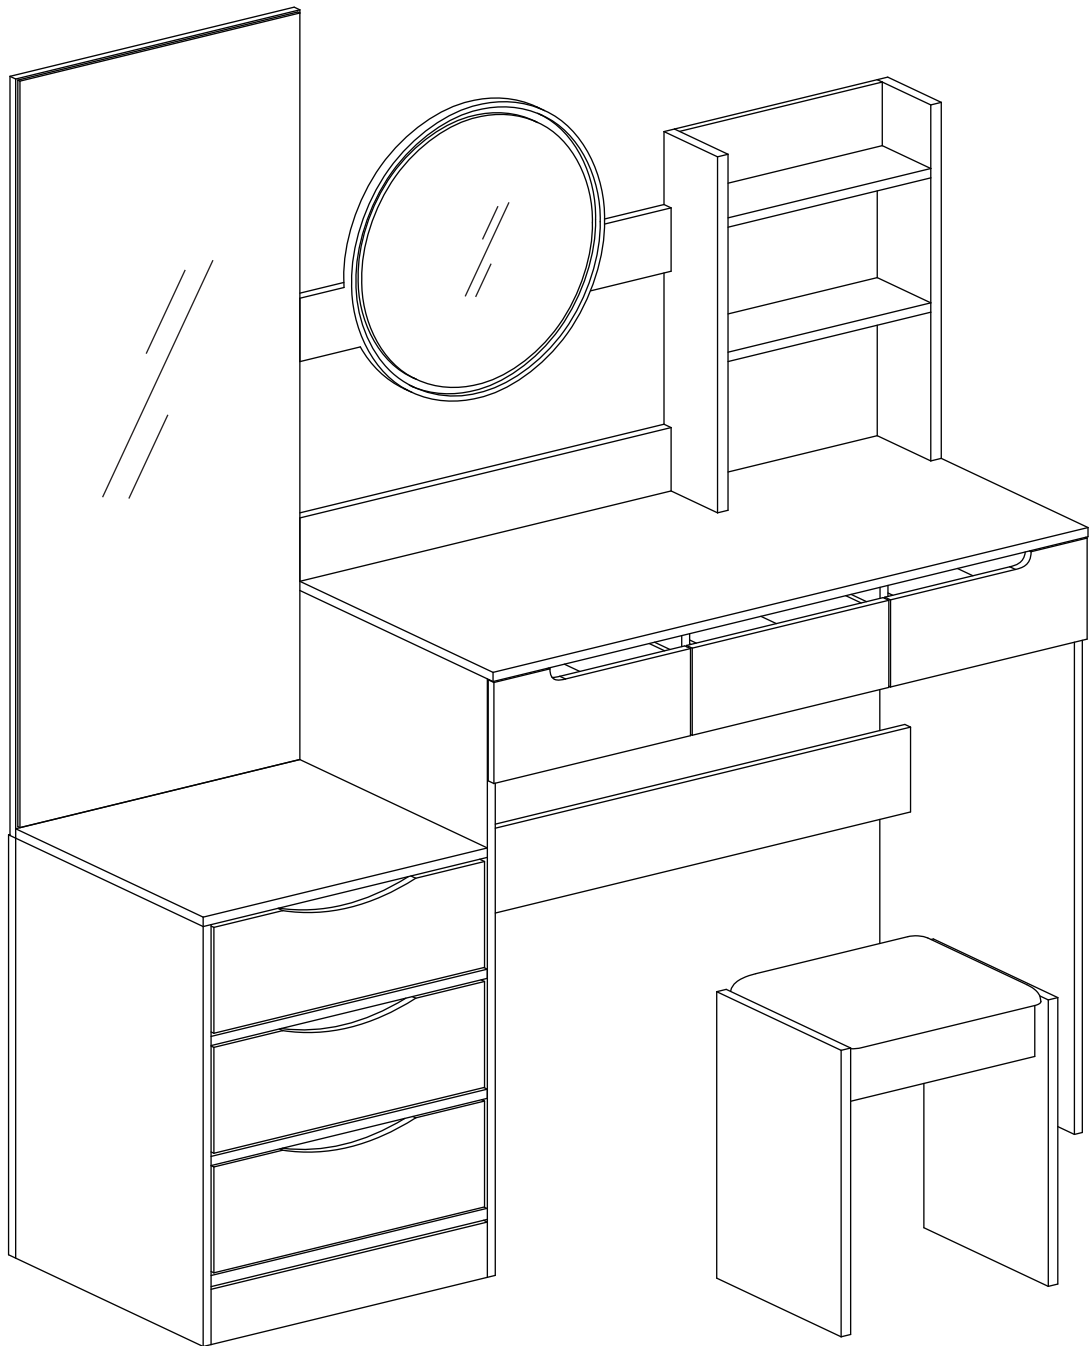

IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

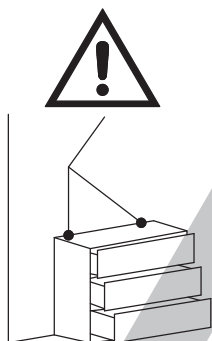

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 89

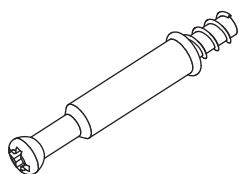

Ø 6 x 35 mm

B x 48



 
Ø 3 x 12 mm

C x 89




Ø 15 x 12 mm

D x 4

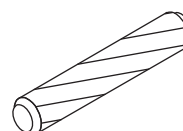


Ø 8 x 30 mm

 
E x 6

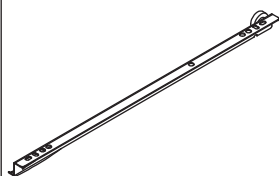


F x 6

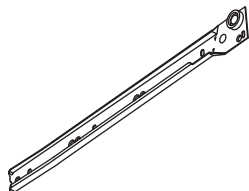 


G x 6

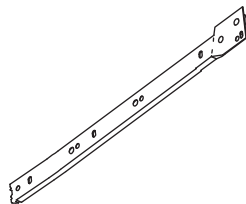 

H x 6

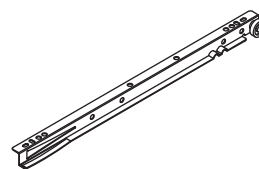 

J x 46

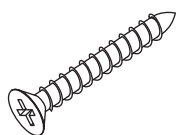 


Ø 3.5 x 30 mm

K x 2







    
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Ø 6 x 25 mm

 
 
 
 
 
 
 
 
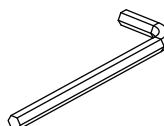 

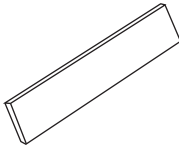 
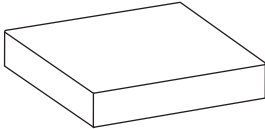 
L x 1

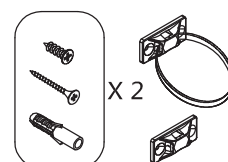


M x 2

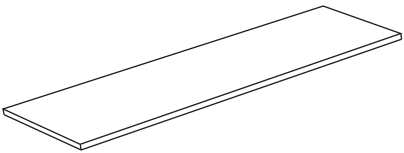

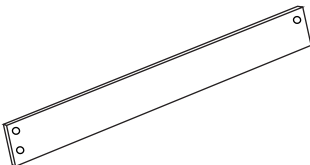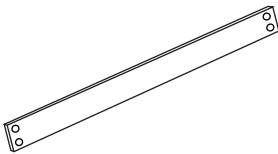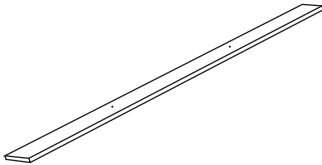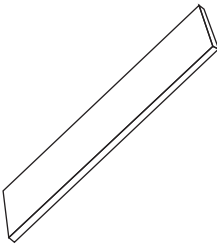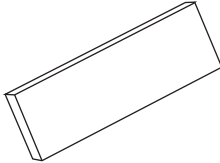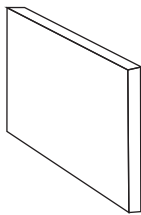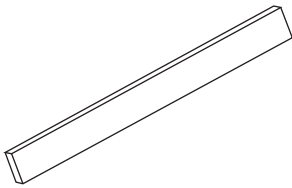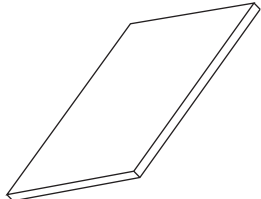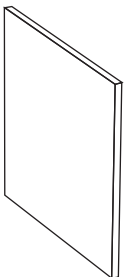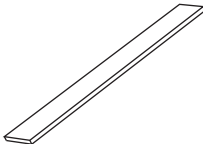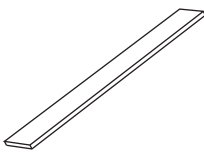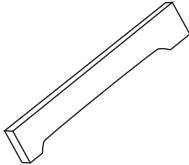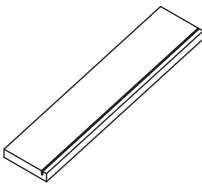					
1	1 PC	2	1 PC	3	1 PC
					
4	1 PC	5	1 PC	6	1 PC
					
8	1 PC	9	2 PCS	10	1 PC
					
12	2 PCS	13	1 PC		
				14	1 PC
16	1 PC	17	2 PCS	18	1 PC
				19	1 PC
		20	3 PCS	21	3 PCS

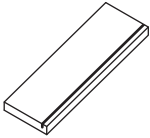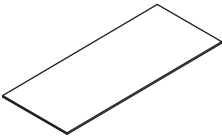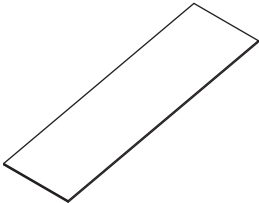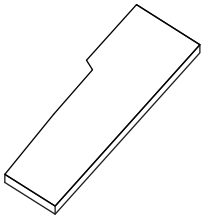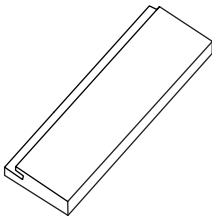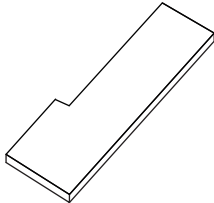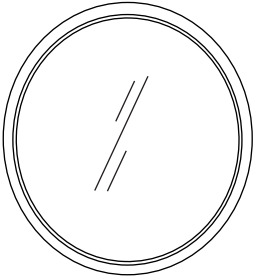							
22	6 PCS	23	6 PCS	24	3 PCS	25	3 PCS
							
26	3 PCS	27	1 PC	28	1 PC	29	1 PC
							
30	1 PC	31	2 PCS	32	3 PCS	33	1 PC

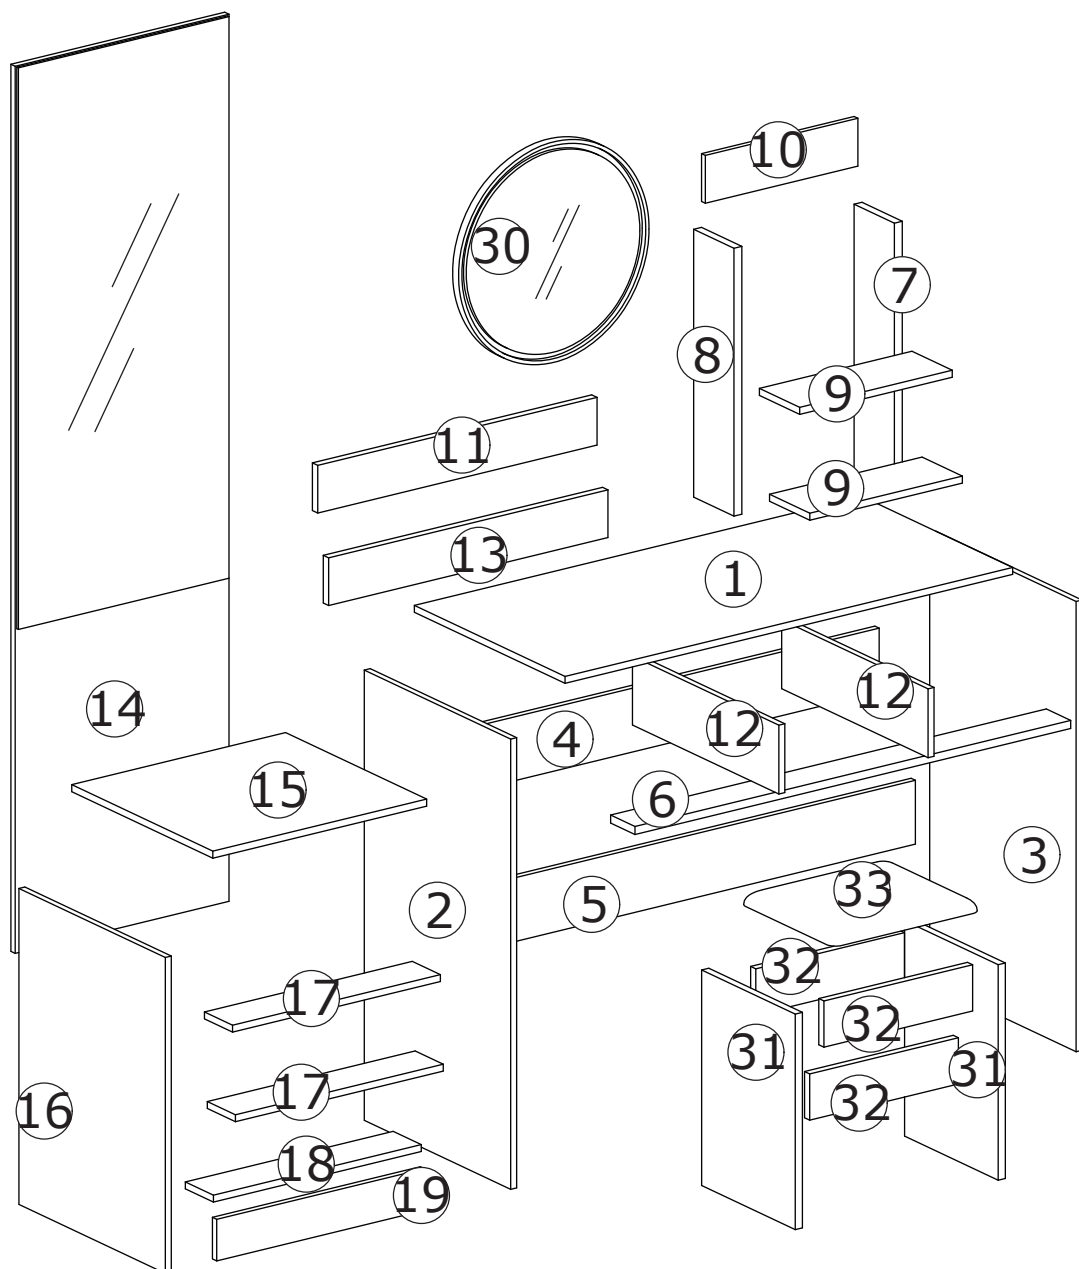 




⚠ WARNING





    

 
 
Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

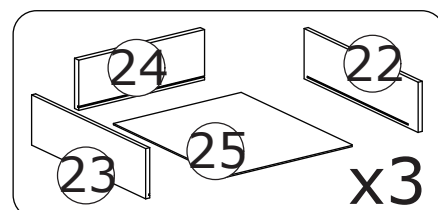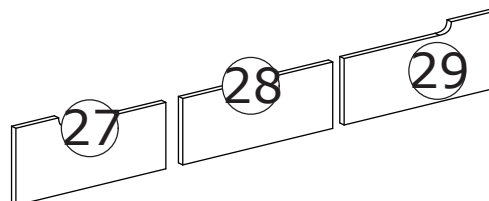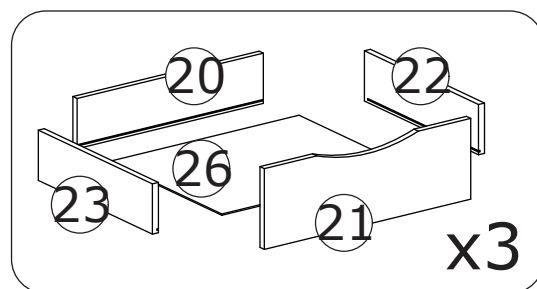*This is a permanent label.
Do not remove!*




1

A x 20  Ø 6 x 35 mm	B x 16  Ø 3 x 12 mm	D x 4  Ø 8 x 30 mm	F x 4 	G x 4 	
--	--	---	---	--	---

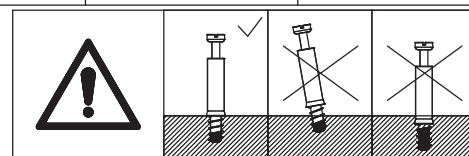 


Fix slide rail(F) to plate 2 with screw(B), insert quickfit screw(A) and wooden dowel(D) into corresponding holes as shown.

 Fix slide rail(G) to plate 16, insert quickfit screw(A) and wooden dowel(D) into corresponding holes as shown.


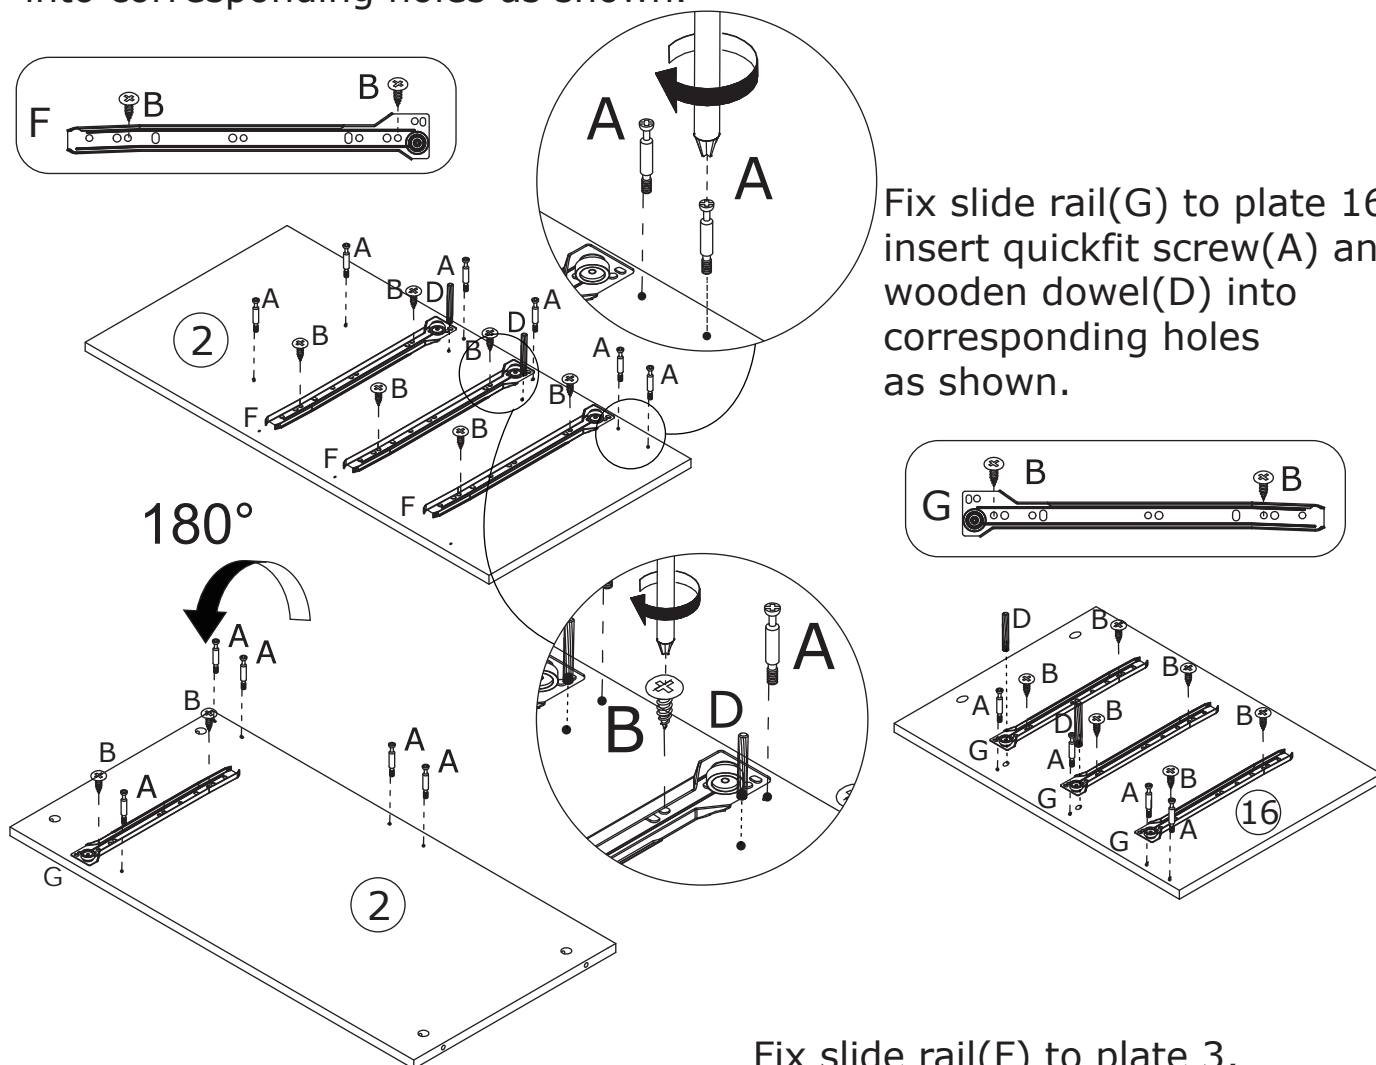


Fix slide rail(F) to plate 3, insert quickfit screw(A) into corresponding holes as shown.


 
Flip plate 2, fix slide rail(G) with screw(B), insert quickfit screw(A) into corresponding holes as shown.

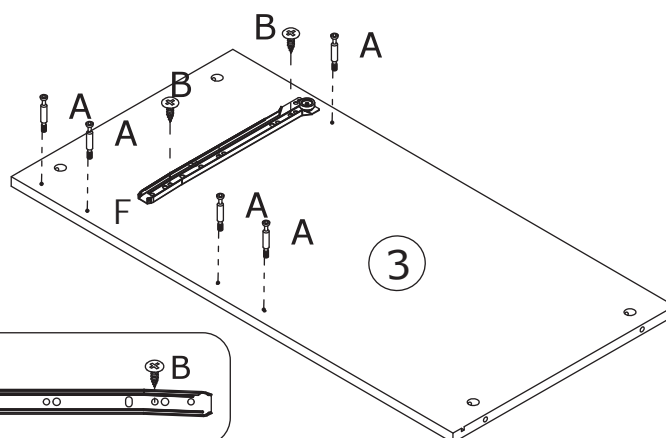





2

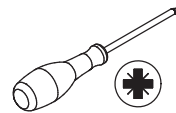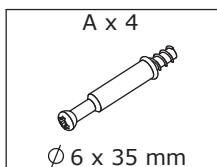 

  
Insert quickfit screw(A) into plate 4 and 6 with a screwdriver as shown.

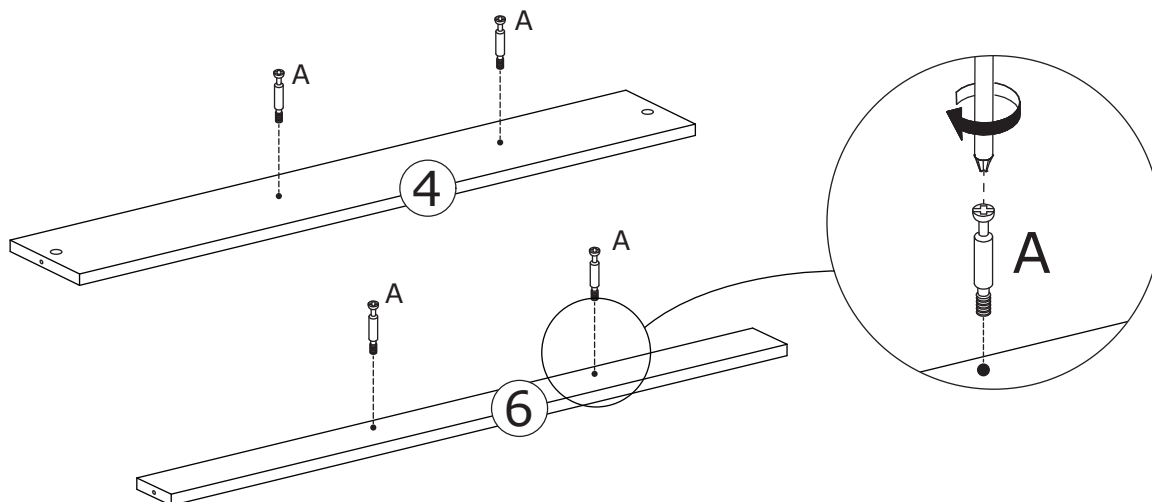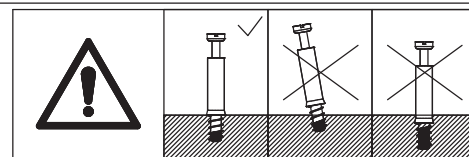

3

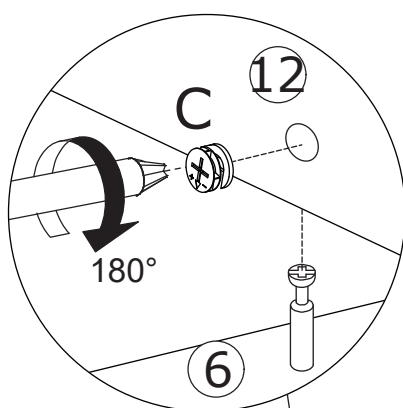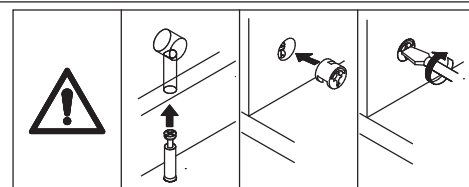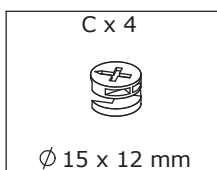    

 Connect plate 4 , 12 and 6 together, put cam lock(C) into plate 12 and turn clockwise to tighten as shown.

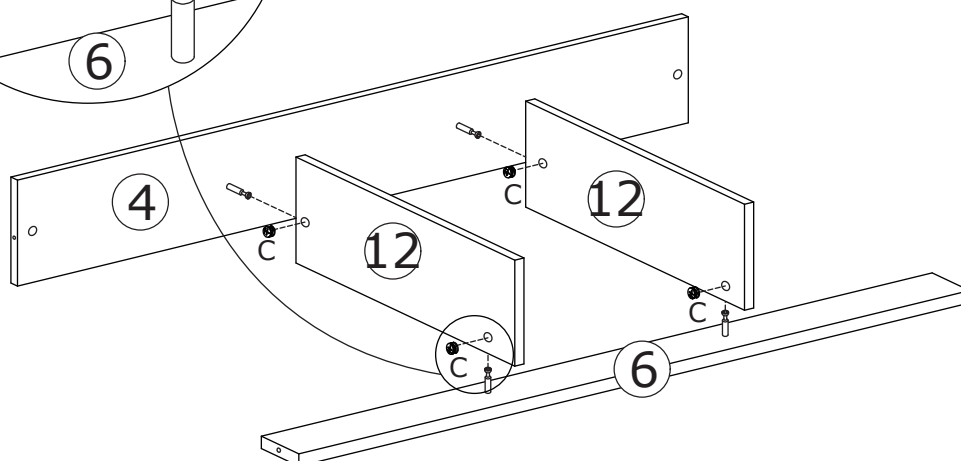


4

B x 8






Ø 3 x 12 mm

 
F x 2




G x 2

  
 


 Fix slide rail(F) to left side of plate 12(x2);
slide rail(G) to right side of plate 12(x2)
with screw(B) as shown.

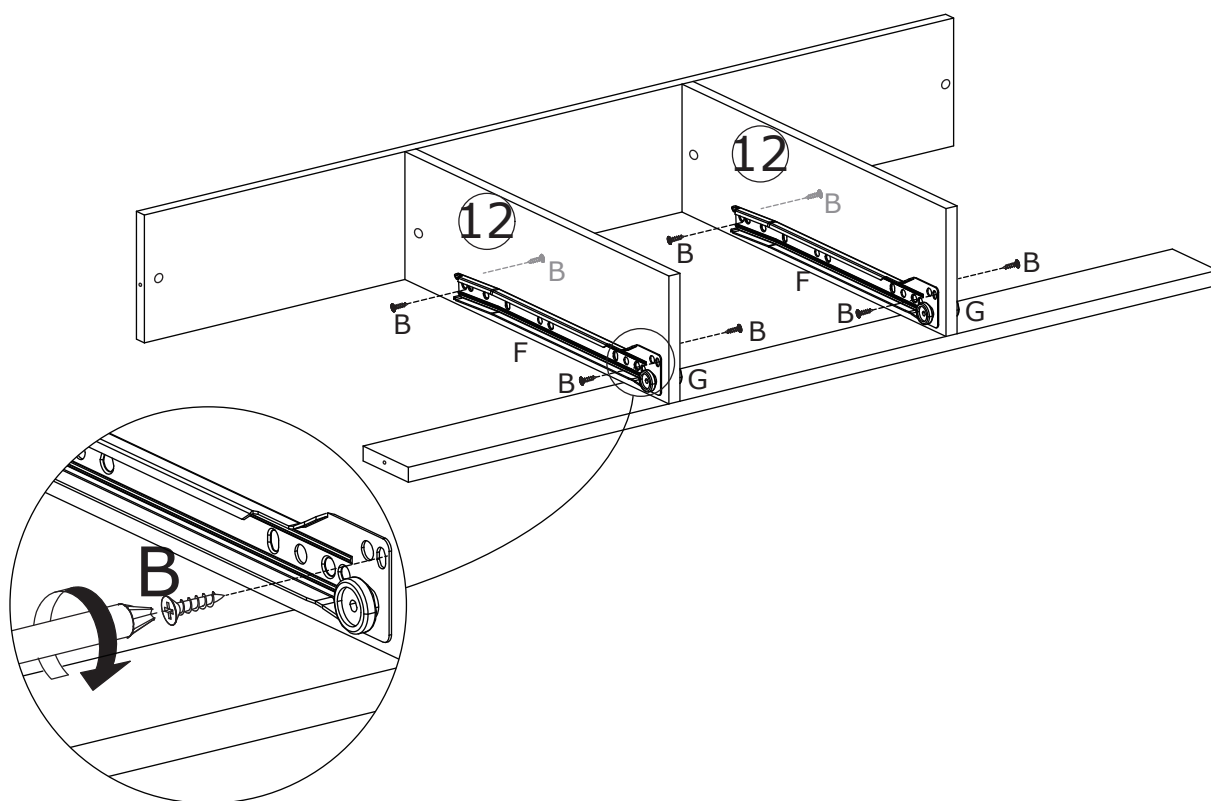


5



 
 
C x 10

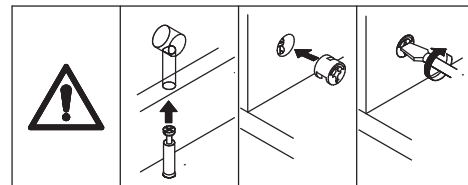 Ø 15 x 12 mm

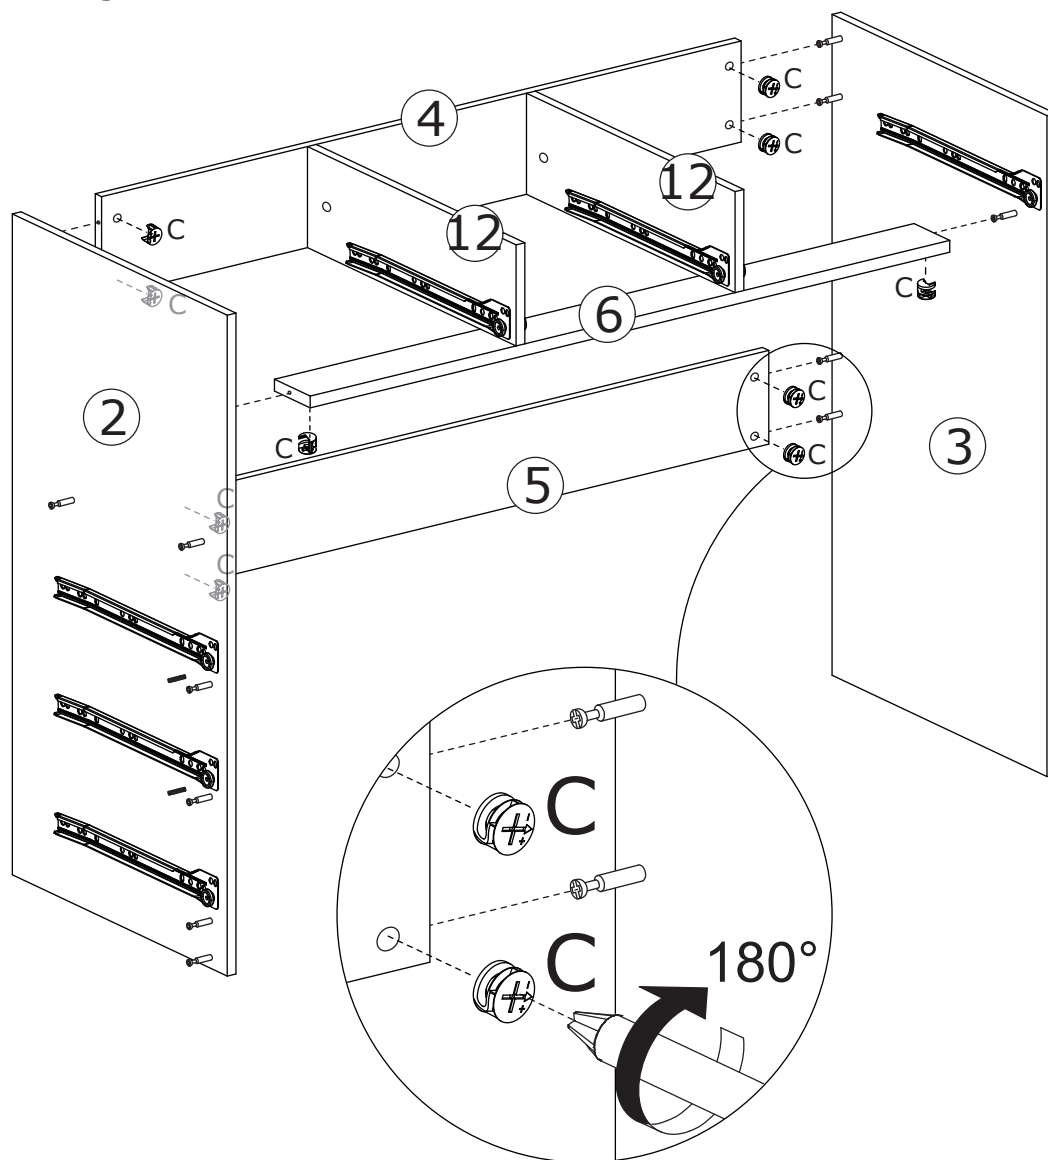 

    Connect plate 2 , 4, 6, 5 and 3 together,
 put cam lock(C) into plate 4,6,5 and turn
 clockwise to tighten as shown.

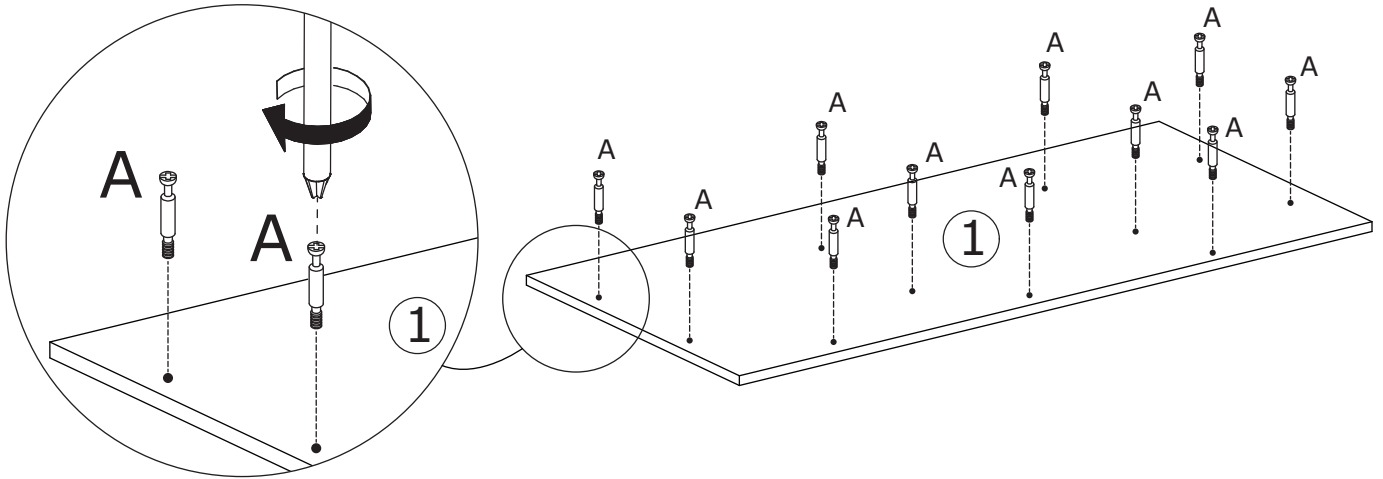
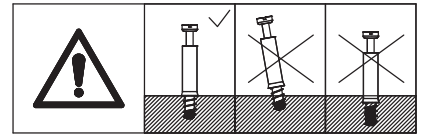

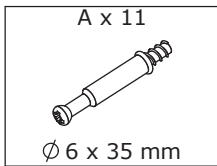


6




Insert quickfit screw(A) into plate 1 with a screwdriver as shown.

   
 
7

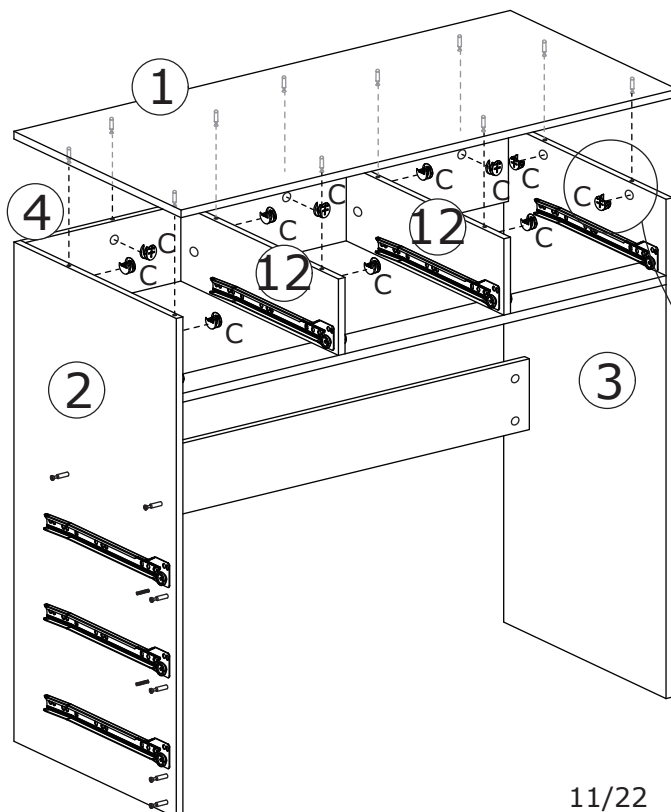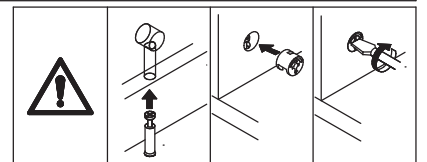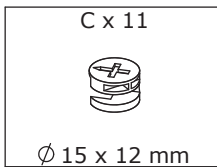


 
Cover plate 1 to the top, put cam lock(C) into plate 2,4,12,3 and turn clockwise to tighten as shown.

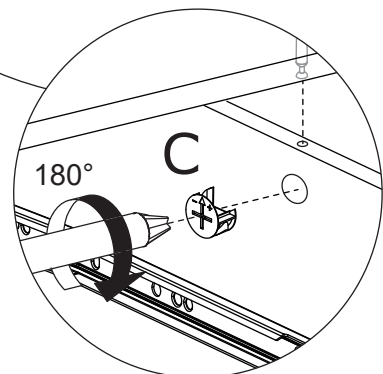



8

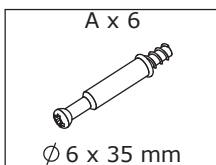  

 
 
Insert quickfit screw(A) into plate 1 with a screwdriver as shown.

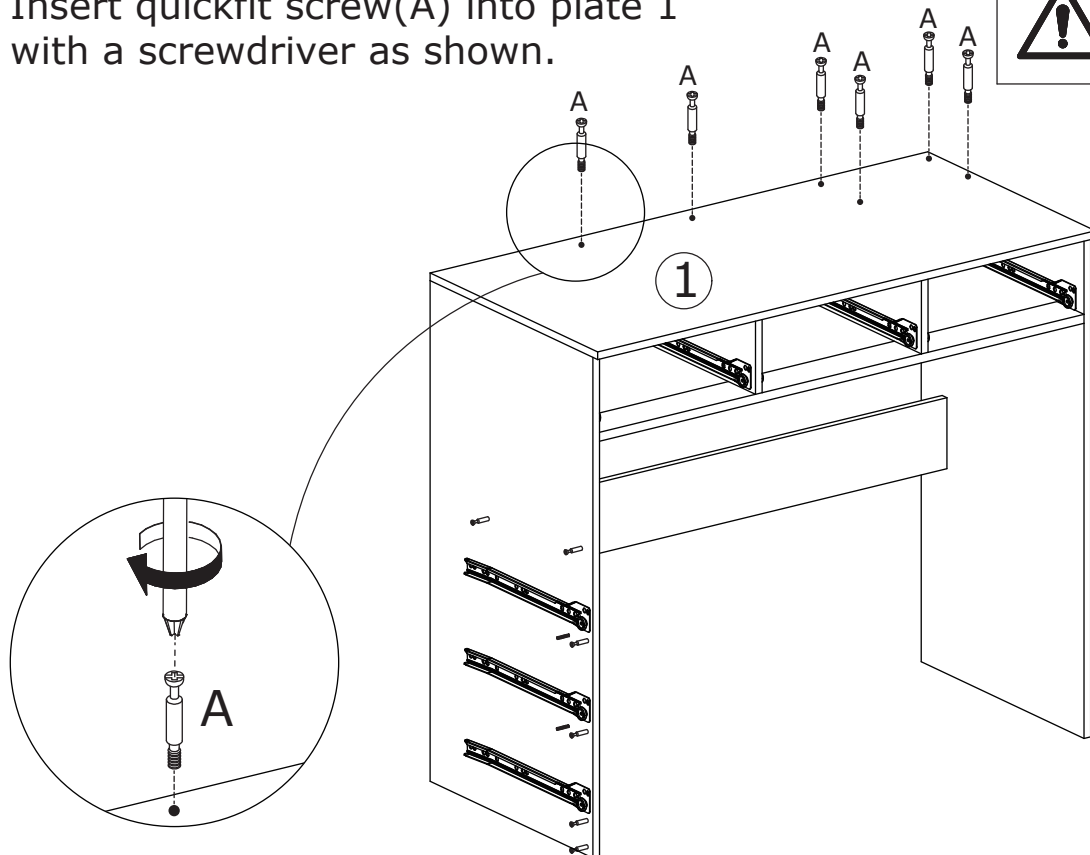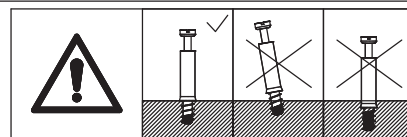

9

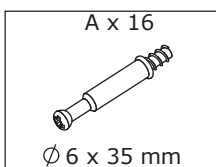  

  Insert quickfit screw(A) into plate 8 and 7 with a screwdriver as shown.

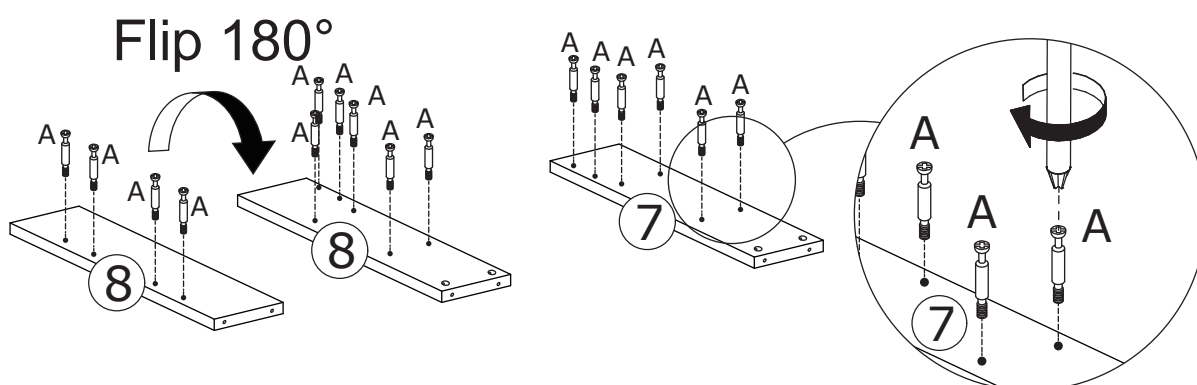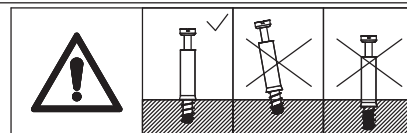


10



C x 22



 
Ø 15 x 12 mm



  Connect plate 11, 13, 8, 9, 10 and 7 together, put cam lock(C) into plate 11,13,10,9 and turn clockwise to tighten as shown.

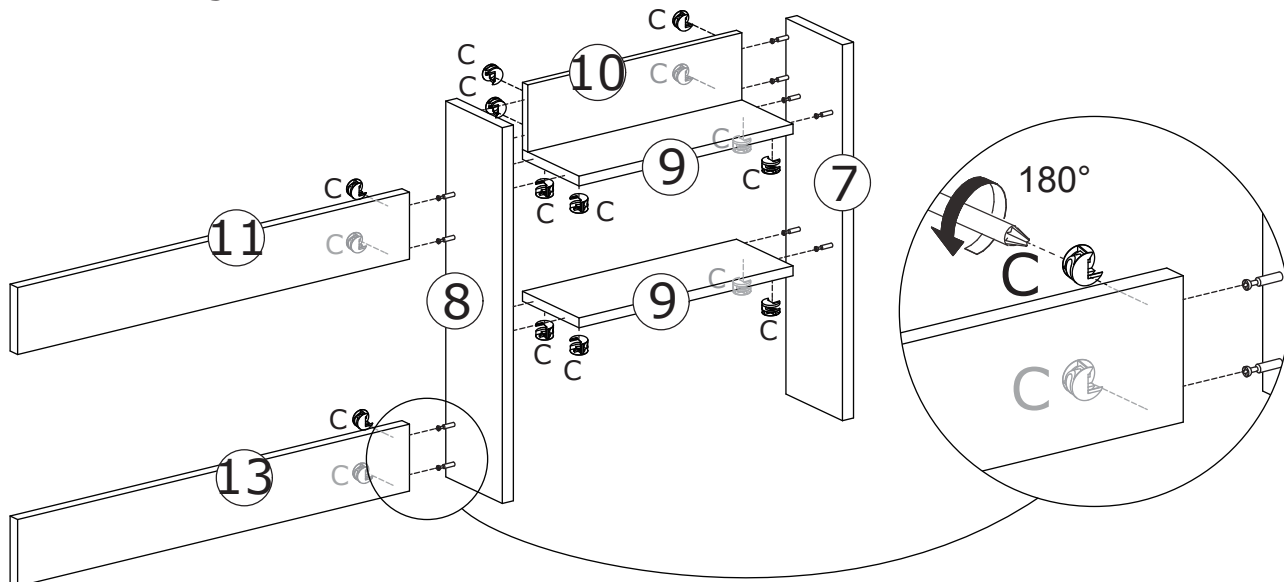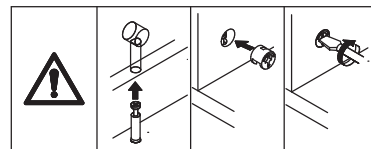


 Attach the component to plate 1, put cam lock(C) into plate 13,8,7 and turn clockwise to tighten as shown.

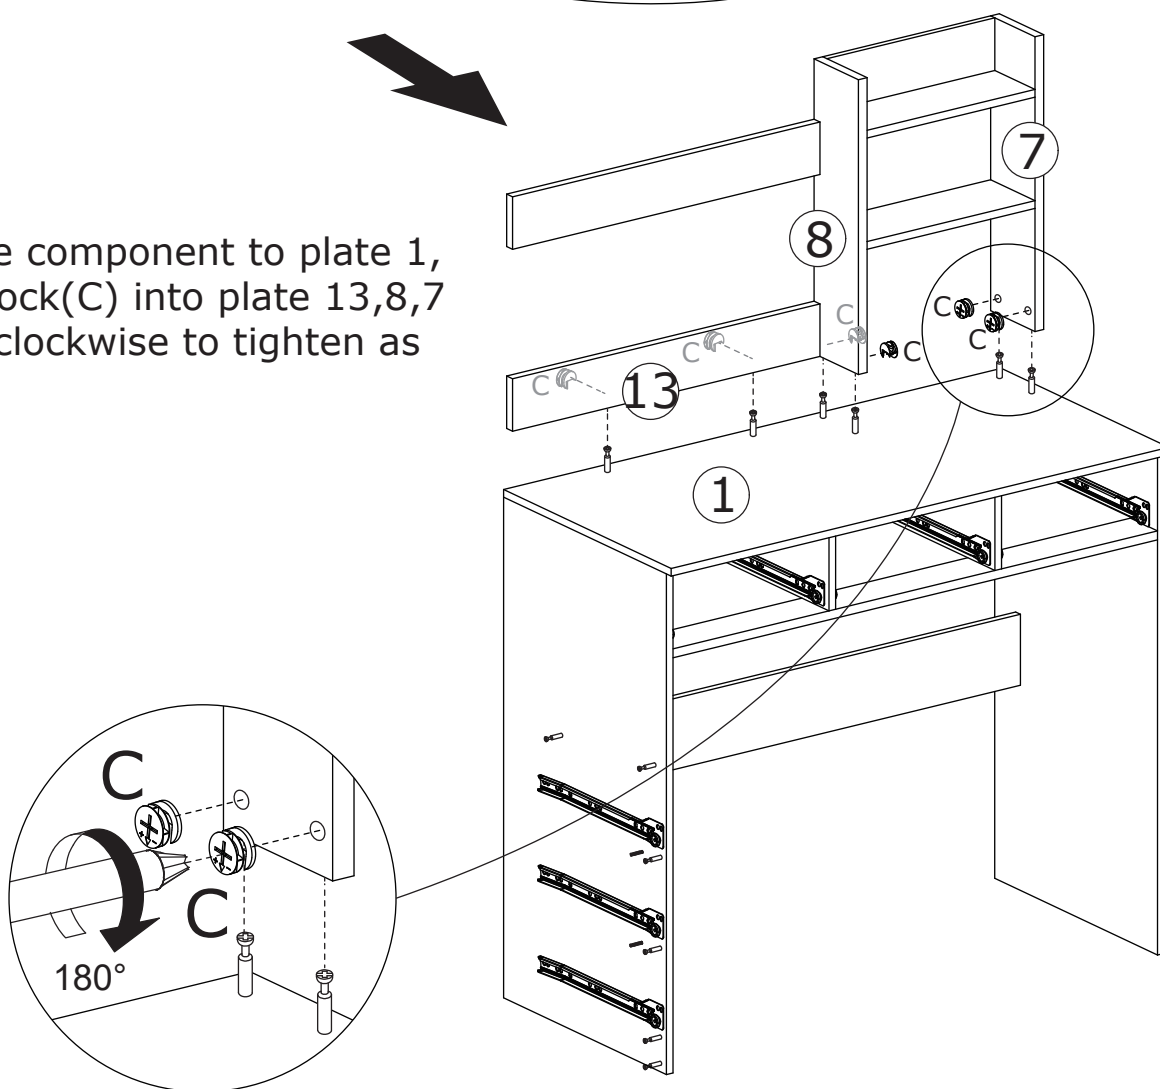


11


 
A x 4



Ø 6 x 35 mm

 

  Insert quickfit screw(A) into plate 18 and 15 with a screwdriver as shown.

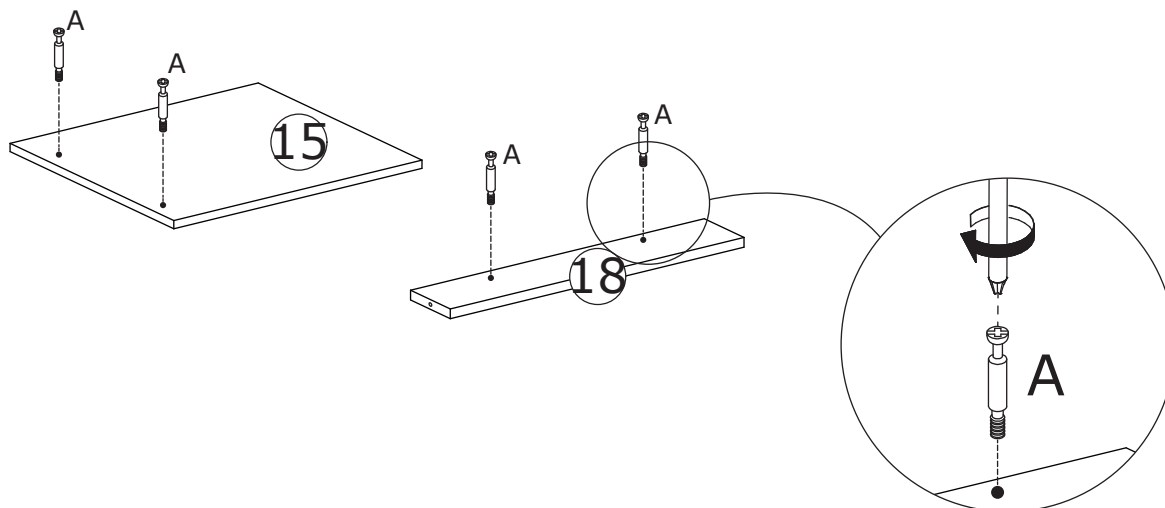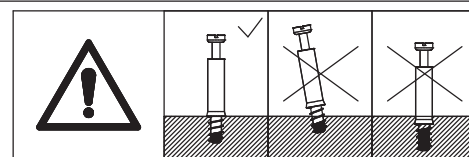


12



C x 2



 Ø 15 x 12 mm



  Attach plate 19 to plate 18, turn cam lock(C) in plate 19 clockwise to tighten as shown.

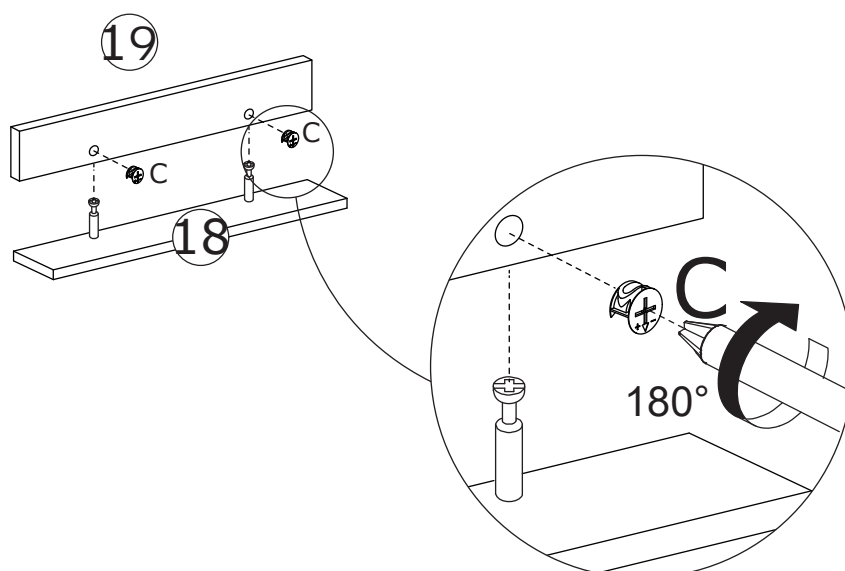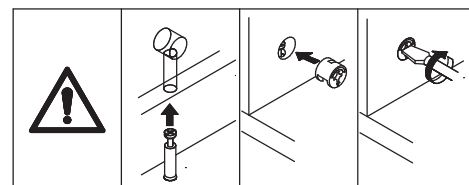


13




C x 14




 
Ø 15 x 12 mm



   Connect plate 15, 17, 18, 19 and 16 together, put cam lock(C) into plate 16,17,18,19 and turn clockwise to tighten as shown.

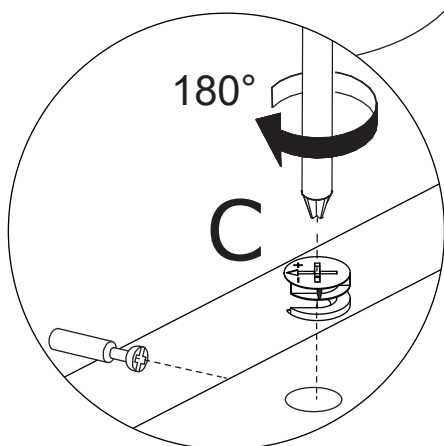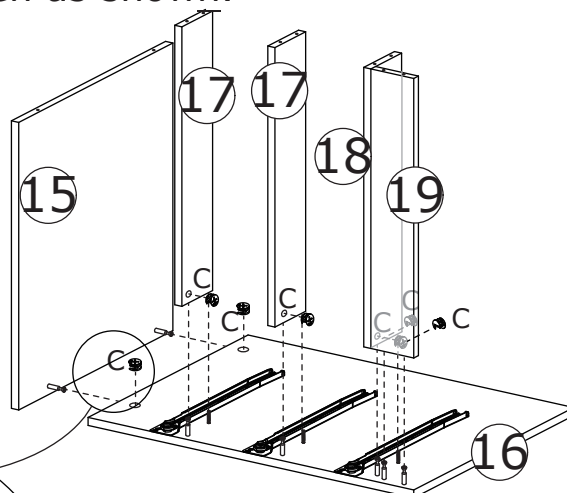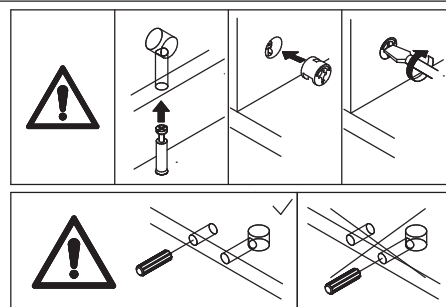

  Attach the component to plate 2, put cam lock(C) into plate 15,17, 18,19 and turn clockwise to tighten as shown.

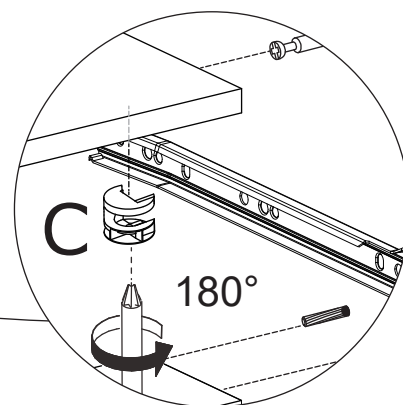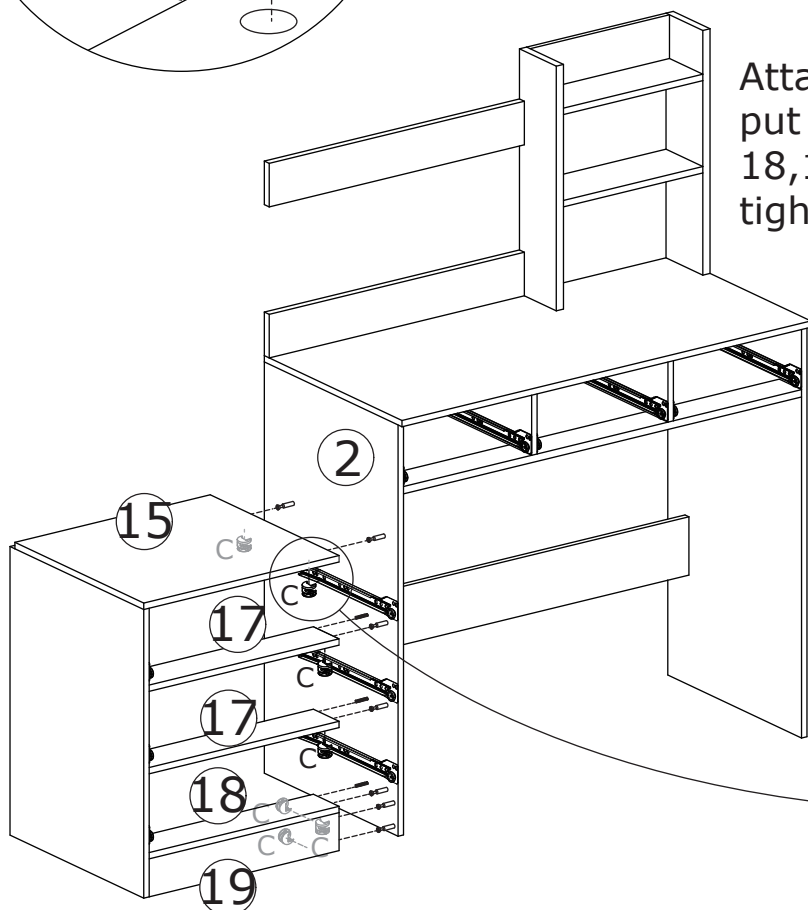

14

 
A x 4





C x 4





J x 10



  Insert quickfit screw(A) into side of plate 14 with a screwdriver as shown.

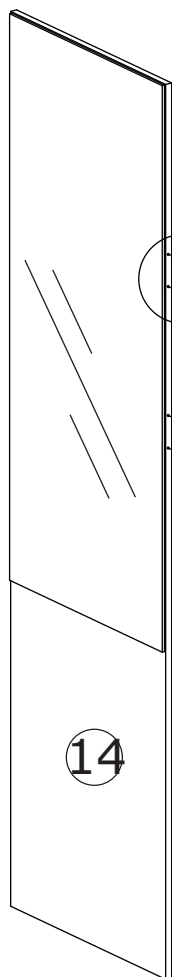
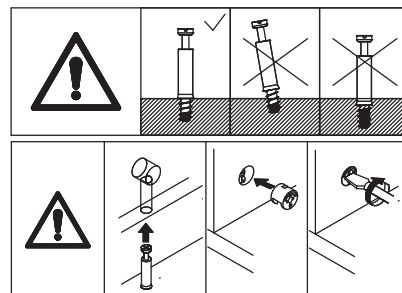


14

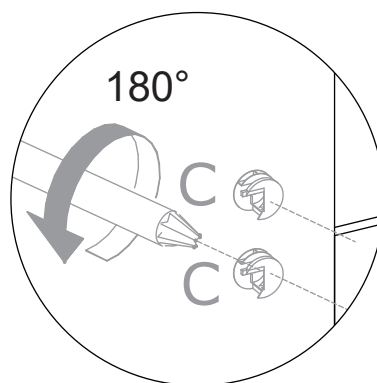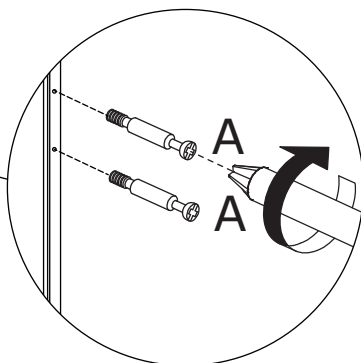  


Attach the mirror to plate 11 and 13, put cam lock(C) into plate 11,13 and turn clockwise to tighten as shown.

 
 
Fix plate 14 to plate 15, 16 and 2 with screw(J) as shown.

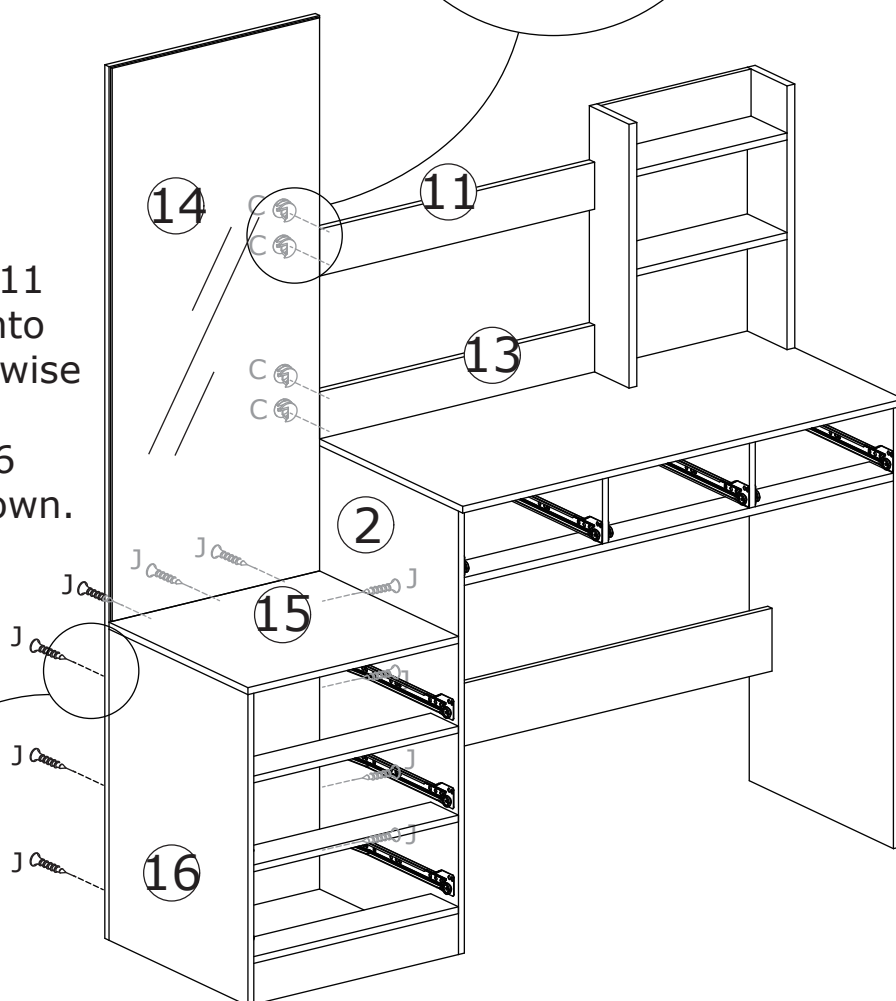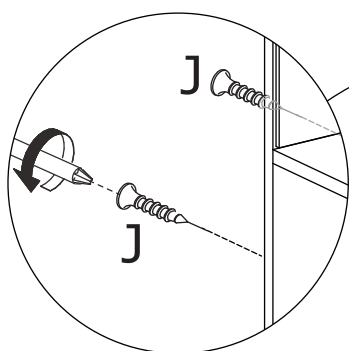

15

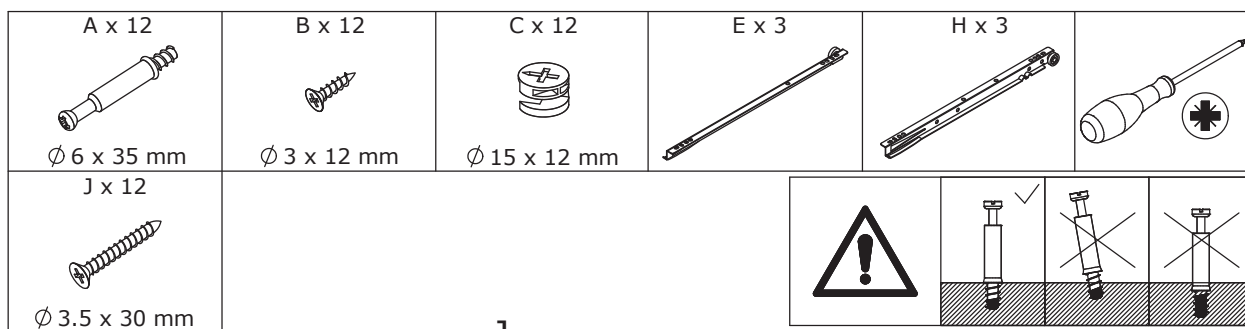 


  Fix plate 22 and 23 to plate 20 with screw(J) as shown.

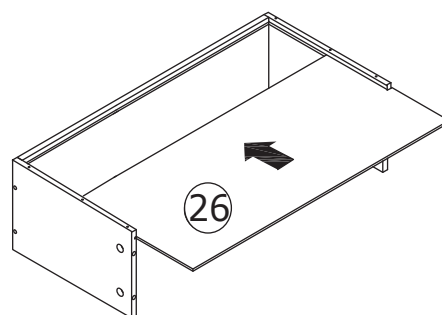
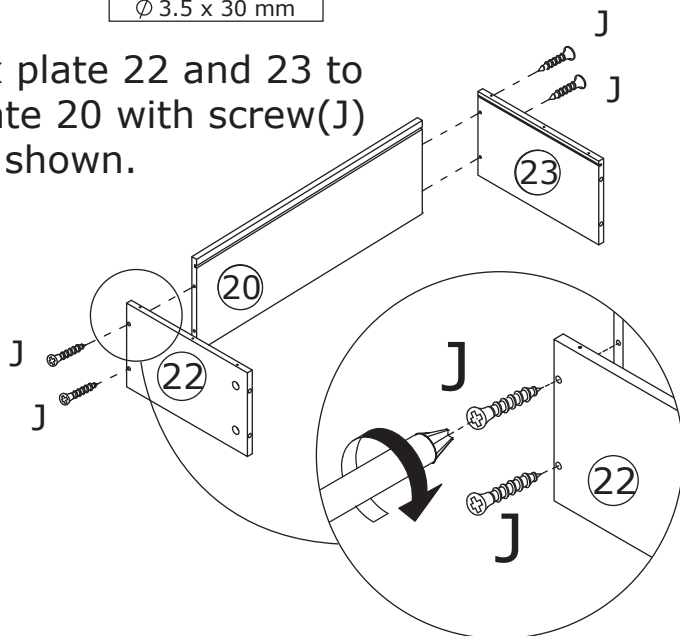


Slide plate 26 along grooves.

 
Insert quickfit screw(A) into plate 21.

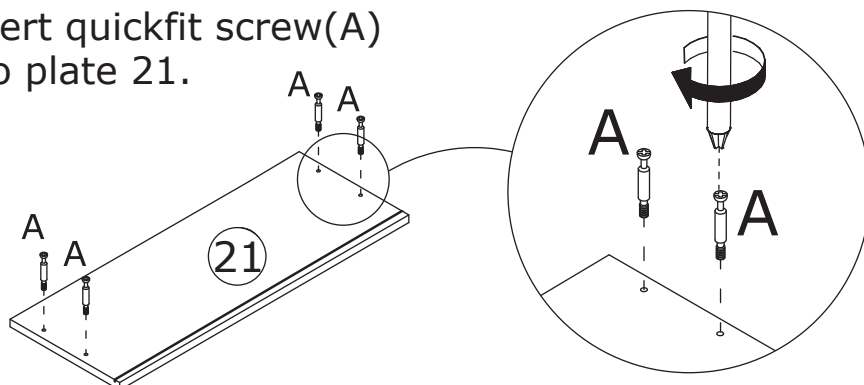

  Attach plate 21 to the component, turn cam lock(C) clockwise to tighten.

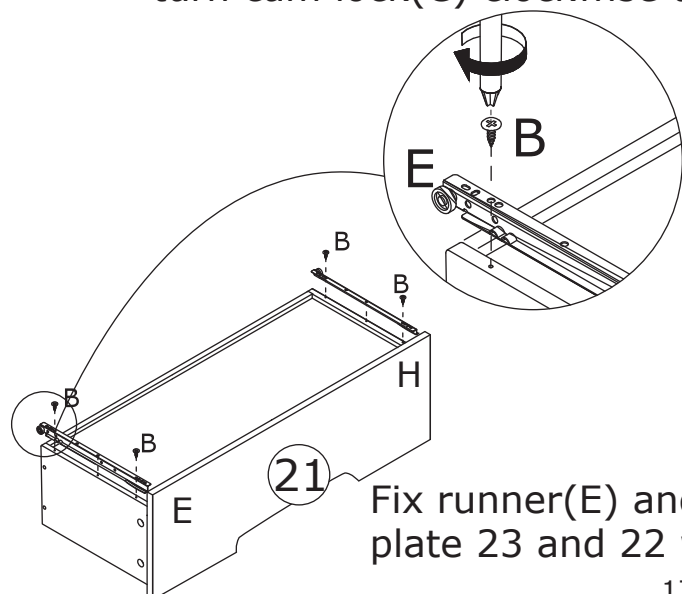
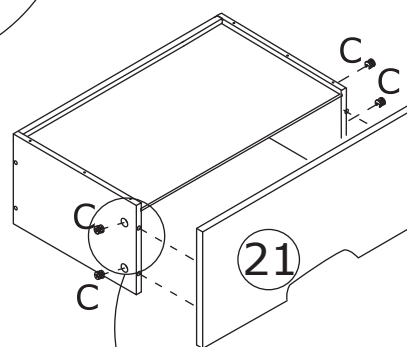


 Fix runner(E) and (H) to plate 23 and 22 with screw(B) as shown.

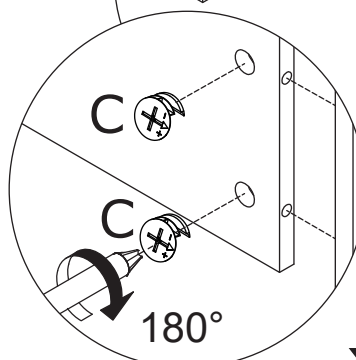


x3

  16

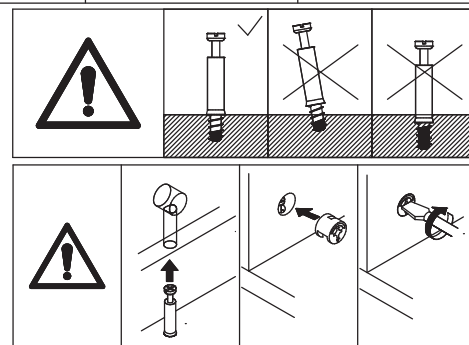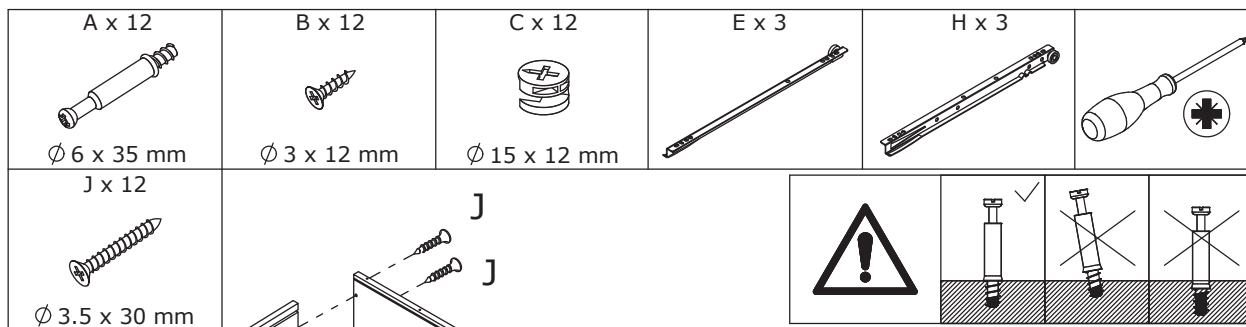


Slide plate 25 along grooves.

 Fix plate 22 and 23 to plate 24 with screw(J) as shown.


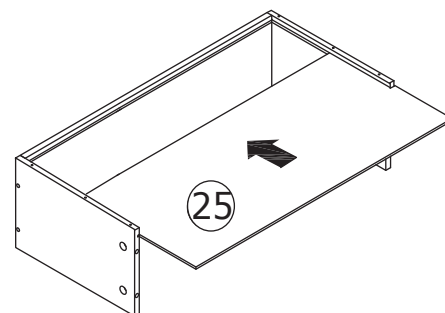


Attach plate 27 to the component, turn cam lock(C) clockwise to tighten.

 Insert quickfit screw(A) into plate 27.

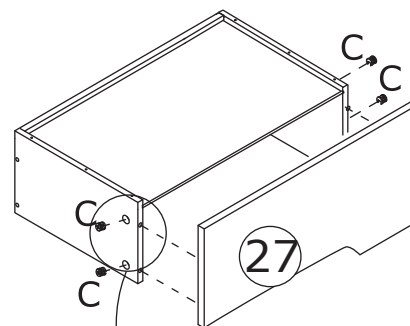

  
Fix runner(E) and (H) to plate 23 and 22 with screw(B) as shown.

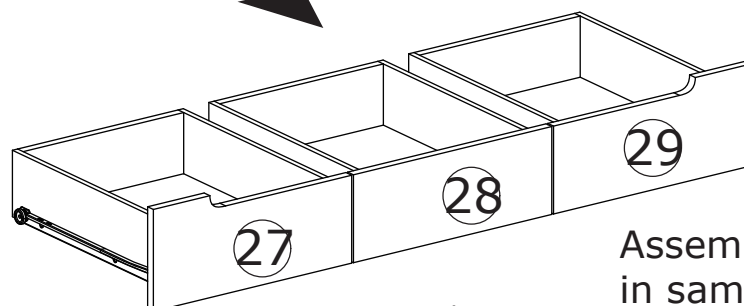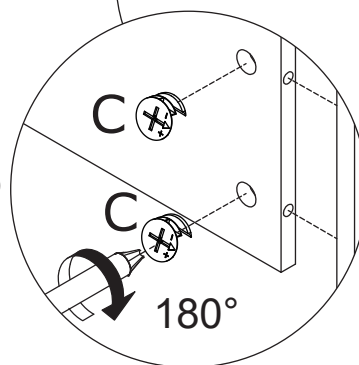

Assemble other drawers in same steps.

17

 Align rails, slide drawers in corresponding positions.

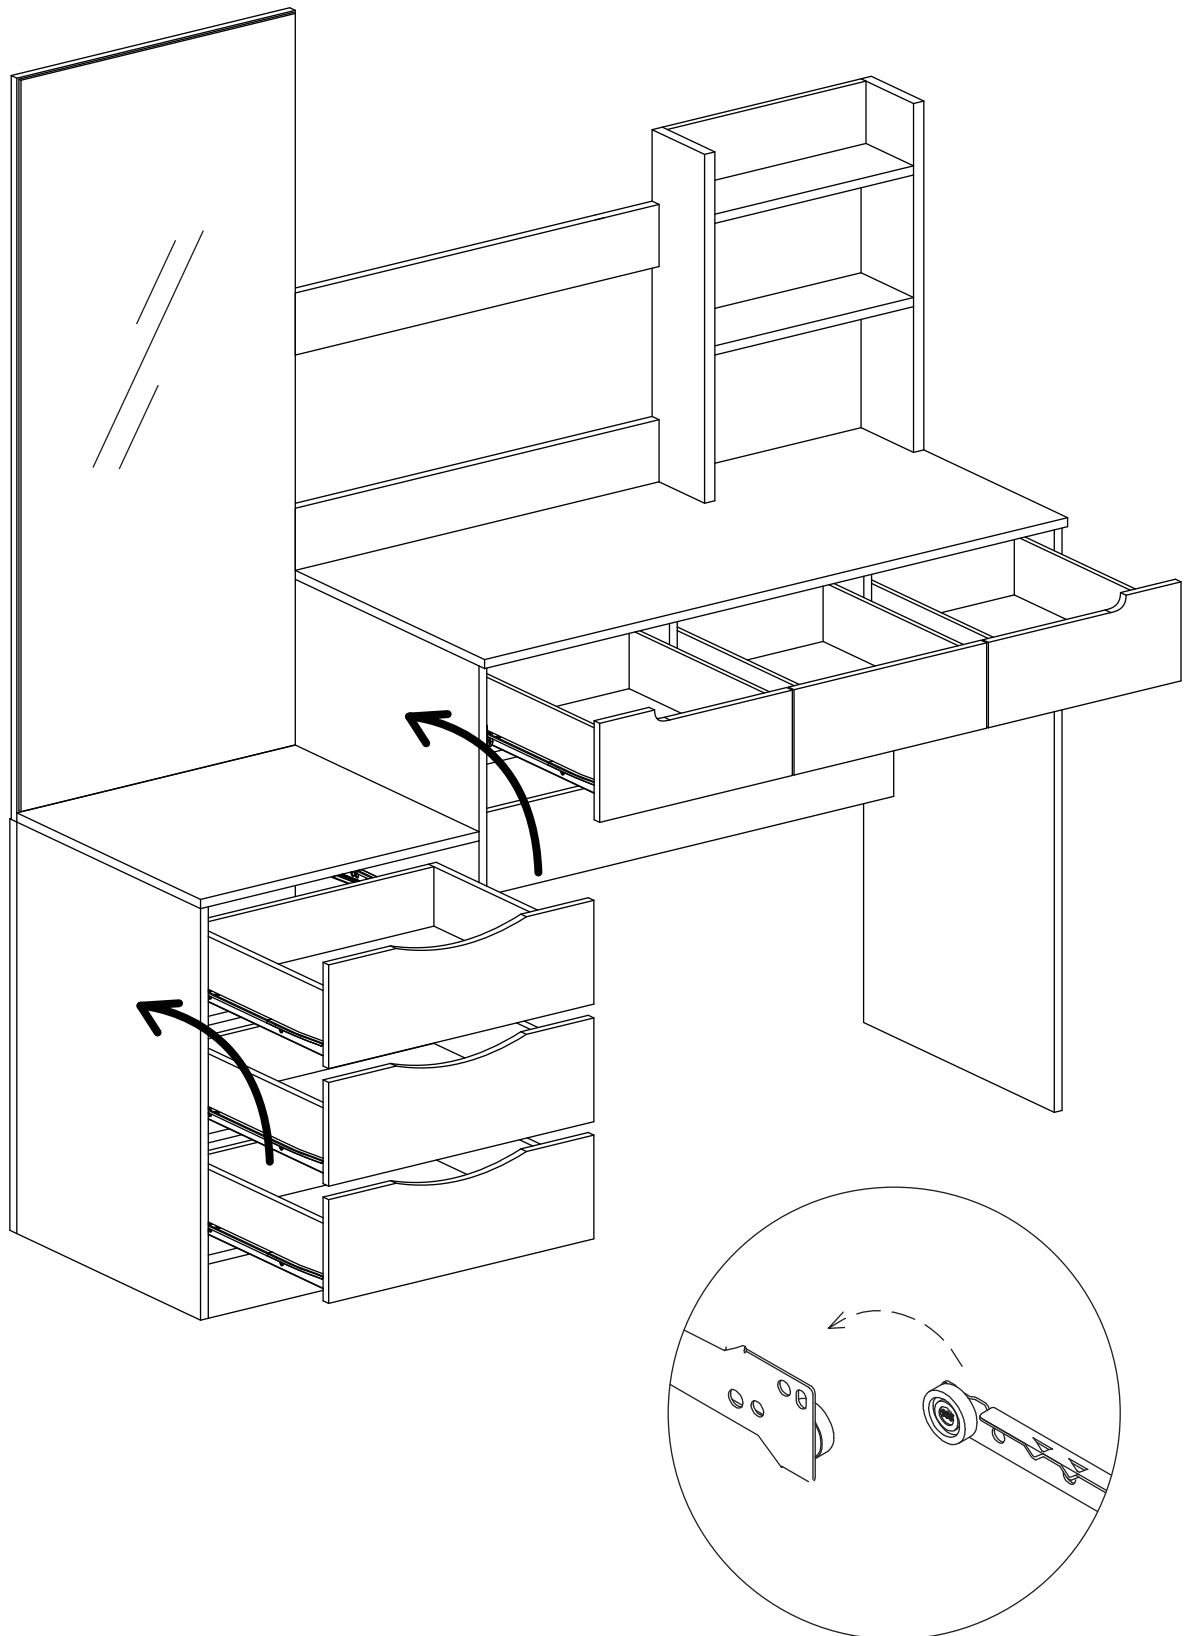

18

 
 
J x 4




Ø 3.5 x 30 mm



Fix plate 31 to plate 32 with screw(J) as shown.

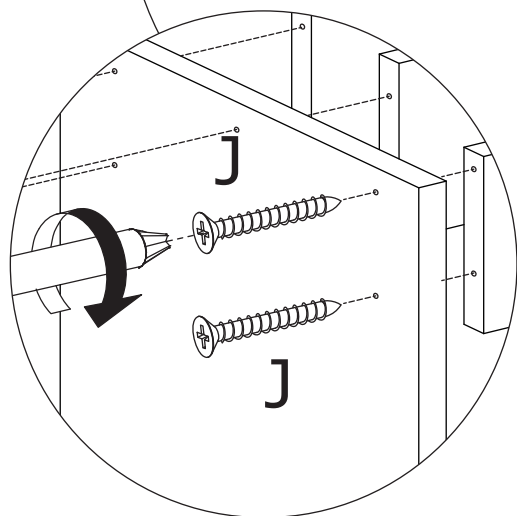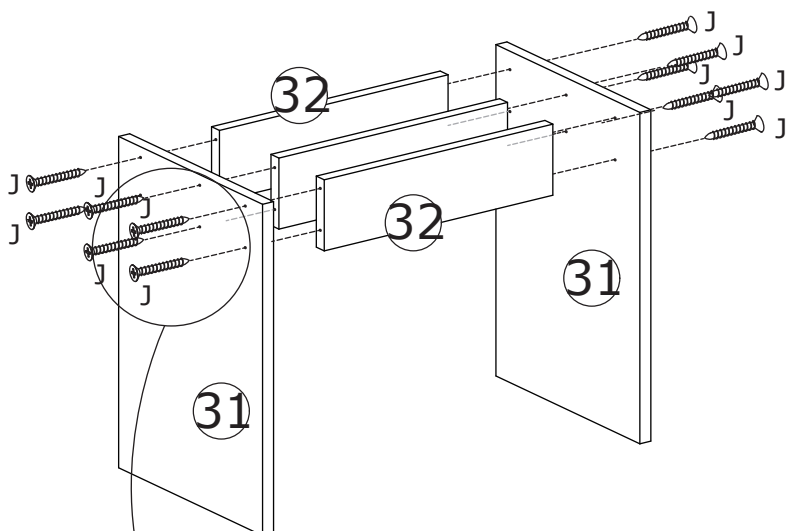

Place seat part 33.

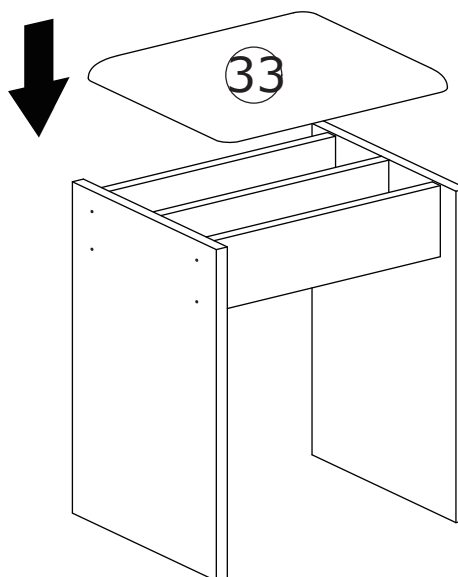 

19

K x 2

 


Ø 6 x 25 mm



L x 1





Fix mirror part 30 to plate 11 with screw(K) as shown.

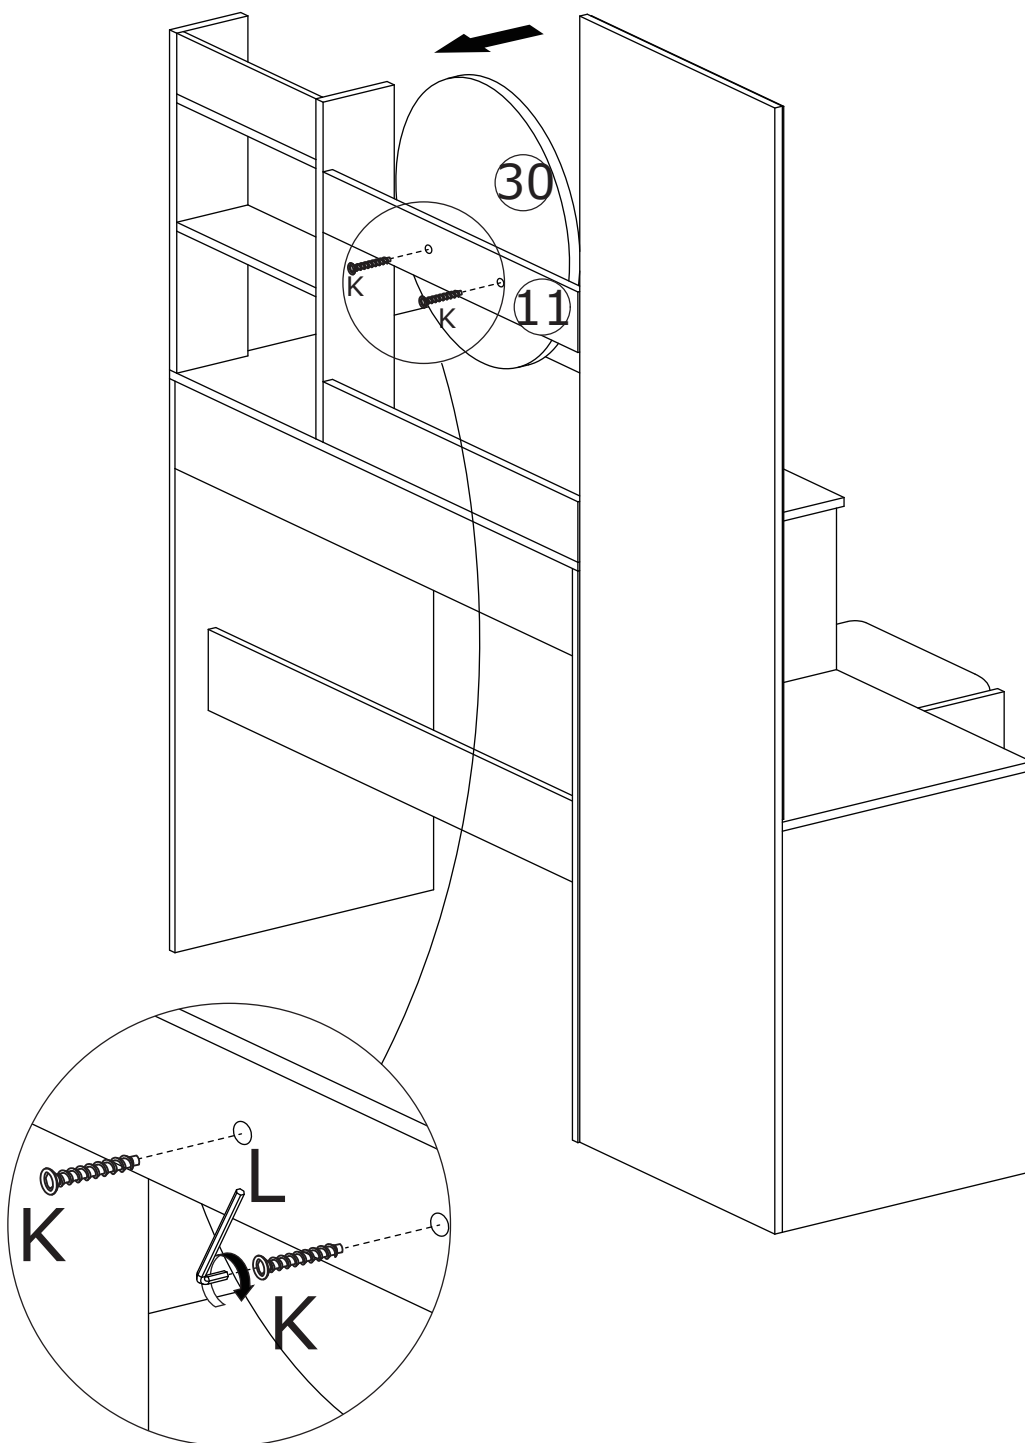

20

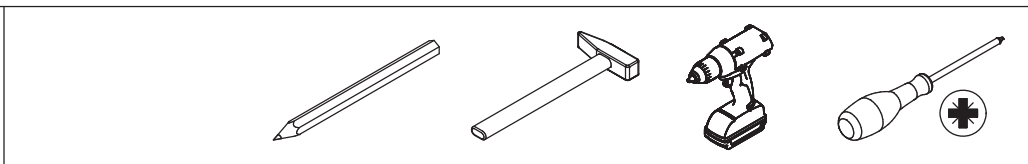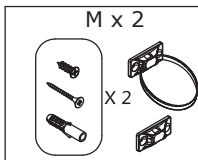  

  Install anti-tipping device(M) as shown.

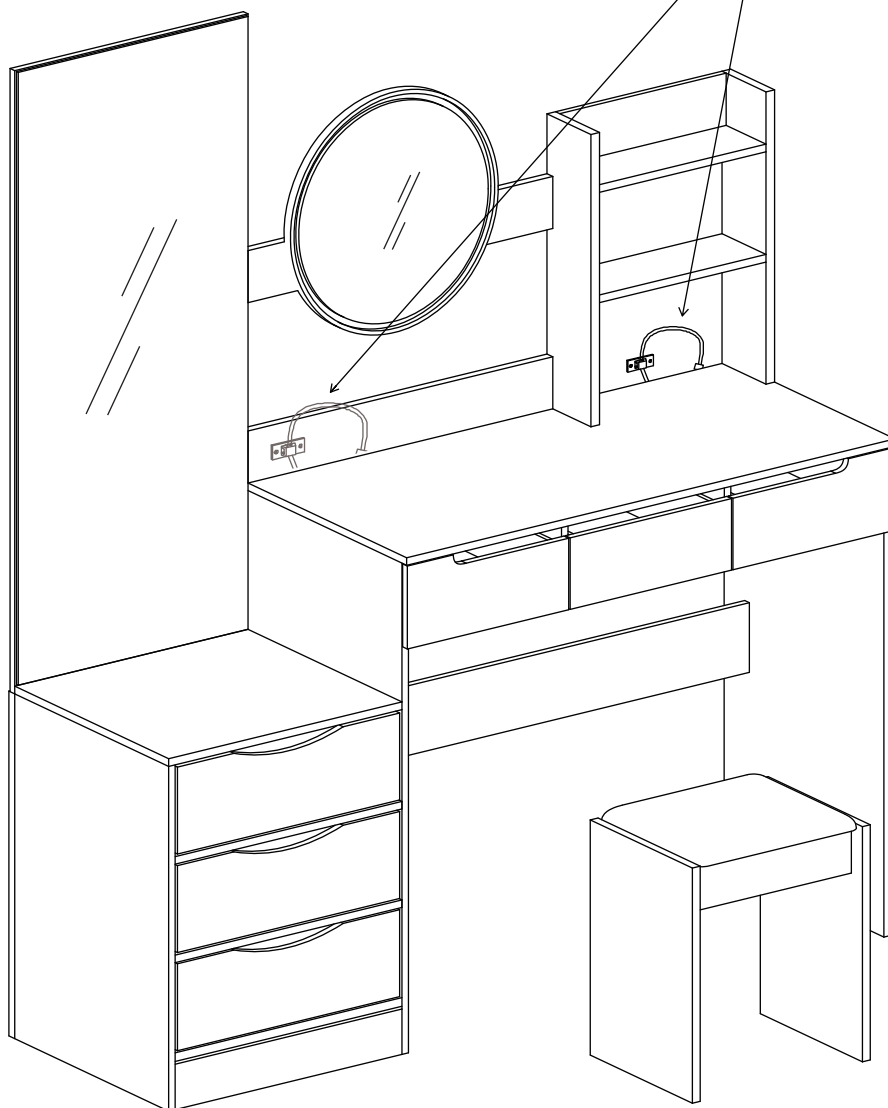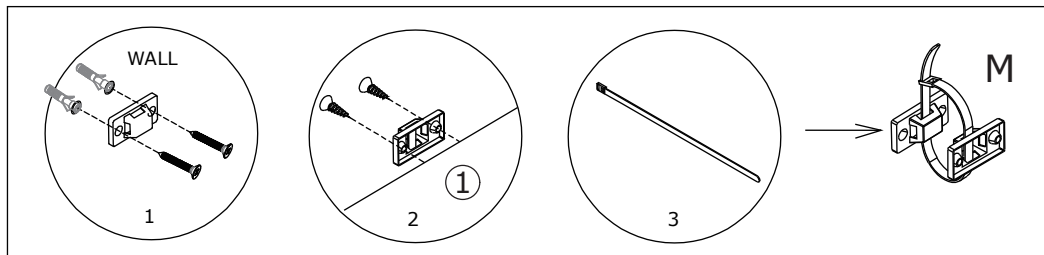

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.