

BABY BOTTLE WARMER

Chef
Handy



USER 'S MANUAL

Model:BBW-9500D

Chef Handly



Thank you for choosing our product

In order to use this product well, please be sure to read the instruction manual carefully and keep the instruction manual properly. The pictures in this manual are for reference only, the product is subject to the actual product.

Precautions for Use

1. Please read the manual carefully before using this product.
2. In order to avoid moisture and leakage, please do not put the machine into water for cleaning.
3. Do not place the product in the place accessible to infants and children; please unplug the power supply if it is not used for a long time.
4. If the power cord is damaged, in order to avoid risks, it must be replaced by the manufacturer, its maintenance department or professionals in similar departments.
5. Do not pour milk and food directly into the milk warmer for heating.
6. Before feeding, please drop the milk on the hand bowl to check the temperature; pay attention to the food heating time should not be too long, so as not to damage the food nutrition.
7. When the product is used in the early stage, slight plastic smell is easy to appear after high temperature, which is a normal phenomenon
8. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Warm Tips	For a better user experience and later maintenance, please use a wet tissue to wipe the inside and outside of the machine for the first time when starting to use the new machine. Please clean the baby bottle basket and cover with water. Fill the scale with water in the bottle warmer and then choose the "Sterilize" mode runs once. At this time, it can check whether the machine is in good condition or not. After the operation, pour out the internal water of the bottle warmer for ventilation and drying and then it can be used normally next time.
-----------	--

Cleaning and Maintenance

1. When cleaning, please unplug the power plug and wait for the heating plate to cool to room temperature before cleaning.
2. Do not scratch the heating plate with metal sharp objects.
3. Due to the different water quality of the tap water, when the heating plate is used for a period of time and the scale is accumulated. Appropriate amount of vinegar or citric acid can be used to add appropriate amount of water into the bottle warmer. Choose the "Sterilize" function to boil the water and clean it.

Daily Cleaning Method

1. Daily cleaning is recommended once every 10-15 days.
2. After the bottle basket and cover are cleaned with water, place them for ventilation.

Long-term Maintenance Requirements


1. It is recommended to pour a certain amount of cleaning detergent (vinegar, citric acid, etc.) into the water tank every two months after the normal use of the bottle warmer and soak it for more than 10 minutes, and then rinse it with clear water.

Product Specifications

Product Name	Baby Bottle Warmer	Product Model	BBW-9500D
Rated Power	AC 110~120V 500W	Warranty	1Year
Recommended room temperature & humidity	15-30°C / 30%-80%	Year of Manufacture	

Introduction to use and operation panel


The machine is equipped with six touch buttons: "power button", "function selection", "add temperature", "reduce temperature", "reserve" and "night light", as shown in the following figure:

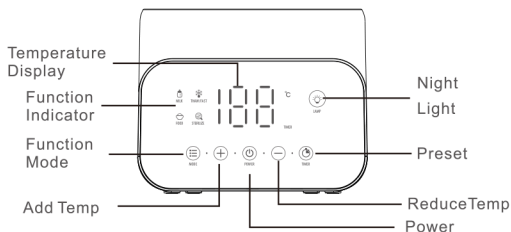

1. Plug in the power supply and the buzzer will beep once, then the screen will display " OF ". Enter the standby state.
2. Press the "POWER" button to turn on and off the machine. When the machine is turned on, the function indicator lights for Warm Milk, Thaw, Food, and Sterilize are all on and the screen display 00
3. Press the "MODE" to select four functions: Warm Milk, Defrost, Food and Sterilize . Each press only displays one function. Other function lights are off.
 - 3.1 Warm Milk: select the warm milk function, the warm "MILK" light is on, and the screen displays 40 °C by default. At this time, you can use "+" and "-" to adjust and set the temperature from 35 to 50 °C. The corresponding indicator flashes 5 times quickly and the buzzer beeps once to enter the heating state. During the heating process, the screen displays the current milk temperature value. And display the set temperature alternately, after reaching the set temperature is no longer displayed alternately.

- 3.2 Thaw/Fast: Select the thaw/fast function and the "THAW/FAST ✱" function light is on, then the display shows 37 °C by default. At this time, you can use "+" and "-" to adjust the setting temperature from 32 to 42 °C. The corresponding indicator flashes 2 times quickly and the buzzer beeps once to enter the heating state. During the heating process, the screen displays the current milk temperature value. And display the set temperature alternately, after reaching the set temperature is no longer displayed alternately. After 2-3 minutes, the screen will displays 43 degrees . The current milk temperature and the set milk temperature start to flash alternately again. At the same time, the indicator light also starts to flash, indicating that the current milk temperature has exceeded 42 degrees to avoid scalding.
- 3.3 Heat Food: Select the Heat Food function and the "FOOD ☹" light will turn on then the screen will display 75 °C by default. At this time, you can use "+" and "-" to adjust and set the temperature value from 60 to 80 °C. The corresponding indicator flashes 5 times quickly and the buzzer beeps once to enter the heating state. During the heating process, the screen displays the current milk temperature value. And display the set temperature alternately, after reaching the set temperature is no longer displayed alternately.
- 3.4 Sterilize: Add about 150ml of water to the milk warmer and select the sterilize function. The indicator lights ☹ is on and the screen switches to display 100°C and then alternately shows the process temperature of the water temperature rise. After the water is boiled, then continue to heat for 10 minutes to sterilize. Return to standby after sterilization.
4. Preset: Press "TIME" button and the "TIME ☹" indicator will be on. then the screen will display one hour by default. The time can be adjusted by "+, -". When the booking countdown is completed, the machine starts to heat up. Note: Please select the function before making an appointment.
5. Night Light: Press the "LAMP ☹" button and the night light indicator is on.

 Product Components and Characteristics

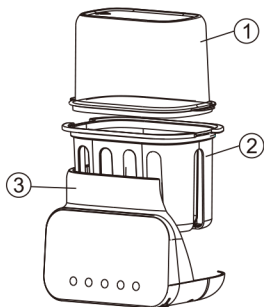

Item	Part Name	Material	Temperature resistance	Quantity
1	Transparent High Cover	PP	-20-120°C	1
2	Baby Bottle Basket	PP	-20-120°C	1
3	Main Body	PP	-20-120°C	1

Assembly and Use Method:


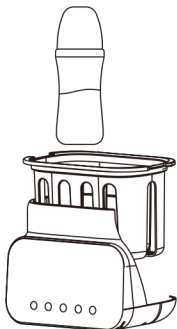 


Figure 1. Fill the bottle with milk and then put it in the bottle basket

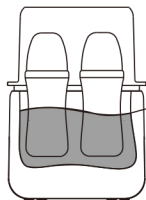 

Add water to reach the height of milk in the bottle (But the water can not exceed the Max level).

Figure 2. Add proper amount of water into the milk warmer.

Warranty Card

Thank you for choosing our products. For your rights and interests, please take good care of the warranty card. If there is any quality problem, please contact the dealer.

User Name		Product Name	
Mobile		Product Model	
Shop		Purchase Date	
Shopping Address			

Warranty:

It is free to provide the maintenance services or replacement within one year from the date of purchase, if there are quality problems or failure problems in normal use condition judged by the technical staff from CHEFHANDY.



More product? Visit
<http://www.chefhandy.net>



Any issue? contact us
<http://www.chefhandy.net>

Need Additional Customer Support?
Contact US expert via
email: **Support@chefhandy.com**

Do not return this product
to the place of purchase.

