

ELECTRIC BABY BOTTLE BRUSH

Chef
Handly



USER 'S MANUAL

MODEL:BCB-3100P



Thank you for choosing our product

In order to use this product well, please be sure to read the instruction manual carefully and keep the instruction manual properly. The pictures in this manual are for reference only, the product is subject to the actual product.

Catalogs

User Manual

1	Warning	03
2	Cleaning & Maintenance	03
3	Use and precautions	03
4	Product Description	04
5	Parts of Product	04
6	Product Installation and Use	05
	♦ Brush head installation	06
	♦ Usage Method	06
	♦ Charging instructions	06
7	Warranty	06

Warning

1. Unpack and remove the product from the box, check the accessories list.
(User manual×1, hand-held bottle cleaning brush body×1, charging cable×1, bottle brush head × 1, nipple brush head × 1).
2. For the first use, put two brush heads in boiling water and cook for 3 minutes to remove the odor generated during production and transportation.

Cleaning & Maintenance

1. Do not use alcohol, steel balls, abrasive cleaners, or corrosive liquids to clean the product, otherwise it may damage the product or cause parts to crack or discolor.
2. Please turn off the power supply when cleaning. It is recommended to clean the main unit and the brush head separately.
3. The brush head can be directly rinsed with clean water, and then placed in boiling water for 2 minutes.
4. The body can be wiped clean with a wet towel.

Use and precautions

1. Tighten the connecting shaft between the brush head and the host until the brush head is fully engaged with the connecting shaft.
2. Do not insert other objects into the connection between the main unit and the brush head.
3. If the indicator light turns red or the torque drops, please charge in time.
4. If any fault is found during use, please stop using immediately.
5. During use, it is normal for the hand-held bottle cleaning brush main unit to generate slight heat.
6. Do not disassemble, repair or modify this product by yourself.
7. When using the product, please do not put the brush head close to the human hair to avoid the danger of tangling with the hair when the brush head is running.
8. Do not expose the product to humidity, high temperature, or prolonged exposure to sunlight.
9. This product should not be used by persons with physical, sensory or mental disabilities, or those with inexperience and knowledge (including children). A guardian must supervise and guide the use of this product.
10. Do not use the main unit and brush head of this product as children's toys.

Product Description

Product Specification

product name: Electric Baby Bottle Brush

 
Rated Power:14.5W

Rated Voltage:5V

Net Weight:300g

Product Size:37*37*340mm

Product Parts

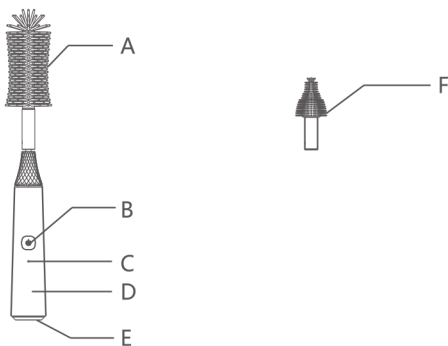

A. Bottle brush head

 
B. On / off key

C. Indicator light

D. Handheld bottle cleaning brush body

E. Bottom cover

F. Nipple brush head

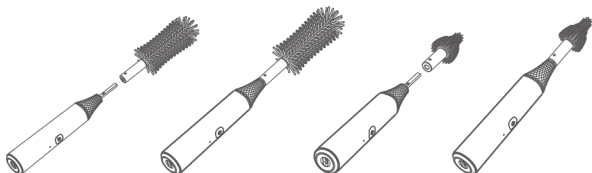

bottle brush
installation

ready

Nipple brush
installation

ready

1.Brush head installation

 
- There are two kinds of the brush head. One is bottle brush head and another one is a nipple brush head.
- Snap type, plug and install method .Put the brush head tightly into the connecting shaft on the host until the brush head and the connecting shaft are fully engaged.

2.Use method

- After installing the brush head, press the power button to clean the bottle.
- After cleaning the bottle, press the power button to turn off the power.

3.Charging instructions

If the indicator light turns red when working, it means that the power is less than 20%, please charge it in time to avoid affecting the use. The charging method is shown below. The red light indicates charging, and the green light indicates full charge.

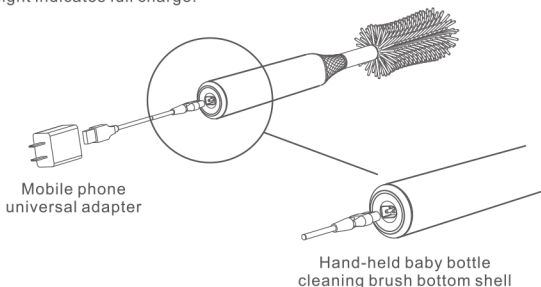

Warranty Card

Thank you for choosing our products. For your rights and interests, please take good care of the warranty card. If there is any quality problem, please contact the dealer.

User Name		Product Name	
Mobile		Product Model	
Shop		Purchase Date	
Shopping Address			

Warranty:

It is free to provide the maintenance services or replacement within one year from the date of purchase, if there are quality problems or failure problems in normal use condition judged by the technical staff from CHEFHANDY

Free Maintain won't be given under the following circumstance:

Free Maintain won't be given under the following circumstance:

1. During the warranty period, repaired by technical staff who is not from Chefhandy, installed or used improperly or improper transportation.
2. The damage caused by customer inappropriate installation, disassembly, or the usage.
3. Warranty card lost or damaged.

Note this product is subject to change without notice during continuous improvement.

Note: In order to prevent the battery from overheating, the machine will automatically shut down after 30 minutes of continuous use, can not be started again until 10 minutes after the battery is stopped.



More product? Visit
<http://www.chefhandy.net>



Any issue? contact us
<http://www.chefhandy.net>

Need Additional Customer Support?
Contact US expert via
email: **support@chefhandy.com**

Do not return this product
to the place of purchase.

