

MUBVIEW[®]

A Smarter Safety Solution

QUICK START GUIDE



Bell-J7 **SMART VIDEO DOORBELL**

WIRELESS | WIFI | OUTDOOR | WATERPROOF
FCC ID: 2AUSP-BELLJ6

Warranty Service

Thanks for your shopping and trust.

We are keeping to optimize product and improve our **lifetime customer service** to offer you a better shopping experience. If you have any problems, please feel free to **contact us**. We will solve your problems **within 24 hours**. Besides, your advice or suggestions will be much appreciated and welcomed.

Register via link below to get **3 Years Warranty Extension**. <http://bit.ly/zuReg>

Product Service

Email: support@mubview.com

Distributor: business@mubview.com

About Us

Web: www.mubview.com

Facebook: www.facebook.com/mubview

Amazon Store: www.amazon.com/mubview

1. Charge the Doorbell -----	P1
2. Supply Power to the Chime -----	P1
2.1 Power by three AA batteries-----	P1
2.2 Power by DC 5V adapter-----	P1
3. What's in the Box-----	P2
4. Switch on the Doorbell -----	P3
5. Download Mubview APP -----	P4
6. Account Registration-----	P4
7. Add Doorbell to App-----	P5
7.1 Preparations for connection-----	P5
7.2 Connect Doorbell to App-----	P5
8. Connect the Chime -----	P7
8.1 Click reset button-----	P7
8.2 Press your doorbell to pair up-----	P7
8.3 Chime settings-----	P8
9. Install the Doorbell -----	P9
9.1 Select a location-----	P9
9.2 Mark the screw holes & Install the wall mount-----	P10
9.3 Mount your doorbell-----	P10
10. Tamper Alart Setting -----	P11
11. Product specifications -----	P12

 
1. Charge the Doorbell

Please charge your doorbell with a DC 5V 1A~2A phone adapter and the provided charging cable. The LED will glow blue once fully charged.

Start Charging:



Fully Charging:

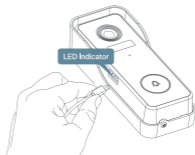

2. Supply Power to the Chime

 
 
2.1 Power by three AA batteries

Three units of AA batteries is required to make your indoor chime 100% wire-free. And you will be free to place your chime in almost anywhere indoors.



*Please mind the electrodes when installing batteries!

2.2 Power by DC 5V adapter

You can also plug in the provided USB cable and connect the chime to DC 5V 1A~2A phone adapter.

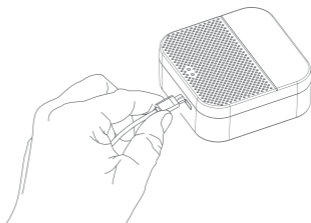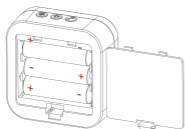

  3. What's in the Box

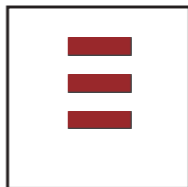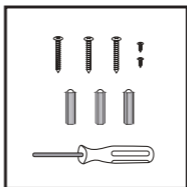

Doorbell * 1

USB Cable *1

DingDong *1

Screws Set/Screwdriver *1

 
Quick User Guide *1

3M Tape *2

NOTE: Micro SD card and power adapter are not included.

4. Switch on the Doorbell

Remove the wall mounting bracket and silicone cover, switch on your doorbell. The LED indicator will flash red (once per second), and it is ready for network setting.

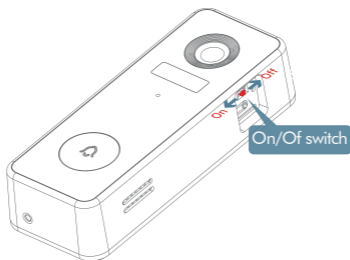

Solid Red
Device is abnormal



Flashing Red Slowly (Once per second)
Ready for WiFi configuration



Flashing Red Quickly (Twice per second)
Device is connecting to WiFi



Solid Blue
Successfully connected to WiFi network



Flashing Blue Slowly (Once per second)
Live-viewing doorbell camera



Flashing Blue Quickly (Twice per second)
Upgrading doorbell firmware

5. Download and Install App

Download Mubview App from Google Play™ or App Store™. Or scan the QR codes as below, with your smart phone.

*Google Play™ is a trademark of Google Inc. App Store™ is a mark of Apple Inc.



iOS



Android

NOTE: Make sure turning on both permissions below.

- ① Allow Mubview App to access mobile cellular data and wireless LAN, otherwise it will fail to connect the camera (in mobile Setting).
- ② Allow Mubview App to send messages, otherwise the phone will not receive alarms when motion is detected (in mobile Setting-Mubview).

6. Account Registration

New user needs to sign up in Mubview App with email address. Click 'Sign up' to create a New Account and follow the steps to complete registration.

7. Add Doorbell to App

7.1 Preparations for connection

- ① Insert Micro SD Card into the camera to save video clips or you can start the 3-day free cloud service. Without Micro SD Card or cloud service, no video will be saved.
- ② The camera only support 2.4GHz Wi-Fi, not support 5GHz.
- ③ When connect to the network, please take the camera close to the router(suggest within 10-15ft).

 
7.2 Connect Doorbell to App



Tap 'Add Device'

Select 'Doorbell Camera'

Power on the Camera

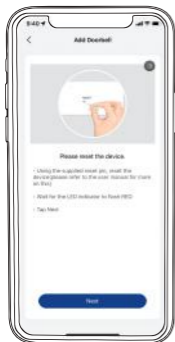

Reset the Camera



Activate the doorbell



Prepare to Scan



Scan QR Code



Wait till 100%

 


Perform Network Diagnosis

8. Connect the Chime

8.1 Click reset button


Click RESET on the chime, and the chime indicator on the left will flash red for 20 seconds, indicating that the chime is in pairing mode.

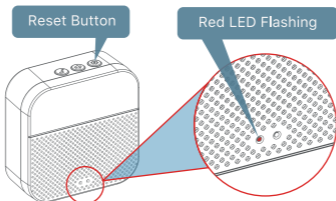




8.2 Press your doorbell to pair up

 
Press the doorbell button to send a pairing signal, and your chime will sound to react, together with its blue LED flashing. Chime pairing succeeds.

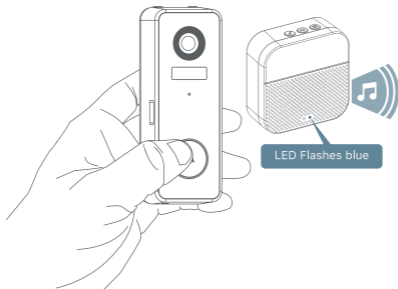NOTE: If your home is large and you need more than one Dingdong, please buy it on Amazon or contact Mubview team to get extra 2.



8.3 Chime settings

 -  Ringtone selection
Click change ringtone (4 ringtones available)
-  Volume control button
Level 1: 110 dB;
Level 2: 100 dB;
Level 3: 90 dB;
Level 4: 80 dB
-  Settings
Click to enter/quit pairing mode;
Press & hold 5 seconds to restore factory defaults

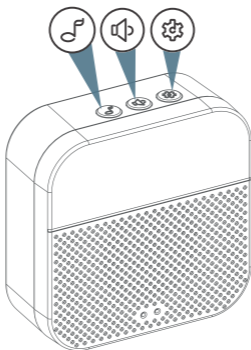


NOTE: If you need 3-day overwriting cloud storage for half a year for free, please contact us to get it.

Email: support@mubview.com


9. Install the Doorbell

 9.1 Select a location

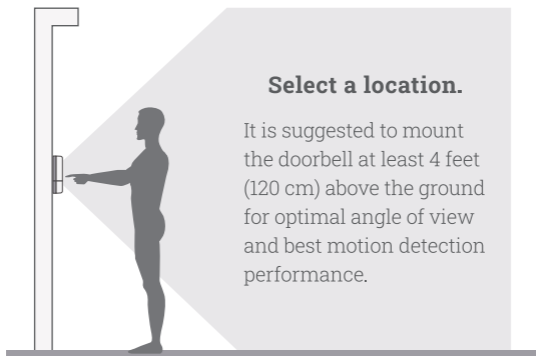


You can purchase the following angled brackets so as to point your doorbell to a specific view angle.

 Corner Mount
(Not included)
25 to 50 degree
angle adjustable




 
Wedge Mount
(Not included)
8 degrees stackable
wedge mount unit



9.2 Mark the screw holes & Install the wall mount

1. Take apart the wall mount from your doorbell and mark the location of the two mounting holes on your wall.

  
2. Screw your bracket into wood wall with the provided screws. If installing on stucco, brick, or concrete, drill holes in the wall, then insert the included anchors before driving in the mounting screws.

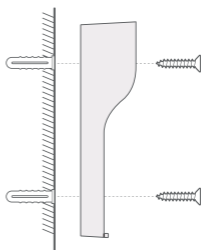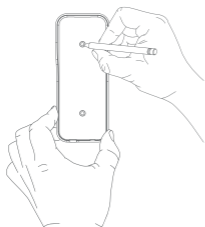

9.3 Mount your doorbell


Attach your doorbell to the mounting bracket and snap the doorbell to make sure it reaches the bottom. Then secure it with the provided starsharpped security screw.

 All set! Congrats!

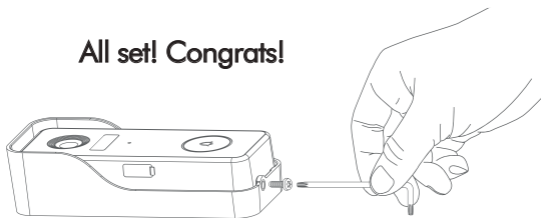

10. Tamper Alarm Setting

 Kindly notice the anti-theft alarm in doorbell settings.

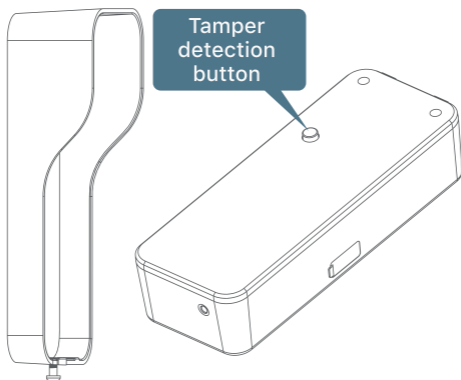

Tamper Alert

Tamper Alert on

Once the doorbell is detached from the bracket, a 30-sec alarm will be triggered. Meanwhile, video recording will be activated, and alarm notification will be pushed to the owner's APP account.



Tamper Alert

Tamper Alert off

The owner can disable the tamper alarm in doorbell settings, and detach the doorbell for battery recharging or maintenance.

11. Product Specifications

Video Doorbell Model No.: Bell J7

Camera	3.0MP Full-HD Camera
Effective pixels	2304(H) × 1296(V)
IR LED	High power dot-array IR LED × 1
View angle	145°
Motion Detect range	100° (Max 5m)
Motion Sensitivity	5 level sensitivity settable
Alarm trigger	Call button, motion detect, anti-theft alarm
Wi-Fi	2.4 ~ 2.4835 GHz WIFI (IEEE802.11b/g/n)
Video recording	Video clips against events
Audio	Full duplex 2-way audio
Storage	SD card (Max. 128G),
Cloud storage	Yes (3-days-free trial)
Power supply	Built-in rechargeable Li-ion battery
Battery capacity	5,000mAh
Ingress protection	IP65
Operating Temp.	-20 °C to 50 °C
Dimensions	34.5 × 56 × 134.6mm
Net weight	125.8g (Battery Included)

Wireless Chime Model No.: Chime 06

Power source 1	DC 5V 1A (from Micro USB)
Power source 2	AA LR6 1.5V battery × 3 units
Consumption	0.4W
Ringtones	4 ringtones optional
Connection type	Radio frequency 433MHz
Place of use	Indoor
Blue LED flashing	Pairing mode
Red LED flashing	Working normally
Blue LED flash twice	Reset factory default succeeds
Working Temp.	-20°C ~ 70°C
Humidity	< 90%, no condensation
Dimension	75.5 × 75 × 28mm
Weight	70g (Exclude batteries)

