

SIMÖLIO®

2.4GHz Wireless TV Speaker



User Manual SM-621

Thank you for choosing the SIMOLIO SM-621 Wireless TV Speakers. Please read this guide carefully and keep it in a safe place for future reference. If you need any further assistance, please contact our customer support team at: support@simolio.com (NA/AU)

support_uk@simolio.com (UK)

Response Time: 2-24h, excl. Holidays

Contents

Important Safety Instruction	1
Overview 0	2
Features 0	2
Product Diagram 0	13
Package Contents 0)4
LED Indication	5
How to Use	15
1. Check Your TV/Audio Source Output Options before the Set up 0	5
2. Turn on the Transmitter and Receiver 0	6
2.1 Power the Transmitter 0	6
2.2 Turn on the Transmitter 0	6
2.3 Power the Receiver	6
2.4 Turn on the Receiver	7
3. Connect the Transmitter to Your TV/Audio Source 0	7
3.1 RCA Analog Connection	7
3.2 3.5mm/AUX Analog Connection	9
3.3 Other Connections in Special Cases	0
	2
5. Use Two Sets of SIMOLIO 2.4GHz Wireless TV Speakers	
	2
	3
	3
	4
	4
	4
	7
·	7

IMPORTANT SAFETY INSTRU

- 1. Please read this instruction manual carefully and completely before using the products. Keep this manual easily accessible at all times.
- 2. Always keep the product dry, and do not expose them to extreme temperatures.
- 3. The receiver must keep the minimum volume before switching the unit on. High volume may cause hearing damage to persons with normal hearing, especially to children.
- 4. Keep devices away from liquid. Before cleaning the product and its accessories, disconnect the transmitter from the power adapter, and use only a slightly damp cloth to clean the devices.
- 5. Use only the supplied power adapter.
- 6. Use the products with care and set them up on a stable surface of a clean, dust-free environment.
- 7. The unit may get hot during use. Ensure the unit has adequate ventilation.
- 8. Please put the product far away from microwave oven, mobile phones, WiFi router etc. to avoid unnecessary electronic wave interference.
- 9. Please switch off the transmitter and receiver after use, and pull out the power adapter from the wall socket when not using for a long time.
- 10. Only qualified person can provide services! Do not attempt to open the unit!

Pacemaker Safety:



Before using this product with a pacemaker or other medical device, consult your physician or the manufacturer of your pacemaker or other medical device.

OVERVIEW

No lip-sync delay, no need to be upset and insulated by heavy headphones, no need to turn up TV voice loudly that may disturb your family. Simolio 2.4GHz Wireless TV Speaker adopts the latest advanced **Frequency** Hopping Spread Spectrum (FHSS) tech, with strong anti-interference ability. It can bring the clear and crisp TV voice at your side, volume range can meet any hearing requirement, creating a comfortable individual listening environment, providing you more freedom to enjoy programs from TV or other audio devices wherever in the room or outdoors. You can even mute your TV, you will never worry about disturbing others in your family anymore.

The big dial knob with power ON/OFF and volume control in the center area of the receiver, makes you turn the volume up, down or power off by your fingertips easily.

Rechargeable and portable wireless speaker with handle, convenient to take anywhere.

Big size appearance & acoustic chamber with powerful loudspeakers (2×5W).

FEATURES

- 1. Compatible with analog RCA and 3.5mm audio output ports.
- 2. With the AUDIO OUT jack at the rear of receiver for connecting to a headset, you can turn an ordinary headset into a wireless TV headset with the volume control by the speaker's big knob. With the special lightweight stethoscope headset we supplied, you can get more comfortable and private listening by muting TV.
- 3. With the AUDIO IN jack at the rear of receiver for connecting to an audio device like PC, MP3, Mobile Phone, iPad, etc., you can turn this receiver into a wired speaker.
- 4. Voice Highlighting Tech: our circuit will reduce background voice of TV, increase the dialogues, so that hard to hear words can easily stand out, making television dialogues easier to understand.
- 5. Automatic Signal Control(ASC): our circuit will adjust the sudden change volume and make the output volume stable. It will avoid strong signal hurting the users' listening.

- 6. Three levels of **TONE control** is specially designed for people who have different sound frequency sensitiveness. They can select TONE (Treble/Normal/ Bass) to find the optimum parameters, and hear the target audio source clearly.
- 7. Supported with the latest 2.4GHz Digital Automatic Frequency Hopping Spread Spectrum (FHSS) tech, you can have wireless freedom and crystal clear voice within a range of up to 100 feet.
- 8. The receiver will work continuously for 6 hours with the replaceable & rechargeable Li-battery.
- 9. Two power adapters available: one for the transmitter power supply, another for the speaker power and charge supply which is plugged in the wall outlet, no need taking the speaker back onto the charging cradle to charge
- 10. The speaker will enter standby automatically after 10 minutes without signal.
- 11. Built-in special circuit with **short-circuit protection** in the base for safety.
- 12. **Memory foam ear tips**: the stethoscope headset is installed with super-soft memory foam ear tips which can reduce earphone irritation and fatigue but not durable. We suggest to replace them every 30~60 days.

PRODUCT DIAGRAM

Receiver Front




Receiver **Back**



Transmitter



PACKAGE CONTENTS

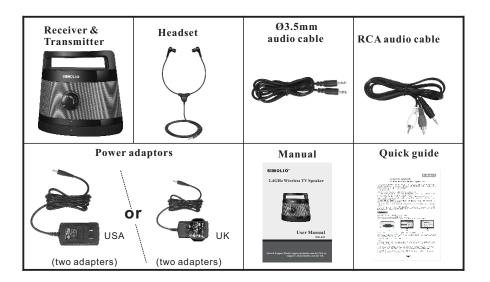

LED Indication

LED Indicator of Transmitter

LED Status	Transmitter Status
Bright green LED lighting steadily	Working or Charging for speaker
Dark green LED lighting steadily	Standby
Green LED blinking slowly	No audio signal input or signal is too weak


LED Indicator of Receiver

LED Status	Receiver Status
Green LED lighting steadily	Working
Green LED blinking slowly	No audio in, transmitter is in standby or turned off
Red & Green LED lighting alternately	Low power indication at wireless working status
Red LED blinking	Low power indication at wired working status
Red LED lighting steadily	Charging by transmitter base
Red LED lighting steadily	Charging by power adapter
Red LED off	Charging full

HOW TO USE

1. Check Your TV/Audio Source Output Options before the Set up


SM-621 is compatible with RCA (labeled "AUDIO OUT") and AUX 3.5mm output.

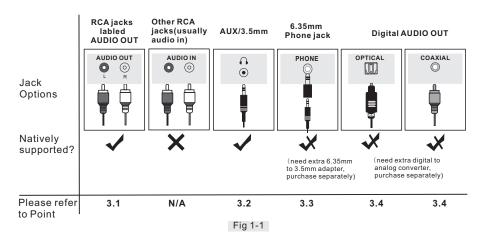

2. Turn on the Transmitter and Receiver

2.1 Power the Transmitter (Ref. Fig 2-1)

Plug the supplied AC adapter into a standard electrical outlet, plug the other end of the AC adapter into the port labeled "DC 9V" on the back of the transmitter.

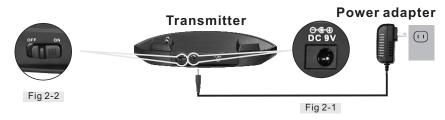

2.2 Turn on the Transmitter (Ref. Fig 2-2) Slide **OFF/ON** switch to "**ON**" position.

2.3 Power the Receiver

Two ways to power the receiver:

- 1) Load the Li-battery into the battery chamber of the receiver with correct polarity and cover the battery case.(Ref. Fig 2-3)
- 2) Use the additional power adapter to power the receiver. (Ref. Fig 2-4) **Note:** please charge the battery for 3 hours before the first use.





2.4 Turn on the Receiver

Rotate the big Volume knob clockwise until you hear a short "click".

3. Connect the Transmitter to Your TV/Audio Source

Set the volume of the audio source to a level sufficient for people with normal hearing to clearly listen to the TV to ensure stable audio output.

i.e. set the TV box VOL $\geq 30\%$ (Ref. Fig 3-1) & TV VOL $\geq 40\%$ (Ref. Fig 3-2) For watching TV quietly without disturbing others, the right way is: Mute your TV by pressing the MUTE button on the remote control or choose any speaker option other than TV Speaker in the TV Sound Output settings.(Ref. Fig 3-3)

• The above settings may differ from various TVs.




3.1 RCA Analog Connection

This part will explain how to connect the SIMOLIO SM-621 transmitter to your television, satellite, or cable box using an RCA analog audio cable.

- If you cannot get to the back of your TV and you only watch the programs through a fixed TV box (cable/satellite box/DVD etc.), you can also use these instructions to install the system to your TV box.
- Be aware that the base should be placed at least 4 feet away from your Router/smart WiFi TV/TV sticks/WiFi TV box to avoid interference.

Step 1. Hook up SIMOLIO to the RCA Audio Out Port of the TV/other Audio Device


Plug the red and white ends of the audio cable into the analog RCA Audio Out ports (red and white ports labeled "AUDIO OUT") on the back of the TV. Plug the single end of the audio cable into the port labeled "AUDIO IN" on the back of the transmitter.

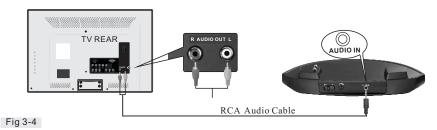

Step 2. TV Audio Out Checking and TV Speaker Setting (use TV remote control)

If you can not hear sound from your speaker after connecting:

- Ensure use TV Red/White ports labeled "AUDIO OUT" or "OUTPUT", other Red/White ports are incorrect. (Ref. Fig 3-5)
- Ensure your TV speaker is set to "External Speakers". (Ref. Fig 3-5)

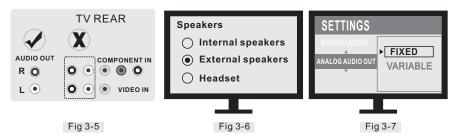

Notes:

* If your TV only support single sound out, the TV's speakers will be either automatically muted when you plug something into an audio out port (Optical/AUX/RCA, etc.) or they become disabled once you choose "External Speakers" as your TV's audio output. It depends on TV circuit design.

For most TVs, the TV's internal speakers and an external audio device can work simultaneously. Such as, for some newer LG TVs, when do analog RCA audio connection, you can set the "Sound Out" to "Internal TV Speaker + Headphones". And for some newer Samsung TVs, you can enable this feature by selecting "TV Speaker" from the TV Sound Output lists.

* Your TV's analog audio settings may be set to "Variable" or "Fixed". If you want to be able to control your TV volume level separate from your SIMOLIO SM-621 volume level, you will need to make sure your TV is set to "Fixed". Contact your TV manufacturer for assistance. (Ref. Fig 3-7)

*Setting menu may be different depending on different TV brands and models.

3.2 3.5mm/AUX Analog Connection

This part is an alternative to 3.1 on page 7-9. This part will explain how to connect the SIMOLIO SM-621 transmitter to your television, satellite, or cable box using a 3.5mm/AUX analog audio cable.

- If you cannot get to the back of your TV and you only watch the programs through a fixed TV box (cable/satellite box/DVD etc.), you can also use these instructions to install the system to your TV box.
- If you connect the 3.5mm audio cable to the 3.5mm Audio Out port which is usually a Headphone port on your TV, your SIMOLIO SM-621 will still function properly, but the sound to your TV internal speakers will be muted. The port is usually labeled with an headphone icon.
- Be aware that the base should be placed at least 4 feet away from your Router/smart WiFi TV/TV sticks/WiFi TV box to avoid interference.

Step 1. Hook up SIMOLIO to the 3.5mm Audio Out Port of the TV/other Audio Device

Plug one end of the 3.5mm audio cable into the "Audio Out" port on the back of the TV. Plug the other end of the audio cable into the port labeled "AUDIO IN" on the back of the transmitter.



Step 2. TV Audio Out / TV Speaker Setting (use TV remote control) If you can not hear sound from your speaker after connecting:

- Ensure your TV speaker is set to "Headset". (Ref. Fig 3-9)
- Plug a wired headphone/earphone into the 3.5mm audio out port of the TV to test if you can hear the TV sound. (Ref. Fig 3-10





Notes:

* Your TV's audio settings may be set to "Variable" or "Fixed". We recommend that you set your audio settings to "Fixed" for better audio quality when using this installation option. If you want to be able to control your TV volume level separate from your SIMOLIO SM-621 volume level, you will need to make sure your TV is set to "Fixed". Contact your TV manufacturer for assistance.




* Setting menu may be different depending on different TV brands and models.

3.3 Other Connections in Special Cases

1) TV/Audio Source only has Digital Optical or Coaxial Audio Out port Step 1. Purchase a Digital to Analog Converter and Set up as Shown in Fig 3-12

If your TV/Audio Source only has a digital optical or coaxial audio out port, you will need a digital to analog converter (DAC) for installation.

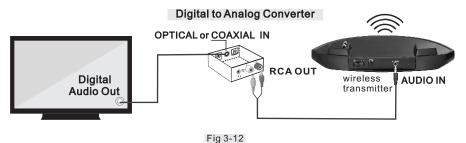


Step 2. TV Audio Format and TV Speaker Setting (use TV remote control) If you can not hear sound from your speaker after connecting:

SIMOLIO° SM-621

• Ensure TV Audio Format is set to "PCM" or "Dolby/DTS" is OFF (This is IMPORTANT, Ref. Fig 3-13)

PS: for certain smart Samsung models, the TV is retaining separate settings for regular TV and internet TV setup. When you turn to the Smart Hub for Internet source, please use the TV remote to go to Settings > Sound > Expert Settings > Audio Format or Digital Output Audio Format, then select PCM.

• Ensure your TV speaker is set to "External Speakers". (Ref. Fig 3-14

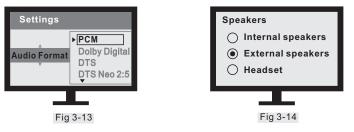

- Take turns to test RCA connection and 3.5mm /AUX connection.
- Use a wired headphone/earphone to plug into the headset port or RCA output of the DAC to test if you can hear the TV sound. (Ref. Fig 3-15)



Note:

Setting menu may be different depending on different TV brands and models.

2) Use SIMOLIO SM-621 to your AV Receiver with 6.35mm PHONE jack Step 1. Purchase a 6.35mm to 3.5mm Adapter and Set up as Shown in Fig 3-16

SM-621 is not compatible with ANY RCA(L/R) ports on your AV Receiver, ONLY use the BIG 6.35 mm PHONE OUT on front side of your AV Receiver with the 6.35 mm to 3.5 mm adapter (purchase separately).






Step 2. Check the Performance of the AV Receiver's Audio Output as Shown in Fig 3-17

If you can not hear sound from your speaker after connecting:

• Use the 6.35 to 3.5mm converter to plug a wired headphone/earphone into the port on AV receiver to check whether the sound is normal.

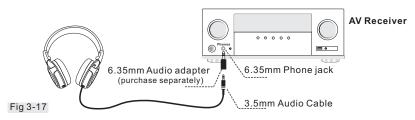

4. TONE Adjustment


Turn on the **receiver** and set the **VOLUME** to your required level. Select **TONE** (**Treble / Normal / Bass**) to hear more clearly. Select **Treble** to enhance female voice and child's voice, select **Bass** to enhance male voice.



5.Use Two Sets of SIMOLIO 2.4GHz Wireless TV Speakers Simultaneously in the Same House

• The two sets of SIMOLIO SM-621 should be put at least 10 meters away from each other when using them simultaneously.



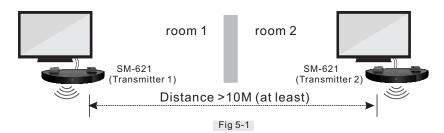

• Put the speaker on the transmitter base, then turn on the transmitter and the speaker, wait for a while until you hear sound from the speaker, then you can take the speaker away to listen.

Note: If two speakers are used on the same TV, only one transmitter needs to be connected, because one transmitter supports multiple speakers to work simultaneously.



Fig 5-2

6. Other Uses

6.1 How to Use the Stethoscope Headset with the Speaker

Follow the transmitter connection as part 3 on page 8~11, connect the stethoscope headset or your own headset to the **AUDIO OUT** jack at the rear of the speaker, you can turn an ordinary headset into a wireless TV headset to enjoy TV without the speaker voice disturbing your family. If you want to watch TV quietly alone, you can click **MUTE** key at your TV remote controller to OFF the TV internal speakers.

Note: please turn the dial knob at the speaker for headset's volume adjustment.



Fig 6-1

6.2 How to Use the Receiver as a Wired Speaker

With the AUDIO IN jack at the rear of the receiver for connecting to an audio device like PC, MP3, Mobile Phone, iPad, etc, you can turn this receiver into a wired speaker.



7. Charge the Speaker

A: Through the Transmitter Base

- 1) Connect the original power adapter with the transmitter and an electrical outlet, slide the OFF/ON switch to ON to power on the transmitter.
- 2) Put the speaker on the transmitter in correct direction. The red charging indicator on the speaker lights up and the speaker starts charging.

B: Through the Supplied AC Adapter

Plug the supplied AC adapter into a standard electrical outlet, plug the other end of the AC adapter into the port labeled "DC 9V" on the back of the speaker.



Notes: The charging time is approx. 3 hours. The speaker will last approx 6 hours on a full charge, but will last a lesser or greater amount of time depending on the average volume level of the speaker.

TROUBLE SHOOTING

Part 1

		raiti
PHENOMENA	CAUSES	SOLUTIONS
	The transmitter is not connected well.	Make sure the AC adapter and the audio cable of the transmitter are plugged well.
	TV volume is turned down to ZERO .	Adjust the TV volume to a sufficient level. If you want to mute the TV, please click the MUTE key on the TV remote control or go to TV settings to OFF the Internal TV speaker.
	Connection between the transmitter and audio source is wrong.	Make sure the connection is correct and in place between the transmitter and the audio source.
	The audio sources (TV and TV related AV devices) are not turned on or their volume are set too low.	Turn on the audio sources, and adjust their volume to a sufficient level.
Speaker receiver doesn't work,	TV audio output is disable or not activated.	Follow the TV manual to change the TV's AUDIO OUT setting to "External TV Speaker".
no sound when used as a wireless speaker.	The TV and TV related AV device's digital audio out format is not set to PCM when using digital to analog converter.	Set it to PCM. For example: Settings > Sound > Digital Audio Out Format > Dolby/DTS/PCM, select PCM. Menu depends on TVs.
	The battery is not properly loaded in the battery chamber, the battery is run out or the adapter is not connected firmly.	Properly load the battery, fully charge the battery, or firmly connect the adapter.
	The receiver is powered off automatically.	Check the big knob of power on/off status, turn off the receiver and then restart.
	There is headset or audio cable plugged into the AUDIO OUT port of the speaker.	Check the back of the speaker receiver and disconnect the audio cable or headset from the receiver.
	The audio out port of the connected audio device is defective (no signal out).	Connect to another audio source to have a test.
Poor sound or sound cuts in and out when used as a wireless speaker.	The audio source's volume is set too low.	Adjust its volume properly.
	The speaker is used for listening to streaming media (Netflix, Amazon Prime Video etc).	Place the transmitter base at least 4 feet away from smart WiFi TV/WiFi TV box/ TV sticks to avoid interference.
	The battery's power is too low.	Charge the battery fully.

Part 2

PHENOMENA	CAUSES	SOLUTIONS
Poor sound or sound cuts in and out	The transmitter is placed too close to metalworks or other electromagnetic wave objects.	Put the transmitter far away from the interference sources.
when used as a wireless speaker.	The connection between the transmitter and the audio source is not in place .	Make sure the connection is firm between the transmitter and the audio source.
No sound or poor sound from the headset when	The headset's plug isn't firmly inserted into the AUDIO OUT jack of the speaker.	Make sure to insert the headset's plug firmly into the AUDIO OUT jack of the speaker
used as a wireless headset.	The speaker is not turned on or the volume is too low.	Make sure the speaker is turned on by the big knob, volume set to a sufficient level.
Can not hear sound from the receiver when used as	The audio cable is not plugged well into the receiver's AUDIO IN jack or the audio source's Audio Out jack	Make sure the connection is firmly and in place.
a wired speaker.	The headset's plug is still inserted in the AUDIO OUT jack of the receiver.	Disconnect the headset from the receiver.
Receiver can not be charged firmly.	The transmitter is not switched on.	Switch on the transmitter when charging for the receiver.
	The receiver is not placed on to the transmitter charging cradle firmly.	Firmly place the receiver on to the transmitter charging cradle.
successfully	The battery is not loaded to the battery chamber correctly.	Load the battery to the battery chamber according to the polarity correctly.
	The receiver is not connected with the adapter properly.	Firmly connect the receiver with the adapter when charging alone.
Mutual interference when use two sets at the same time		The two units should be put at least 10 meters away from each other.
	The distance between the two sets is too close.	Put the speaker on the transmitter base, then turn on the transmitter and the speaker, wait for a while until you hear sound out from the speaker, then you can take the speaker away to listen.

LIMITED WARRANTY

12 months limited warranty: The 12 months warranty will cover defects in manufacturing and product failure for a period of 12 months from the original date of purchase. The warranty period is not extended if we repair or replace a warranted product.

This warranty is provided at the discretion of Simolio Ltd. And does not cover cosmetic damage or damage due to acts of nature, accident, misuse, abuse, negligence, commercial use, or modification of or to any part of the product. Accessories such as stethoscope headset, AC adapter, ear tips and batteries are not covered under this warranty.

Please contact:

support@simolio.com (for NA/AU) or support uk@simolio.com (for UK) and provide your Amazon order ID to register the warranty.

TECHNICAL SPECIFICATION

Transmission mode	Automatic Frequency Hopping Spread Spectrum		
Carrier frequency	2.4GHz ISM BAND		
Dual speakers	2*5 Watt, 6 Ohm		
Operating voltage	Transmitter	9V / 1.5A, 110/240V power adapter with a DC 4.0X1.7mm barrel jack	
	Receiver	7.4V/1000mAh Li-Battery	
		9V / 1.5A, 110/240V power adapter with a DC 4.0X1.7mm barrel jack	
Frequency response	20 Hz – 20 KHz		
Distortion	≤1%		
Signal-to-noise ratio	≥70dB		
Range	Up to 100 Feet (without obstacles)		
Working time	6 hours		
Charging time	3 hours		