 


SIMOLIO®

Vintage Radio Bluetooth Speaker

JH-762S

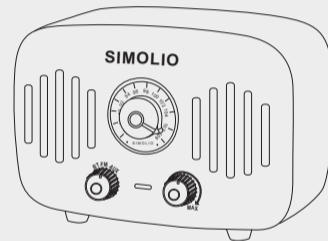

User Manual

www.amazon.com/simolio

**Sales & Support Email: support1@simolio.com (for USA)
support_uk@simolio.com (for UK)**

**Sales & Support Email: support1@simolio.com (for USA)
support_uk@simolio.com (for UK)**

Thank you for choosing the SIMOLIO Bluetooth stereo speakers. Please read this guide carefully and keep it in a safe place for future reference. If you need any further assistance, please contact our customer support team at:

support1@simolio.com (for USA)


support_uk@simolio.com (for UK)

Response Time: 2-24h, excl. holidays

Contents

1. Product Diagram	01
2. Package Contents	02
3. User Instructions	02
3.1 Charging the speaker	02
3.2 Using the speaker as a Bluetooth Speaker	03
3.3 Using the speaker as a FM Radio	03
3.4 Using the speaker as an AUX Player	04
4. Technical Specifications	04
5. Safety Instructions	05
6. Limited Warranty	06
7. Troubleshooting	06

 1. Product Diagram

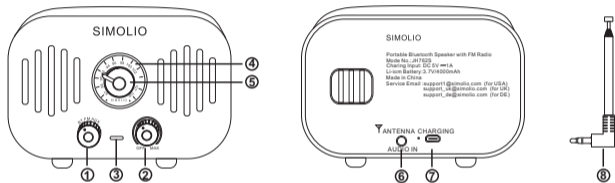

- ① Function selection knob
- ② Volume knob/Power switch
- ③ LED indicator
- ④ Frequency scale
- ⑤ Turning knob

- ⑥ AUX port / Antenna port
- ⑦ Micro USB charging port
- ⑧ Pluggable antenna

2. Package Contents



3. User Instructions

3.1 Charging the speaker

- * Plug the supplied USB cable to the power source.
- * The charging indicator will stay solid red when the speaker is in charge. After fully charged, the red light will go off, and the green light will be on.
- * It takes 10 hours for the internal 2*2000mAh Li-ion batteries to be fully charged.
- * When completely charged, the battery will be able to deliver 12-20 hours of radio play or 8-12 hours of Bluetooth speaker time or AUX player time. (depending on the volume)

 
3.2 Using the speaker as a Bluetooth Speaker

- * Turn the function selection knob to “BT”, the LED indicator turns to white.
- * Turn on the Bluetooth device such as a mobile phone to find the name of “Simolio” and click it to connect.
- * When Bluetooth is connected, there will be a beep, open the music player to listen to music.
- * After disconnected the Bluetooth, there will be a beep and the Bluetooth indicator will flash.

3.3 Using the speaker as a FM Radio

- * Turn the function selection knob to the “FM”.
- * The LED indicator will turn to solid green.
- * Rotate the turning knob to select a channel.

Note: You can plug the antenna or the 3.5mm audio cable into the speaker's AUX port to get better FM signal.

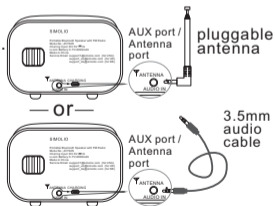

3.4 Using the speaker as an AUX Player

- * Turn the function selection knob to “AUX”.
- * The orange LED indicator is on.
- * Unplug the antenna from the rear of the speaker first, then insert one end of the supplied 3.5mm AUX cable to the speaker, and the other end to your phone or tablet etc. Open the music player to enjoy music.

4. Technical Specifications

FM Working Frequency	87MHz-108MHz	Input	5.0V/1A
Bluetooth Working Frequency	2.4GHz ISM	Range	30 feet
Bluetooth Version	4.0	Weight	429 g
Battery capacity	2000mAH*2	Size	143(L)*68(W)*100(H)mm
SNR	FM/BT>75dB; AUX>80dB	Audio output	2*8W (Max)
Maximum Distortion	<0.5%	Charging Time	10H

5. Safety Instructions

1. Please read this manual carefully and follow the instructions for all operations and use.
2. Always keep this product dry, and do not expose them to extreme temperatures.
3. Do not charge at the water source or in the rain to prevent electric shock.
4. Do not damage the cable, especially at the connector.
5. Switch off the speaker after use. Unplug the USB charging cable when it is not in use or during a thunderstorm.
6. Please keep the speaker away from heat sources(including all equipment that generates heat), such as stoves.
7. Do not disassemble the speaker. Please refer all servicing to qualified person only!

6. Limited Warranty

1. This vintage radio has full 12-month warranty against manufacturing defects from the date of purchase. Do not cover appearance damage or damage due to acts of nature, accident, misuse, abuse, negligence, commercial use, or modification of or to any part of the product.
2. The warranty period begins from the original date of purchase.
3. The warranty period is not extended if we repair or replace warranted product.

7. Troubleshooting

Problem	What to do
Speaker cannot connect with Bluetooth device	<ul style="list-style-type: none"> * On your Bluetooth device: Turn the Bluetooth feature off and then on; Delete Simolio from the Bluetooth list on your device, pair again. * Move your Bluetooth device closer to the speaker and away from any interference and obstructions. * Check by pairing a different Bluetooth device.
No sound	<ul style="list-style-type: none"> * Increase the volume on your speaker, your Bluetooth device and music source. * Move your Bluetooth device closer to the speaker and away from any interference or obstructions. * Check by using a different music source. * Check by pairing a different Bluetooth device
Poor sound quality	<ul style="list-style-type: none"> * Check by using a different music source. * Check by pairing a different Bluetooth device. * Move your Bluetooth device closer to the speaker and away from any interference or obstructions.

Problem	What to do
No sound or noise at a certain FM frequency	<ul style="list-style-type: none"> * Increase the volume on your speaker. * Extend the antenna to get better signal. * Move your speaker away from any interference or obstructions.
Poor sound quality from a device connected by AUX cable	<ul style="list-style-type: none"> * Make sure the AUX cable is connected in place. * Check by connecting to another device.
No audio from a device connected by AUX cable	<ul style="list-style-type: none"> * Make sure the AUX cable is connected in place. * Increase the volume on your speaker, your Bluetooth device and music source. * Check by connecting to a different device.
Battery won't charge	<ul style="list-style-type: none"> * Make sure the charging cable is connected in place. * If your speaker has been exposed to high or low temperatures, let the speaker return to room temperature and try charging again.