

Prisual HTTP-CGI Control Sheet				
Function	Command	Variable	Values	Comments
Pan & Tilt	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd& [action]&[pan speed]&[tilt speed]	[camera ip]	*cameras current IP	
		[action]	up	moves camera 'up'
			down	moves camera 'down'
	http://camera_ip/cgi-bin/ptzctrl.cgi?ptzcmd&up&panspeed&tiltspeed		left	moves camera 'left'
			right	moves camera 'right'
			leftup	moves camera 'left' & 'up'
			rightup	moves camera 'right' & 'up'
			leftdown	moves camera 'left' & 'down'
			rightdown	moves camera 'right' & 'down'
		ptzstop	tells camera to 'stop' moving	
	[pan speed]	1	slowest 'pan' speed	
		...	ranges from 1 - 24	
	[tilt speed]	24	fastest 'pan' speed	
		1	slowest 'tilt' speed	
		...	ranges from 1 - 20	
		20	fastest 'tilt' speed	
Zoom	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd& [action]&[zoom speed]	[camera ip]	*cameras current IP	
		[action]	zoomin	zooms camera in
			zoomout	zooms camera out
		[zoom speed]	zoomstop	stops zooming
		...	ranges from 1 - 7	
		7	fastest 'zoom' speed	
Focus	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd& [action]&[focus speed]	[camera ip]	*cameras current IP	
		[action]	focusin	focuses camera in
			focusout	focuses camera out
			focusstop	stops focusing
		[focus speed]	1	slowest 'focus' speed
		...	ranges from 1 - 7	
		7	fastest 'focus' speed	
Focus Lock	http://[camera ip]/cgi-bin/param.cgi?ptzcmd& [action]_mfocus	[camera ip]	*cameras current IP	
		[action]	lock	locks focus state
			unlock	unlocks focus state
Home Position Preset	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&home	[camera ip]	*cameras current IP	Moves camera to HOME
	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd& [action]&[position number]	[camera ip]	*cameras current IP	
		[action]	posset	position 'set'
			poscall	position 'call'
		[position number]	0	beginning of range 1
			...	range 1 from 0-89
			89	end of range 1
Direct Position Recall	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd& [mode]&[pan speed]&[tilt speed]&[pan position]&[tilt position]	[camera ip]	*cameras current IP	
		[mode]	abs	Absolute Positioning
			rel	Relative Positioning
		[pan speed]	1	slowest 'pan' speed
			...	ranges from 1 - 24
			24	fastest 'pan' speed
		[tilt speed]	1	slowest 'tilt' speed
			...	ranges from 1 - 20
			20	fastest 'tilt' speed
		[pan position]	0000 or FFFF	home position
			0001	first step pan right
			...	range from 0000 to 0990 (HEX)
			0990	last step pan right
			FFFE	first step pan left
			...	range from FFFF to F670 (HEX)
			F670	last step pan left
		[tilt position]	0000 or FFFF	Home Position
		0001	first step tilt up	
		...	range from 0000 to 0510 (HEX)	
		0510	last step tilt up	
		FFFE	first step tilt down	
		...	range from FFFF to FE51 (HEX)	
		FE51	last step tilt down	
Direct Zoom Recall	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto& [zoom speed]&[zoom position]	[camera ip]	*cameras current IP	
		[zoom speed]	0	slowest zoom speed
		...	range from 0 - 7	

		[zoom position]	0000	Full Wide
		...	range from 0 - 4000 (HEX)	
		4000	Full Tele	
Navigation				
Function	Command	Variable	Values	Comments
OSD Access	http://[camera ip]/cgi-bin/param.cgi?navigate_mode& [mode]	[camera ip]	*cameras current IP	
		[mode]	OSD	Calls OSD Menu
OSD Menu Navigation			PTZ	P/T/Z Control Mode
	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd& [action]	[camera ip]	*cameras current IP	
			up down	moves menu 'up' moves menu 'down'
			enter	Selects an OSD option
			return	Returns to previous menu
Image Adjustments				
Function	Command	Variable	Values	Comments
Image Settings	http://[camera ip]/cgi-bin/param.cgi?post_image_value& [mode]&[level]	[camera ip]	*cameras current IP	
		[mode]	bright saturation contrast sharpness hue	adjust brightness adjust saturation adjust contrast adjust sharpness adjust hue
		[level]	0 ...	beginning of range ranges from 0 -14
			14	end of range
	Image Orientation	http://[camera ip]/cgi-bin/param.cgi?post_image_value& [mode]&[state]	[camera ip]	*cameras current IP
		[mode]	flip mirror	flipped image adjustments mirrored image adjustments
		[state]	1 0	flip / mirror default
Default Image Settings	http://[camera ip]/cgi-bin/param.cgi?get_image_default_conf	[camera ip]	*cameras current IP	Defaults all image settings above
JPEG Snapshot				
Function	Command	Variable	Values	Comments
Take Snapshot	http://[camera ip]/snapshot.jpg	[camera ip]	*cameras current IP	Takes a JPEG snapshot
Change Resolution	http://[camera ip]/cgi-bin/snapshot.cgi?post_snapshot_conf&resolution= [size]	[camera ip]	*cameras current IP	
		[size]	1920x1080	Sets JPEG resolution to 1920x1080
			960x600	Sets JPEG resolution to 960x600
			480x300	Sets JPEG resolution to 480x300
Photobooth Pictures				
Function	Command	Variable	Values	Comments
Take Pictures	http://[camera ip]/cgi-bin/booth.cgi?0&4& [delay]&photo&0	[camera ip]	*cameras current IP	
		[delay]	1 ... 9	shortest delay delay in seconds 1 - 9 longest delay
Download Pictures	http://[camera ip]/photo[num].jpg	[num]	1 ... 4	
Photobooth Videos				
Function	Command	Variable	Values	Comments
Take Video	http://[camera ip]/cgi-bin/booth.cgi?0&4& [delay]&video& [length]	[camera ip]	*cameras current IP	
		[delay]	1 ... 9	shortest delay delay in seconds 1 - 9 longest delay
		[length]	1 ... 10	shortest length length in seconds 1 - 10 longest length

Get Video	http://[camera ip]/video[num].mp4	[num]	1	
			...	
			4	
Inquiries				
Function	Command	Variable	Values	Comments
Video	http://[camera ip]/cgi-bin/param.cgi?get_media_video	[camera ip]	*cameras current IP	Network Video Configuration
Audio	http://[camera ip]/cgi-bin/param.cgi?get_media_audio	[camera ip]	*cameras current IP	Network Audio Configuration
Network	http://[camera ip]/cgi-bin/param.cgi?get_network_conf	[camera ip]	*cameras current IP	Network Configuration
Information	http://[camera ip]/cgi-bin/param.cgi?get_device_conf	[camera ip]	*cameras current IP	Camera Information
Serial Number	http://[camera ip]/cgi-bin/param.cgi?get_serial_number	[camera ip]	*cameras current IP	Serial Number *Not always accurate

www.prisual.us

contact us: prisual.av@gmail.com