



OVERVIEW

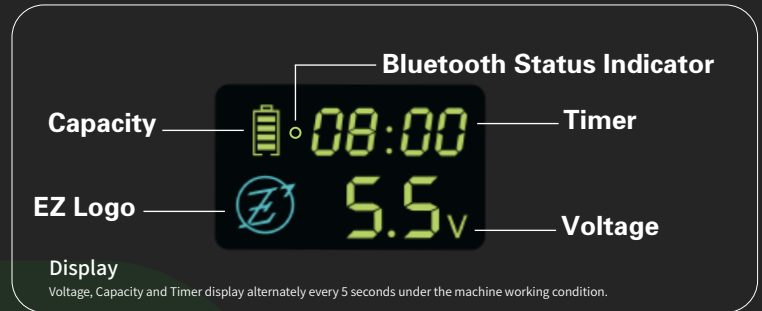

Dual Dock Magnetic battery charging station

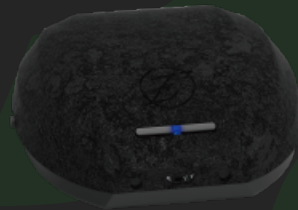

Multi-touch Wireless Footswitch

INCLUDES:

- 1、User Guide
- 2、P2 MT X1
- 3、Multi-touch Wireless Footswitch
- 4、Dual Dock Magnetic battery charging station

SPECIFICATIONS

Motor	EZ Customized Swiss Motor	Material	Aircraft Aluminum
Stroke Length	3.5mm	Operating Voltage	5 - 12V DC
Rpm	10000rpm ± 10%	Switch Frequency	60 - 160 Hz
Needle Protrusion	0 - 4.5 mm	Dimensions(Ø X L)	32 x 141 mm
Weight	8oz (227g) with power pack	1800 mAh	2.5 Hrs
		5 hrs Approx	MULTI-TOUCH

Battery Capacity


Recharging Time


Powerpack WorkingTime

MULTI-TOUCH


BASIC OPERATION

Power ON/ OFF



Press and Hold the  button for two seconds to turn P2 MT ON.



Press and Hold the  button for two seconds to turn P2 MT OFF.

Power START/ STOP


Click  button to turn P2 MT START or STOP.

Adjusting Voltage

Press  or  to adjust in 0.1V increments.




Press and Hold  or  to quickly adjust the voltage in 0.1V increments.



Start/ Stop Built-in Timer

Press  button to active your machine ON, the timing mode start.

Note: timer mode record in minutes, the maximum recording time is 999 minutes. the time is counting only when machine is running. The timer will reset the count when the P2 MT is being restarted.

Push Mode

Press  and  button at the same time, Screen LOGO  solid, the machine ACTIVE the strong start mode.

Press  and  button at the same time, Screen LOGO  flashes, the machine push mode OFF.

Note: In push mode the initial voltage output is 10V lasts for 1 second and then returns to normal voltage after.

Toggle Wireless Footswitch Mode

For those using with **MULTI-TOUCH WIRELESS FOOTSWITCH**, The wireless footswitch can be used to turn the P2 MT START or STOP.


Note: The P2 MT allows artists working in two footswitch options. Which means you can turn the P2 MT START or STOP using both two options.

* Traditional footswitch mode. * Onboard footswitch button mode.

MULTI TOUCH WIRELESS FOOTSWITCH

OVERVIEW

POWER BUTTON -SLIDE SWITCH

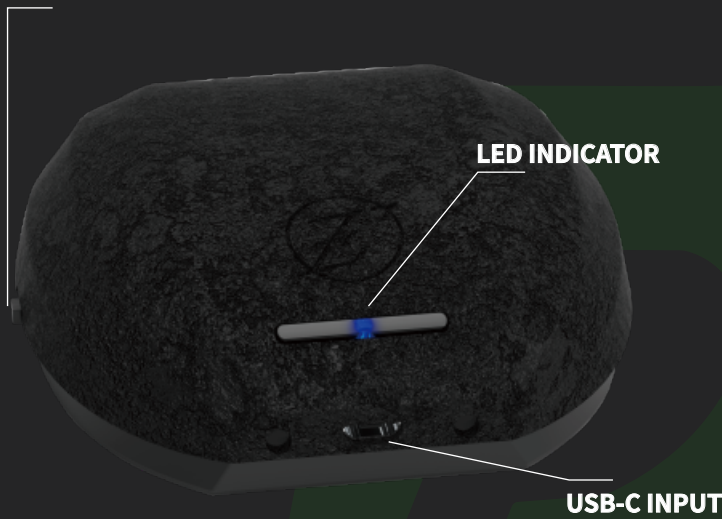

KEY FEATURES

Compatible and wireless foot control P2 MT pen machine via Bluetooth.

Multi-color LED indicate P2 MT Pen machine connect status.

Solid construction & new minimalist design.

LED indicator for battery charge.
Non-skid rubber bottom.


TECHNICAL SPECIFICATIONS

Dimensions(L x W x H)	89 x 84 x 30 mm
Charging Voltage	5V
Weight	6.6oz (187g)
Connection	Micro-USB or Type-C
Battery Capacity	850mAh
Recharging Time	1.5hrs
WorkingTime	Up to 100hrs

BASIC OPERATION



Power ON/ OFF

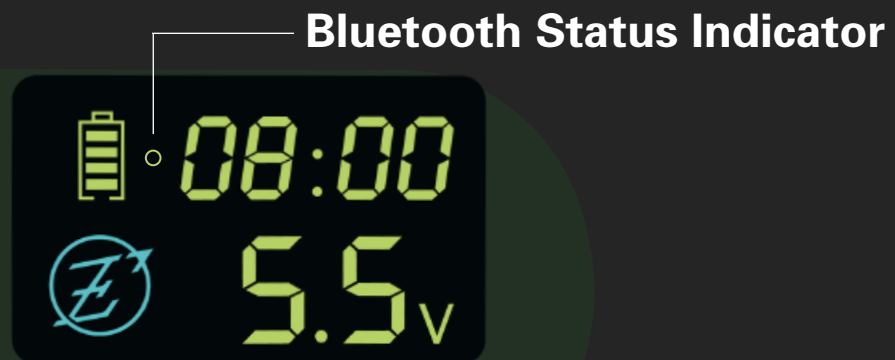Power button-slide switch to turn Multi-Touch Footswitch ON/OFF.



Pairing

Power footswitch on, Alternately flashing red and blue lights on the top of Multi-Touch will indicate your footswitch is ready for pairing.

1. Double-click the P2 MT power button, Screen led indicator  flashes, P2 MT will automatically connect with your footswitch, The foot switch led indicator turns blue, Toggle Wireless Footswitch Mode turn on.
2. Single Click the P2 MT power button, Screen led indicator  solid, Onboard footswitch button mode.
3. Bluetooth Status Indicator no display on the screen, Footswitch working mode off.

Note:

- 1) In the search status, if no connected pedals can be found within 30 seconds, P2 MT will automatically enter the normal mode.
- 2) In the search status, single-press the power button to stop the search and enter the normal mode.
- 3) The last shutdown was in normal mode, and it will be in normal mode when P2 MT turned on again