


GiveBest[®]

ELECTRIC FIREPLACE WITH REALISTIC FLAME EFFECT

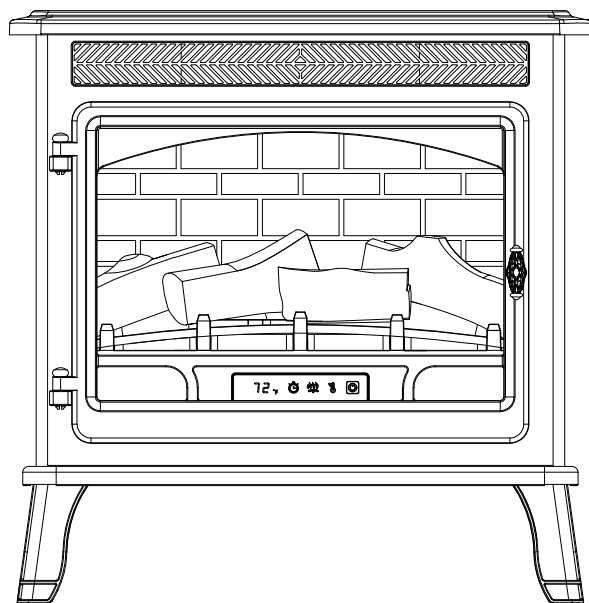

USER MANUAL
Model: GFI-2403-01

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons including the following:

- 1. Read all instructions before installing or using this heater.**
- DANGER**-High temperatures may be generated under certain abnormal conditions. Do not partially or fully cover or obstruct the front of this heater.
Warning: In order to avoid overheating, do not cover the heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, etc. and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear (sides and rear restrictions apply to location dedicated heaters only).
- Do not operate any heater after it malfunctions. Disconnect power at service panel and have heater inspected by a reputable electrician before reusing.
- To disconnect heater, turn controls to off, and turn off power to heater circuit at main disconnect panel.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug this appliance when not in use.
- Do not operate any heater with a damaged cord or plug or after the appliance malfunctions, or if it has been dropped or damaged in any manner.
Discard heater, or return to authorized service facility for examination and/or repair.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate this appliance where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
- To disconnect this appliance, turn controls to the off position, then remove plug from outlet.
- This product is equipped with a polarized plug (one blade is wider than the other blade). To reduce the risk of electrical shock, this plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Always plug heaters directly into a wall outlet/ receptacle. Never use with an extension cord or relocatable power tap outlet/power strip).

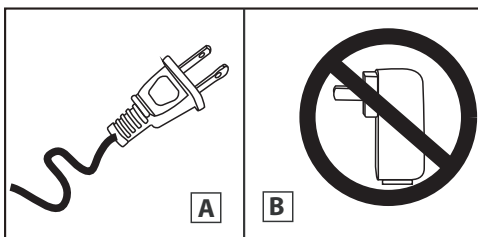


Fig.1



15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the appliance.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where opening may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This fireplace should not be used as a drying rack for clothing. Christmas stockings or decorations should not be hung in the area of it.
18. Use this appliance only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
19. This heater may include a visual alarm to warn that parts of the heater are getting excessive hot. If the alarm flash immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures.
DO NOT OPERATE THE HEATER WITH ALARM FLASHING.

SAVE THESE INSTRUCTIONS

Safety Information

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.


 **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov

LEG ASSEMBLE

CAUTION - Risk of Fire - Do Not Operate Without Legs(Base) Attached




Screw driver NOT included

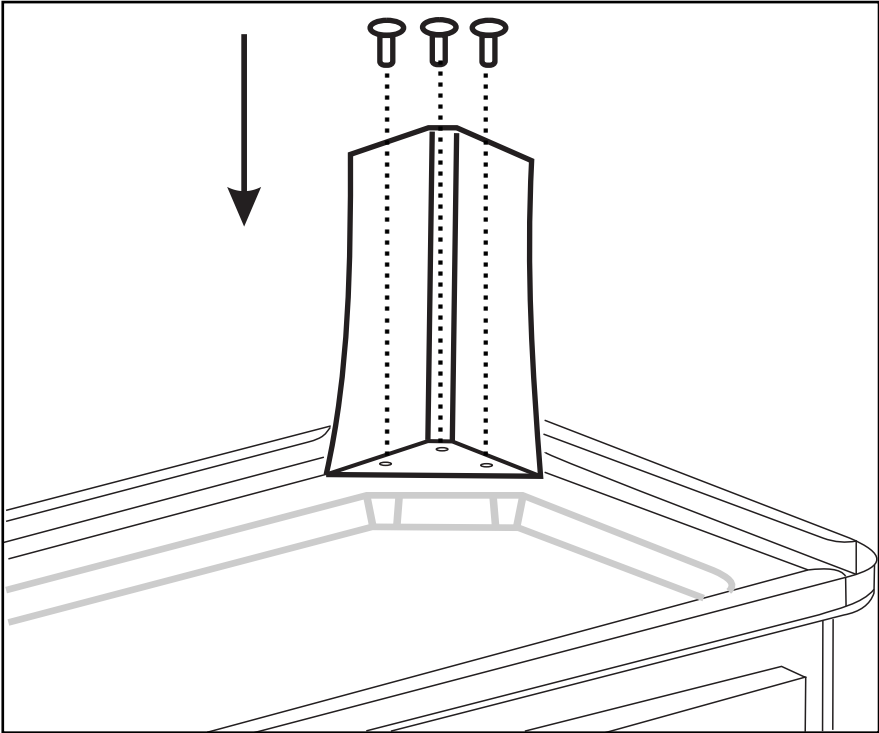


PRODUCT OVERVIEW

CAUTION – High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9 m) from the front of the heater and away from the side and rear.

Plug into an appropriate voltage AC 120V outlet, The unit will enter standby mode with display screen on red. Your heater is ready for use now. The flame effect feature is majority red visible from a point 10 feet (3 m) in front of the center of the heater and 5 feet (1.5 m) above the floor, and it is energized whenever the on-off switch is in the on position.

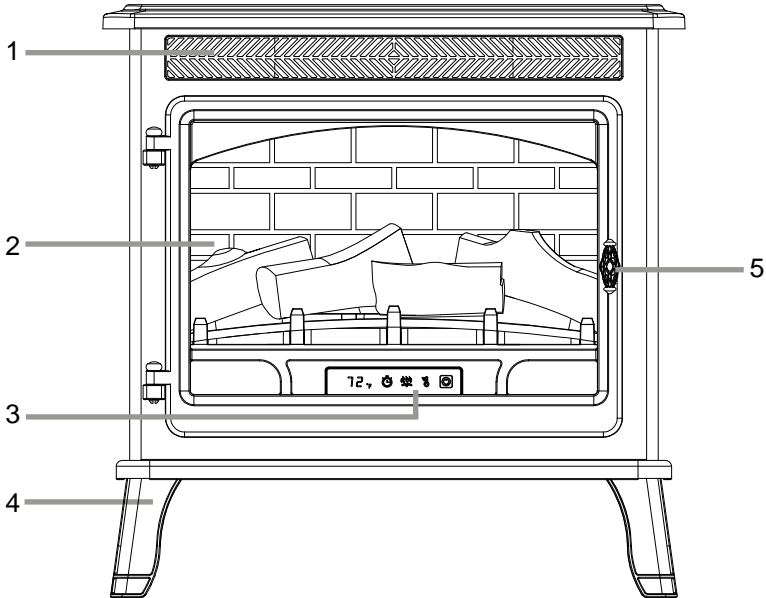


CONTROL PANEL

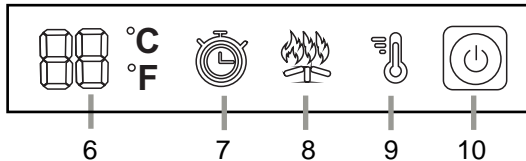

- | | |
|--|------------------------|
| 1. Heating area | 6. Temperature display |
| 2. Front cover and
Realistic flame and logs glowing | 7. Timer |
| 3. Control panel | 8. Flame level |
| 4. Leg | 9. Temperature |
| 5. Door handle | 10. Power on/off |

REMOTE CONTROL

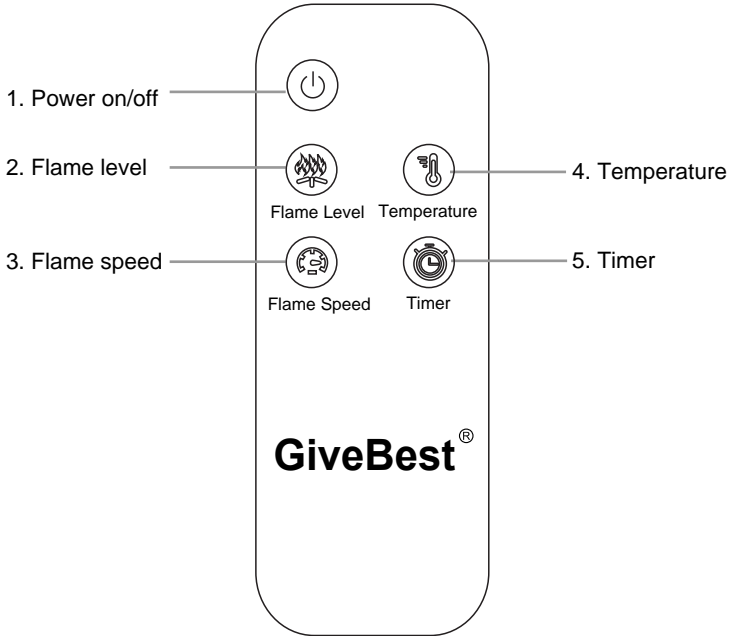


BATTERY REPLACEMENT

Replace with two 1.5V AAA batteries.

Do not mix old and new batteries.

Do not mix alkaline, standard(carbon zinc), or rechargeable(nicad, ni-mh,etc.) batteries.

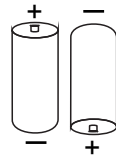

2 x AAA batteries

CAUTION

Do not ingest batteries.

Non-rechargeable batteries are not to be replaced.

Batteries are to be inserted with correct polarity.

Exhausted batteries are to be removed from the product.

Always purchase the correct size and grade of battery most suitable for the intended use.

Replace all batteries at the same time.

Clean the battery contacts and also those of device prior to battery installation.



Remove used batteries promptly.

BATTERY DISPOSAL

Please always dispose of batteries at a suitable recycling point.





PRODUCT SIZE

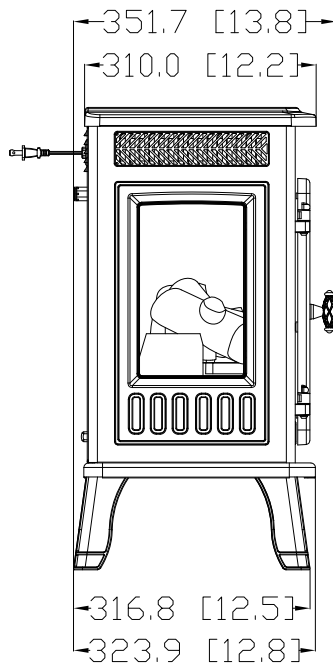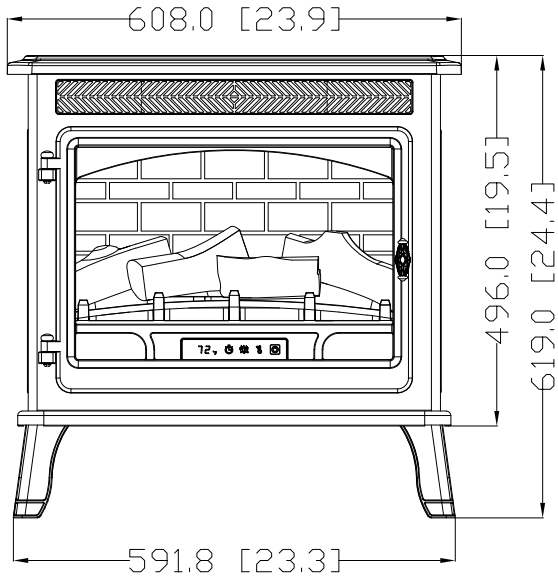


OPERATION


1. By Buttons on Control Panel

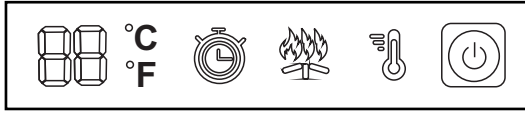



Press the  button to power on or off the unit.

Press and hold about 10 seconds during powering on to lock the unit, the front flame effect display will flash. Hold again for about 10 seconds to unlock.


Press the  button repeatedly to switch to desired temperature from 17 to 27 °C (62 to 82°F).


Press and hold the  button about 3 seconds to switch between °F and °C .


Press the  button repeatedly to switch to F5 to F1 or set off flame level.


Press the  button repeatedly to set the timer to 30 minutes, 1H to 9H or 00 (off).


2. By Rmote Control

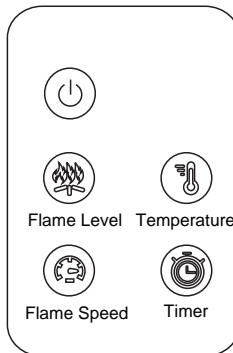


Press the  button to power on or off the unit.

Press the  button repeatedly to switch to F5 to F1 or set off flame level.

Press the  button repeatedly to switch to desired temperature from 17 to 27 °C (62 to 82°F).

Press the  button repeatedly to set the timer to 30 minutes, 1H to 9H or 00 (off).

Press the  button repeatedly to set the flame speed to S1-S5.

TROUBLESHOOTING

ISSUE	POSSIBLE CAUSES	SOLUTIONS
Display shows "E 1"	The thermostat sensor is broken or disconnected.	Unplug the fireplace, remove the back panel of the fireplace and check that the thermostat is plugged into the main circuit board. If this does not solve the problem, contact customer service for a replacement thermostat sensor.
Display shows "E 2"	The thermostat sensor short circuited.	Contact customer service for a replacement thermostat sensor.
Display shows "E 3"	Manual Reset overheat protection has triggered.	Inspect the heater and check that the air inlets and outlets are not blocked as this may cause overheating. Unplug the heater for 30 minutes and allow it to cool down. Re-plug and operate, but monitor the heater for signs of overheating. If the problem persists, discontinue use of the heater and contact customer service.
Heater does not blow warm air.	Cool down cycle.	Normal operation. Heater will continue to run for less than one minute before shutting down. Times will vary based on temperatures. During this time cool air will blow.
No power, logs do not glow.	No power to the unit	Check that unit is plugged into a standard 120V outlet. Press power button several times, make sure power is set at "ON" position.
Logs glow, but no flame effect.	Flame effect turned off	Press flame button several times.
Heater does not blow warm air.	Thermostat setting is preventing heater from turning on.	Adjust the temperature settings to ensure that the thermostat is set higher than the current room temperature.
Flame effect works, but heater does not function and the embeded flashes when the heater button is pressed.	The heater is disabled.	With the power on, press and hold the POWER button on the control panel for 10 seconds. Once re-enabled the embeded lights will flash multiple times.

Remote control is not working.	No batteries	Change the remote batteries.
Remote control is not working.	Poor signal	Operate remote transmitter at a slow measured pace. Press the remote control buttons with an even motion and gentle pressure. Repeatedly pressing buttons in rapid succession may cause the transmitter to malfunction.
Remote control is not working.	Distance	Operate the remote at a distance less than 26 feet from the front of the appliance; point the remote at the control panel.

MAINTENANCE

1. The motors for the fan and the flame generator assembly are pre-lubricated for extended bearing life and require no further lubrication. However, we recommend periodic cleaning /vacuuming the fan/heater.
2. Clean the trim using a soft cloth, slightly dampened with citrus oil based product and buff with a clean soft cloth.
DO NOT use brass polish or household cleaners as these will damage the metal trim. Citrus oil based products can be obtained at supermarkets or hardware stores.
3. Make sure the unit is turned OFF and unplugged before cleaning the heater or fireplace.
4. Do not allow water to run into the interior of the heater as this could result in a fire or electric shock hazard.
5. Any other servicing should be performed by an authorized service representative.
6. Except cleaning, any other servicing should be performed by an authorized service representative.
7. Carefully fold the power supply cord and tie it up with a cord, then put the heater into the packing box. Keep it in a location away from any hot or wet location.

SPECIFICATION

Power: 120V~,60Hz
 Rated Wattage: 1500W(+5%-10%)
 Remote working range: up to 26.2 feet

PACKAGE

Fireplace x 1
 Remote Control x 1
 Battery x 2
 Leg x 4
 Screws (M4x12mm) x 12
 User Manual x 1

1 Year Limited Warranty

The product is warranted against defects in materials and workmanship under normal use and service for a period of one year from the date of original purchase when delivered to you in new condition in its original container, warranty repair or replacement shall not extend the original warranty period of the product, a dated proof of purchase is required at the time of warranty service, a copy of your dated bill of sale will satisfy this requirement.

This warranty does not cover accessories or consumables, such as light bulbs, as to which there shall be no warranty or replacement.

This limited warranty covers all defects encountered in normal use of the product and does not apply to the following cases:

1. Loss or damage of the product due to abuse, neglect, mishandling, improper packaging, alteration, accident, electrical current fluctuation, improper use, failure to follow operating or maintenance instructions prescribed in Brightown safety instructions or other documentation, dropping, scratches and abrasion will be presumed to generate from misuse, abuse or failure to operate as set forth in the user's manual or other documentation for the product.
2. Use of other parts or supplies (other than those sold by Brightown) that cause damage to the product.
3. If the product's model number or dating defaced, altered or removed.

For customer service and warranty, contact us here

✉ support@brightown.com

☎ US +1 (888) 550 1319
Mon-Fri 8AM-10PM(EST)

Brands Family: Brightown, Givebest

