

BUTURE

USER MANUAL



BUTURE JR600 Stick Vacuum Cleaner

sales@ibuture.com

[Read this user manual carefully before first use. Keep this manual for further guidance in case]

If you have any concern with our
product, service, warranty, please contact

当社の製品、サービス、保証についてご不明な点が
ございましたら、お問い合わせください



sales@ibuture.com

The service team will provide you with satisfied solution

サービスチームはお客様に満足のいくソリューションを提供します

1. WARNING

Thank you for purchasing the BUTURE JR600 stick vacuum cleaner.

Please read the user manual carefully before using the product and take safety protection measures to avoid malfunctions caused by accidental operation. If the product is given to another person, please make sure to also include this user manual.

The product provides a free 2-year warranty by default. To extend the warranty to 3 year, please contact sales@ibuture.com in time to activate.

If you have any questions, please contact sales@ibuture.com.

Personal Safety

01. Store it indoors in a dry place and out of the reach of children.
02. This product is suitable for children 10 years old and above. Users with reduced physical functions, sensory or intellectual abilities, or lack of experience and knowledge are advised to use the product safely supervision or guidance and to be aware of the hazards involved.
03. Please pay attention to safety when children or pets near the vacuum cleaner.
04. Children should not clean or use the product without supervision.
05. Use only manufacturer's recommended attachments as described in this manual; misuse or use of any accessory or attachment other than those recommended may present a risk of personal injury.
06. Take extra care when cleaning stairs.
07. Keep the appliance and accessories away from the hot surface.
08. Do not block the appliances' openings or hinder airflow, keep openings free of any objects including dust, lint, clothing, fingers (and all parts of the body).

Electrical Safety

01. Only use batteries and chargers supplied by the manufacturer.
02. Never modify the charger in any way.
03. Do not pull the cord to disconnect it from a socket, grasp the plug and pull to disconnect it.
04. Keep the charger cord away from hot surfaces and sharp edges.
05. The supply cord cannot be replaced. If the cord is damaged the charger should be discarded and replaced.
06. Do not handle the charger or the appliance with wet hands.
07. Do not store, or charge the appliance outdoors.
08. The charger must be removed from the socket before removing the battery, cleaning, or maintaining the appliance.


Battery Safety

01. This appliance includes Li-ion batteries, do not incinerate batteries or expose them to high temperatures, as they may explode.
02. Liquid ejected from the battery may cause irritation or burns.
03. In an emergency contact professional help immediately.
04. Leaks from the battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid gets on the skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of it immediately in accordance with local regulations.
05. When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws, or other small metal objects that could make a connection from one terminal to another.
06. When you dispose of the appliance remove the battery and dispose of the battery safely in accordance with local regulations.





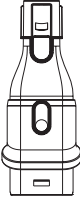
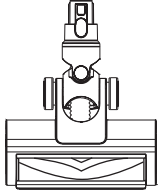
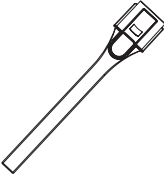
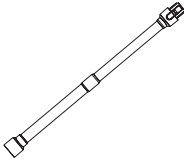

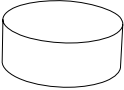
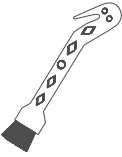

2. CONTENT OF PACKAGE

Please check and confirm the accessories and parts according to the following sheet before using. If any part is missing or defective, please contact sales@ibuture.com for customer service in time.

Main Body

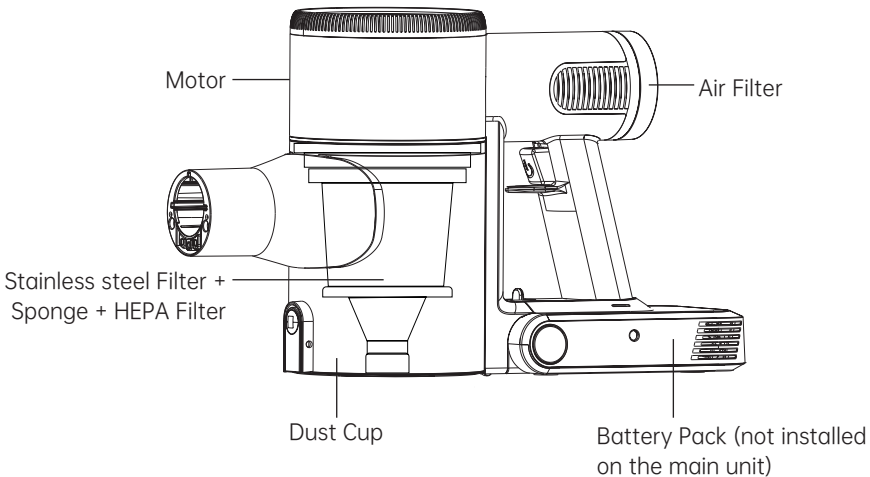


Accessories List

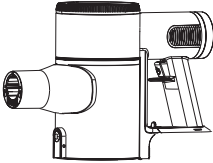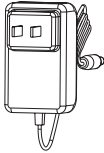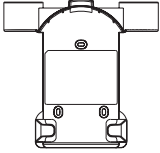
 <p>Main Body*1</p>	 <p>Adapter*1</p>	 <p>Wall Mount*1 (with screw*3, expansion tube*3)</p>
 <p>Battery Pack*1</p>	 <p>2 in 1 Brush*1</p>	 <p>Electric Floor Brush*1</p>
 <p>Crevice Brush*1</p>	 <p>Telescopic Tube*1</p>	 <p>Extra HEPA*1</p>
 <p>Extra Sponge Filter*1</p>	 <p>Cleaning Brush*1</p>	 <p>User Manual*1</p>

3. KNOW YOUR PRODUCT

3.1 Product Details

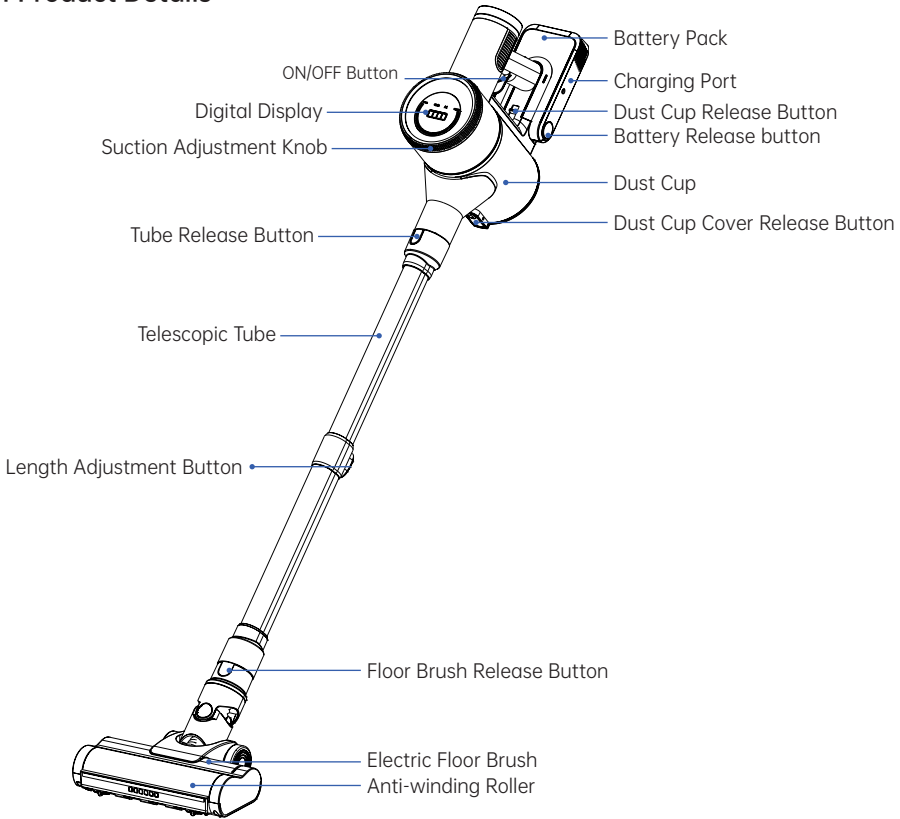

3.2 Digital LED Screen

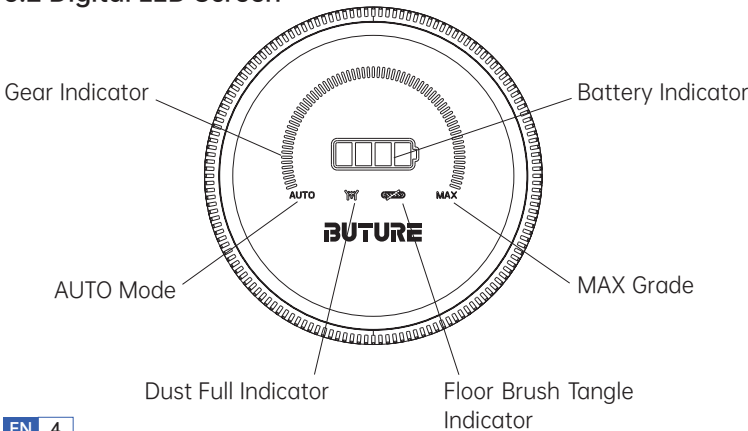


Tip: The "⚙️" "🌀" "🔋" icon will only be displayed when the vacuum is blocked.

3.3 Accessory Usage


1. Crevice Brush

Suitable for cleaning small gaps such as doors and windows, corner of stairs, etc.

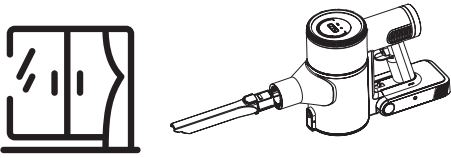


2. 2 in 1 Brush

Suitable for cleaning sofas, seats, etc.

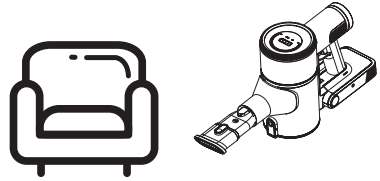


3. Floor Brush

Suitable for cleaning floor tiles, floors, as well as short and medium hair carpets.

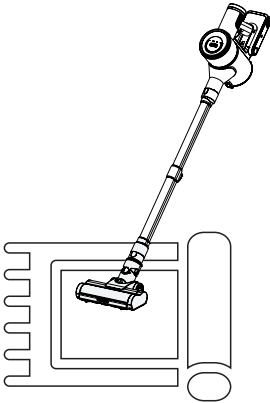


4. Cleaning Brush

Remove hair, rubbish, and micro dust from the accessories or filters.

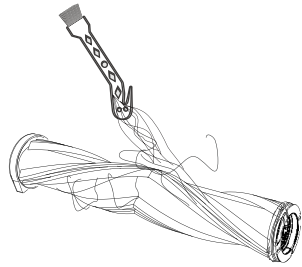

5. Install the Wall Mount


Snap the main unit into the wall mount from the middle position, and snap the flat suction and sofa suction into the hanger slot from the bottom.

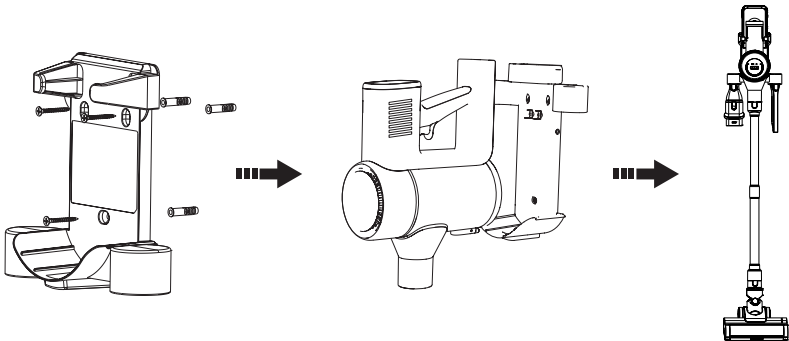

4. ASSEMBLING


4.1 Install the Battery

- Slide forward in the direction of the arrow, and the lock is fastened on the rack.

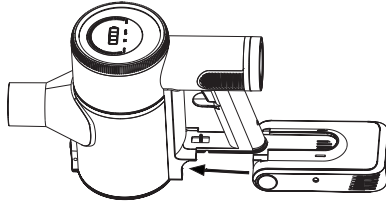


4.2 Install the Dust Cup

- Align the protruding part of the main unit with the recessed part of the dust box, push it forward.

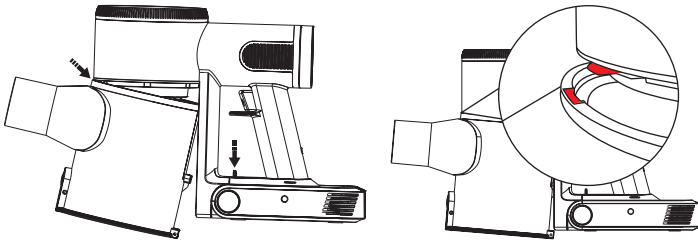


4.3 Install the Machine

- 1: Connect the main body to the telescopic tube first, then install the brush.

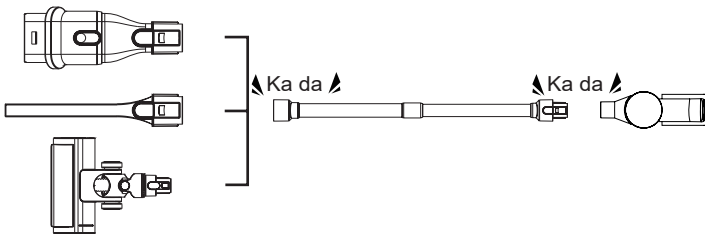

- 2: Connect the main body to the brush directly.

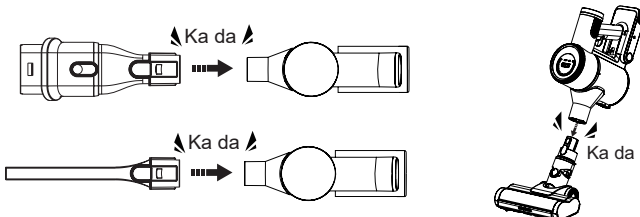

5. CHARGING


5.1 Two Charging Ways

Note: Due to long-distance transportation, the power of the battery pack is consumed, please fully charge it before using it for the first time.

1. The battery is installed on the vacuum cleaner. Plug the adapter to charge.

* When charging, the battery indicator on the display flashes green.


When the battery is fully charged, the battery indicator is always on green.

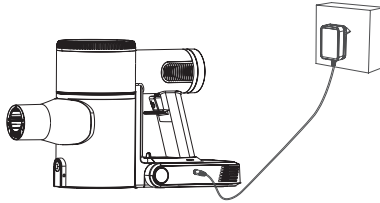


2. The battery could be charged separately without installing it in the vacuum cleaner. Plug the adapter to charge.

* When charging, the lights on the battery pack flash blue.

When the battery is fully charged, the lights are always on blue.

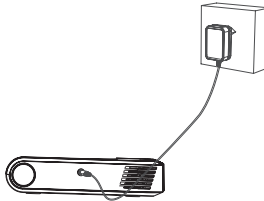


3. Battery Power Indicator

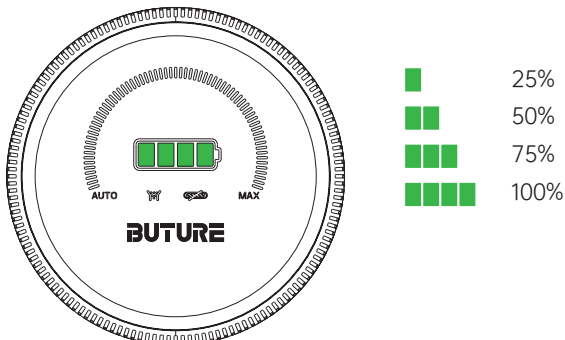


5.2 Low Battery Reminder


1. **During the running process**, the battery indicator flashes in red, reminding that the battery power is low and the vacuum will be shut down later. Please charge in time.

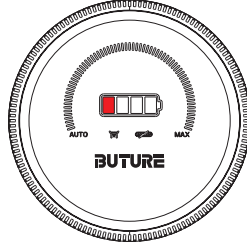

2. **After turning off the vacuum**, the battery indicator flashes in orange, then flashes slowly for 5s and goes out, indicating that the power is less than 25%, please charge it in time.

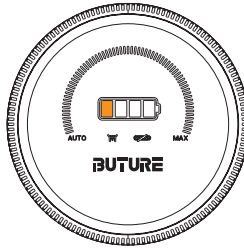

5.3 Charging with Wrong Adapter

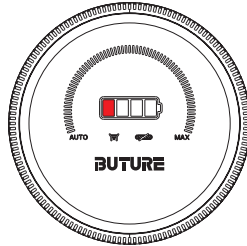


If a wrong adapter is being used, the battery indicator flashes red and goes out after 60s. The input voltage/current does not match, which will cause damage to the battery pack. Please replace the original adapter in time.

6. USING

6.1 Start the Vacuum Cleaner

In the OFF state, press the ON/OFF button to start the vacuum cleaner.


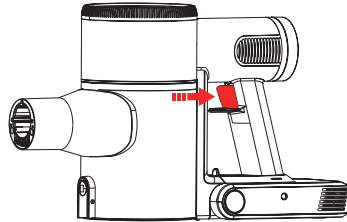

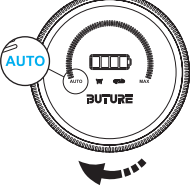


6.2 Change Suction Grade

Rotate Clockwise after Power On or in AUTO Mode

<p>The diagram shows a circular dial with a central battery icon and the word 'BUTURE' below it. The dial has markings for 'AUTO', 'MIN', and 'MAX'. A blue circle with the word 'AUTO' is positioned over the 'AUTO' marking on the dial.</p>	<p>Press the ON/OFF button to turn on the vacuum, AUTO will display blue light. The vacuum works in AUTO mode, it can automatically adjust the power according to the amount of dust.</p>
<p>The diagram shows the same circular dial as above. A curved arrow above the dial indicates a clockwise rotation.</p>	<p>Turn the knob clockwise, and AUTO will display white light. The vacuum enters the manual mode.(10 gears to choose in manual mode)</p>
<p>The diagram shows the circular dial with a red circle containing the word 'MAX' positioned over the 'MAX' marking on the dial.</p>	<p>When turn clockwise to the MAX mode, MAX will displays red light.</p>
<p>The diagram shows the circular dial with a curved arrow above it indicating a counterclockwise rotation. A blue circle with the word 'AUTO' is positioned over the 'AUTO' marking on the dial.</p>	<p>When the vacuum is on MAX mode turn the knob counterclockwise, the suction power reduces. When the suction power back to lowest, it will be back into AUTO mode. AUTO displays blue light.</p>


Rotate Counterclockwise after Power On or in AUTO Mode

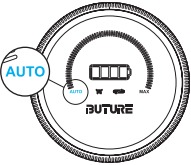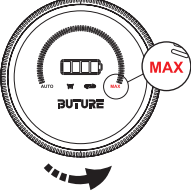	<p>Press the ON/OFF button to turn on the vacuum, AUTO will display blue light. The vacuum works in AUTO mode, it can automatically adjust the power according to the amount of dust.</p>
	<p>Adjust the knob counterclockwise, the vacuum enters the MAX mode, and MAX will display red light.</p>
	<p>In the MAX mode, continue to adjust counterclockwise, the suction power reduces will in turn (10 gear can be adjusted).</p>
	<p>When the vacuum is on MAX mode, turn the knob clockwise, the suction power back to lowest, it will be back into AUTO mode. AUTO displays blue light.</p>

6.3 Adjust the Length of the Tube according to Different Needs

Press the button behind the tube and pull out the tube at the same time to extend the tube.

Press the button and pull the tube back to shorten the tube.

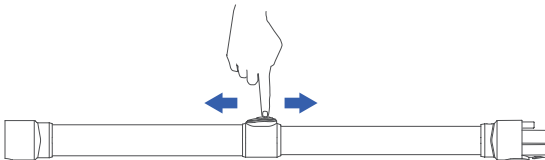

7. MAINTENANCE


7.1 Clean the Motor

Wipe the motor with a soft dry cloth.


7.2 Clean the Dust Cup and Filter

**It is recommended to clean once a week and replace it once every 2 months.*


1. When the dust reaches the "MAX" mark of the dust cup, please clean it up as soon as possible, or it will affect the vacuuming effect.

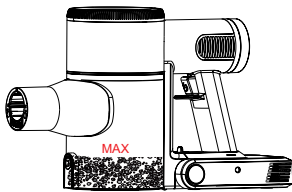


2. Press the dust cup cover release button to open the cover and dump the garbage into the trash can.

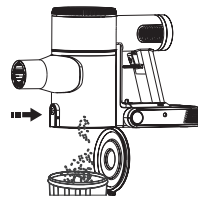

3. Pull back the button to remove the dust cup.

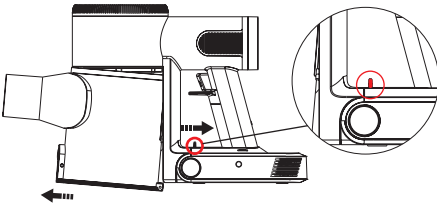


4. Grab the HEPA filter handle to remove the HEPA filter, sponge and stainless steel filters.

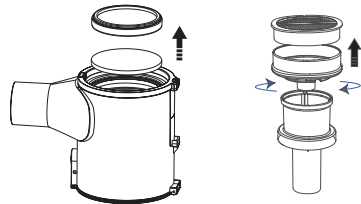


5. Scrape the HEPA filter with a cleaning brush.




6. Rotate the metal filter clockwise to remove it from the filter holder.

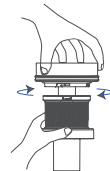


7. Clean the dust cup, sponge and stainless steel filter with water.

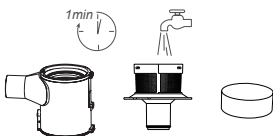


8. Leave it to completely dry before installing to the vacuum.

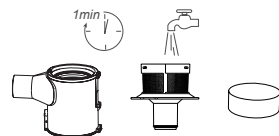

9. Rotate the HEPA filter, sponge and metal filter counterclockwise into the dust cup.

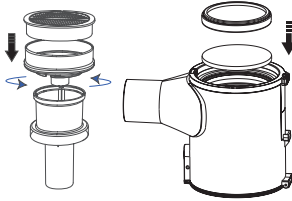

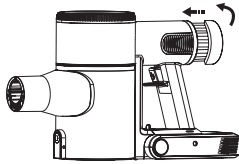


10. Align the convex part of the main unit with the concave part of the dust box, push it forward, and hear a click "kada", finish installation.

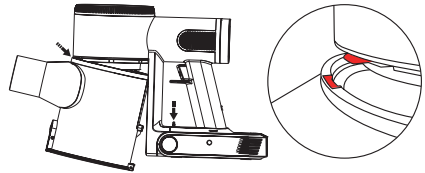



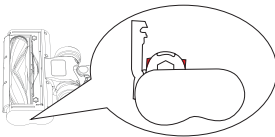

7.3 Clean the Air Filter

*It is recommended to clean once every six months and replace it once a year.
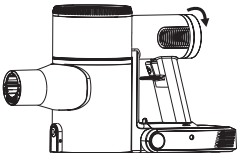
<p>1. Rotate the air filter counterclockwise to remove it from the main unit.</p> 	<p>2. Scrape the HEPA filter with a cleaning brush.</p> 	<p>3. Rotate the air filter clockwise to install it back to the main unit.</p> 
--	---	--

7.4 Clean the Floor Brush

*Before removing the roller, please make sure that the floor brush has been separated from the main unit, so as to avoid personal injury caused by accidentally starting the machine.
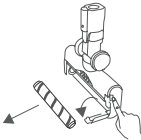
<p>1. Push the switch up to the "unlocked" side, rotate the plug, and remove the roller brush.</p> 	<p>2. Use the small cleaning tool to sweep away and remove hairs and debris from the rollers.</p> 
<p>3. Put the left side of roller brush into the floor brush first, then press the right side in.</p> 	<p>4. After inserting the roller, press down the latch, hear a click "kada", finish installation.</p> 

8. TROUBLESHOOTING

If there is any problem during use, please check the following troubleshooting table.

If the problem can't be solved, please contact the after-sales email: sales@ibuture.com.




Warning:

Turn off the vacuum cleaner before maintenance. Otherwise it may cause electric shock or other personal injury.

*When the vacuum cleaner does not work properly, the icon on the screen will light up in red.

8.1 Air Channel/Dust Sensor Blocked


When the aluminum tube or dust cup is blocked, the vacuum stops working, cannot be turned on within 10s, and the "🚫" shows red.

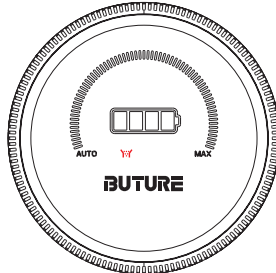

Solution: Clean the aluminum tube and the filters in the dust cup.

8.2 Brush Roller Tangled

If the floor brush inhales large foreign objects or entangles too much hair, it may cause the drum to stop rotating, the LED lights on it flashe 3 times, and the "🚫" on screen shows red.

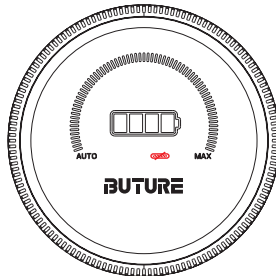

Solution: Remove the floor brush and clean up the foreign matter wrapped around the roller. Please ensure that the brush head has been detached from the main unit to prevent accidental starting of the machine and cause personal injury.

8.3 Common Trouble

Common Trouble	Possible Causes	Solutions
Vacuum can not work	<ol style="list-style-type: none"> 1.Low battery power 2.Automatic protection triggered by excessive temperature due to blockage 3.Battery damaged 	<ol style="list-style-type: none"> 1.Charge before use 2.Clean the floor brushes, dust suction ports or air inlet filters, and restart after cooling down 3.Replace a battery
Suction reduced	<ol style="list-style-type: none"> 1.The dust cup is full of dust 2.The filters are full of dust 3.The telescopic tube or brush inlet blocked 4.Low battery power 	<ol style="list-style-type: none"> 1.Empty the dust cup 2.Clean or change the filter 3.Remove blockage in tube and brush inlet 4.Charge before use
Insufficient use time after charging	<ol style="list-style-type: none"> 1.Insufficient charging time 2.Battery aging 3.The dust cup is full of dust 4.The filters are full of dust 5.The telescopic tube or brush inlet blocked 6.Always use the highest speed to clean the whole house 	<ol style="list-style-type: none"> 1. Recharge the battery 2.Change a battery 3.Empty the dust cup 4.Clean or change the filter 5.Remove blockage in tube and brush inlet 6.For simple cleaning, it is recommended to use the lowest speed or the medium speed. Only larger garbage needs the highest speed, which can effectively prolong the battery life. <p>If the house is larger, contact customer service to get additional spare batteries.</p>
Battery indicator does not light up when charging	<ol style="list-style-type: none"> 1.Battery damaged 2.Screen damaged 3.Adaptor incorrectly connected or damaged 	<ol style="list-style-type: none"> 1.Change a battery 2.Change the motor unit 3.Change the adaptor or fully insert the charging terminal into the battery charging terminal
Not charging	<ol style="list-style-type: none"> 1.Battery temperature is too high or too low 2.The charger power light is not on. 	<ol style="list-style-type: none"> 1.Please wait for the battery temperature to return to normal before charging 2.Charger not plugged in

9. WARRANTY

BuTure cordless vacuum cleaner has a two-year warranty. You can contact our email via sales@ibuture.com for after-sales support, we will reply you within 1 working day.

The warranty includes: free maintenance of the cordless stick vacuum, free replacement of defective parts, including battery, filter, floor brush, dust container, charger and motor.

If any problems or malfunctions during use, please send your question and order number to sales@ibuture.com.

BuTure support specialist will answer you within 1 working day.



E-mail: sales@ibuture.com