

Welcome Guide

SVINZ Alarm Day Clock Digital Calendar
Model: SDC008 (SDC008W)

Thank you for your purchase of this SVINZ product. Please read this instruction manual carefully before using product to ensure proper use. Keep this manual in a safe place for future reference.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT INSTALL THIS PRODUCT IN A CONFINED SPACE SUCH AS A BOOK CASE OR SIMILAR UNIT.

CAUTION

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICABLE PARTS INSIDE, REFER TO QUALIFIED USER PERSONNEL.

HOW TO USE:

Remove the digital clock and AC adaptor from the package.

Plug the input connector of the AC Adaptor into the DC-IN hole on the back of the device.

Plug in the clock and press the ON/OFF switch or just wait few seconds.

In 5 seconds the clock will display the exact time/day of the week/month and day cycle.

The clock can be used as a desk clock with adjustable bracket or wall mountable.

Now you may enjoy the SVINZ Alarm Day Clock Digital Calendar.





HOW TO SET:

Set Time	< 02:22 PM >
Set Date	12-10-2020
Time Mode	12 Hours
Alarm Time 1	11:36 AM
Alarm1 Frequency	Mon.to Fri.
Alarm Time 2	11:38 AM

1. **SET TIME:** Press the **MENU** button to access the settings page. Press the **RIGHT/LEFT** button to select the field to be modified. When the field is underlined with blue, use the **UP/DOWN** button to adjust the number. After the changes are complete, press the **OK** button to save the settings. Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings.
2. **SET DATE:** Press the **MENU** button to access the settings page. Press the **DOWN** button to access the 2nd line titled Set Date. Press the **RIGHT/LEFT** button to underline the field to be modified. When the field is underlined with blue, use the **UP/DOWN** button to adjust the number. After the changes are complete, press the **OK** button to save the settings. Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings.
3. **TIME MODE:** Press the **MENU** button to access the settings page. Press the **DOWN** button to access the 3rd line titled Time Mode. Press the **RIGHT/LEFT** button to switch between: 12 Hours (A.M./P.M.) or 24 Hours (Military Time). Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings.
4. **ALARM TIME 1:** Press the **MENU** button to access the settings page. Press the **DOWN** button to access the 4th line titled Alarm Time 1. Press the **RIGHT/LEFT** button to select the field to be modified. When the field is underlined with blue, use the **UP/DOWN** button to adjust the number. After the changes are complete, press the **OK** button to save the settings. Press the **DOWN** button to access alarm 1 frequency settings.
5. **ALARM 1 FREQUENCY:** Press the **DOWN** button to access the 5th line titled Alarm 1 Frequency. Press the **RIGHT/LEFT** button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings. **PLEASE NOTE:** The alarm will ring for 60 seconds and then go off on its own if the snooze is off, or you can manually stop it by pressing the snooze button if the snooze is on.
6. **ALARM TIME 2:** Press the **MENU** button to access the settings page. Press the **DOWN** button to access the 6th line titled Alarm Time 2. Press the **RIGHT/LEFT** button to select the field to be modified. When the field is underlined with blue, use the **UP/DOWN** button to adjust the number. After the changes are complete, press the **OK** button to save the settings. Press the **DOWN** button to access alarm 2 frequency settings.

7. **ALARM 2 FREQUENCY:** Press the **DOWN** button to access the 7th line titled Alarm 2 Frequency. Press the **RIGHT/LEFT** button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings. **PLEASE NOTE:** The alarm will ring for 60 seconds and then go off on its own if the snooze is off, or you can manually stop it by pressing the snooze button if the snooze is on.
8. **ALARM TIME 3:** Press the **MENU** button to access the settings page. Press the **DOWN** button to access the 8th line titled Alarm Time 3. Press the **RIGHT/LEFT** button to select the field to be modified. When the field is underlined with blue, use the **UP/DOWN** button to adjust the number. After the changes are complete, press the **OK** button to save the settings. Press the **DOWN** button to access alarm 3 frequency settings.
9. **ALARM 3 FREQUENCY:** Press the **DOWN** button to access the 9th line titled Alarm 3 Frequency. Press the **RIGHT/LEFT** button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings. **PLEASE NOTE:** The alarm will ring for 60 seconds and then go off on its own if the snooze is off, or you can manually stop it by pressing the snooze button if the snooze is on.
10. **ALARM TIME 4:** Press the **MENU** button to access the settings page. Press the **DOWN** button to access the 10th line titled Alarm Time 4. Press the **RIGHT/LEFT** button to select the field to be modified. When the field is underlined with blue, use the **UP/DOWN** button to adjust the number. After the changes are complete, press the **OK** button to save the settings. Press the **DOWN** button to access alarm 4 frequency settings.
11. **ALARM 4 FREQUENCY:** Press the **DOWN** button to access the 11th line titled Alarm 4 Frequency. Press the **RIGHT/LEFT** button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings. **PLEASE NOTE:** The alarm will ring for 60 seconds and then go off on its own if the snooze is off, or you can manually stop it by pressing the snooze button if the snooze is on.
12. **ALARM TIME 5:** Press the **MENU** button to access the settings page. Press the **DOWN** button to access the 12th line titled Alarm Time 5. Press the **RIGHT/LEFT** button to select the field to be modified. When the field is underlined with blue, use the **UP/DOWN** button to adjust the number. After the changes are complete, press the **OK** button to save the settings. Press the **DOWN** button to access alarm 5 frequency settings.

- 13. ALARM 5 FREQUENCY:** Press the **DOWN** button to access the 13th line titled Alarm 5 Frequency. Press the **RIGHT/LEFT** button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings. **PLEASE NOTE:** The alarm will ring for 60 seconds and then go off on its own if the snooze is off, or you can manually stop it by pressing the snooze button if the snooze is on.
- 14. SNOOZE:** Press the **DOWN** button to access the 14th line titled Snooze. Press the **RIGHT/LEFT** button to switch between: Off, 3(times), 5(times). Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings.
- 15. AUTO DIMMING:** Press the **MENU** button to access the setting page. Press the **DOWN** button to access the 15th line titled Auto Dimming. Press the **RIGHT/LEFT** button to switch between: Mid, Low, Off
- Mid** means the brightness automatic dims to dark at 7:00 PM and dims to bright at 7:00AM (For this mode, the brightness of the day is 50cd/m² and of the night is 10cd/m²)
- Low** means the brightness automatic dims to dark at 7:00 PM and dims to bright at 7:00AM (For this mode, the brightness of the day is 50cd/m² and of the night is 5cd/m²)
- Off** means the brightness does not change during the day and the night. (For this mode, the brightness of the day and the night is both 50cd/m²)
- 16. COLOR MODE:** Press the **MENU** button to access the settings page. Press the **DOWN** button to access the 16th line titled Color Mode. Press the **RIGHT/LEFT** button to switch between: White, Yellow or Black. Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings.
- 17. VOLUME:** Press the **MENU** button to access the settings page. Press the **DOWN** button to access the 17th line titled Volume. Press the **RIGHT/LEFT** button to increase or decrease the alarm volume (1-10). After the changes are complete, press the **OK** button to save the settings.
- 18. DATE MODE:** Press the **MENU** button to access the setting page. Press the **DOWN** button to access the 18th line titled Date Mode. Press the **RIGHT/LEFT** button to switch between:
Month-Day-Year (U.S. Mode).
Day-Month-Year (European Mode).
Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings.
- 19. LANGUAGE:** Press the **MENU** button to access the setting page. Press the **DOWN** button to access the 19th line titled Language. Press the **RIGHT/LEFT** button to select a language (English, French, German, Dutch, Polish, Spanish, Italian and Welsh are available). Press the **MENU** button to go back to the main display or press the **UP/DOWN** button to access other settings.

IMPORTANT & WARRANTY

The SVINZ Alarm Day Clock Digital Calendar SDC008 is packaged with a thin anti-scratch screen protector. Please feel free to peel it off using the pull-up tab. Please be sure not to apply pressure to the high quality non-reflective LED screen.

The SVINZ Alarm Day Clock Digital Calendar SDC008 is pre-set to GMT Time Zone. It has a small internal watch-type battery that maintains time, even when the clock is unplugged or during a power outage. If you receive the clock in another time zone, (e.g. Pacific, Mountain or Central) you may have to adjust the time by using these instructions.

The SVINZ Alarm Day Clock Digital Calendar SDC008 has an Auto Switch-On Facility when connected to the power supply. To power the clock off or back on, press and hold the On/Off button for a few seconds.

The SVINZ Alarm Day Clock Digital Calendar SDC008 does not change the time automatically for daylight savings time, and needs to be adjusted manually.

The SVINZ Alarm Day Clock Digital Calendar SDC008 has a 12-month warranty provided by the manufacturer SVINZ. For Non-artificial damage or defect of the device or AC adapter can be replaced during the warranty period.

SPECIFICATIONS:

Dimension: 8.55 x 6.76 x 0.90 Inches

LED Size: 162 x 122 mm, 8 Inches

Backlight: LED

IPS: 4: 3

Resolution: 1024 x 768

Net Weight: 1LBS

AC Power Adapter: Input 100-240V

AC Output DC: 5V-1A

Warranty: 1 Year

For technical support or assistance

Please feel free to contact us via: support@svinz.com

Manufactured by ChuFan E-Commerce Co.,Ltd www.svinz.com