

GCF20D 咖啡机开机指引 | A4 128g 铜版纸 双面彩印

## THE FIRST TIME OR A LONG TIME NOT USE THE MACHINE



**01** Make sure to remove the red silicone cap from the bottom of water tank.

**02**

Before making espresso, make sure the knob is on the OFF position.



**03**

Make sure the steam wand nozzle is clean and no blocking.

**04**

Fill water into the water tank NOT exceed the MAX line. Set up the water tank vertically and align the buckles to the hole on the back of the machine, and press it down to be parallel to the top of the machine.



**05**

Plug in the power cord, press ON/OFF button, all indicators will flash the machine is preheating.



**06**

Place a big cup under the steam wand. When all indicators stay on, turn on the steam control knob slowly.

**07**

Let the water flow out of the steam wand about 80ml (about 1~2 minute), then turn OFF the Steam control knob. This process is let the water flow into the empty pump for the first use.



**08**

Place a cup on the drip tray. Press the Espresso button to flow out the hot water to clean the filter holder or the coffee cup.

# QUICK START GUIDE

**GCF20D**

Retain This Instruction For Future Reference

## FROTH MILK ALONE

01

Press the milk frothing button. Please wait the milk frothing indicator stop flashing. Otherwise it comes out with weak steam, which will make bad frothing effect.



02

Prepare a pitcher with about 100ml of milk. Insert the steam wand nozzle into the milk about 0.4-0.8inch. Slowly turn on the steam control knob to control the steam volume.



03

Froth milk in the way moving vessel round from up to down, after the milk increase in volume by 2 times or the required purpose is reached, turn the knob back to "OFF" position to stop. Take away the pitcher.



**Note:** During the milk frothing, if lack of water, the machine will produce louder noise and small steam, please refill in time.

04

In order to prevent the steam wand nozzle from blocking and make it easier to clean, we suggest you to clean it immediately after frothing milk.



05

Turn off the steam control knob. Press and hold the steam wand, pull out the stainless steel sleeve. Clean the steam nozzle with damp cloth/sponge.



**Warning:** The steam wand may be very hot during and after use. Please mind the hot water and operate carefully.

## MAKE ESPRESSO ALONE

01

Insert the filter into the filter holder. Fill ground coffee into the filter and press it with the tamp spoon. The ground coffee should be pressed evenly and not too firmly.



02

Install the filter holder into the machine from "Unlock" to "Lock" position. Place a cup on the drip tray.



03

Press the single-cup switch or double-cup switch the espresso indicator will flash, the machine start brewing.



04

The machine will stop automatically when coffee brewing finished.



05

Remove the filter holder from "Lock" to "Unlock" position. Remove the coffee grounds and clean the filter holder by water. Rinse the seal ring with wet cloth.



**Note:** Be careful the hot water of machine brewer and hot coffee grounds.