 


Brighttown®

CURTAIN STRING LIGHTS

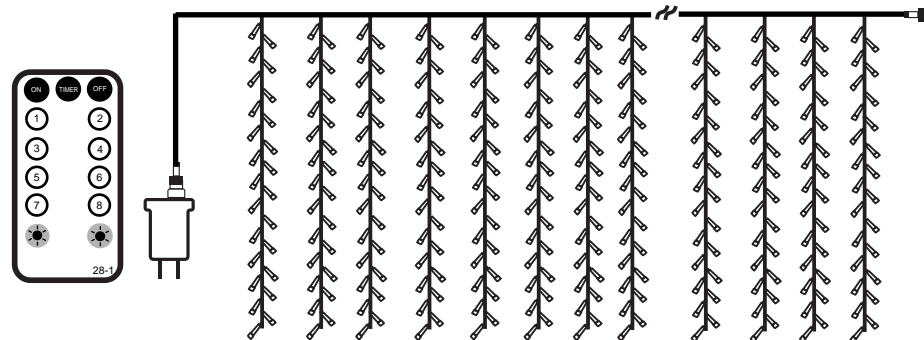

 
IMPORTANT SAFETY INSTRUCTIONS

1. Do not mount or place near gas or electric heaters, fireplace, candles or other similar source installation.
2. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails, Install only using the mounting kits provided.
3. Do not let the product rest on the power supply cord or on any electric cord.
4. Do not use this product for other than its intended use.
5. Do not hang other decoration or objects on cord, wire or light string.
6. Do not close doors or window if clamping or damaging the products or cord.
7. Do not cover the product with cloth, paper or any material not part of the product when in use.
8. Read and follow all instructions on this product.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm, for more information, go to www.P65Warnings.ca.gov.

PLEASE READ THIS MANUAL CAREFULLY AND KEEP IT FOR FUTURE REFERENCE

REMOTE CONTROL

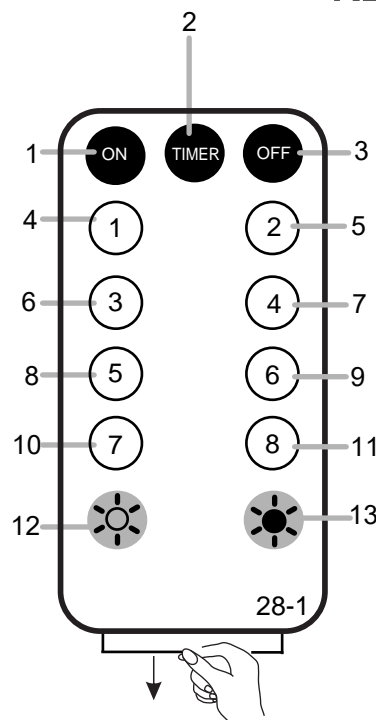


1. power on
2. 6H on, 18H off
3. power off
4. combination (mode 2-7 cycling)
5. in waves
6. sequential
7. slow-glow
8. chasing/flash
9. slow fade
10. twinkle/flash
11. steady on
12. dim up
13. dim down


Friendly Note:
Remove the insulation sheet before first time use as illustrated

Button Cell Replacement

 
Step 1

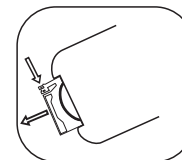

 Step 2

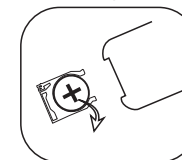

 Step 3

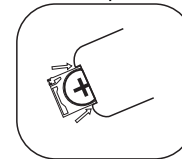

BATTERY PRECAUTIONS

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment, a reserved battery may cause damage to the device.
3. If the battery in the device is consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible leakage.
4. Do not try to recharge the battery as it is not intended to be recharged, it can overheat and rupture. (Follow the battery manufacturer's instructions.)
5. The batteries shall not be exposed to excessive heat such as sunshine or fire.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. The remote control is supplied with a coin/button cell battery. If the coin button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used battery away from children. If the Battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed any part of the body, seek immediate medical attention.

WARNING!



 
Button cell batteries can cause serious injury or death if swallowed. Dispose of safely! Store batteries out of reach of children!

OPERATIONS

1. Hanging the string lights on window or curtain as illustrated below.

Step 1: Wind the main string around the rod first


Step 2: Unwrap the drops

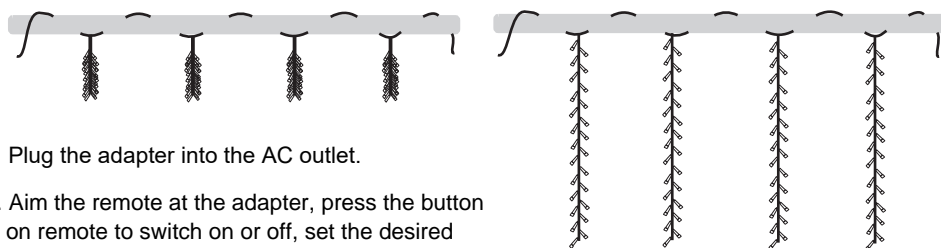

2. Plug the adapter into the AC outlet.
3. Aim the remote at the adapter, press the button on remote to switch on or off, set the desired lighting effects(mode 1-8), set the timer or adjust the brightness.
4. Press the mode button on adapter repeatedly to switch to 8 lighting modes if the remote can not be found.
5. Insert back the insulation tab to remote after operation for storing.

END TO END CONNECTION

 The string lights can be extended with same strings, DO NOT exceed max connectable strands, or it may lead to risk of damage.

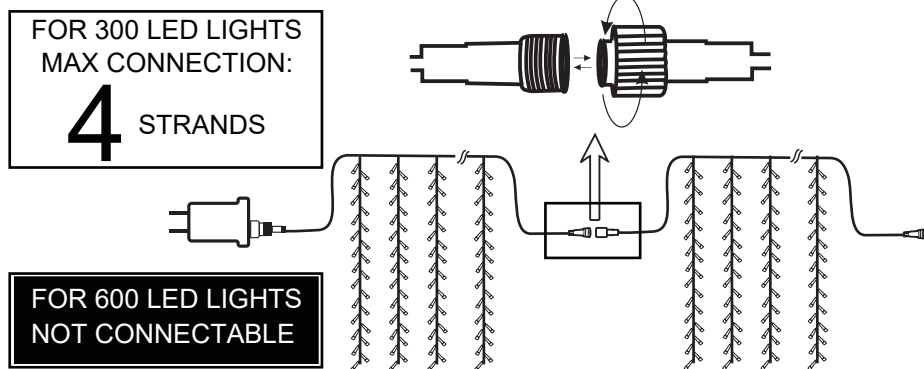

TROUBLESHOOTING

1. If the string lights do not work, make sure the adapter is plugged firmly.
2. If the string lights do not work, make sure it is turned on.
3. If the remote does not work, the battery may exhaust, replace a new button cell for it.
4. If the remote does not work, keep it closer to the Adapter.
5. If the above cases do not work, ask a professional electrician for help or contact us.

SPECIFICATION

Lighting mode: static + dynamic

Waterproof grade: IP44

LED lifespan: 50000 hours

Remote working range: up to 32 Ft.

PACKAGE

String Lights with Adapter

Remote Control with Built-in Battery

User Manual

1 Year Limited Warranty

The product is warranted against defects in materials and workmanship under normal use and service for a period of one year from the date of original purchase when delivered to you in new condition in its original container, warranty repair or replacement shall not extend the original warranty period of the product, a dated proof of purchase is required at the time of warranty service, a copy of your dated bill of sale will satisfy this requirement.

This warranty does not cover accessories or consumables, such as light bulbs, as to which there shall be no warranty or replacement.

This limited warranty covers all defects encountered in normal use of the product and does not apply to the following cases:

1. Loss or damage of the product due to abuse, neglect, mishandling, improper packaging, alteration, accident, electrical current fluctuation, improper use, failure to follow operating or maintenance instructions prescribed in Brightown safety instructions or other documentation, dropping, scratches and abrasion will be presumed to generate from misuse, abuse or failure to operate as set forth in the user's manual or other documentation for the product.
2. Use of other parts or supplies(other than those sold by Brightown) that cause damage to the product.
3. If the product's model number or dating defaced, altered or removed.

For customer service and warranty, contact us here

✉ support@brightown.com

☎ US +1 (888) 550 1319
Mon-Fri 8AM-10PM(EST)