 


TAB

CARPET CLEANER MACHINE

Model: R6

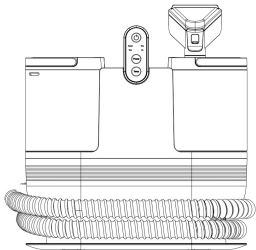

USER MANUAL

Read and understand this instruction manual thoroughly before using the product. It contains important information for your safety as well as operating and maintenance advice.

Contents

STATEMENT.....	1
CONTACT TAB CUSTOMER CARE.....	1
IMPORTANT SAFETY INSTRUCTIONS.....	2
PRODUCT INTRODUCTION.....	4
PREPARATION.....	5
INSTRUCTIONS.....	6
OPERATING INSTRUCTIONS.....	8
MAINTENANCE.....	10
TROUBLESHOOTING.....	14
SAFETY INSTRUCTIONS.....	15



Thanks for choosing TAB, our product that has been tested to meet our stringent quality standards. This product is covered with TAB product labor warranty for 12 months from the date of its original purchase.

Please email us with your order ID and problem or issue via service@tabhome.com, we will respond within 24 hours.

Please read the User Manual thoroughly. Clean and maintain the product as instructed. If any abnormalities occur, please refer to the Troubleshooting Guide first.

This warranty is void if the defect is caused by accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons, or a failure to follow operating instructions provided with the product. This warranty does not apply to normal wear and tear or commercial use.

In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss—direct, indirect or incidental—or consequential damage arising out of, or in connection with the use of the product.

CONTACT TAB CUSTOMER CARE



PLEASE CONTACT US BEFORE RETURNING THIS PRODUCT TO THE STORE . EMAIL TAB CUSTOMER CARE FOR PROBLEMS AND QUESTIONS. WE WILL RESPOND WITHIN 1 BUSINESS DAY.

CONTACT / TAB CUSTOMER CARE

E-mail: service@tabhome.com

For operation video of R6, please check the QR code on the right.



TAB Website



R6 Operation



BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN YOUR USER GUIDE AND ON THE APPLIANCE

When using an electrical appliance, basic precautions should always be followed, including the following:

● **MUST DO:**

1. Unplug it before maintenance , inspection and moving.
2. Use professional bubble free cleaning fluid to avoid damage to the machine.
3. Regularly dispose of dust on the plug.
4. Plug it in tightly when it is used.
5. Unplug the machine when it is not in use for a long time.
6. Note that the socket must not be overloaded.
7. Use it under the AC 120V.
8. Stop use immediately, turn off the power and unplug in the event of an exception or failure.
9. Stop using and look at the manual or consult customer service if there are abnormal sounds or smells.
10. Keep away from fireworks, heating, etc.
11. Stop working immediately when there is a foreign body blocking the spray nozzle.
12. Stop working immediately when a foreign body is inhaled.
13. When there is a blockage of clean water bucket or sewage bucket by foreign matters, pour out the water and clean up before continuing to use.
14. Remember to unplug the power cord after use.



 
 
● **DO NOT:**

1. Do not damage the power cord. Do not pull it when handling.
2. Do not use the machine when the power cord and plug are broken or the plug gets loose.
3. Do not touch or plug and unplug it with wet hands.
4. Do not allow infants to touch the power plug.
5. Do not spray pesticides, hair colorants, lubricants and other liquid.
6. Do not inhale flammable and explosive substances such as cigarette ends.
7. Do not inhale oil gas heat or dry dust.
8. Do not disassemble, repair or transform it by oneself.
9. Do not use in dangerous situations such as rain water and strong wind.
10. Do not put the main machine in water or water the machine. in order to avoid electric shock and fire.
11. Do not inhale dirt and dust with suspected infectious diseases
12. Do not use without a sewage bucket.
13. Do not use for purposes other than cleaning.
14. Do not lean or ride.
15. Do not use the machine within the reach of young children.
16. Do not allow children to use and play with it.
17. Do not use it outside.
18. Do not continue to use if the suction inlet is blocked.
19. Do not pull the power cord when plugging or unplugging it so as not to cause an electric shock.



● **Body:**

1. Clean water tank 2. Cleaning brush 3. Button panel 4. Dirty water tank 5. Host machine
6. Hose 7. Water spray switch button 8. Hand retainer 9. Power switch 10. Bobbin winder base
11. Buckle 12. Lock

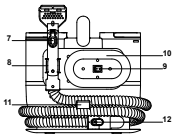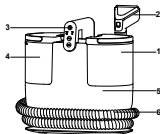

● **Accessories:**



Standard brush



WidePath brush



T-shaped brush



Self-clean brush



Instruction


● **PRODUCT PARAMETERS:**

Rated Working Voltage	120V 60Hz	Motor Type	Dry and Wet Dust Suction Motor
Rated Power	1200W	Motor Life	≥300H
Vacuum Degree	13KPa	Hose Length	1.7m
Noise	≤80db	Waterproof Level	IPX4
Clean Water Tank Capacity	1800ml	Net Weight of Machine	4.2kg
Dirty Water Tank Capacity	950ml	Working Environment Temperature	5-50°C
Power Line Length	5m	Machine Size	320*228*327mm
Heating Time	15S	Heater Life Time	≥300H

PREPARATION



 
- 1** Remove the clean water tank from the body.




- 2** Open it and fill with clean water.



 
- 3** Install the clean water tank into the body.



- 4** Insert the brush into the handle.

 

 
- 5** Fix the hose and power cord before handling.




INSTRUCTIONS



 
- 1** Plug in it.




- 3** Turn on the power to start.

 

- 2** Turn on the main switch.

 

 - 4** Select suction power or water temperature.



Notice: Please spray the residual water in the pipe before spraying hot water.

 
- 5** Press the water spray button to spray clean water.



Spray the stain with clean water to let it surface.
Do not spray continuously at the same spot.
After spraying, absorb the water, so as not to cause mildew and odor.




6 Absorb water.



Stop spraying, and absorb the sewage.
After using the cloth on which water is easily retained, please blow dry or air dry.

 8 Turn off the main switch.




*If the machine will not be used for a long time, please turn off the main power behind the machine.


10 Pour away clean water and sewage, and clean the sewage bucket.



 7 Turn off the power to stop.



9 Unplug it.

 

Attention: Turn off the power before unplugging it.
After use, please hang the coiled power cord back to its original place.



● Operating Instructions :

 
In order to avoid blocking the air duct, please clean up large pieces of garbage in the area, such as large pieces of paper, packaging film, etc. .The cleaning range of this machine is soft planes such as cloth and plush. It is not recommended to use it on hard surface.

1. Press the power switch to start the machine and start working; Press the power switch again to turn off the machine.
2. Power: The default is "Standard" gear, press the "Power" button to adjust to "Turbo" gear. Press again to adjust to "Standard", switch back and forth.
3. Temp: The default is "Warm" mode, press the "Temp" button to adjust to "Hot" mode. Press again to adjust to "Warm" mode, switch back and forth.
4. Sewage tank water full prompt: When the sewage tank is full, All the lights are flashing, the buzzer "drip" voice for three consecutive times to enter the standby mode.
5. Adjust the mode according to the demand, hold the cleaning brush, press and hold the "water spray switch" button on the bottom of the cleaning brush button, the water spray head continues to spray water outward; release the button, the water spray stops.
6. For ordinary stains, pour the cleaning liquid into the cleaning tank and spray water on the stains. After spraying water, the cleaning brush is used to wipe repeatedly, and the stains and sewage are sucked into the sewage box and sucked several times to quickly clean the stains. It is recommended that after cleaning, clean it again with water to prevent the cleaning liquid from remaining in the fabric.
7. For stubborn stains, first use a special cleaning solution to the cloth above the stain place spray, spray after the use of cleaning brush repeatedly, the cleaning solution will completely dissolve the stain, open the machine to clean the liquid and sewage into the sewage tank, repeated suction several times can quickly clean the stain.
8. After cleaning, use the self-cleaning brush head and perform the overall cleaning of the pipe.



● Power Cord and Hose Storage:

- 1.This product has a long power cord, after the product is used, the power cord can be wrapped around the back of the machine Winding seat, convenient storage.
- 2.After the product is used, the hose can be wound in the storage slot at the bottom of the machine.

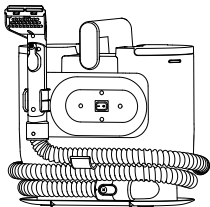

● ATTENTION:

- 1.The power cord of this product is long, please be careful to trip when using;
- 2.Do not allow children to sit on the machine;
- 3.Please pay attention to safety when using this product. Do not put the power cord into the water.
- 4.Please do not use the machine in the ambient temperature below 0℃ or 50℃.
- 5.It is strictly prohibited to change the whole machine, accessories and wire replacement.



▲ Attention:

 
Stop running and unplug it before maintenance.

● Cleaning of body:

The ordinary smudges can be wiped with a damp cloth.
The stubborn dirt can be wiped with a damp cloth with detergent and then cleaned with a dry cloth dipped in water.

● After every use:

Remove them from the body, rinse thoroughly with water and air dry.



● Remove the front cover and then rinse the water sucker:



 
● Brush head and pipe self-cleaning:

1. Install the self-cleaning brush head on the handle, open the machine, and the machine starts to work. At the same time, keep pressing the water button, and see a certain amount of water stored in the pipe, and clean the pipe.





2. Install the self-cleaning brush head on the handle, open the machine, directly put on the brush head into the faucet for direct cleaning.




• Dirty water tank cleaning:

In order to maintain the performance of the product, please clean the dirty water tank regularly. If there is more dirty water in the dirty water tank, the suction of this product will be weakened. If the water level reaches the maximum water level, the dirty water tank should be cleaned in time. After the dirty water tank is removed from the host, the internal dirty water and garbage shall be poured out and cleaned.

• Disassembly method of dirty water tank:

 
Pull up the dirty water tank obliquely to remove the dirty water tank as a whole, then open the buckle of the dirty water tank cover, open the cover and clean the dirty water tank.

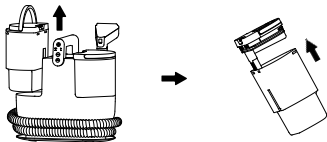

• Adding water to the clean water tank: When the clean water tank is short of water, please add water in time:


Water adding method: Remove the clean water tank, open the water tank cover and add water.

 Disassembly method of clean water tank: Pull up the clean water tank obliquely to remove the clean water tank as a whole, then turn on the cover of the clean water tank and add water.

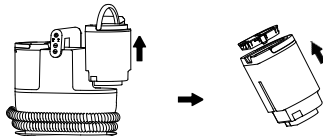

• Cleaning cleaning brush: When the cleaning brush is entangled by hair or blocked by dirt, please clean and maintain it in time:

 
1. When the cleaning brush is entangled with hair, use a tool to clean the hair or dirt on the bristles.
2. When the cleaning brush is blocked, please remove the transparent cover above the cleaning brush, and use chopsticks or other tools to clean the air duct inside the cleaning brush handle.






● Clean the filter screen in the clean water tank:

 The filter screen in the clean water tank is used to filter impurities in water and scale generated after boiling water, so please clean the filter screen in time after using it for several times to ensure its filtering effect.



● Removable hose:

 The hose of this machine is detachable. If the hose breaks, please remove it and replace it with a new one.

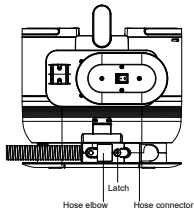

If any abnormality is found during use, please refer to the following table

Status	Possible causes	Processing method
The machine does not work after the switch is turned on	The plug is not properly connected and loose, resulting in poor contact.	Turn off the power and plug it again.
	The internal line or power cord is broken.	Call the repair telephone.
	The machine set overheats and the protective device operates.	Refer to the instructions for protective device.
The product does not spray water	Nozzle blockage	Remove the nozzle blockage with a fine needle
	Water shortage in clean water tank	Add water to the clean water tank in time
	The internal water pipe is blocked or broken	Contact the merchant or after-sales
Abnormal noise	The suction port of the product is blocked or large waste is inhaled	Clear blockages in time
	Motor failure	Contact the merchant or after-sales
Weak suction or no water absorption	Too much dirty water in the dirty water tank	Clean the dirty water tank in time
	Hose is broken	Replace the hose with a new one
	Dirt blocking the suction	Clear blockages in time
Abnormal or inoperative machine	The ambient temperature is too high or too low	Keep the machine at a suitable ambient temperature (0°C-50°C)
		Contact the merchant or after-sale
Hot water is not hot	Slow heating of boiler	Contact the merchant or after-sales
	The boiler is not heated	



- Only authorized technicians can disassemble this product. It is strictly prohibited to disassemble this product by themselves.
- The power cord of this product is long, do not put the power cord in water; the power cord can be wrapped around the hook on the back of the host.
- Do not put this product near cigarette butts, lighters or other open flames.
- Please clean the product after usage if needed.
- Do not put heavy objects and sharp objects on the machine.
- This product is an indoor household product. Please do not use it outdoors.
- It is forbidden to press articles (people) above 10kg.
- Before using this product, please remove all vulnerable items on the ground (such as glasses, lamps) and items that may entangle the floor brush and air suction channel (such as wires, paper, curtains).
- Do not put this product in a place that is easy to fall (such as tables and chairs).
- When the dirty water in the dirty water tank is full, please empty it before using the product.
- The ambient temperature of this product is 5 °C to 50 °C.
- Do not use this product in high temperature environment.
- To prevent tripping, please inform other members of the room when this product is working.