 


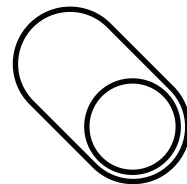

Instruction Manual  
Bedienungsanleitung  
Manual de instrucciones  
Manuel d'instructions  
Manuale d'uso  
Руководство по эксплуатации

**K651G**



<b>EN</b>	Instruction Manual .....	2
<b>DE</b>	Bedienungsanleitung .....	29
<b>ES</b>	Manual de instrucciones .....	56
<b>FR</b>	Manuel d'instructions .....	83
<b>IT</b>	Manuale d'uso .....	110
<b>RU</b>	Руководство по эксплуатации.....	137

## Important Safety Instructions

### IMPORTANT SAFETY INSTRUCTIONS

When using an electrical Appliance, basic precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

1. This Appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the Appliance in a safe way and understand the hazards involved. Children shall not play with the Appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Clear the area to be cleaned. Remove power cords and small objects from the floor that could entangle the Appliance. Tuck rug fringe under the rug base, and lift items such as curtains and tablecloths off the floor.
3. If there is a drop off in the cleaning area due to a step or stairs, you should operate the Appliance to ensure that it can detect the step without falling over the edge. It may become necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not a trip hazard.
4. Only use as described in this manual. Only use attachments recommended or sold by the manufacturer.
5. Please make sure your power supply source voltage matches the power voltage marked on the Docking Station.
6. For INDOOR household use ONLY. Do not use the Appliance in outdoor, commercial or industrial environments.
7. Use only the original rechargeable battery and Docking Station provided with the Appliance from the manufacturer. Non-rechargeable batteries are prohibited.
8. Do not use without dust bin and/or filters in place.
9. Do not operate the Appliance in an area where there are lit candles or fragile objects.
10. Do not use in extremely hot or cold environments (below -5°C/23°F or above 40°C/104°F).

11. Keep hair, loose clothing, fingers, and all parts of body away from any openings and moving parts.
12. Do not operate the Appliance in a room where an infant or child is sleeping.
13. Do not use Appliance on wet surfaces or surfaces with standing water.
14. Do not allow the Appliance to pick up large objects like stones, large pieces of paper or any item that may clog the Appliance.
15. Do not use Appliance to pick up flammable or combustible materials such as gasoline, printer or copier toner, or use in areas where they may be present.
16. Do not use Appliance to pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.
17. Do not put objects into the suction intake. Do not use if the suction intake is blocked. Keep the intake clear of dust, lint, hair, or anything that may reduce air flow.
18. Take care not to damage the power cord. Do not pull on or carry the Appliance or Docking Station by the power cord, use the power cord as a handle, close a door on the power cord, or pull power cord around sharp edges or corners. Do not run Appliance over the power cord. Keep power cord away from hot surfaces.
19. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
20. Do not use the Docking Station if it is damaged. The power supply is not to be repaired and not to be used any longer if it is damaged or defective.
21. Do not use with a damaged power cord or receptacle. Do not use the Appliance or Docking Station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.
22. Turn OFF the power switch before cleaning or maintaining the Appliance.
23. The plug must be removed from the receptacle before cleaning or maintaining the Docking Station.

24. Remove the Appliance from the Docking Station, and turn OFF the power switch to the Appliance before removing the battery for disposal of the Appliance.
25. The battery must be removed and discarded according to local laws and regulations before disposal of the Appliance.
26. Please dispose of used batteries according to local laws and regulations.
27. Do not incinerate the Appliance even if it is severely damaged. The batteries can explode in a fire.
28. When not using the Docking Station for a long period of time, please unplug it.
29. The Appliance must be used in accordance with the directions in this Instruction Manual. REECOO cannot be held liable or responsible for any damages or injuries caused by improper use.
30. The robot contains batteries that are only replaceable by skilled persons. To replace the robot's battery, please contact Customer Service.

31. If the robot will not be used for a long time, power OFF the robot for storage and unplug the Docking Station.

**32. WARNING:** For the purposes of recharging the battery, only use the detachable supply unit DN622.13 provided with the Appliance.

## SAVE THESE INSTRUCTIONS

To satisfy RF exposure requirements, a separation distance of 20 cm or more should be maintained between this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

To disable Wi-Fi module on Robot, power the robot ON.

Place the robot on the Docking Station making sure the Charging Contacts on Robot and the Docking Station Pins make a connection.

Press and hold the AUTO Mode Button on the robot for 20 seconds until Robot emits 3 beeps. To enable Wi-Fi module on Robot, power the robot OFF and then power ON. The Wi-Fi module is turned on when Robot is restarted.



### Correct Disposal of this Product

 
This marking indicates that this product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To recycle your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can safely recycle this product.

	<b>Class II</b>
	<b>Short-circuit-proof safety isolating transformer</b>
	<b>Switch mode power supply</b>
	<b>For indoor use only</b>
	<b>Direct current</b>
	<b>Alternating current</b>
	<b>Detachable supply unit</b>


# Contents

1. Package Contents .....	8
2. Operating and Programming.....	12
3. Maintenance .....	20
4. Troubleshooting.....	25
5. Product Specifications.....	28



# 1. Package Contents/1.1 Package Contents

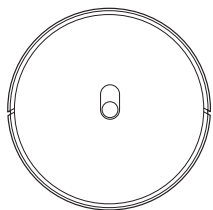


Robot

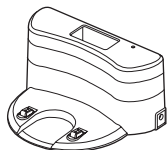 

Docking Station+Power Adapter

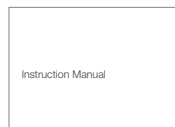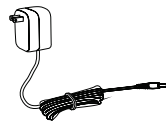  


Instruction Manual

 


Side Brushes



 Main Brush (Pre-installed)




Tangle-free Brush

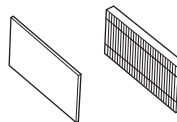 


High Efficiency Filter &  
Sponge Filter



 
Dust Bin and Reservoir  
(Pre-installed)



Cleaning Cloth Plate

 

 Washable/Reusable  
Microfiber Cleaning Cloth




Disposable Cleaning  
Cloths

**Note:** Figures and illustrations are for reference only and may differ from actual product appearance.  
Product design and specifications are subject to changes without notice.





# 1. Package Contents/1.2 Product Diagram

 
## Robot

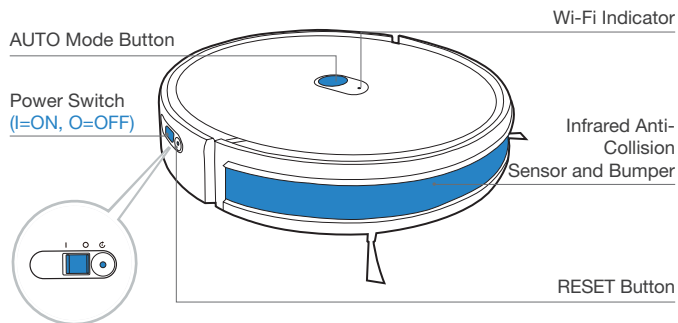

## Bottom

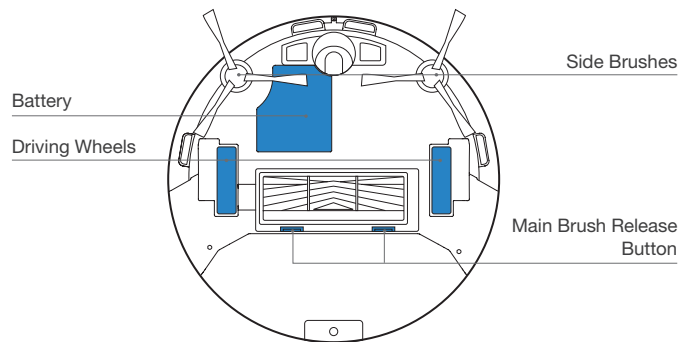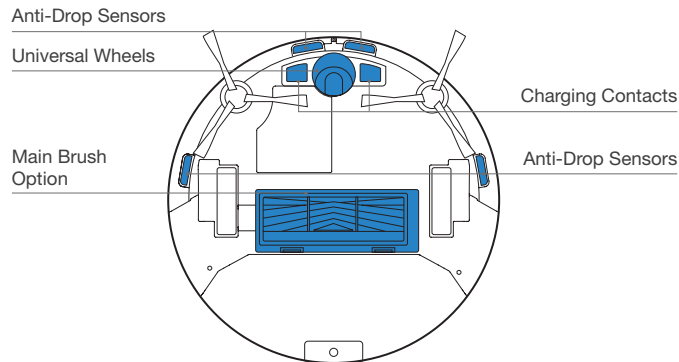  


## Dust Bin and Reservoir (Pre-installed)

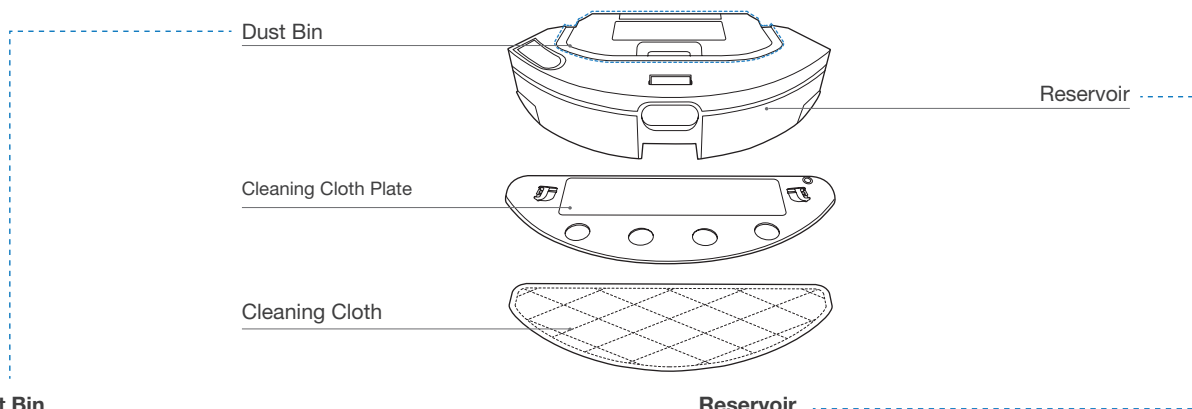 


### Dust Bin

Multi-function Cleaning Tool

 Dust Bin Handle

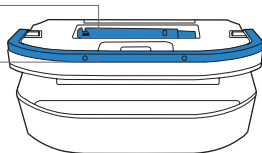

Filter Net

 

Sponge Filter




High Efficiency Filter




### Reservoir

 
Water Inlet Cover

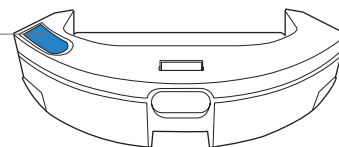


Cleaning Cloth Plate

 

Cleaning Cloth

 


## Docking Station

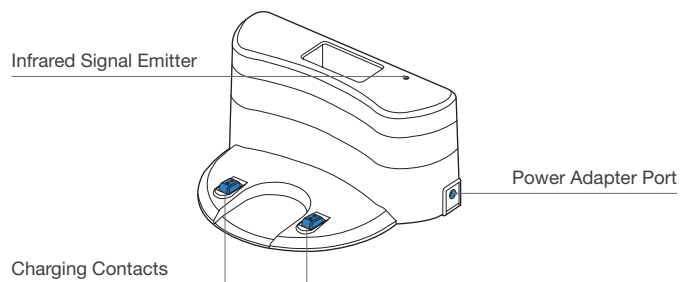 


## 2. Operating and Programming/2.1 Notes Before Cleaning

 Tidy up the area to be cleaned by putting furniture, such as chairs, in their proper place.

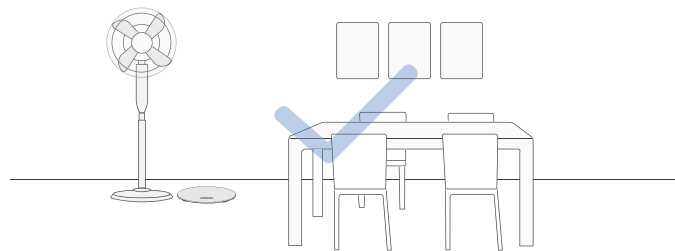

 It may be necessary to place a physical barrier at the edge of a drop to stop the unit from falling over the edge.

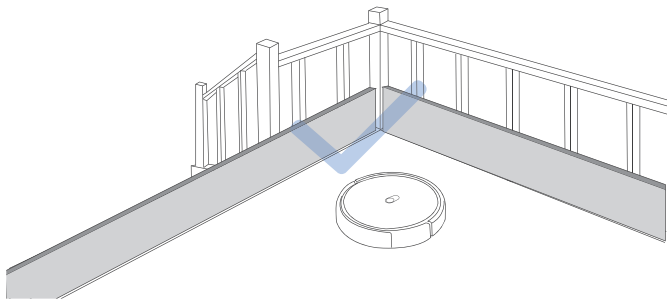

Put away objects including wires, cloths and slippers, etc. on the floor to improve the cleaning efficiency.




Before using the product on a rug with tasseled edges, please fold the rug edges under.




Please do not stand in narrow spaces, such as hallways, and make sure not to block Robot.

## 2. Operating and Programming/2.2 Quick Start
 
### 1 Remove Protective Materials

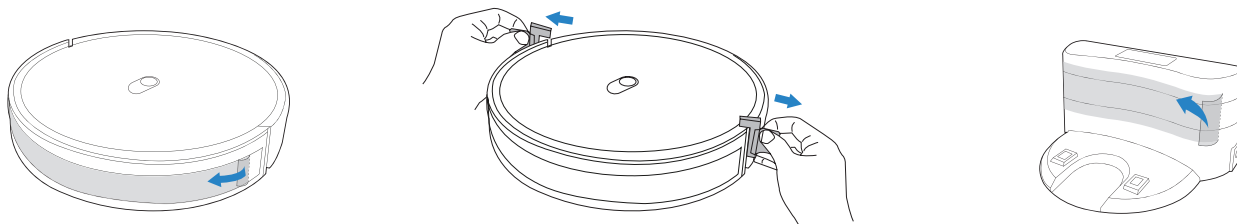


### 2 Install Side Brushes

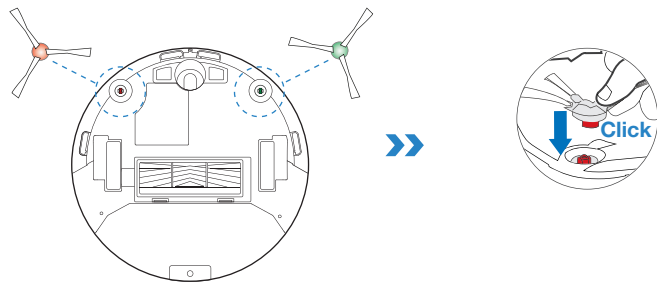 


## 2. Operating and Programming/2.3 Charging Robot
 
### 1 Docking Station Placement

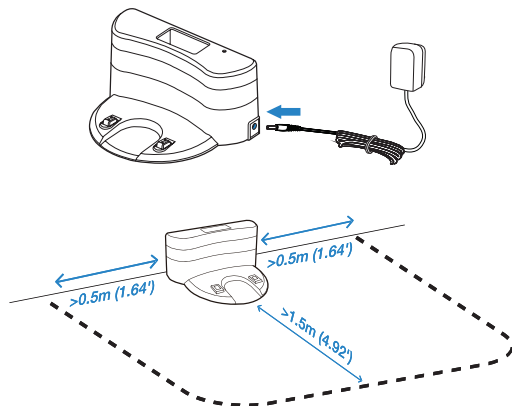


### 3 Charge Robot

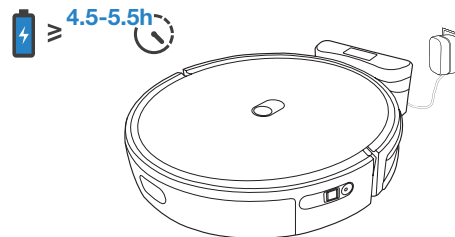 

- \* Empty the reservoir and remove the Cleaning Cloth Plate before charging Robot.
- \* It is suggested to avoid picking up or moving Robot during the cleaning for Robot to return to charge successfully.

### 2 Power ON

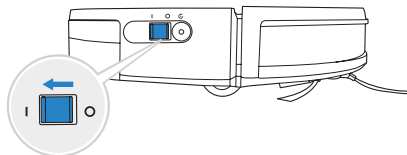 

**Note:** I = ON, O = OFF


- ! Robot cannot be charged when being powered OFF.

## 2. Operating and Programming/ 2.4 Yeedi App

 
To enjoy all available features, it is recommended to control your Robot via the Yeedi App.

**Before you start, make sure that:**

- Your mobile phone is connected to a Wi-Fi network.
- The 2.4GHz band wireless signal is enabled on your router.
- The Wi-Fi indicator light on Robot is slowly flashing.

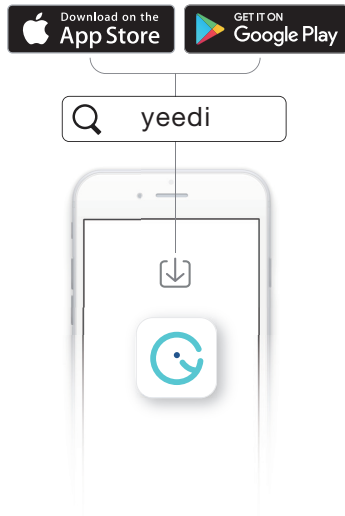

### Wi-Fi Indicator Light

	Slowly flashing	Disconnected to Wi-Fi or waiting for Wi-Fi connection
	Rapidly flashing	Connecting to Wi-Fi
	Solid	Connected to Wi-Fi

 
 
#### Tips:

If you have any problems during the Wi-Fi setup process, refer to the Troubleshooting > Wi-Fi Connection section in this manual.

## 2. Operating and Programming/ 2.5 Operating Robot

During the first cleaning, please supervise Robot and assist it should there be a problem.

### 1 Start

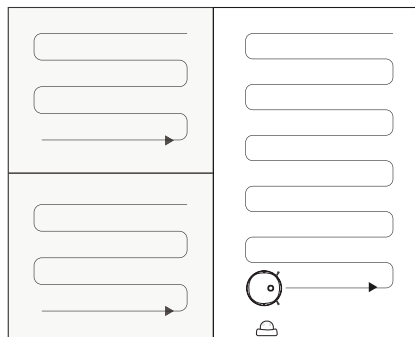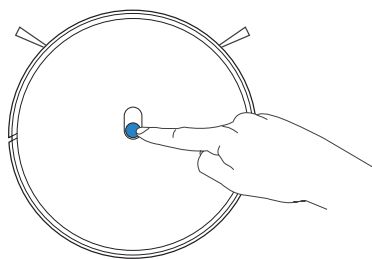





## 2 Start/Pause

The robot's Control Panel stops glowing after the robot is paused for a few minutes. Press the AUTO Mode Button on Robot to wake up the robot.

 
### Pause

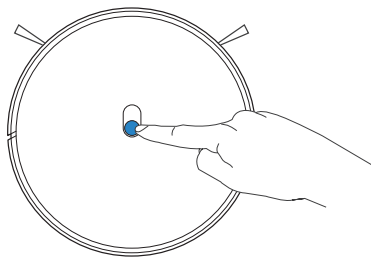

### Wake Up

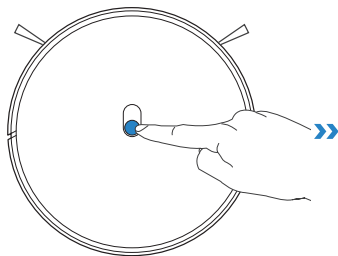 


### Start

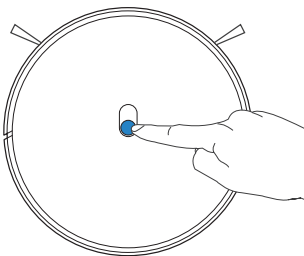 

If the pause duration is shorter than 10 minutes, Robot will return to finish the cleaning where it left off.

## 3 Power OFF

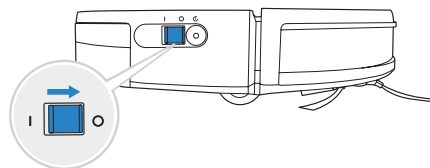 

\* If Robot will not be used for a while, fully charge Robot and power OFF before storage. Charge Robot every 1.5 month to prevent battery drain.


\* When Robot is not cleaning, it is recommended to keep Robot powered ON and charging.

## 2. Operating and Programming/2.6 Dust Bin & Reservoir

 
### Note:

1. To prolong the service life of the reservoir, it is recommended to use purified water or softened water.
2. Please avoid using the mopping system on the carpet.

### Add Water

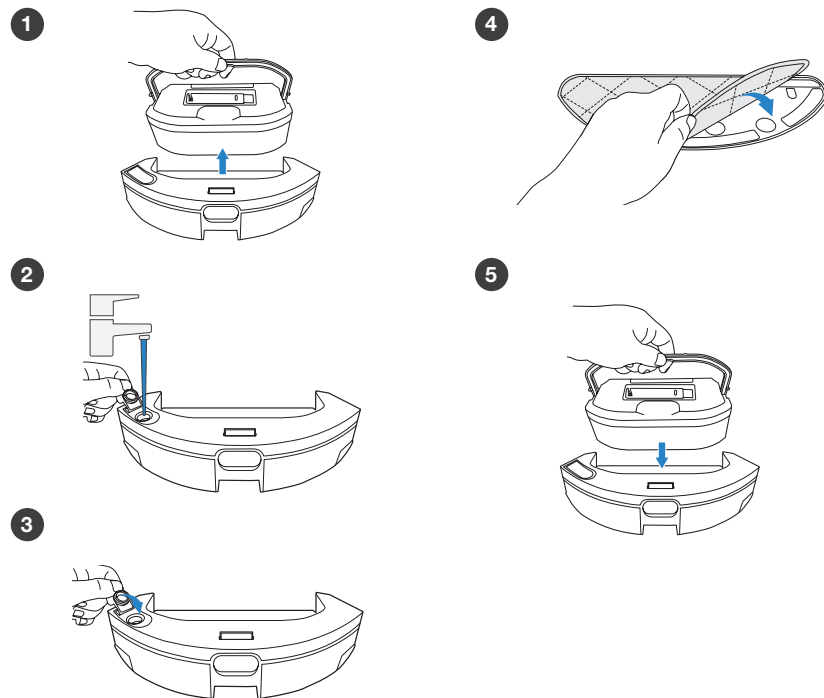


### Install Dust Bin & Reservoir

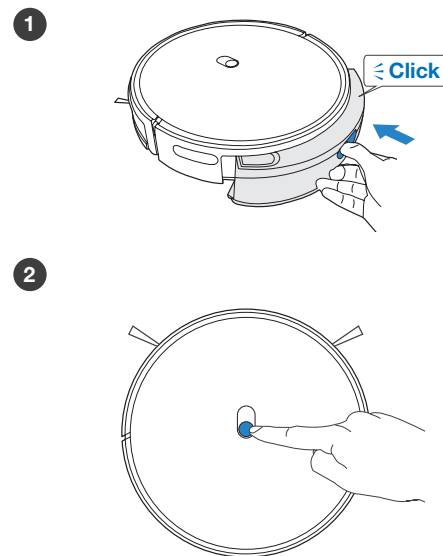 


## 2. Operating and Programming/2.7 Tangle-free Brush

Tangle-free Brush is specifically designed to pick up hair without tangling. It is suggested to increase the vacuum power in yeedi App when using Tangle-free Brush.

 
### 1 Release the Brush Cover

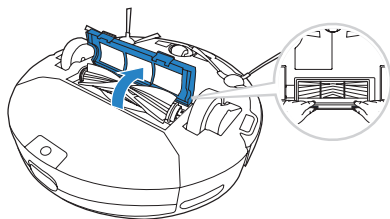

### 2 Uninstall the Main Brush

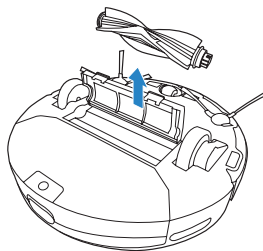 

### 3 Install Tangle-free Brush

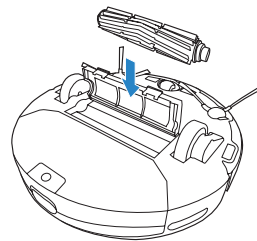 

## 3. Maintenance/3.1 Regular Maintenance

To keep Robot running at peak performance, perform maintenance tasks and replace parts with the following frequencies:

Robot Part	Maintenance Frequency	Replacement Frequency
Disposable Cleaning Cloth	/	Dispose after each use
Washable/Reusable Microfiber Cleaning Cloth	After each use	Every 50 washes
Reservoir	After each use	/
Side Brush	Once every 2 weeks	Every 3-6 months
Main Brush Tangle-free Brush	Once per week	Every 6-12 months
Sponge Filter/ High Efficiency Filter	Once per week	Every 3-6 months
Universal Wheel Anti-Drop Sensors Bumper Charging Contacts Docking Station Pins	Once per week	/

 
**Before performing cleaning and maintenance tasks on Robot, turn the robot OFF and unplug the Docking Station.**

**A multi-function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.**

**Note:** Yeedi manufactures various replacement parts and fittings. Please contact Customer Service for more information on replacement parts.


### 3. Maintenance/3.2 Dust Bin & Reservoir

Uninstall the Dust Bin & Reservoir

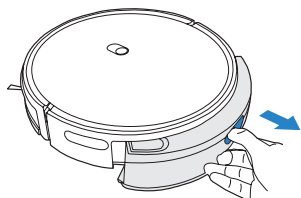


Reservoir

 
1

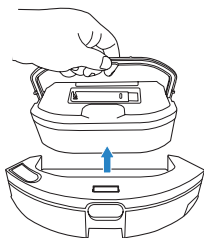


2

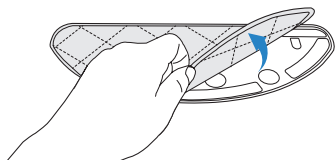 


3

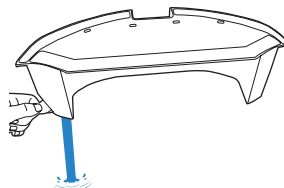 


4

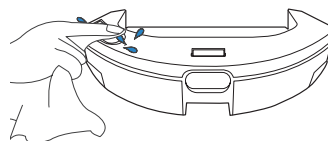 

 Washable/Reusable Microfiber  
Cleaning Cloth

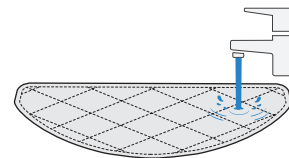


Disposable Cleaning Cloth

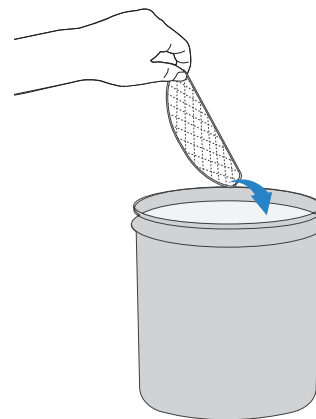 


## Dust Bin

 
1

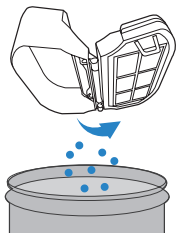



2

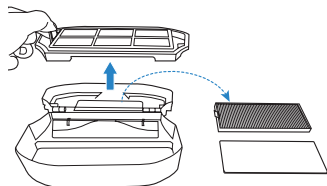 


3

 

4

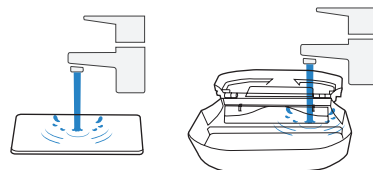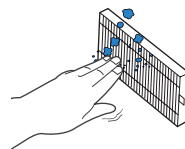  


5

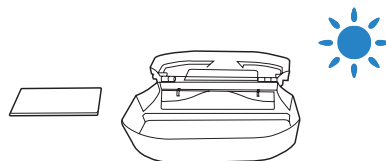 


## 3. Maintenance/3.3 Main Brush & Side Brushes

### Main Brush

 
1

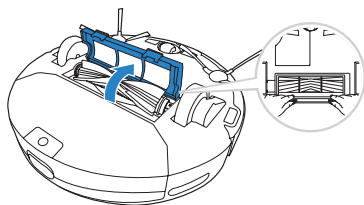

2

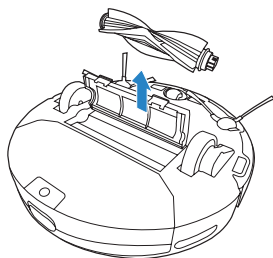 


3

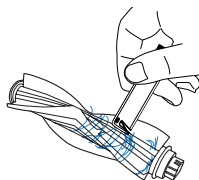 


### Side Brushes






 
1

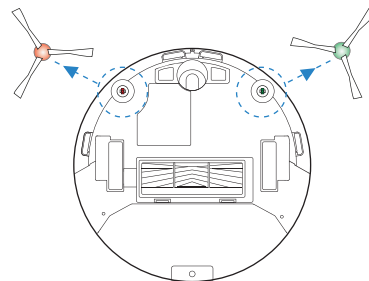

2

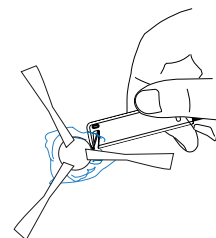 

### 3. Maintenance/3.4 Other Components

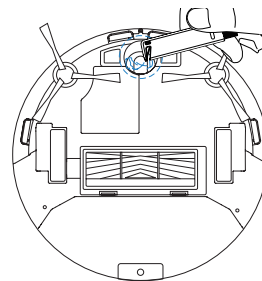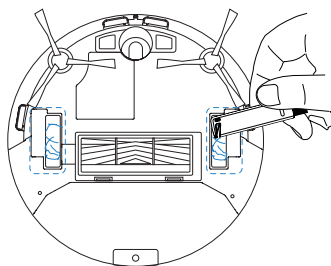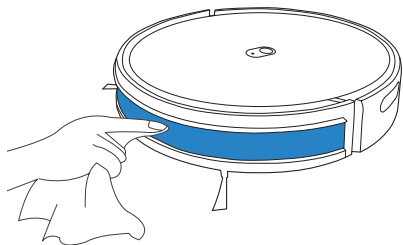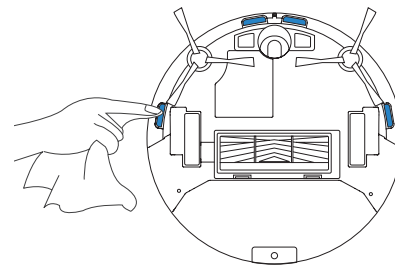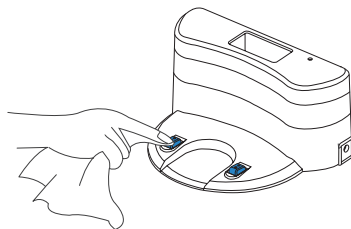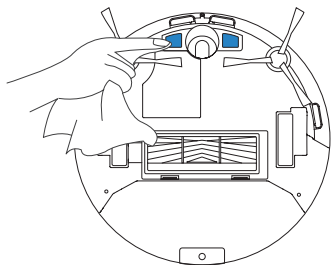      



## 4. Troubleshooting/4.1 Troubleshooting

No.	Scenario	Possible Cause	Solution
1	Robot is not able to connect to the home Wi-Fi network.	Incorrect home Wi-Fi username or password entered.	Enter the correct home Wi-Fi username and password.
		Robot is not within range of your home Wi-Fi signal.	Make sure Robot is within range of your home Wi-Fi signal.
		Network setup started before Robot was ready.	Turn ON Power Switch. Press the RESET Button. Robot is ready for network setup when its Wi-Fi Indicator light flashes slowly.
		Robot does not support 5 GHz Wi-Fi.	Make sure the robot has been connected with 2.4 GHz Wi-Fi network.
2	Robot is not charging.	Robot is not switched ON.	Switch ON Robot.
		Robot has not connected to the Docking Station.	Be sure that the robot's Charging Contacts have connected to the Docking Station Pins.
		The Docking Station is not connected to the power supply.	Make sure the Docking Station is connected to the power supply.
		The battery is completely discharged.	Please contact Customer Care for help.

No.	Scenario	Possible Cause	Solution
3	Robot cannot return to the Docking Station.	The Docking Station is not correctly placed.	Refer to Section 3.2 correctly place the Docking Station.
		The Docking Station is not correctly connected.	Make sure the Docking Station is correctly connected.
		The Docking Station is manually moved during the cleaning.	It is suggested not to move the Docking Station during the cleaning.
		Robot did not start cleaning from the Docking Station.	Make sure Robot starts cleaning from the Docking Station.
4	Robot misses cleaning spots to be cleaned, or repeats cleaning the area cleaned.	The cleaning cycle is interfered by small objects or barriers on the floor.	Remove power cords and small objects from the floor to ensure cleaning efficiency. Robot will automatically clean the area missed, please avoid moving Robot manually or block the path during the cleaning cycle.
		Robot is working on slippery polished floors.	Make sure the floor wax is dried before Robot starts cleaning.
		Robot is unable to reach certain areas blocked by furniture or barriers.	Tidy up the area to be cleaned by putting furniture and small objects in their proper place.
5	Robot gets stuck while working and stops.	Robot gets stuck while working and stops.	Robot will try various ways to free itself. If it is unsuccessful, manually remove the obstacles and restart.
		Robot might be stuck under furniture with an entrance of similar height.	Please set a physical barrier.
6	Robot is making too much noise when cleaning.	Robot is tangled or blocked with debris.	Clean Robot as described in section Maintenance and restart. If the trouble persists, please contact Customer Care.

## 4. Troubleshooting/4.2 Wi-Fi Connection

Before Wi-Fi setup, make sure Robot, mobile phone, and Wi-Fi network meet the following requirements.

### **Robot and Mobile Phone Requirements**

- Robot is fully charged and the power switch of Robot is turned on.
- Wi-Fi status light slowly flashes.
- Turn off mobile phone's cellular data (you can turn it back on after setup).

### **Wi-Fi Network Requirements**

- You are using a 2.4GHz or 2.4/5 GHz mixed network.
- Your router supports 802.11b/g/n and IPv4 protocol.
- Do not use a VPN (Virtual Private Network) or Proxy Server.
- Do not use a hidden network.
- WPA and WPA2 using TKIP, PSK, AES/CCMP encryption.
- WEP EAP (Enterprise Authentication Protocol) is not supported.
- Use Wi-Fi channels 1-11 in North America and channels 1-13 outside North America (refer to local regulatory agency).
- If you are using a network extender/repeater, the network name (SSID) and password are the same as your primary network.

## 5. Product Specifications

<b>Model</b>	<b>K651G</b>		
Rated Input	19V === 0.6A 11.4W		
<b>Docking Station Model</b>	<b>DN622.13</b>		
Rated Output Voltage	19V ===	Rated Output Current	0.6A
<b>Power Adapter Model</b>	<b>YJS015F-1900600G/DK18-190060H-V/TS-A011-190060E2</b>		
Off/Standby Mode Power	Less than 0.50 W		
Networked Standby Power	Less than 2.00 W		
Frequency Bands and power	Operating frequency: 2412MHz - 2472MHz		
	Maximum transmitting power: 19 dBm.		

\* Output power of the Wi-Fi module is less than 100mW.

**Note:** Technical and design specifications may be changed for continuous product improvement.