



yeedi

K700

Instruction Manual

Bedienungsanleitung

Manual de instrucciones

 
Manuel d'instructions

Manuale d'uso

Руководство по эксплуатации

Model/Modell/Modelo/

Modèle/Modello/Модель:K701G

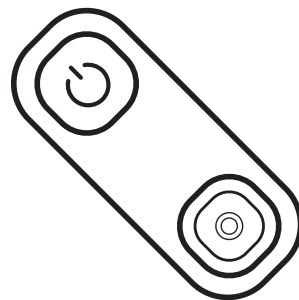

Contents

1. Important Safety Instructions	4
2. Package Contents	8
3. Operating and Programming.....	11
4. Maintenance	17
5. Status Indicator Light and Alarm Sounds	23
6. Troubleshooting.....	24
7. Technical Specifications	26

1. Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

1. This Appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the Appliance in a safe way and understand the hazards involved. Children shall not play with the Appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Clear the area to be cleaned. Remove power cords and small objects from the floor that could entangle the Appliance. Tuck rug fringe under the rug base, and lift items such as curtains and tablecloths off the floor.
3. If there is a drop off in the cleaning area due to a step or stairs, you should operate the Appliance to ensure that it can detect the step without falling over the edge. It may become necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not a trip hazard.
4. Only use as described in this manual. Only use attachments recommended or sold by the manufacturer.
5. Please make sure your power supply voltage matches the power voltage marked on the Docking Station.
6. For INDOOR household use ONLY. Do not use the Appliance in outdoor, commercial or industrial environments.
7. Non-rechargeable batteries are prohibited.
8. Do not use without dust bin and/or filters in place.
9. Do not operate the Appliance in an area where there are lit candles or fragile objects.
10. Do not use in extremely hot or cold environments (below -5°C/23°F or above 40°C/104°F).
11. Keep hair, loose clothing, fingers, and all parts of body away from any openings and moving parts.
12. Do not operate the Appliance in a room where an infant or child is sleeping.
13. Do not use Appliance on wet surfaces or surfaces with standing water.
14. Do not allow the Appliance to pick up large objects like stones, large pieces of paper or any item that may clog the Appliance.

1. Important Safety Instructions

15. Do not use Appliance to pick up flammable or combustible materials such as gasoline, printer or copier toner, or use in areas where they may be present.
16. Do not use Appliance to pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.
17. Do not put objects into the suction intake. Do not use if the suction intake is blocked. Keep the intake clear of dust, lint, hair, or anything that may reduce air flow.
18. Take care not to damage the power cord. Do not pull on or carry the Appliance or Docking Station by the power cord, use the power cord as a handle, close a door on the power cord, or pull power cord around sharp edges or corners. Do not run Appliance over the power cord. Keep power cord away from hot surfaces.
19. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
20. Do not use the Docking Station if it is damaged.
21. Do not use with a damaged power cord or receptacle. Do not use the Appliance or Docking Station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.
22. Turn OFF the power switch before cleaning or maintaining the Appliance.
23. The plug must be removed from the receptacle before cleaning or maintaining the Docking Station.
24. Remove the Appliance from the Docking Station, and turn OFF the power switch to the Appliance before removing the battery for disposal of the Appliance.
25. The battery must be removed and discarded according to local laws and regulations before disposal of the Appliance.
26. Please dispose of used batteries according to local laws and regulations.
27. Do not incinerate the Appliance even if it is severely damaged. The batteries can explode in a fire.
28. When not using the Docking Station for a long period of time, please unplug it.
29. The Appliance must be used in accordance with the directions in this Instruction Manual. REECOO cannot be held liable or responsible for any damages or injuries caused by improper use.





1. Important Safety Instructions

- 30. The robot contains batteries that are only replaceable by skilled persons. To replace or remove the battery, please contact Customer Service.
- 31. If the robot will not be used for a long time, fully charge the robot and power OFF for storage and unplug the Docking Station.
- 32. **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit CH1630RC provided with this appliance.
- 33. The Remote Control requires two nonrechargeable AAA batteries. To replace the battery of the Remote Control, please turn over the Remote Control, press and remove its Battery Cover. Remove the batteries, and insert the new batteries with the correct polarity. Reassemble the Battery Cover.
- 34. Non-rechargeable batteries are not to be recharged.
- 35. Different types of batteries or new and used batteries are not to be mixed.
- 36. Batteries of the Remote Control are to be inserted with the correct polarity.
- 37. Exhausted batteries are to be removed from the Appliance and safely disposed of.
- 38. If the Remote Control is to be stored unused for a long period, the batteries should be removed.

- 39. The supply terminals are not to be short- circuited.

SAVE THESE INSTRUCTIONS

1. Important Safety Instructions

	Class II
	Short-circuit-proof safety isolating transformer
	Switch mode power supply
	For indoor use only

 


Correct Disposal of this Product


This marking indicates that this product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To recycle your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can safely recycle this product.

2. Package Contents


2.1 Package Contents

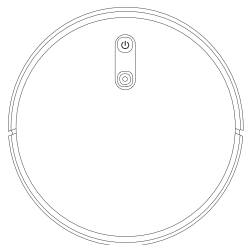


Robot

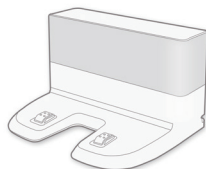 


Docking Station

 


Side Brushes

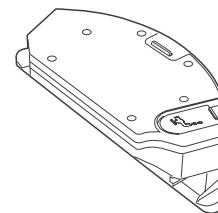 

Reservoir

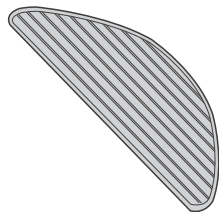 

 
Washable/Reusable
Microfiber Cleaning Cloth




Remote Control with
Batteries



 Multi-Function Cleaning
Tool



 Sponge Filter and High
Efficiency Filter

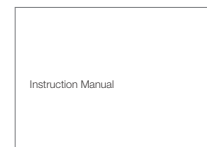



Instruction Manual


Note: Figures and illustrations are for reference only and may differ from actual product appearance. Product design and specifications are subject to changes without notice.

2. Package Contents



2.2 Product Diagram

   Robot

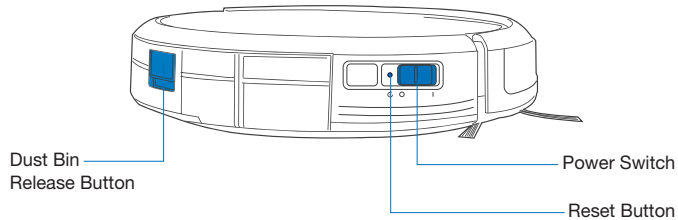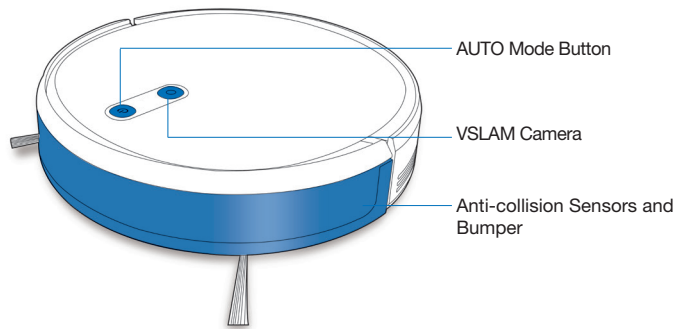


(Press and hold  for 5 seconds. The robot will revert to the factory settings. Use this button with caution.)

  Bottom View

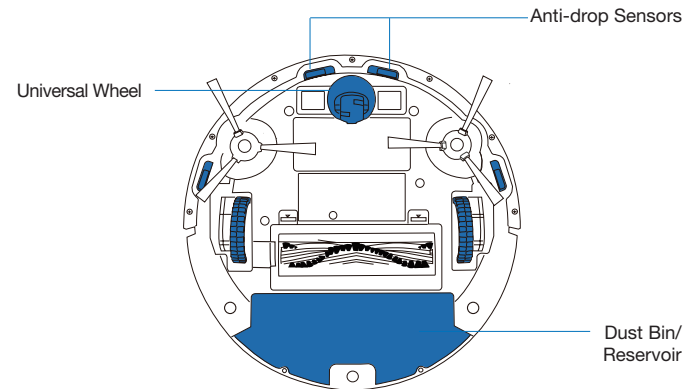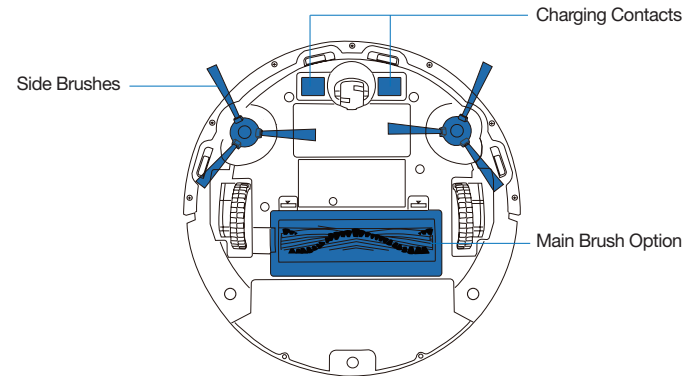


2. Package Contents

 
Docking Station

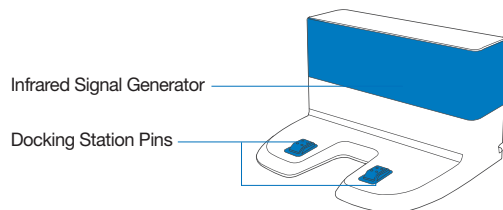

Advanced Mopping System

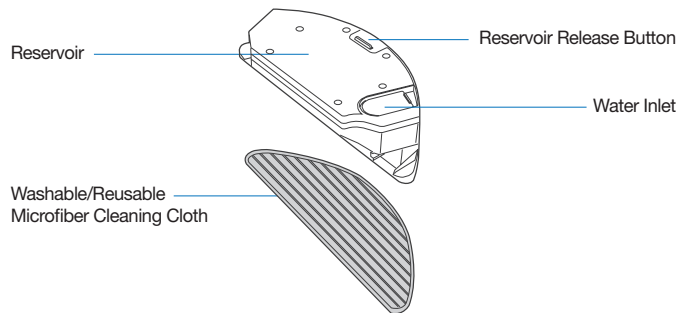 


Remote Control

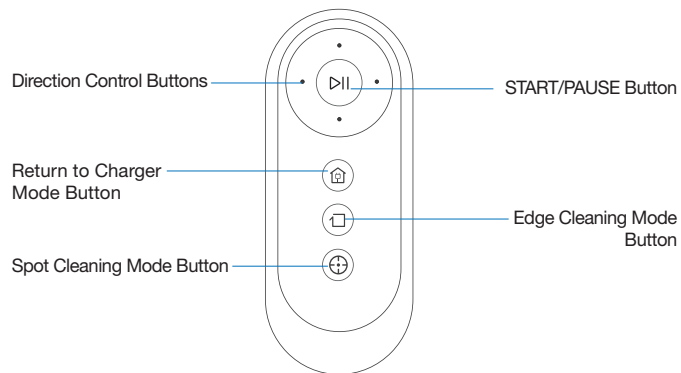 


3. Operating and Programming

3.1 Notes Before Cleaning

 WARNING: Do not use The robot on wet surfaces or surfaces with standing water.

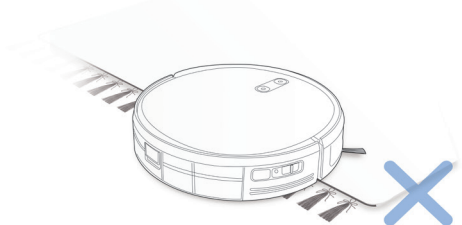

 
Before using the product on a rug with tasseled edges, please fold the rug edges under.

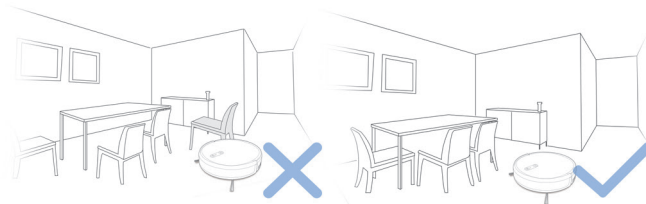

Tidy up the area to be cleaned by putting furniture, such as chairs, in their proper place.



 It may be necessary to place a physical barrier at the edge of a drop to stop the unit from falling over the edge.

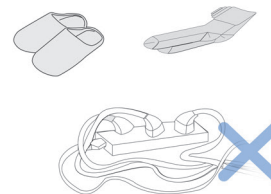


Remove power cords and small objects from the floor that the robot could be obstructed by.


3. Operating and Programming

3.2 Preparation

 
1 Remove Protective Strip

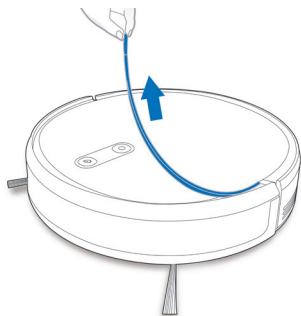


2 Docking Station Placement

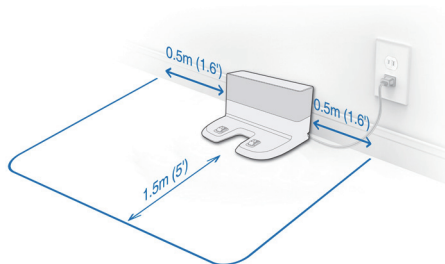 


3 Install Side Brushes

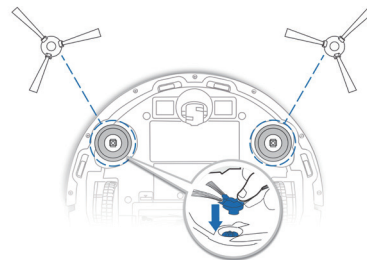 

4 Power ON

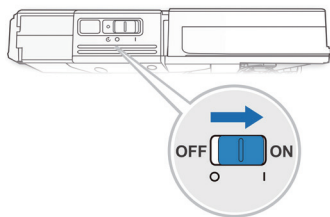 

5 Charge The robot

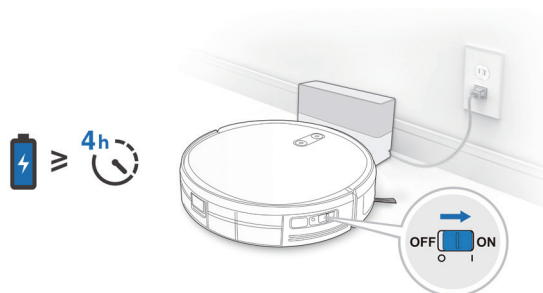 


Note: When the robot completes the cleaning cycle or when battery power gets low, The robot automatically returns to the Docking Station to recharge itself.

3. Operating and Programming


3.3 Selecting Cleaning Mode

1 AUTO Cleaning Mode

 
A **Programmed Cleaning Pattern** (optimized for hard floors) will be selected by default.

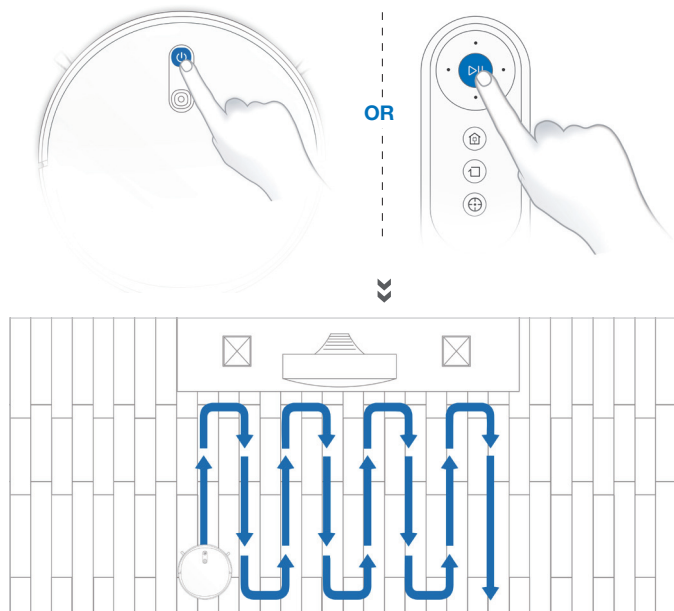

2 Return to Docking Station

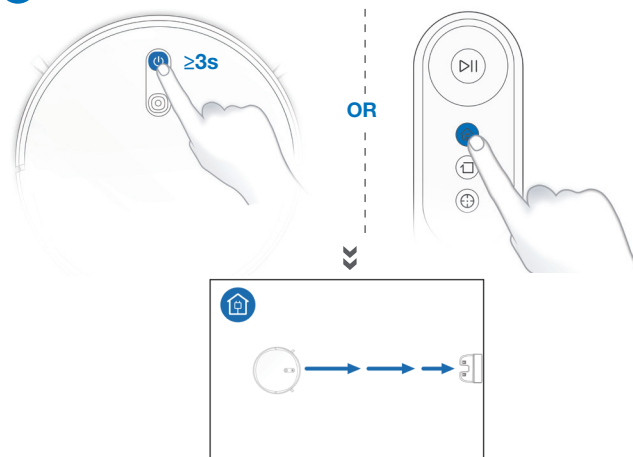 


3 Edge Cleaning Mode

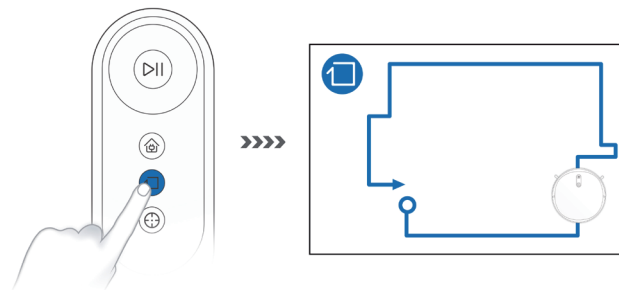 


3. Operating and Programming

 4 Spot Cleaning Mode (Less than 3 minutes)

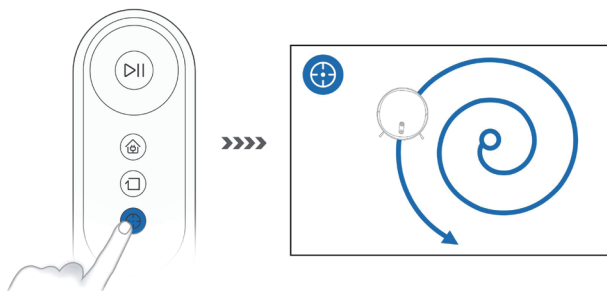

 
3.4 Switch vacuum power

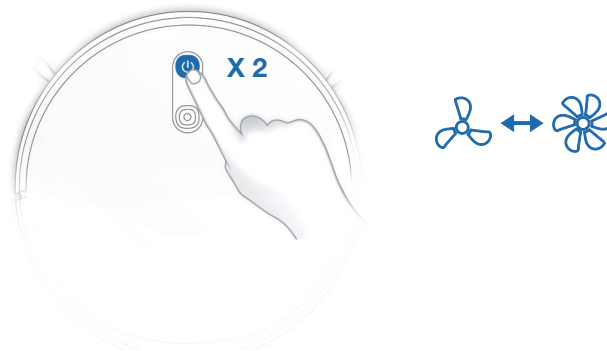

3. Operating and Programming


3.5 Pause, Wake Up, Power Off

 1 Pause

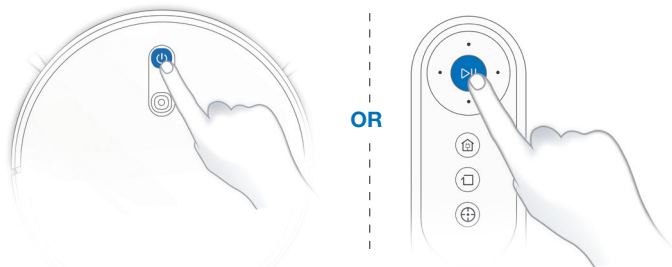


Note: The robot's Control Panel stops glowing after the robot is paused for a few minutes. Press the AUTO Mode Button on the robot to wake up the robot.

 2 Wake Up

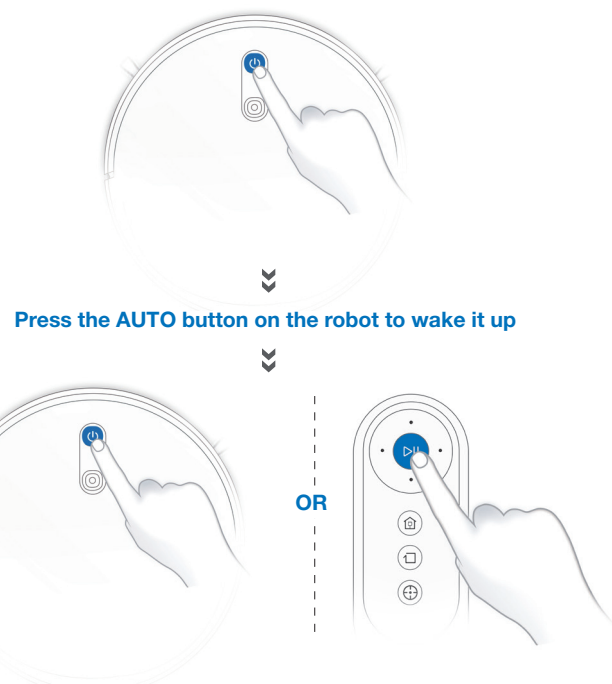

Press the AUTO button on the robot to wake it up

 3 Power OFF

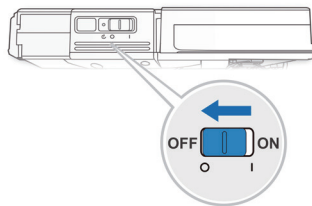


Note: When the robot is not working, it is recommended to keep it switched ON and charging.

3. Operating and Programming

3.6 Optional Mopping System

 Note: Empty the Reservoir and remove the Cleaning Cloth Plate before cleaning on carpet. When using the mopping system, fold area rug edges under themselves so The robot will avoid the rug. Be sure to use only water, and do not put washer fluid or any other cleaning solution in the Reservoir.

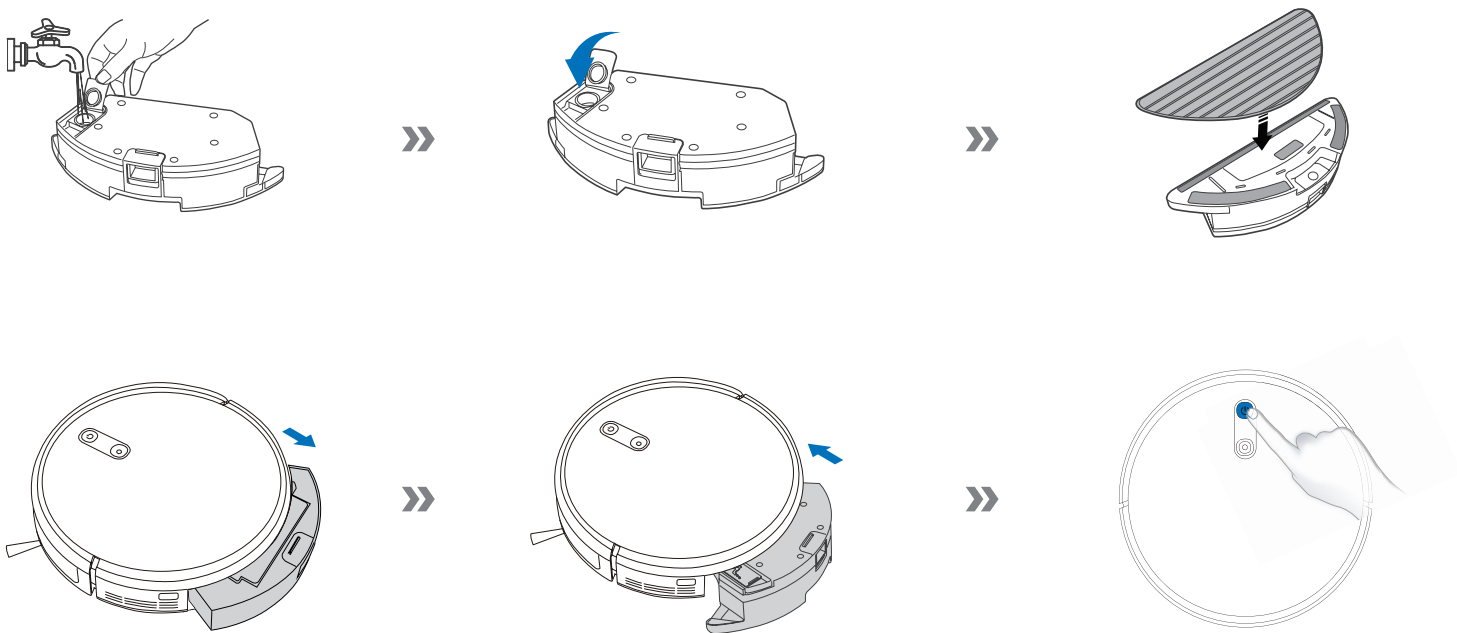


Note: After The robot finishes mopping, empty any remaining water from the Reservoir.

4. Maintenance

Before performing cleaning and maintenance tasks on The robot, turn the robot OFF and unplug the Charging Dock.

 4.1 Optional Mopping System


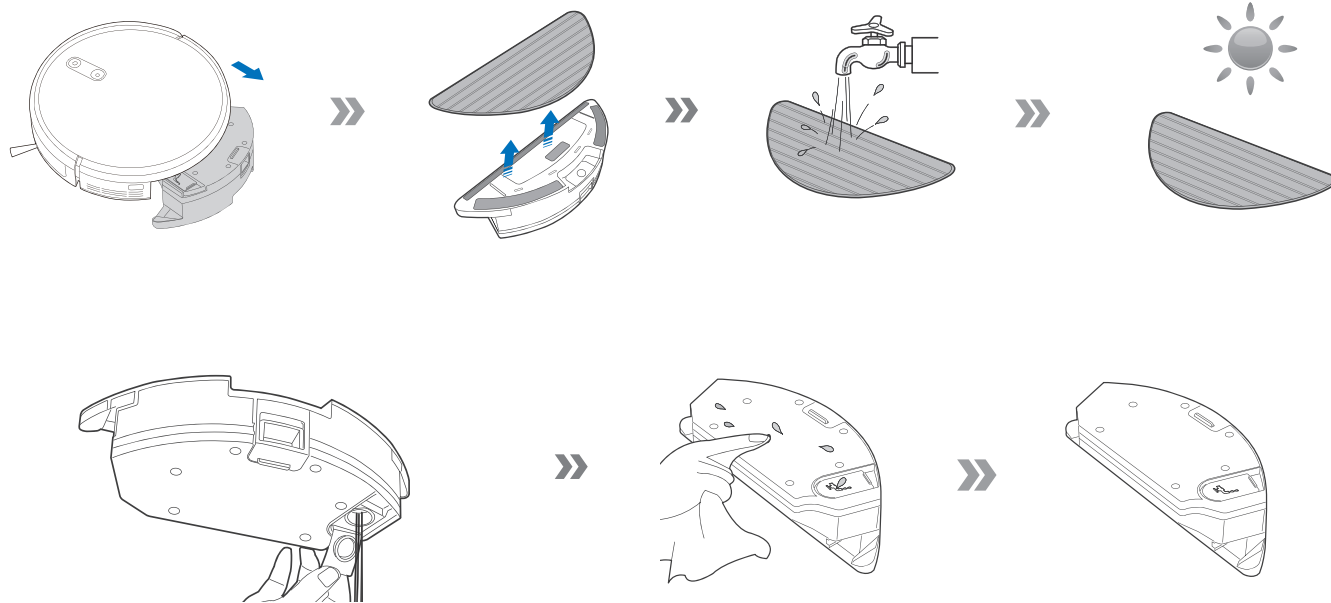


4. Maintenance

Before performing cleaning and maintenance tasks on The robot, turn the robot OFF and unplug the Docking Station.

4.2 Dust Bin and Filters

  Dust Bin

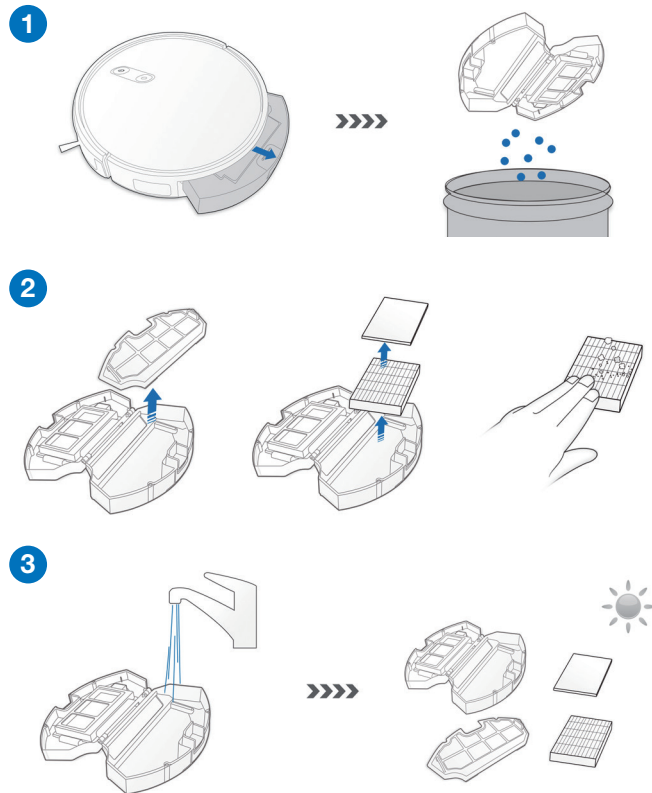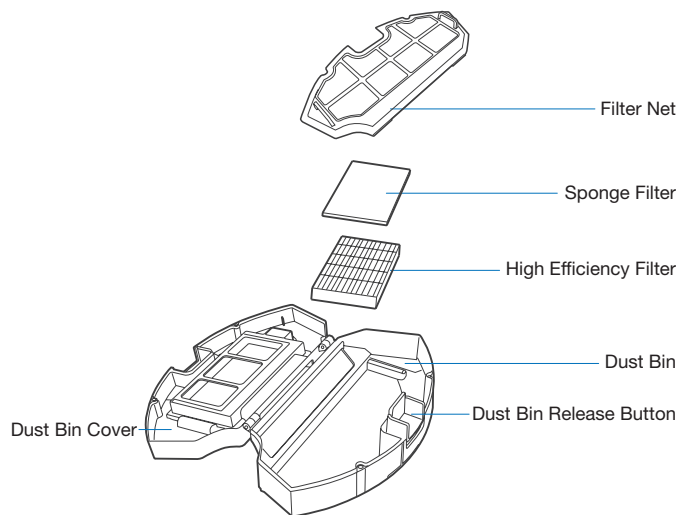


4. Maintenance

4.3 Main Brush and Side Brushes

Note: A Multi-Function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.

 Main Brush

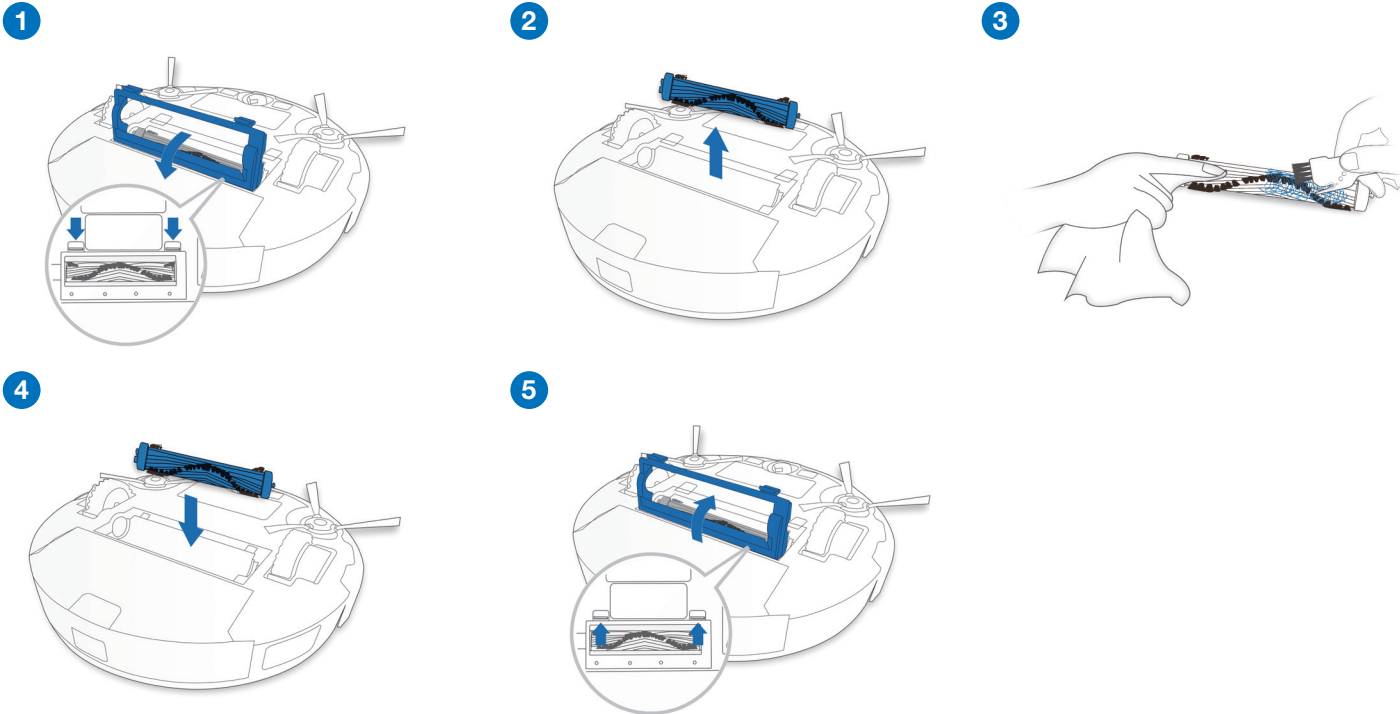


4. Maintenance


4.4 Side Brushes

Note: A Multi-Function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.

 
1

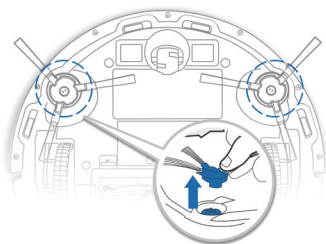


2

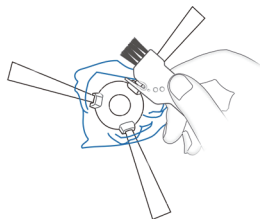 




3

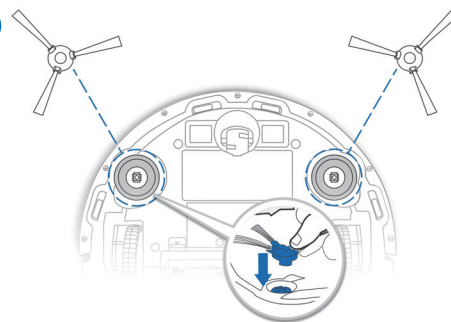 


 
4.5 Other Components

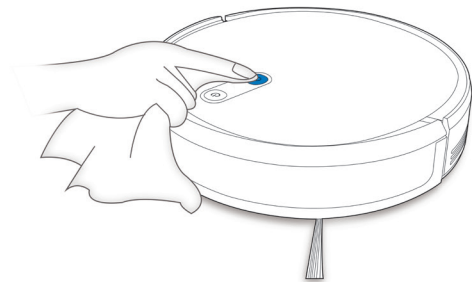

   4. Maintenance

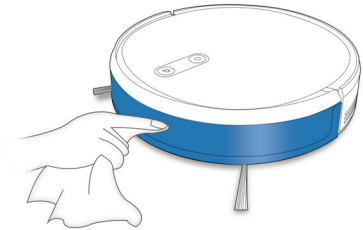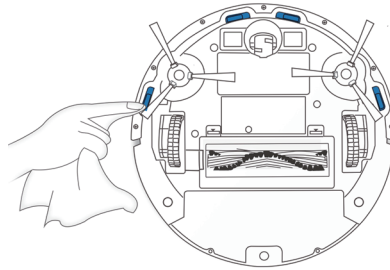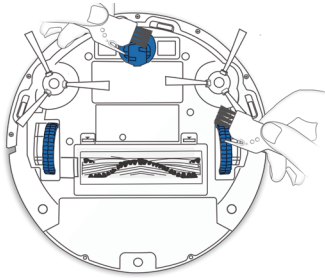

  Note: Before cleaning the robot's Charging Contacts and Docking Station Pins, turn the robot OFF and unplug the Docking Station.

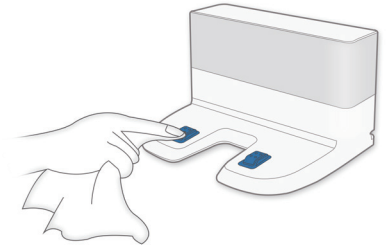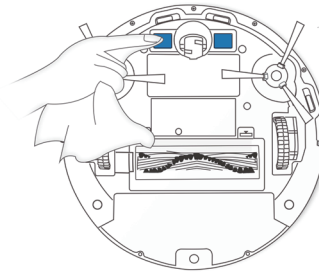

4. Maintenance

4.6 Regular Maintenance

To keep The robot running at peak performance, perform maintenance tasks and replace parts with the following frequencies:

Robot Part	Maintenance Frequency	Replacement Frequency
Side Brush	Once every 2 weeks	Every 3-6 months
Main Brush	Once per week	Every 6-12 months
Sponge Filter/ High Efficiency Filter	Once per week	Every 3-6 months
Universal Wheel Anti-Drop Sensors Bumper Charging Contacts Docking Station Pins	Once per week	/

A multi-function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.

Note: YEEDI manufactures various replacement parts and fittings. Please contact Customer Service for more information on replacement parts.

5. Indicator Light

Indicator Light

Scenario	Indicator Light
The robot is cleaning	AUTO Mode Button glows a solid WHITE
The robot is charging	AUTO Mode Button flashes WHITE
The robot has low battery	AUTO Mode Button glows a solid RED
The robot has a problem	AUTO Mode Button flashes RED
Programmed Cleaning Pattern is enabled	Cleaning Mode Switch Indicator lights up

6. Troubleshooting

No.	Malfunction	Possible Causes	Solutions
1	The robot is not charging.	The robot is not switched ON.	Switch ON the robot.
		The robot has not connected to the Docking Station.	Be sure that the robot's Charging Contacts have connected to the Docking Station Pins.
		The battery is completely discharged.	Re-activate the battery. Switch ON the robot. Place the robot on the Docking Station by hand, remove after charging for 3 minutes, repeat 3 times; then charge normally.
2	The robot cannot return to the Docking Station.	The Docking Station is not correctly placed.	Please refer to Section "Preparation" to place the Docking Station correctly.
		The Docking Station is unplugged or moved manually during the cleaning.	Please make sure the Docking Station is plugged in and avoid move the Docking Station manually when the robot is cleaning.
		The robot is working in a dark environment.	Make sure the rooms to be cleaned are well illuminated.
		The robot is stuck by obstacles (including wires, carpet tassels, or electric fan bases, etc.), or the door of the room where the Docking Station is placed is closed.	Please refer to Section "Notes Before Cleaning" to tidy up the space before using the robot.
		The robot is paused for more than 60 minutes, or manually moved out of 1-meter radius of the original position during the cleaning.	It is suggested to pause the robot for no more than 60 minutes. When moving the robot, keep the robot within 1-meter radius of the original position. To ensure the cleaning efficiency, please try to avoid pausing or moving the robot during the cleaning.
		The robot did not start cleaning from the Docking Station.	It is suggested to start the robot from the Docking Station.

6. Troubleshooting

No.	Malfunction	Possible Causes	Solutions
3	The robot gets stuck while working and stops.	The robot is tangled with something on the floor (electrical wires, curtains, carpet fringing, etc.).	The robot will try various ways to free itself. If it is unsuccessful, manually remove the obstacles and restart.
4	The robot returns to the Docking Station before it has finished cleaning.	When the battery gets low, The robot automatically switches to Return to Charger Mode and returns to the Docking Station to recharge itself.	This is normal. No solution necessary.
		Working time varies according to floor surface, room complexity and the Cleaning Mode selected.	This is normal. No solution necessary.
5	The robot does not clean the whole area.	The cleaning area is not tidy.	Remove small objects from the floor and tidy up the cleaning area before The robot starts cleaning.

7. Technical Specifications

Model	K701G		
Working Voltage	14.4V DC		
Docking Station Model	CH1630RC		
Rated Input	100-240 V AC, 50-60 Hz, 25 W	Rated Output	20 V DC, 0.8 A
Remote Control Model	RC1633	Working Voltage	3 V DC
Remote Control Battery Type	AAA	Nominal Voltage	1.5 V DC
Off/Standby Mode Power	Less than 0.50 W		
Networked Standby Power	Less than 2.00 W		

Note: Technical and design specifications may be changed for continuous product improvement.
This equipment should be operated with a minimum distance of 20cm between the radiator and your body.