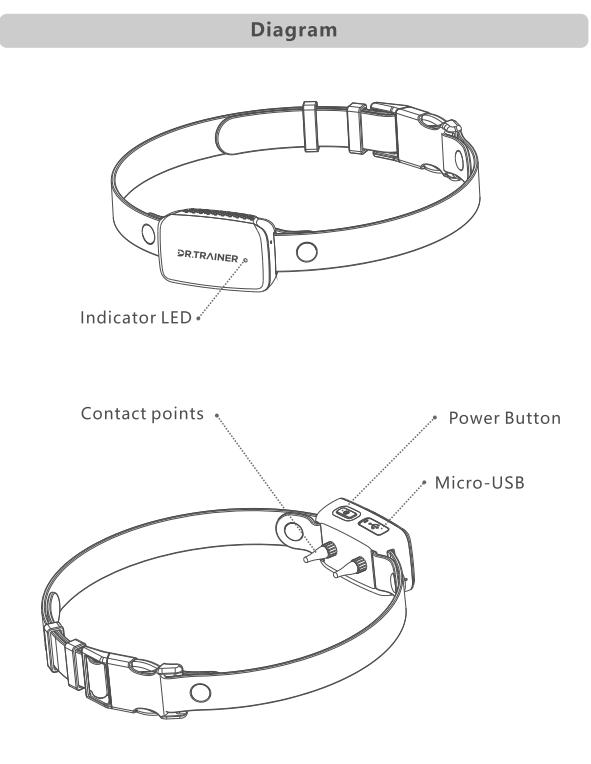
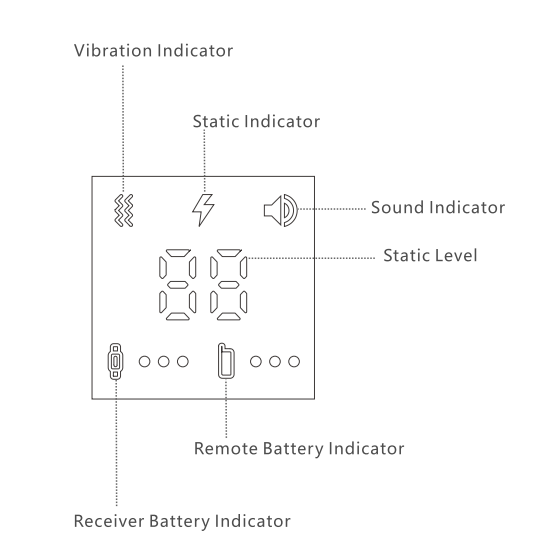
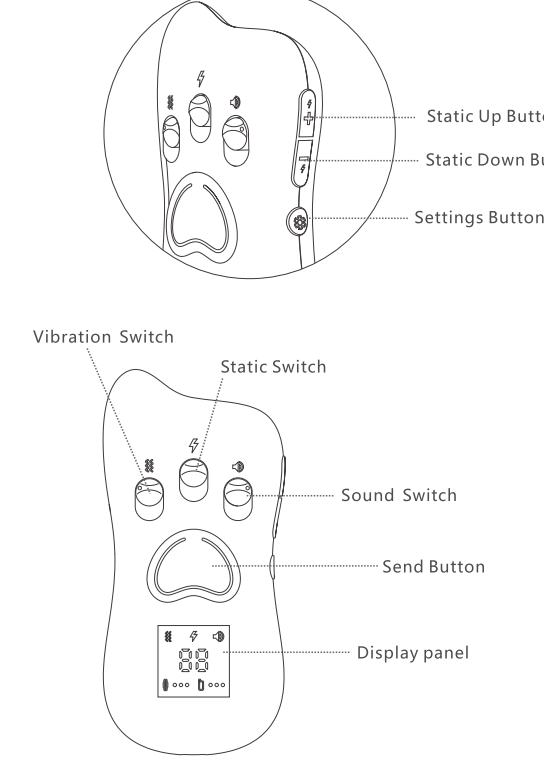
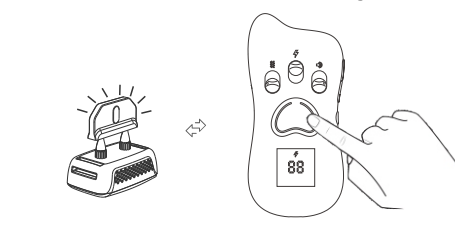
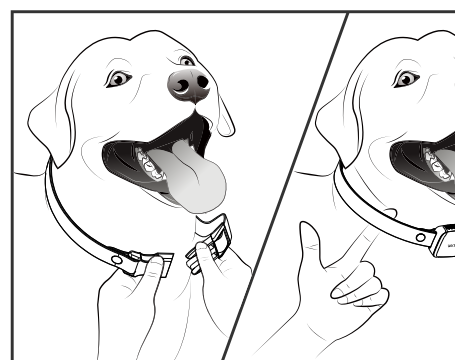
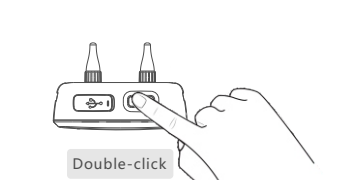
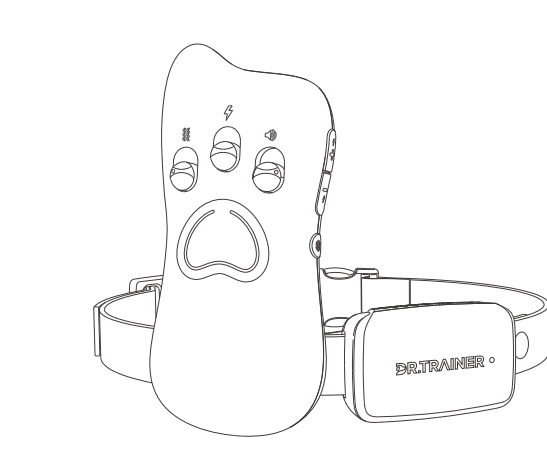


<p>Specifications and Performance</p> <p>Product name: Pet Training Collar Model: T1s Battery type: Li-Polymer Battery capacity: 500mAh (Receiver Collar) 500mAh (Remote Transmitter) Input interface: Micro-USB Input parameters: 5V/1.0A Max. (Receiver Collar) 5V/0.4A Max. (Remote Transmitter) Static: 1-99 Levels Remote range: 750 yards Auto protection: If static function is triggered 8 times in 1 minute, the device will cool down for 2 minutes to protect your dog. Charging time: About 45min (Receiver Collar) About 120min (Remote Transmitter) Working time: About 2 weeks (Receiver Collar) Material: PC+ABS Ingress protection: IPX7 (Receiver Collar) Packing list: 1x Receiver Collar 1x Remote Transmitter 1x USB Charging Cable 1x Test Light 1x User Manual 4x Contact Points</p>	<p>Diagram</p>  <p>Receiver Collar: Receive the signal from the Remote Transmitter and execute the combined command.</p>	 <p>Receiver Battery Indicator</p>	 <p>Remote Transmitter: Send the signal to the Receiver Collar.</p>	<p>Vibration Switch & Static Switch & Sound Switch: Use for setting the combination command of Send Button.</p> <p>Send Button: Send combination commands to the receiver collar to train your dog.</p> <p>Settings Button: 1. Use for checking the status and lighting up the icons and indicators on the panel, including combination command, battery status, Automatic Bark-stop or not, and so on. 2. Enter a settable state for Static Level.</p> <p>Static Up or Down Button: First, press the Settings Button to enter the settable state, and then you can adjust the Static Level up or down a range of levels from 1-99.</p> <p>Display panel: Used to display the status of the device, the indicator icons of selected functions will light up on the screen.</p>	<p>Receiver Collar Definitions</p> <p>1. Function and Operation</p> <table border="1"> <thead> <tr> <th>Function</th> <th>Action</th> <th>Indication</th> </tr> </thead> <tbody> <tr> <td>Power on</td> <td>In shutdown state, press and hold the Power Button for 1 second</td> <td>Blue light stays on 3 seconds, with short vibration for 1 second.</td> </tr> <tr> <td>Power off</td> <td>In operating state, press and hold the Power Button for 2 seconds</td> <td>Lights off, with long vibration for 1 second.</td> </tr> <tr> <td>Remote Transmitter pairing mode</td> <td>Double-click the Power Button (within 1.5 seconds)</td> <td>Alternately flashes blue and green lights for about 80 seconds</td> </tr> <tr> <td>Factory reset</td> <td>Press the Power Button for more than 15s</td> <td>The device vibrates when you keep pressing over 2 seconds, continue pressing for 15s consecutive seconds, then it will be reset to factory defaults.</td> </tr> </tbody> </table> <p>2.LED Indications</p> <table border="1"> <thead> <tr> <th>Operating state</th> <th>Indication</th> </tr> </thead> <tbody> <tr> <td>Pairing state</td> <td>Blue light flashes. Green and blue lights flash alternately</td> </tr> <tr> <td>Charging</td> <td>Green light slowly flashes</td> </tr> <tr> <td>Fully charged</td> <td>Green light stays on</td> </tr> <tr> <td>Low battery</td> <td>Red light quickly flashes when battery capacity is less than 15%.</td> </tr> </tbody> </table>	Function	Action	Indication	Power on	In shutdown state, press and hold the Power Button for 1 second	Blue light stays on 3 seconds, with short vibration for 1 second.	Power off	In operating state, press and hold the Power Button for 2 seconds	Lights off, with long vibration for 1 second.	Remote Transmitter pairing mode	Double-click the Power Button (within 1.5 seconds)	Alternately flashes blue and green lights for about 80 seconds	Factory reset	Press the Power Button for more than 15s	The device vibrates when you keep pressing over 2 seconds, continue pressing for 15s consecutive seconds, then it will be reset to factory defaults.	Operating state	Indication	Pairing state	Blue light flashes. Green and blue lights flash alternately	Charging	Green light slowly flashes	Fully charged	Green light stays on	Low battery	Red light quickly flashes when battery capacity is less than 15%.	<p>Remote Transmitter Definitions</p> <p>1. Function and Operation</p> <table border="1"> <thead> <tr> <th>Function</th> <th>Action</th> <th>Indication</th> </tr> </thead> <tbody> <tr> <td>Set combination command for the Send Button</td> <td>Turn on or off the toggle switches of Sound, Vibration and Static.</td> <td>The indicator icons of selected functions light up for 5 seconds.</td> </tr> <tr> <td>Check combination command</td> <td>Touch Send Button</td> <td>1. The indicator icons of selected functions light up for 5 seconds. 2. Static Level shows on the panel if Static Function is switched on.</td> </tr> <tr> <td>Send combination commands</td> <td>Click Send Button</td> <td>The indicator icons of selected functions flash.</td> </tr> <tr> <td>Check the status</td> <td>Click the Settings Button.</td> <td>1. The icons of selected functions light up. 2. If Static Function is switched on, the Static Indicator icon flashes, and Static Level shows on the panel. 3. If Automatic Bark-stop is enabled, Bark-stop icon shows on the panel. 4. Remote and Receiver battery status show on the panel.</td> </tr> </tbody> </table>	Function	Action	Indication	Set combination command for the Send Button	Turn on or off the toggle switches of Sound, Vibration and Static.	The indicator icons of selected functions light up for 5 seconds.	Check combination command	Touch Send Button	1. The indicator icons of selected functions light up for 5 seconds. 2. Static Level shows on the panel if Static Function is switched on.	Send combination commands	Click Send Button	The indicator icons of selected functions flash.	Check the status	Click the Settings Button.	1. The icons of selected functions light up. 2. If Static Function is switched on, the Static Indicator icon flashes, and Static Level shows on the panel. 3. If Automatic Bark-stop is enabled, Bark-stop icon shows on the panel. 4. Remote and Receiver battery status show on the panel.	<table border="1"> <thead> <tr> <th>Function</th> <th>Action</th> <th>Indication</th> </tr> </thead> <tbody> <tr> <td>Adjust Static stimulation level</td> <td>The Static must be switched on, or else it cannot be adjusted. 1. Click the Settings Button. 2. When the Static icon flashes, press Static Up or down Button to adjust.</td> <td>The Static Indicator icon flashes, and Static Level shows on the panel.</td> </tr> <tr> <td>Pair with Receiver Collar</td> <td>When the Receiver is in pairing mode, press the Up and Down Button at the same time more than 5 seconds.</td> <td>The Receiver Battery Indicator lights up.</td> </tr> </tbody> </table>	Function	Action	Indication	Adjust Static stimulation level	The Static must be switched on, or else it cannot be adjusted. 1. Click the Settings Button. 2. When the Static icon flashes, press Static Up or down Button to adjust.	The Static Indicator icon flashes, and Static Level shows on the panel.	Pair with Receiver Collar	When the Receiver is in pairing mode, press the Up and Down Button at the same time more than 5 seconds.	The Receiver Battery Indicator lights up.	<p>2.LED Indications</p> <table border="1"> <thead> <tr> <th>Standby</th> <th>No light indication</th> </tr> </thead> <tbody> <tr> <td>The Static Level can be adjusted</td> <td>The Static Indicator icon flashes.</td> </tr> <tr> <td>Charging</td> <td>The Remote Battery Indicator flashes.</td> </tr> <tr> <td>Fully charged</td> <td>The Remote Battery Indicator stays on.</td> </tr> <tr> <td>Low battery</td> <td>The Remote icon flashes red when the Remote battery capacity is less than 15%.</td> </tr> </tbody> </table>	Standby	No light indication	The Static Level can be adjusted	The Static Indicator icon flashes.	Charging	The Remote Battery Indicator flashes.	Fully charged	The Remote Battery Indicator stays on.	Low battery	The Remote icon flashes red when the Remote battery capacity is less than 15%.
Function	Action	Indication																																																																	
Power on	In shutdown state, press and hold the Power Button for 1 second	Blue light stays on 3 seconds, with short vibration for 1 second.																																																																	
Power off	In operating state, press and hold the Power Button for 2 seconds	Lights off, with long vibration for 1 second.																																																																	
Remote Transmitter pairing mode	Double-click the Power Button (within 1.5 seconds)	Alternately flashes blue and green lights for about 80 seconds																																																																	
Factory reset	Press the Power Button for more than 15s	The device vibrates when you keep pressing over 2 seconds, continue pressing for 15s consecutive seconds, then it will be reset to factory defaults.																																																																	
Operating state	Indication																																																																		
Pairing state	Blue light flashes. Green and blue lights flash alternately																																																																		
Charging	Green light slowly flashes																																																																		
Fully charged	Green light stays on																																																																		
Low battery	Red light quickly flashes when battery capacity is less than 15%.																																																																		
Function	Action	Indication																																																																	
Set combination command for the Send Button	Turn on or off the toggle switches of Sound, Vibration and Static.	The indicator icons of selected functions light up for 5 seconds.																																																																	
Check combination command	Touch Send Button	1. The indicator icons of selected functions light up for 5 seconds. 2. Static Level shows on the panel if Static Function is switched on.																																																																	
Send combination commands	Click Send Button	The indicator icons of selected functions flash.																																																																	
Check the status	Click the Settings Button.	1. The icons of selected functions light up. 2. If Static Function is switched on, the Static Indicator icon flashes, and Static Level shows on the panel. 3. If Automatic Bark-stop is enabled, Bark-stop icon shows on the panel. 4. Remote and Receiver battery status show on the panel.																																																																	
Function	Action	Indication																																																																	
Adjust Static stimulation level	The Static must be switched on, or else it cannot be adjusted. 1. Click the Settings Button. 2. When the Static icon flashes, press Static Up or down Button to adjust.	The Static Indicator icon flashes, and Static Level shows on the panel.																																																																	
Pair with Receiver Collar	When the Receiver is in pairing mode, press the Up and Down Button at the same time more than 5 seconds.	The Receiver Battery Indicator lights up.																																																																	
Standby	No light indication																																																																		
The Static Level can be adjusted	The Static Indicator icon flashes.																																																																		
Charging	The Remote Battery Indicator flashes.																																																																		
Fully charged	The Remote Battery Indicator stays on.																																																																		
Low battery	The Remote icon flashes red when the Remote battery capacity is less than 15%.																																																																		
<p>DR.TRAINER</p> <p>Thank you for purchasing the Dr.Trainer Pet Training Collar. We have made every attempt to provide you with the most technologically advanced product, using the most stringent quality and manufacturing standards. We are confident you will be pleased with the results you'll attain with your Dr.Trainer. Please remember, you will get better results with the use of lower static levels combined with consistent training techniques. The use of high levels of static should only be used as a last resort, or in life-threatening situations. Good luck with your training, and please feel free to contact us, should you have any questions.</p> <p>971-302-6642 or Service@DrTrainer.com</p>	<p>Important Safety Information</p> <p>Not for use with aggressive dogs. Do not use this product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or a certified trainer.</p> <p>Safety during on-leash training. It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash, long enough for him to attempt to chase an object, but short enough so he can't reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase something.</p> <p>Risk of skin damage. Please read and follow the instructions in this manual. The proper fit of the collar is important. A collar worn for too long or fastened too tightly on your pet's neck may cause skin damage, ranging from redness to pressure ulcers. This condition is commonly known as bed sores.</p> <ul style="list-style-type: none"> Avoid leaving the collar on the dog for more than 12 hours per day. When possible reposition the collar on the pet's neck every 1 to 2 hours. Check the fit to prevent excessive pressure. Follow the instructions in this manual. Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts. When using a separate collar for a lead, don't put pressure on the electronic collar. Wash the dog's neck area and the contacts of the collar weekly with a damp cloth. Examine the contact area daily for signs of a rash or a sore. If a rash or sore is found, discontinue use of the collar until the skin has healed. If the condition persists beyond 48 hours, see your veterinarian. 	<p>How does the Dr.Trainer Smart Training Collar work?</p> <p>Now, you can experience the difference a Dr.Trainer can make. Spend less time training and more time enjoying your dog.</p> <p>The Dr.Trainer is easy to use, with combined functions that you can set in advance. Then, all you need to do for training is to press the Send Button on your Remote Transmitter. It sends a signal activating your dog's Receiver Collar. He receives a safe but annoying stimulation, he will quickly understand the association between his behavior and your correction; in no time, you'll have a better-behaved pet. The Dr.Trainer has been proven safe, comfortable, and effective for both small and large dog breeds.</p> <p>Important: The Dr.Trainer has a range of up to 750 yards. Depending on the way you hold the Remote Transmitter, the maximum range may vary. Terrain, weather, vegetation, transmission from other radio devices, and other factors will also affect the maximum range.</p>	<p>Operating Guide</p> <p>STEP 1: Check the connection between Receiver Collar and Remote Transmitter.</p> <ol style="list-style-type: none"> Turn the Receiver Collar on. Press Settings button on the Remote. If the Receiver's battery icon lights up, it means the two devices are connected. If the two devices are disconnected, follow Step 5 for wireless pairing connection. <p>STEP 2: Test the Static Function</p> <p>To ensure that the Static Function works properly before using the collar on your dog, it is recommended that you test the Static Function at least once before use. Please follow instructions below for how to use the Test Light.</p> <ol style="list-style-type: none"> Turn the Receiver Collar on. Place the Test Light above the Contact Points. Set your combination command, making sure that at least the Static Function is turned on. Press Send Button on the Remote Transmitter. The Test Light will flash if the function is working. Turn the Receiver Collar off, store the Test Light for future testing.  <p>Note: If the Test Light does not flash, recharge the battery and re-test.</p>	<p>STEP 3: Fit the Smart Bark Collar</p> <p>Important: The proper fit and placement of your Bark Collar is important for effective operation. To ensure a proper fit, please follow these steps:</p> <ol style="list-style-type: none"> Make sure that the Receiver Collar is turned off. Start with your dog standing comfortably. Place the Bark Collar on your dog's neck close to the ears. Center the Contact Points underneath your dog's neck. Check the tightness of the Bark Collar by inserting one finger between the collar and your dog's neck. The fit should be snug but not constricting.  <p>Note: It is sometimes necessary to trim the hair around the Contact Points to make sure that the contact electrodes delivers effective static.</p>	<p>STEP 4: Reconnect Receiver Collar with your Remote Transmitter. (Only used when the connection is broken)</p> <p>Note: If the two devices are disconnected, first make sure the Receiver Collar is turned on, and close to the Remote Transmitter.</p> <ol style="list-style-type: none"> Quickly double-click the Power Button of the device to enter pairing mode (blue and green lights flash alternately).  <ol style="list-style-type: none"> Press the Up and Down Buttons at the same time on your Remote Transmitter for more than 5 seconds to establish the connection. The indicator light of the Receiver turns blue and stays on for 3 seconds, indicating a successful device connection. 	<p>FAQ's</p> <p>Q: Is the static safe for my pet? While the static is unpleasant, it is harmless to your pet. Electronic training devices require interaction and training from the owner to achieve desired results.</p> <p>Q: How old does a pet have to be before using the Dr.Trainer? Your pet should be able to learn basic obedience commands such as "sit" or "stay". Pets should be at least 6 months old before using the Trainer.</p> <p>Q: Is the Receiver Collar waterproof? Yes. All of the Dr.Trainer Receiver Collars are waterproof.</p> <p>Q: Can I use the Dr.Trainer on aggressive pets? We do not recommend that any of our products to be used on aggressive pets. We recommend that you contact your local veterinarian or professional trainer to determine if your pet might be aggressive.</p> <p>Q: Why my pet is not responding when I press the Send Button?</p> <ul style="list-style-type: none"> Check to see if the Collar has been turned on. If your range has reduced since the most recent use, please check to see if the battery is low in either the Remote Transmitter or Receiver Collar. You can verify the Collar is delivering static to your pet by using the Test Light. Please refer to the "Test the Static Function" section for details. Increase the correction level. Make sure the Receiver Collar's Contact Points are placed snugly, in contact with your pet's skin. 	<p>Q: Why won't the Receiver Collar turn on? Make sure the Receiver Collar has been charged.</p> <p>Q: Why is the Receiver Collar not responding to the Remote Transmitter? Verify the Receiver Collar has been turned on. Refer to Operating Guide "STEP 1: Check the connection between Receiver Collar and Remote Transmitter".</p> <p>Q: Can I adjust the strength of Sound, Vibration and Static? You can only adjust the Static Level with Remote Transmitter.</p>	<p>IMPORTANT!</p> <p>Please note that, the maximum static level can be detrimental to dogs that are sensitive to electric static, and different breeds of dog react differently to the same level of static stimulation. If you use the customized correction setting, it is highly recommended that you always start from the lowest intensity level, i.e. Level 1, and pay close attention to your dog's reaction when increasing the static level.</p>	<p>DR.TRAINER</p>  <p>T1s</p>																																																										

印刷颜色:单黑