



ACMER P2 Update Firmware Tutorial



1. Software Installation

Engraving Parameters

Material Library

Operation Tutorial

Software

Operation Video

Drivers for Windows OS

Mac

Win

ACMER_P2_Firmware_V1.0_20230104

CustomButtons

LaserGRBL-v4.9.4

LightBurn-v1.1.04

MKSLaserTool_setupV1.0.6

Installer Language






Please select a language.


English

OK


Cancel

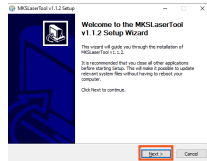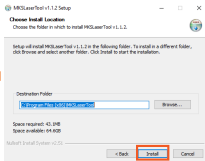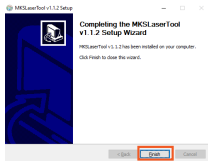

2. Firmware Updates

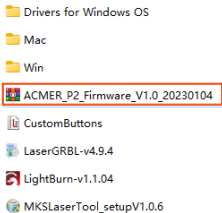

2.1 Get the firmware from TF card or ACMER official website and unzip it.

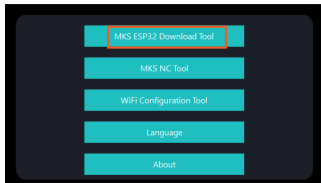

2.2 Click on "MKS ESP32 Download Tool".

⑤ Start Writing




① Open file.

② Set FLASH SIZE to 8MB

③ Select the correct port

④ Set baud rate to 115200

2.3 Press the above screen to set up.

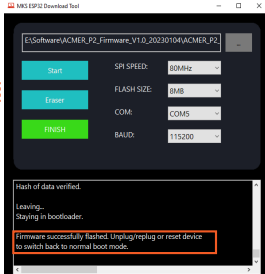

2.4 Wait for the update to complete.