 

Video Sound Bar



User Manual

 
What's in the box

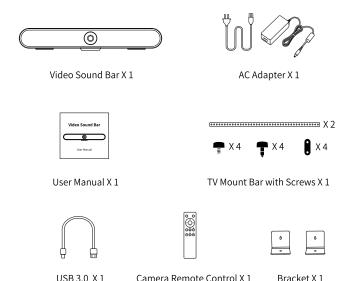


Overview





LED Indicator light




Easy Set-Up

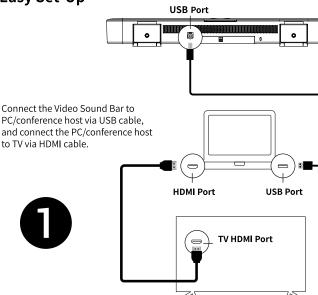

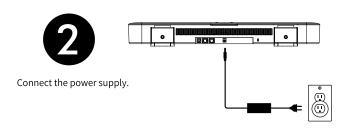


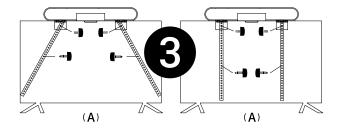

A: If your TV doesn't have mounting bracket, please fix the mount bars with screw holes on the back of your TV.

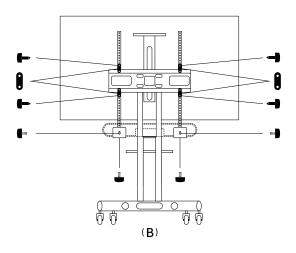

B: If your TV has a mounting bracket, please fix the mount bars with screw holes on the mounting bracket.

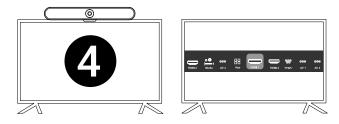

Select the corresponding HDMI input signal resource of the TV to receive the output signal of PC/conference host.

Camera indicator light status

The camera indicator light will turn blue when camera program is opened or under running; It will turn red when microphone is muted by remote. For other normal conditions, the light will be green.

Camera Remote Control

