

PRECAUTIONS

- Do not use any abrasive powder to clean the cabinet. Wipe it with a soft cloth moistened with a mild soap and water solution.
- Must escape from burning and impact.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- If the sound becomes low or distorted, replace all the batteries with new. Do not use old and new batteries together.
- If the set is not used for a long time, remove all the batteries to prevent possible battery leakage.

SPECIFICATIONS


FM 1: 87-108MHz	SW1-9: 4.75-22.0MHz	Skype: radiowow
FM 2: 64-67MHz	DC IN: 5V/300mA	E-mail: xhdatacn@gmail.com
AM: 522-1620KHz	DC: 3V (UM3 AA 1.5V X2)	Facebook: XHDATA
		https://www.xhdata.com.cn
		Whatsapp: +86 18025193267

CE   MADE IN CHINA

XHDATA

D-219


Operating Manual

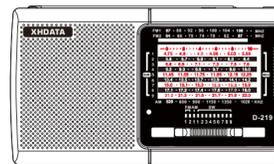

FM1-2/AM/SW1-9

11 BANDS WORLD RECEIVER

FUNCTION OF KEYS

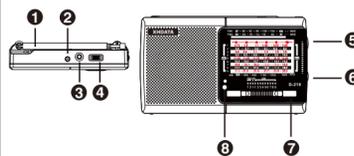

- 1 Antenna
- 2 Dc jack (5V)
- 3 Earphone jack
- 4 Power on/off
- 5 Tuning knob
- 6 Volume button
- 7 Band selector (FM/AM/SW1-9)
- 8 Power light

USING THE RADIO

1. POWER ON/OFF . VOLUME

- Turn the radio on by switch the power on/off switch (4).
- Use the volume knob (6) to adjust the volume.

2. LISTEN TO FM

- Select the FM band by using the band selector switch (7).
- Use the tuning knob (5), tune the radio to the desired frequency.

3. LISTEN TO AM/SW1-9

- Select the desired band (AM/SW1-9) by using the band selector switch (7).
- Turn the tuning knob (5) to the desired frequency.

4. ANTENNA

- For AM, the receiver uses the internal antenna for the AM band.
- Rotate the receiver for best reception.
- For FM/SW, fully extend the antenna (1) and rotate it for the best reception.