

项目: Haylou T007


品名: 中英文说明书

料号:

版本: B

更新日志:

图档识别

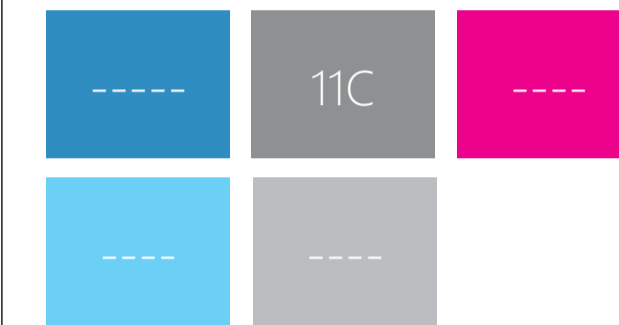

裁切线

压痕线

标注线

图档比例: 1: 1

技术要求

1. 尺寸: 55x80mm

2. 材质: 70g书写纸

3. 印刷: 专色印刷

4. 工艺: 风琴折+对折

5. 公差: ±1mm

6. 备注: 英文为首页

注: 所有材料必须符合ROHS规定.

资料确认

品牌:

电子:

市场:


品质:

软件:

包装:



东莞市猎声电子科技有限公司  
Dongguan Liesheng Electronic Co., Ltd.

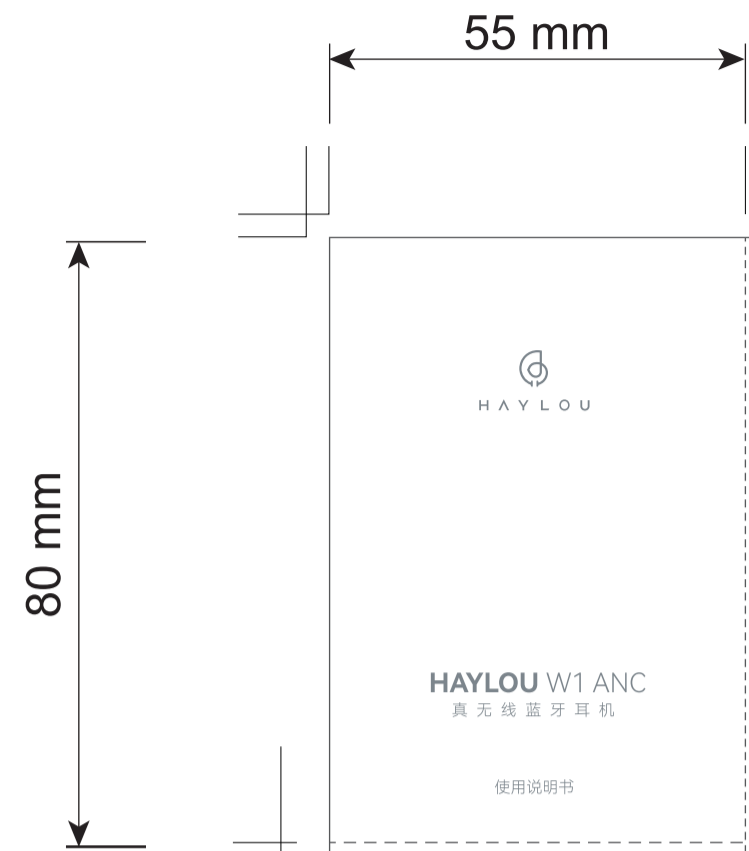

**产品介绍**

耳机: 充电针, 降噪麦克风, MFB键, 通话麦克风, 接口, LED灯, Type-C 充电接口

**佩戴耳机**

将耳机轻轻塞入耳道, 调整耳机达到最舒适佩戴状态。

通话时, 将耳机麦克风朝向嘴部可使通话更清晰。

**充电**

插入充电线可同时给耳机和充电盒充电。

充电盒未盖盖帽时指示灯基于当前电量闪烁, 充电盒指示灯熄灭。

单击充电盒按钮或耳机放入充电盒时, 充电盒指示灯基于当前电量闪烁。

61%-100% 内绿灯, 21%-60% 内黄灯, 1%-20% 内红灯, 电量低于 10%, 红灯闪烁 10 次。

温馨提示: 充电盒电量耗尽时, 无指示灯, 不能给耳机充电。

首次开机使用, 请先去除左右耳机充电触点处的隔离膜, 将充电盒及耳机充满电。

**开机**

耳机在充电盒内, 取出耳机自动开机。

**关机**

放入充电盒中, 耳机自动关机。

**连接配对**

同时将两只耳机从充电盒取出, 打开设备蓝牙搜索 "Haylou W1 ANC" 并点击配对连接。

如设备未连接, 将耳机放回充电盒, 重新上述操作, 再次连接后, 耳机开机可自动回连至上一次配对设备 (蓝牙需开启)。

**功能说明**

双击任意MFB键  
蓝牙耳机: 播放/暂停  
音乐时: 切换上一曲  
三击左耳  
蓝牙耳机: 切换下一曲  
三击右耳  
蓝牙耳机: 接听/挂断  
长按右MFB键2秒  
蓝牙耳机: 长按右MFB键  
长按左MFB键  
蓝牙耳机: 打开/关闭最低延迟模式  
长按左MFB键  
蓝牙耳机: 长按左MFB键

注: MFB键为多功能键

**耳机的重置:**

1. 耳机的指示灯熄灭, 保持充电盒电量充足, 然后长按充电盒按钮6秒在绿灯闪烁后再次点亮。

\* 重置后, 请长按充电盒按钮以上步骤, 或长按充电盒按钮, 联系客服, 重新配对耳机。

**常见异常:**

1. 耳机一边有音一边无声:  
尝试将无声的耳机放入充电盒再取出, 用于干燥或者擦拭耳机充电接触部位;

2. 耳机无法接听电话自动断线:  
检查充电电量是否充足, 充电盒导致耳机无法关机, 无法和手机蓝牙连接。

**包装内容物**

耳机, 充电盒, 充电线, 说明书。

**产品简介**

产品名称: HAYLOU W1 ANC  
产品型号: HAYLOU T007

**耳机的基本参数**

通讯距离: 10米 (无障碍空旷环境)  
电池容量: 35mAh (单耳)  
充电时间: 约 5小时  
播放时间: 约 5小时  
待机时间: 约 10小时  
输入参数: 5V = 50mA (单耳)  
电池类型: 锂离子聚合物电池  
无线标准: 蓝牙5.3  
CE/RED ID: 2023DP15394

**充电盒基本参数**

输入参数: 5V = 800mA  
输出参数: 5V = 100mA  
控制方式: 触控式  
电池容量: 400mAh  
电池类型: 锂离子聚合物

以上数据来源于实验室, 实际使用会有误差, 请以实际使用为准。

**日常维护**

请勿将耳机放入水中清洗, 请勿放入洗衣机及在异常温度情况下存放或使用, 每次正常使用后, 请用干布或无纺布将耳机上的汗渍或者雨水, 可以有效延长耳机的使用寿命。

**注意**

1. 使用前请仔细阅读本产品使用说明书并妥善保管。  
2. 首次使用时, 请先将本产品充满电。  
3. 如果产品长时间不使用时, 请将其充满电。  
4. 必须选择正规厂家生产且经过国家CCC认证的充电器。  
5. 长时间连续使用耳机有损听力, 请合理控制使用时间及音量。  
6. 使用耳机时请避免对外界声音的感知力, 请不要在可能威胁到安全的环境中佩戴耳机。

**产品中有毒物质的名称及含量**

部件名称	有害物质					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
耳机本体	○	○	○	○	○	○
充电盒	○	○	○	○	○	○
充电线	○	○	○	○	○	○

注: 表格依据SJ/T 11364标准编制。

○ 表示该有害物质在所列部件中有微量材料中的含量均符合SJ 2657规定的限量要求以下。

X 表示该有害物质在所列部件中的某一材料中的含量超出SJ 2657规定的限量要求。

**三包凭证**

产品型号	用户姓名	购买日期
用户姓名	联系电话	邮政编码
用户地址	用户电话	
购买日期	销售单位	
	订单编号	

**Haylou蓝牙耳机售后服务**

Haylou蓝牙耳机售后服务严格按照《中华人民共和国消费者权益保护法》、《中华人民共和国产品质量法》实行售后三包服务, 服务内容如下: 在三包有效期内, 您可凭购物凭证凭据本规定享受免费的修理、更换、退货的权利。

1. 自您购买之日起7日内, 本产品出现故障, 经由Haylou售后服务中心判定为产品质量问题, 可享受退换货服务。

2. 自您购买之日起15日内, 本产品出现故障, 经由Haylou售后服务中心判定为产品质量问题, 可享受维修或更换服务。

3. 自您购买之日起12个月内, 本产品出现故障, 经由Haylou售后服务中心判定为产品质量问题, 可享受维修或更换服务。

**Haylou W1 ANC 性能故障表**

名称	性能故障
蓝牙耳机	1. 使用过程中听不到声音。 2. 通话过程中, 对方听不到声音。 3. 无法充电。

**非保修条例**

1. 使用不当的正常磨损内部: 刮痕, 颜色改变, 刮擦老化等, 接触点磨损, 接触不良等, 被篡改等人为导致故障。

2. 未经授权的维修, 改装, 维修, 拆卸, 进液, 摔落, 碰撞, 使用, 不当的使用或其产品配件和附件, 涂改标签, 防仿标识。

3. 已超出三包有效期。

4. 因不可抗力造成的损坏。

5. 不符合《性能故障表》所列性能故障的情况。

6. 由于人为原因造成本产品及其配件产生(产品性能故障) 所列性能故障。

**说明书中的产品、配件、用户界面等画面均为示意图, 仅供参考, 由于产品的更新和升级, 产品实物与示意图可能有差异, 请以实物为准。**

**售后服务与支持**

保修期: 自产品购买之日起12个月(请妥善保管购买凭证)

**免费服务:** 在保修期内, 凡属产品本身质量问题引起的故障, 请用户凭购买凭证与经销商取得联系以享受售后服务。如您任何产品故障或维修并非可归责于产品质量本身则不在保修范围内, 有下列情形不属于保修范围:

1. 因火灾、地震、雷击、异常电压、环境因素而发生之故障或毁损的。

2. 自行或非授权经销商擅自拆卸、改装或更换原厂零件。

3. 未按使用手册操作或人为使用不当而造成损坏者, 如: 进水损坏、腐蚀、摔落、挤压或放在异常温度环境下。

**若有售后服务需求, 请联系Haylou客服**

联系电话: 东莞市猎声电子科技有限公司  
服务热线: 广东猎声电子科技有限公司  
服务热线: 185 4014 1038  
网址: www.haylou.com  
客服电话: 4008-555-083

**Overview**

耳机: 充电针, 降噪麦克风, MFB键, 通话麦克风, 接口, LED灯, Type-C 充电接口

**How to Wear**

Gently insert the earbud into the ear canal, adjust the earbud to the most comfortable wearing state.

When calling, adjust Mic towards mouth to gain more clear call.

**How to Charge**

Insert the charging cable to simultaneously charge the earbuds and the charging case. When the battery is not fully charged, the indicator flashes based on the current battery level of the case. After fully charged, the indicator goes out.

Battery Indicator of Charging Case  
Click the charging case button or put the earbuds into the charging case, the indicator flashes based on the current battery level of the case.

61%-100% flashes green, 21%-60% flashes yellow, 1%-20% flashes red.

When the battery is lower than 10%, the indicator flashes red 10 times.

Warning: When the charging case is out of power, there is no indicator, and the earbuds can't be charged.

For first time use, please remove the isolation film on the charging contacts of both earbuds. Then fully charge the charging case and earbuds.

**Power-on**

When the earbuds are in the charging case, take them out to automatically power on.

**Power-off**

Put the earbuds back into the charging case, they will automatically power off.

**How to Connect**

Take out both earbuds from the charging case at the same time. Turn on device Bluetooth and search for "Haylou W1 ANC", then click to connect.

**Warranty Card**

**Warranty Period**  
12 months after you purchase this item. (or you may inquire your local shopper for more details.)

**Free Service**  
Supposing any defects caused by quality issues occur within the warranty period, please take this warranty card and purchase receipts to your distributor for free exchange service.

Model Number	Date of Purchasing
User's Name	User's Phone
User's Address	Shop's Name
Shop's Address	
Comments	

**Free exchange service will not be accessed under following circumstances:**

1. Damages caused by unauthorized disassembly.

2. Defects or physical damages caused by leaking or dropping off.

3. Damages by act of God.

Supposing your item is within any damages or defects except the above circumstances, please return to us or your distributor for free repairing.

**Daily Maintenance**

Please do not shower with earbuds. Do not wear them in rainy day. Do not leave them in washing machine or other extreme situations. Please wipe off sweat or rain on the earbuds with dry cloth after use to maintain its service life.

Manufacturer: Dongguan Liesheng Electronic Co., Ltd.  
Address: Room 401-410, Building 1, No. 86 Hongtu Road, Nancheng District, Dongguan City, Guangdong, China

**How to Use**

1. Double click on either MFB  
Haylou: mute.  
2. Triple click on the left MFB  
Skip track backward.  
3. Triple click on the right MFB  
Skip track forward.  
4. Double click on either MFB  
Answer/hang up a call.  
5. Press and hold the right MFB for 2s  
Switch between ANC modes.  
6. Press and hold the left MFB  
Turn on/off low-latency mode.  
7. Triple click on either MFB  
Repeat a call.

MFB(Multi Function Button)

**Restore Factory Settings**

1. Put the earbuds back into the charging case and make sure the case has sufficient power. Press and hold the charging case button for 6s until the indicator quickly flashes green 6 times and then goes out.

\* If the operation fails, please repeat the above steps, or log in to the official website, contact customer service to view the reset operation video.

**Common abnormal:**

1. One of the earbuds is mute:  
Try to put the mute earbud into the charging case and then take it out. If the problem is still not solved after the above operation, try the reset steps.

2. The earbud cannot be charged:  
Check whether the charging case has sufficient power. Wipe the charging contacts with a dry cloth or cotton swab.

3. The earbud cannot automatically disconnect from the mobile phone.  
Check whether the charging case has sufficient power. The earbud will not power off if the case is out of power and will not disconnect from the mobile phone.

**Package List**

Earbuds, charging case, charging cable, user manual.

Product name: HAYLOU W1 ANC  
Product model: HAYLOU T007

**Basic Parameters(earbuds)**  
Operation range: 10m (open space with no obstacle)  
Battery capacity: 35mAh(single earbud)  
Charging time: approx. 1.5hr  
Playback time: approx. 5hr  
Standby time: approx. 10hr  
Input parameter: 5V = 50mA  
Battery type: Lithium polymer  
Bluetooth version: V5.3

**Basic Parameters(charging case)**  
Input parameter: 5V = 500mA  
Output parameter: 5V = 100mA  
Charging time: approx. 2hr  
Battery capacity: 400mAh  
Battery type: Lithium polymer

The above data comes from LieSheng Lab, the actual use is affected by factors such as environment, operation and signal.

**Caveats**

**Warning**

1. Do not disassemble, repair or modify the product for any reason, as this may cause fire or even completely destroy the product.

2. Do not expose the product to environments where the temperature is too low or too high (below 0°C or above 45°C).

3. Keep the indicators away from the eyes of children and animals while using the earbuds.

4. Do not use this product during thunderstorms. Thunderstorms may cause the product to malfunction and increase the risk of electric shocks.

5. Do not wipe and clean the earbuds or their case with alcohol or other volatile liquids.

6. Avoid any contact with liquids.

**Note**

1. Please read this user manual carefully before using the product and please properly store it.

2. When using for the first time, please fully charge this product.

3. Please charge the product, in case it has not been used over two weeks.