


KOWO[®]

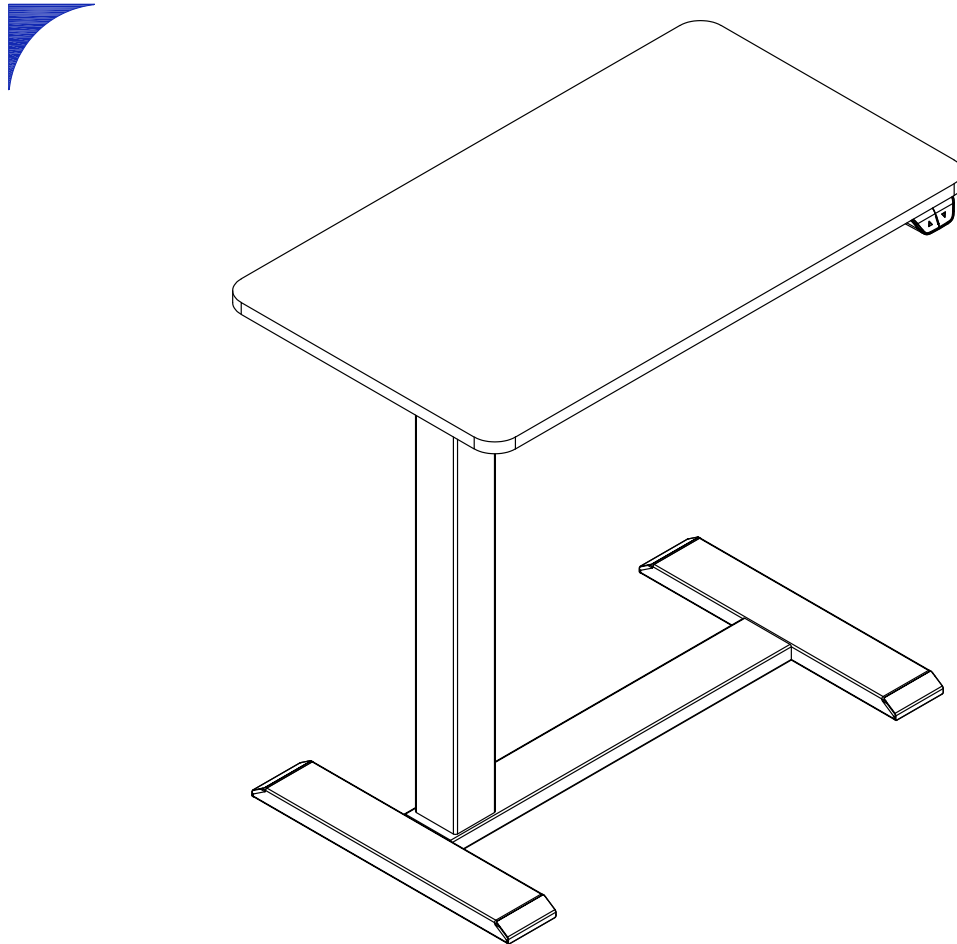

Standing Desk

Model#K3001

Any questions or issues please contact us

Tel : 020-8187-1190

Email: service.uk@kowohome.com


9:00 AM - 5:00 PM GMT Monday - Friday

Specifications


| | |
|----------------------------|--|
| Max. Weight Capacity | 55 lbs (25kg) |
| Speed | 25mm/s |
| Battery Capacity / Voltage | 800mAH / 24V |
| Min. Height | 26.3" (670mm) |
| Max. Height | 42.1" (1070mm) |
| Duty Cycle | 10% (Working 2 minutes then stop 18 minutes) |
| Certification | FCC,UKCA |

Accessory Package


PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, please contact us for replacement parts.

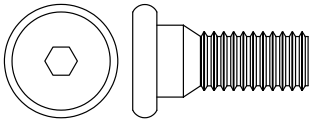

 
A. 3/4" Medium Machine Screw - 4



 
B. 1/2" Small Machine Screw - 2




C. 1-1/8" Small Machine Screw - 4

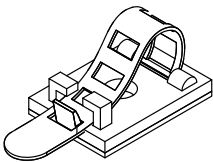

 
D. Self-adhesive Cable Strap - 2



 E. 1/2" Flat Head Screw - 2




F. Wrench - 1


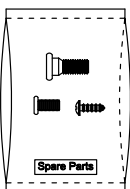


G. Spare Parts - 1


Diagram of Components

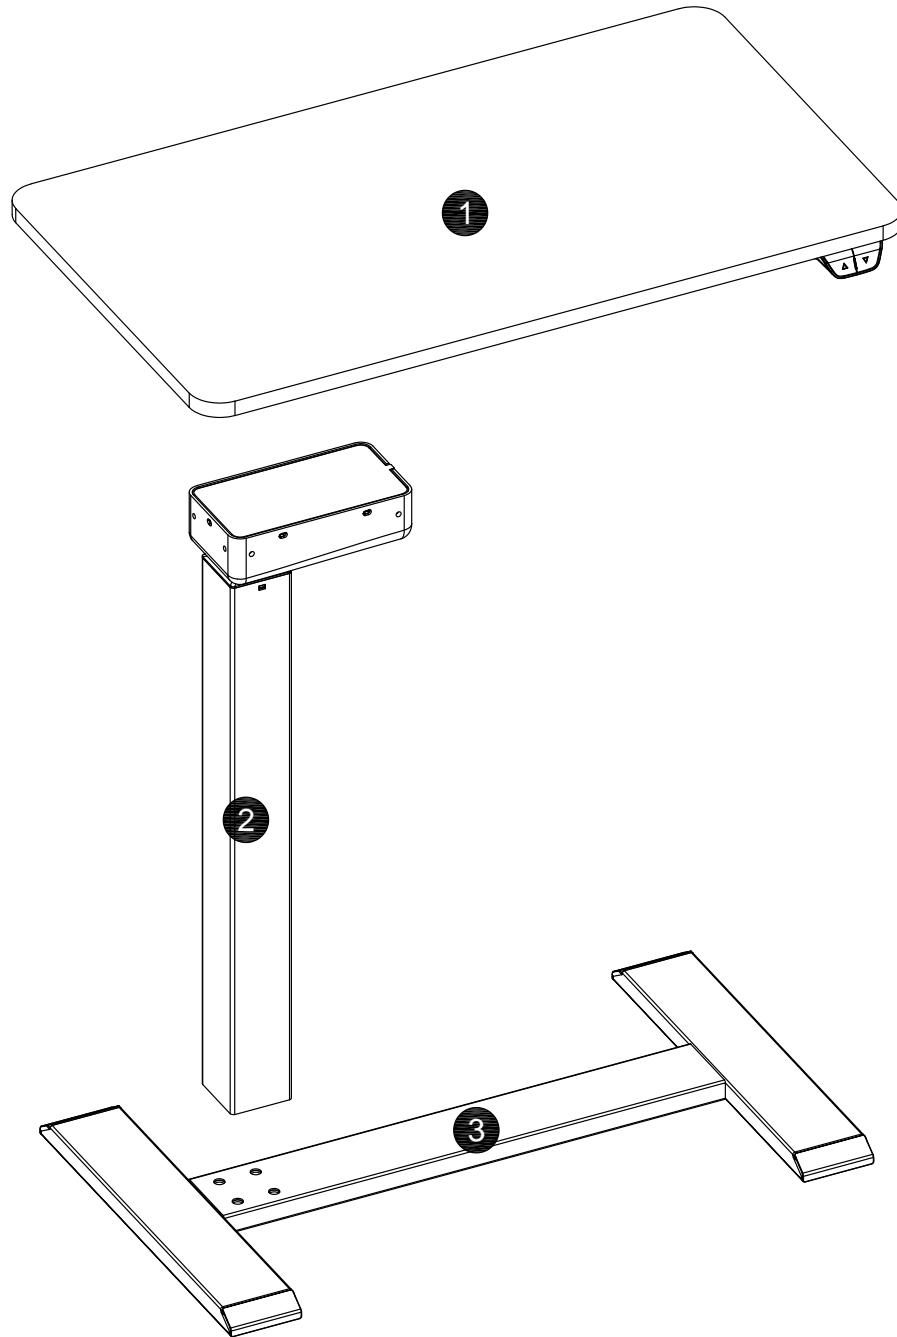

STEP 1

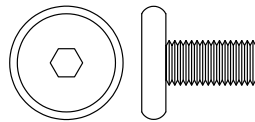
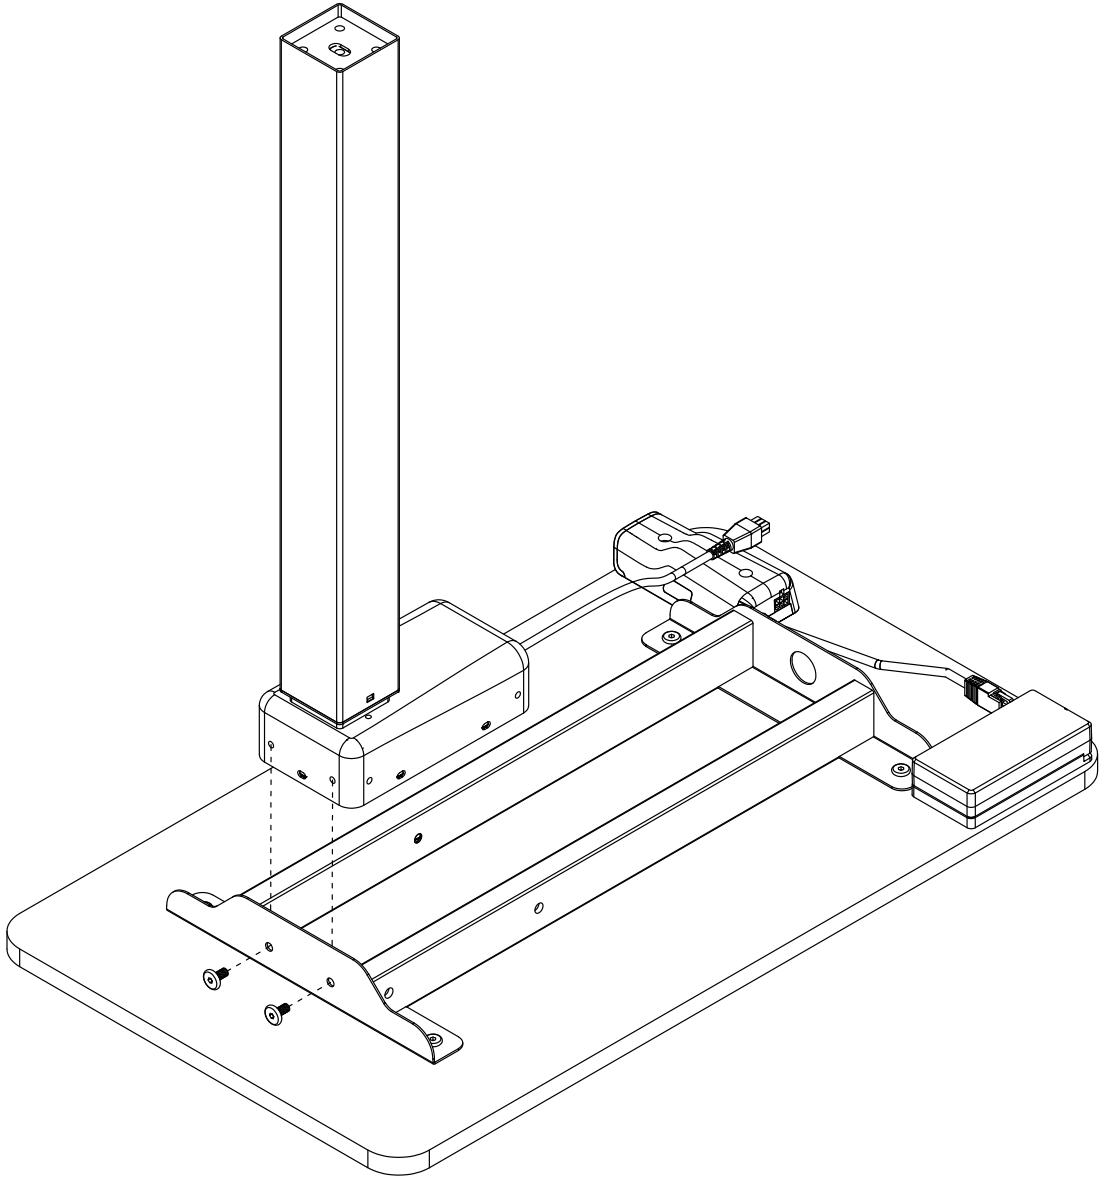


 B. 1/2" Small Machine Screw - 2




F. Wrench - 1

STEP 2

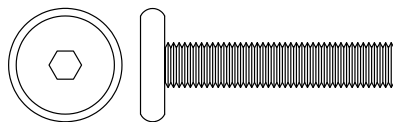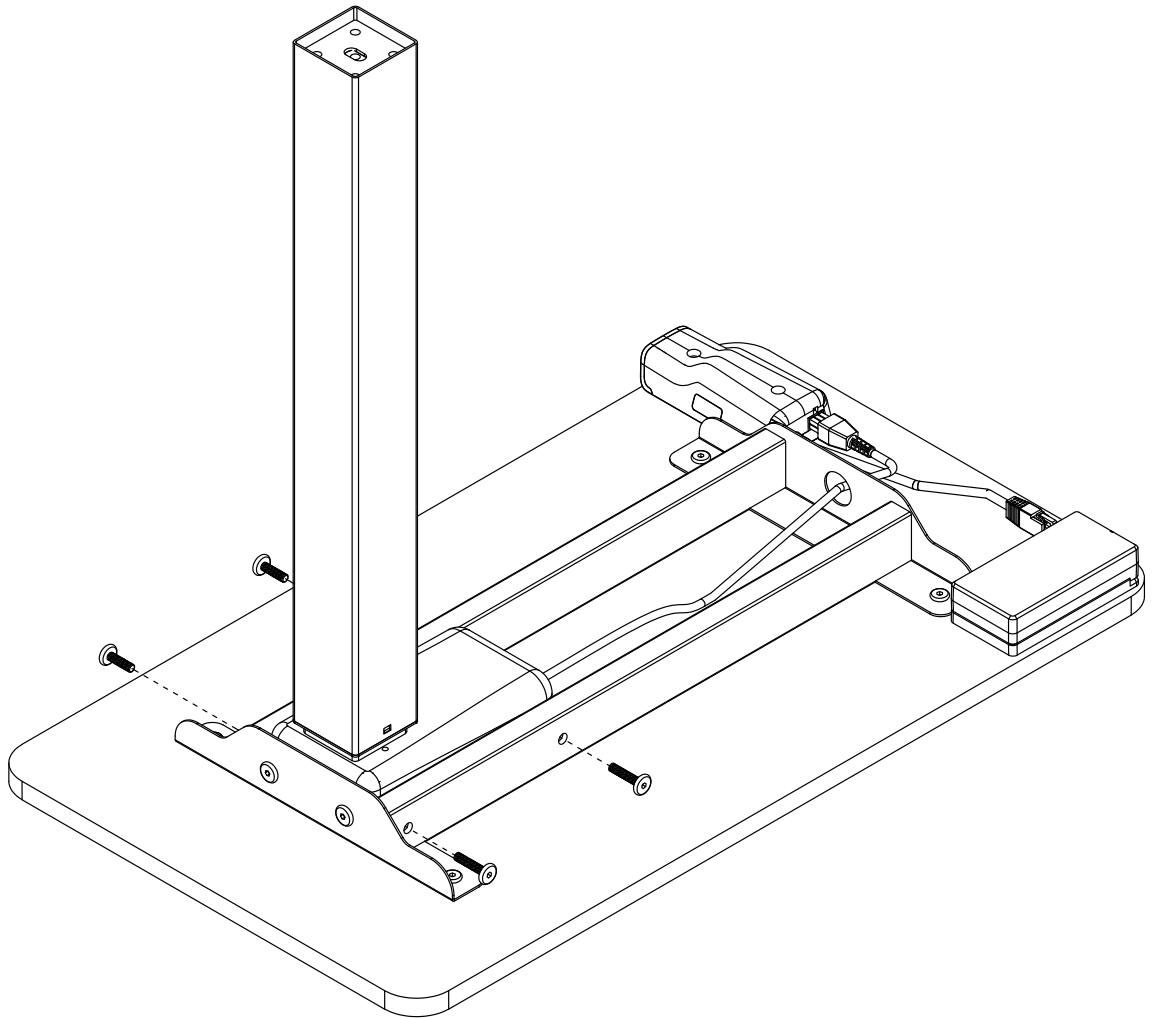


 C. 1-3/16" Small Machine Screw - 4





F. Wrench - 1


STEP 3

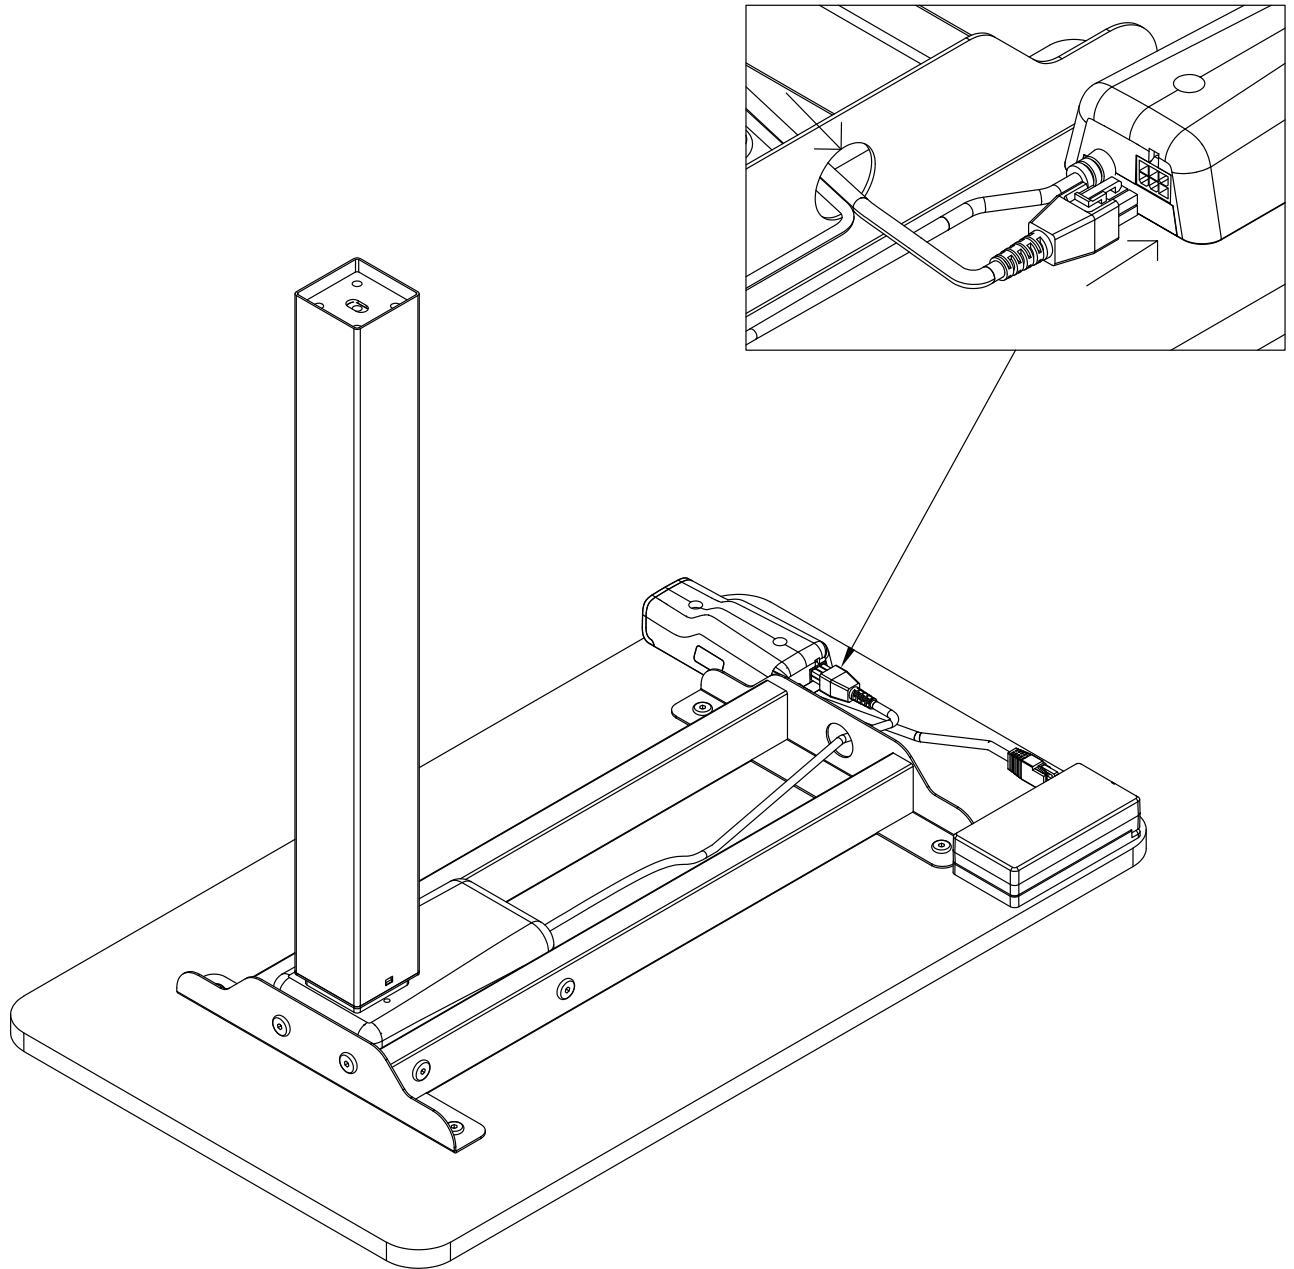

 STEP 4




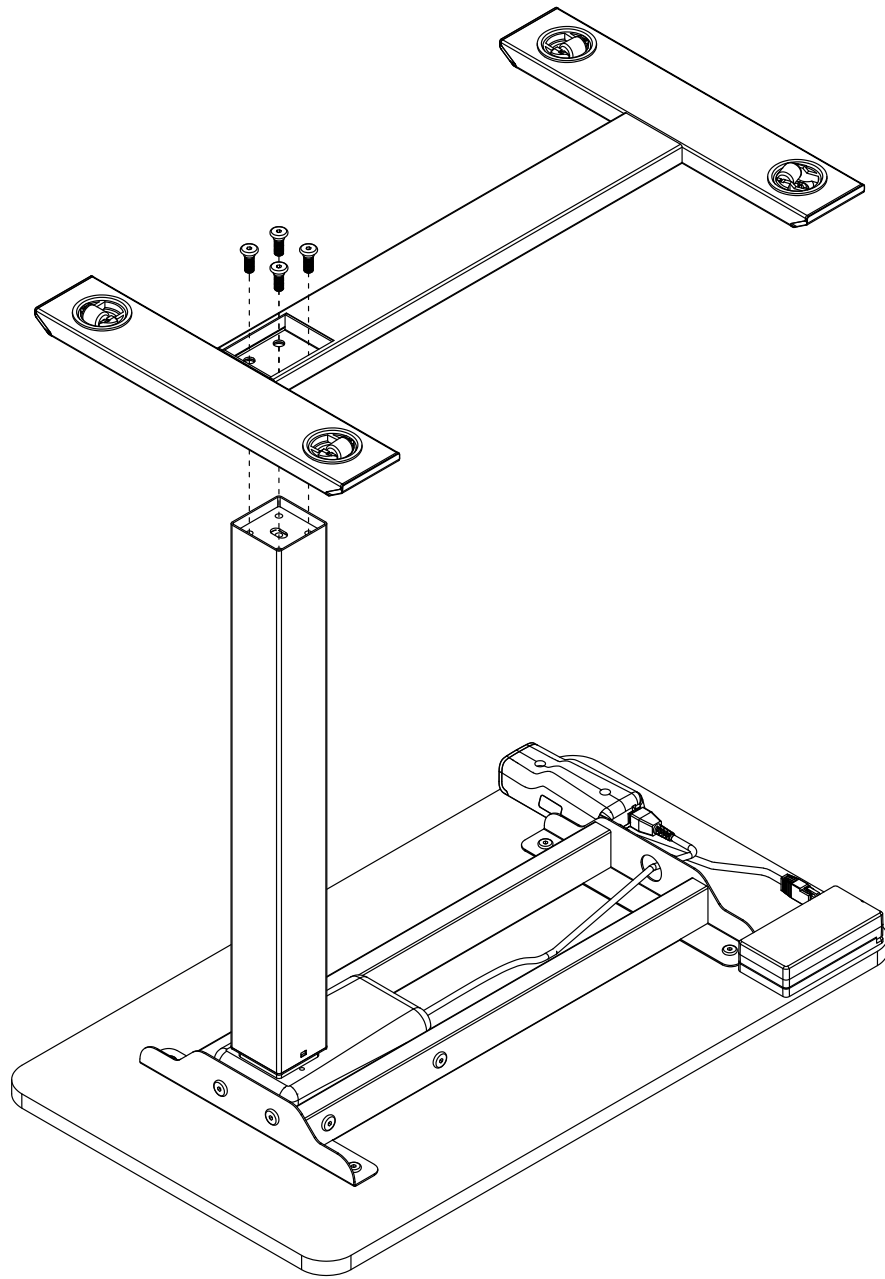


 A. 3/4" Medium Machine Screw - 4



F. Wrench - 1

 STEP 5

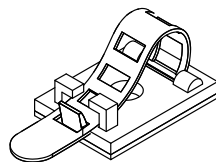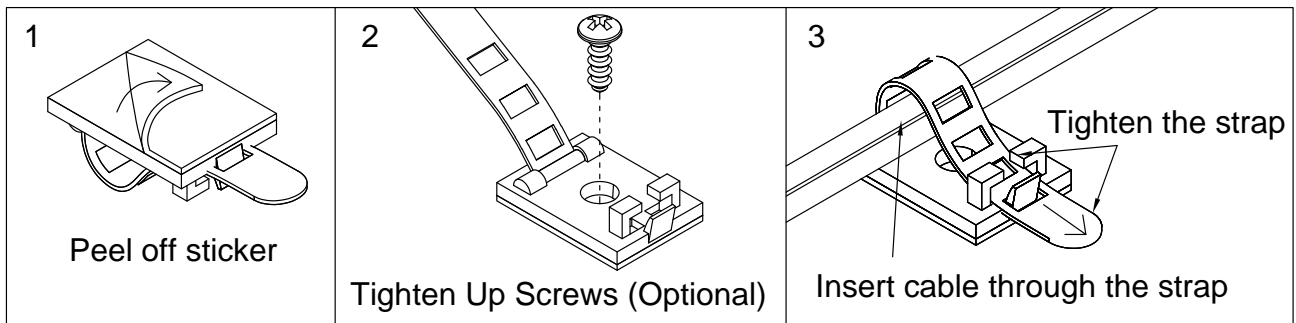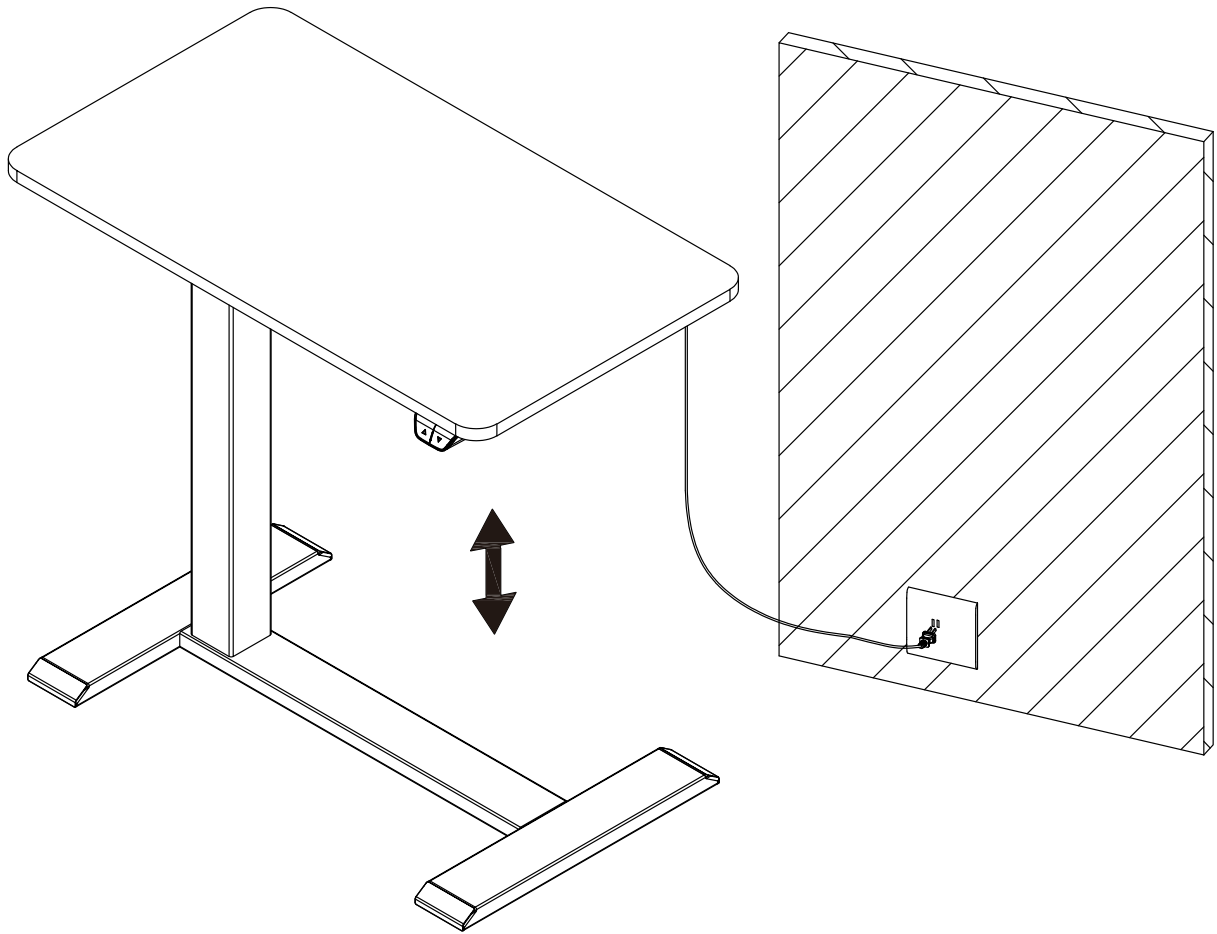


D. Self-adhesive Cable Strap - 2

E. 1/2" Flat Head Screw - 2

Factory reset is required for first time initialization(Page 9)

OPERATION

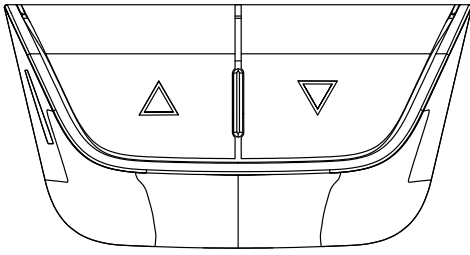

-Up and Down Function

1. Press ▲ or ▼ to adjust the desktop height up or down.

-Reset

1. In the power-on state, press and hold the ▲ and ▼ buttons at the same time for 3 seconds and then release. The desk automatically goes down (Pressing any button will terminate the reset action during the process) until the desktop reaches the bottom and rebounds slightly, followed by a beeping sound. The reset process is complete.

Troubleshooting:

1.If the desk has been continuously working for a certain period and then stops responding by pressing the ▲ or ▼ buttons, please let the system rest for more than 18 minutes before you continue to use it.

TROUBLESHOOTING

| SOUND FREQUENCY | ROOT CAUSE | CORRECTIVE ACTION |
|----------------------|--|--|
| Beep | Low Battery | Charge or replace the battery. |
| Beep, Beep | The Desk Is In Excessive Used Of Going Up And Down | Rest for 18 minutes. |
| Beep, Beep, Beep | Overloading OR Motor Disconnected | Reduce loading weight and run a factory reset. |
| Beep Beep Beep Beep | Request Factory Reset | Press the 'Up' and 'Down' buttons at the same time(Do not release the buttons) until your desk is connected to power. The desk goes down automatically and bounces back up once it reaches the bottom. |
| Beep, Beep Beep Beep | Factory Reset Completed | |

Attention

- Power supply: AC24V
- Working environment: 17.6°F- 104°F ;
- The warranty period of this Lithium battery pack is about one year. Proper use might extend the battery's operating life.
- The battery pack cannot be frozen, insulated or operated for a long time in the operating ambient temperature over 40 .
- It is not good for the battery's operating life if it is charging when its power runs out fully. Suggest charging the battery pack when the power does not run out.
- Do not deliberately or forcibly make the power of battery run out and charge, for it will reduce the battery pack's operating life
- Before cleaning, you have to unplug the power supply cable. Clean with a slightly damp cloth to wipe away the surface dust. Keep all electrical components away from liquids. Do not damage the connection line and keep the plug in a safe position.
- Inside the control box, there are electronic components, metal parts, plastic parts, wires and so on. They should be disposed in accordance with the local laws and regulations. They cannot be disposed as household waste.
- Before using the product, please make sure the product has been installed correctly.
- Before starting use of the product, please read the instructions to fully understand all the product's functions and settings.
- Keep children away from electric height-adjustable desks, control units and handsets. Manufacturer is not responsible of any damages that result from children's unpredictable behaviour.
- Slight noise caused by the multi wedge belt or brake system will not impact the use of this product.
- Do not use corrosive or abrasive materials to clean this product and please dispose of cleaning solutions in an environmentally friendly manner.
- Understand the risks associated with using this product. Children or those with cognitive impairment should not use this product without supervision.
- If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a relevant specialist to avoid any injuries.
- Please operate in a clean and safe environment. For example, do not left around your tools. And always be careful to deal with packaging materials, in order to avoid any kinds of possible danger. Potential choking risk exists when children play with plastic bags!
- If necessary, retain the original package for future transportation.

Recycling and Disposal



This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contact the distributor or manufacturer for recycling assistance.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la Section 15 des règles de la FCC. Son fonctionnement est soumis aux deux Conditions suivantes :

- (1) Ce produit ne risque pas de causer d'interférences électromagnétiques nuisibles, et
- (2) L'appareil doit fonctionner en dépit de tout brouillage produit, y compris le brouillage pouvant mener à une opération non désirée.

Este dispositivo cumple con la Parte 15 de las Reglas FCC. La operación está sujeta a las dos siguientes condiciones:

- (1) Este dispositivo no debe causar interferencia ,y.
- (2) Este dispositivo debe aceptar cualquier interferencia recibida, incluida interferencia que pueda causar un funcionamiento indeseable.