


Z-Axis Height Adjuster Installation Manual



English
Deutsche
Français

Note: The picture is for reference only, the actual product shall prevail. For more information, please scan the QR code.

Accessories List

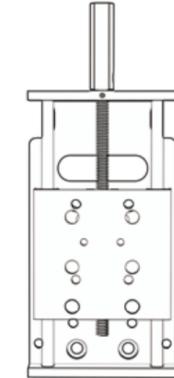

Z-Axis Height Adjuster Module*1pcs



M4X8*12PCS M4X6*4PCS




M4X10*4PCS H2.5



M5X8*6PCS H3


Fixed Focus Piece*1PCS

Type 1 If your laser is in the form shown in the figure below, please follow these steps to install the Z-axis height adjustment module.

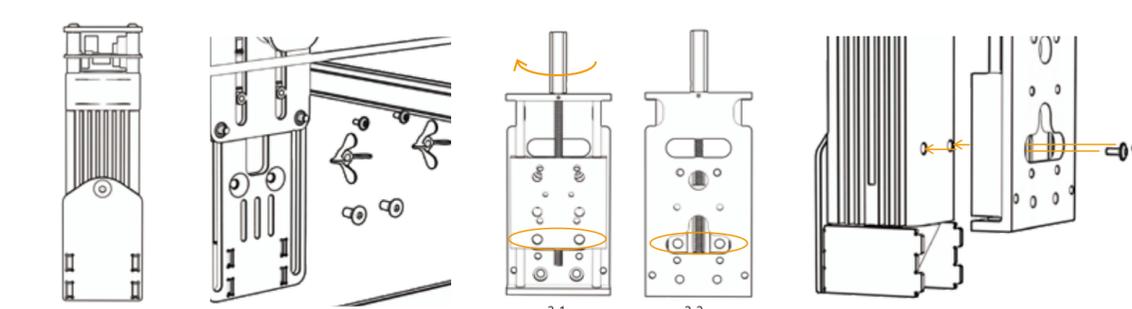

Type 1

- 1 Remove the original laser backplate and laser
- 2 Rotate the handle to align hole positions 2-1 and 2-2 in the figure above
- 3 Fix laser and Z-axis height adjuster, M5*8/2pcs

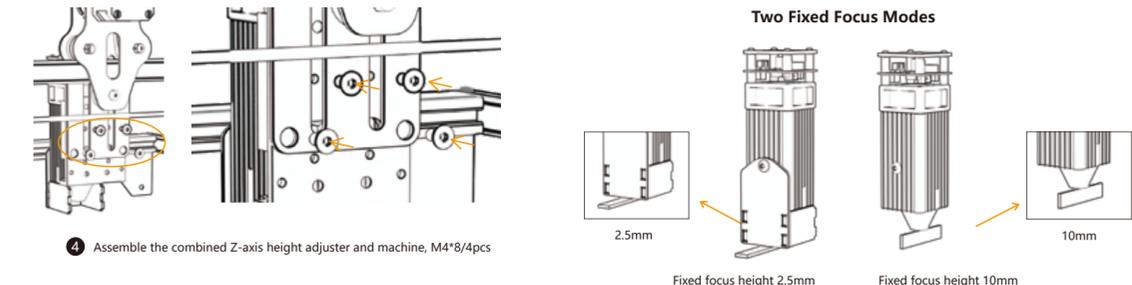


- 4 Assemble the combined Z-axis height adjuster and machine, M4*8/4pcs
- Two Fixed Focus Modes**
- Fixed focus height 2.5mm
 - Fixed focus height 10mm

Precautions


- 1 In order to ensure that the machine does not shake during operation and is more stable, the Z-axis height adjuster restricts the laser from working as close to the height of the POM wheel as possible. So when using, the engraved surface needs to be raised to a suitable position.
- 2 The Y-axis engraving format has been reduced by 20mm due to the addition of the Z-axis height adjuster. If a limit switch is required, the user needs to move it forward by 20mm.

Type 2 If your laser is in the form shown in the figure below, please follow these steps to install the Z-axis height adjustment module.

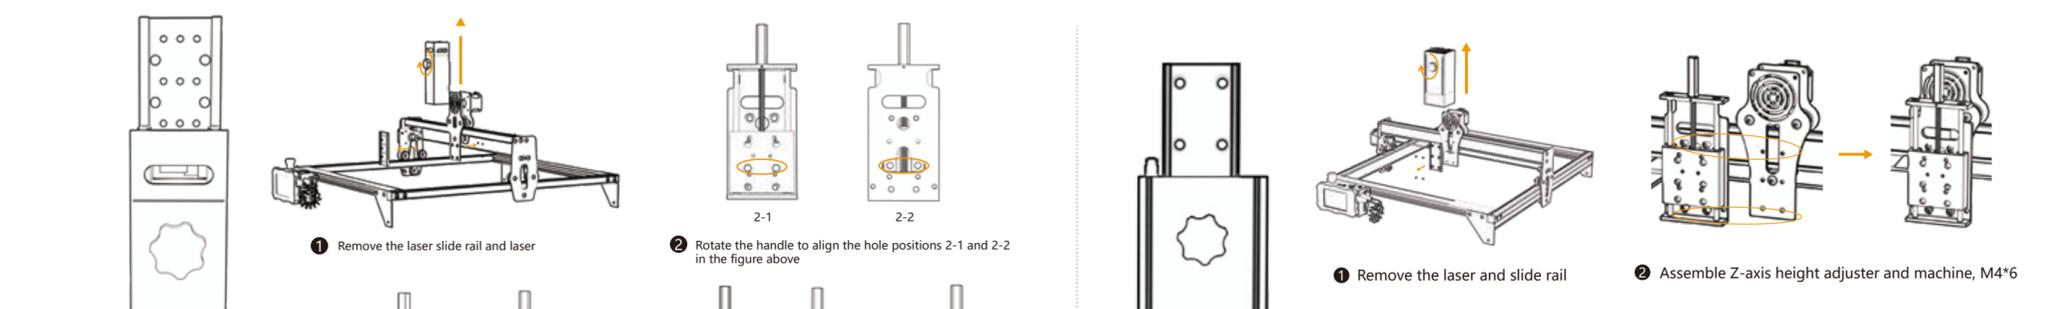

Type 2


- 1 Remove the laser slide rail and laser
- 2 Rotate the handle to align the hole positions 2-1 and 2-2 in the figure above

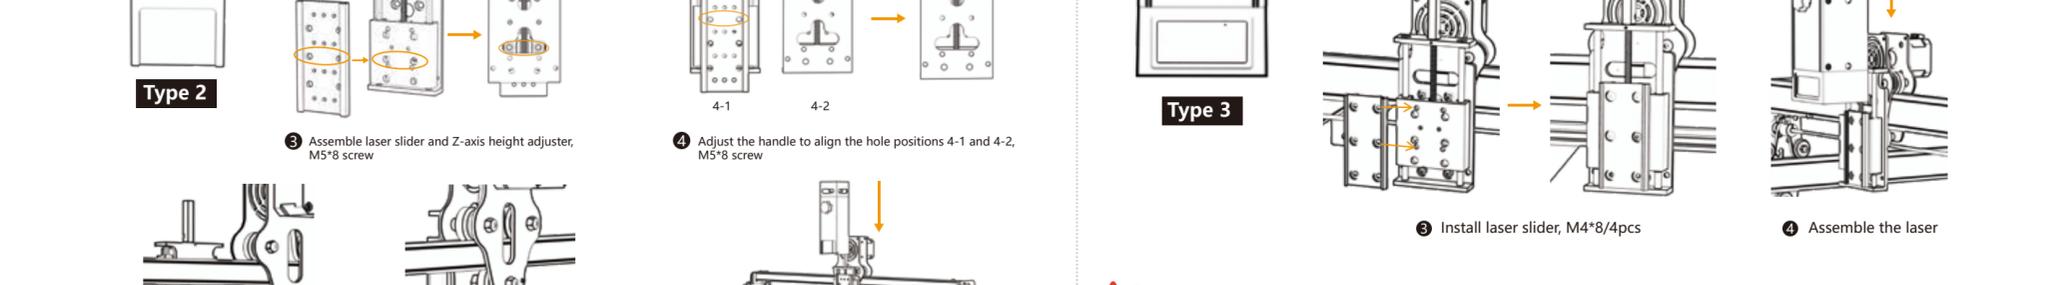

- 3 Assemble laser slider and Z-axis height adjuster, M5*8 screw
- 4 Adjust the handle to align the hole positions 4-1 and 4-2, M5*8 screw


- 5 Fix Z-axis height adjuster and machine, M4*10 screws
- 6 Assemble the laser

Type 3 If your laser is 20W or 30W, please follow these steps to install the Z-axis height adjustment module.

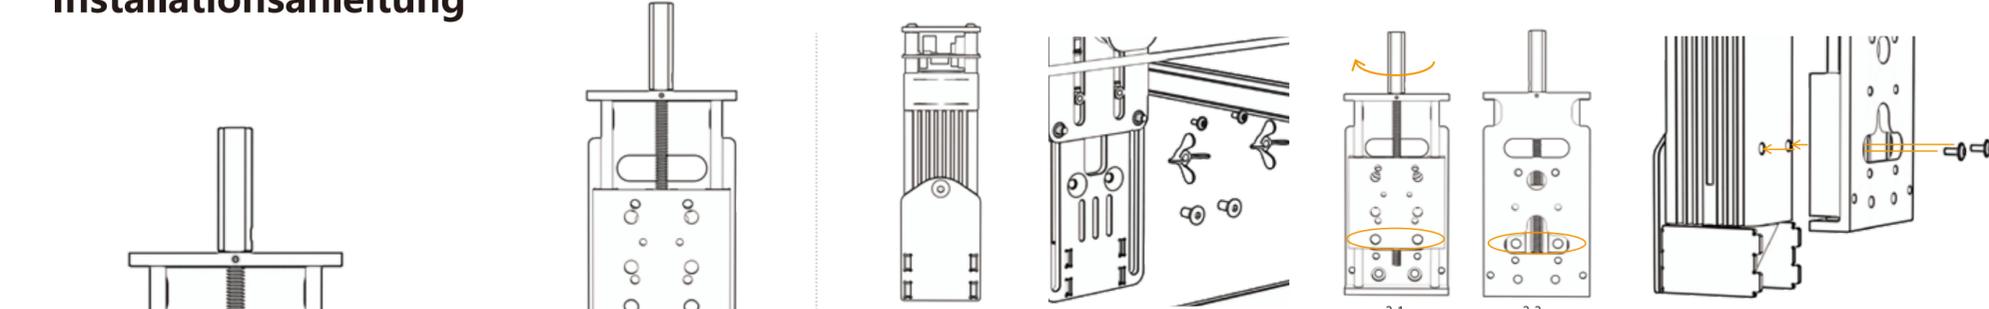

Type 3

- 1 Remove the laser and slide rail
- 2 Assemble Z-axis height adjuster and machine, M4*6

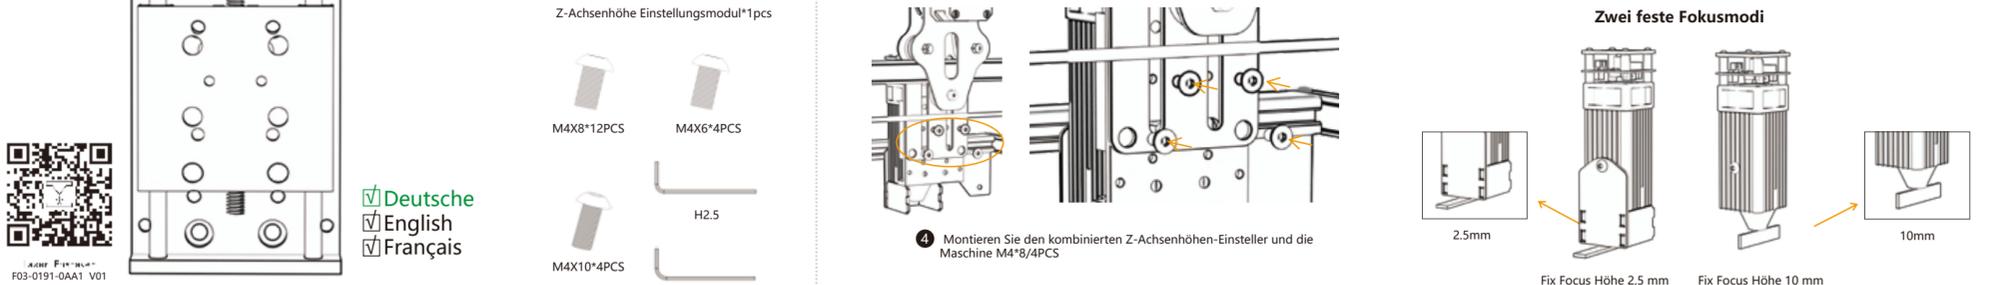

- 3 Install laser slider, M4*8/4pcs
- 4 Assemble the laser

Precautions


- 1 In order to ensure that the machine does not shake during operation and is more stable, the Z-axis height adjuster restricts the laser from working as close to the height of the POM wheel as possible. So when using, the engraved surface needs to be raised to a suitable position.
- 2 The Y-axis engraving format has been reduced by 20mm due to the addition of the Z-axis height adjuster. If a limit switch is required, the user needs to move it forward by 20mm.



Deutsche
English
Français

Hinweis: Das Bild dient nur als Referenz, Das tatsächliche Produkt muss herrschen. Für mehr Informationen, Bitte scannen Sie den QR -Code.

Zubehörliste

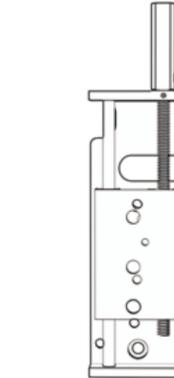

Z-Achsenhöhe Einstellungsmodul*1pcs



M4X8*12PCS M4X6*4PCS




M4X10*4PCS H2.5



M5X8*6PCS


Fixes Focus -Stück*1pcs

Type 1 Wenn sich Ihr Laser in der in der folgenden Abbildung gezeigten Form befindet, befolgen Sie diese Schritte, um das Z-Achse-Höhenanpassungsmodul zu installieren.

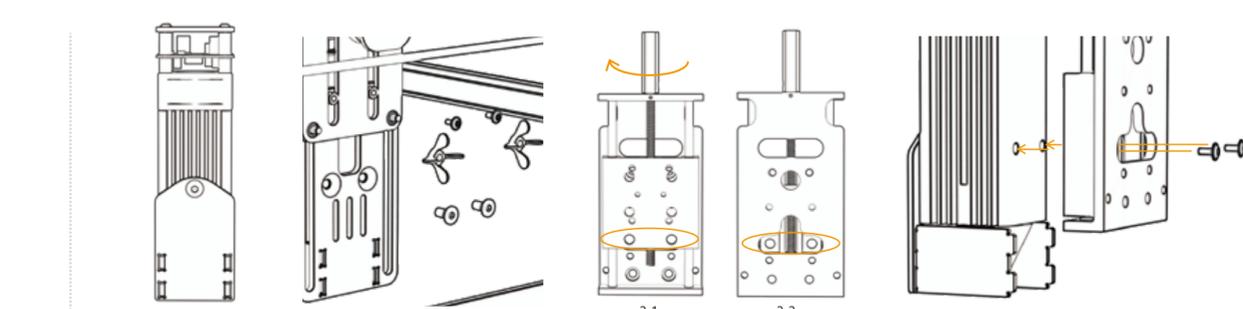

Type 1

- 1 Entfernen Sie die ursprüngliche Laser -Rückplatte und den Laser
- 2 Drehen Sie den Griff, um die Lochpositionen 2-1 und 2-2 auszurichten und 2-2 in der Abbildung oben
- 3 Fix Laser- und Z-Achse-Höhe, M5*8/2pcs

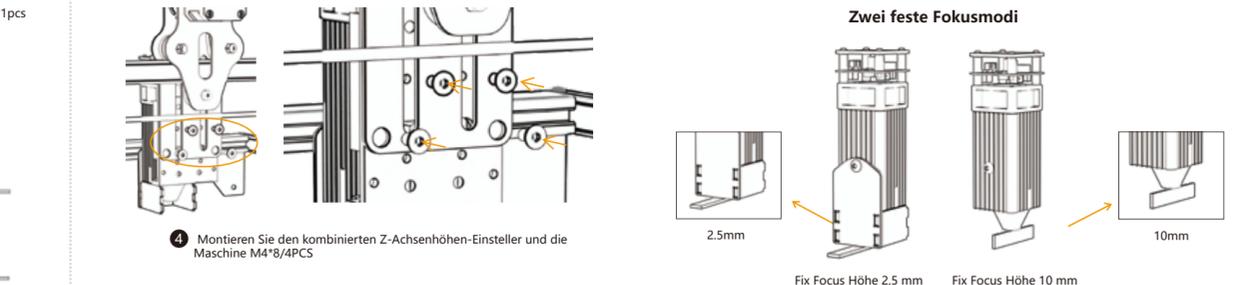



- 4 Montieren Sie den kombinierten Z-Achsenhöhen-Einsteller und die Maschine M4*8/4PCS
- Zwei feste Fokusmodi**
- Fix Focus Höhe 2,5 mm
 - Fix Focus Höhe 10 mm

Vorsichtsmaßnahmen

- 1 Um sicherzustellen, dass die Maschine während des Betriebs nicht schüttelt und stabiler ist, beschränkt der Z-Achsenhöhe der Laser den Laser so nahe wie möglich an der Höhe des Pom-Rades. Bei der Verwendung muss die gravierte Oberfläche in eine geeignete Position angehoben werden.
- 2 Das Y-A-Achse-Gravurformat wurde aufgrund der Zugabe des Z-Achsenhöhe-Einstellers um 20 mm reduziert. Wenn ein Limitschalter erforderlich ist, muss der Benutzer ihn um 20 mm verschieben.



Typ 2 Wenn sich Ihr Laser in der in der folgenden Abbildung gezeigten Form befindet, befolgen Sie diese Schritte, um das Z-Achse-Höhenanpassungsmodul zu installieren.

Typ 3 Wenn Ihr Laser 20W oder 30 W beträgt, befolgen Sie diese Schritte, um das Z-Achse-Höhenanpassungsmodul zu installieren.

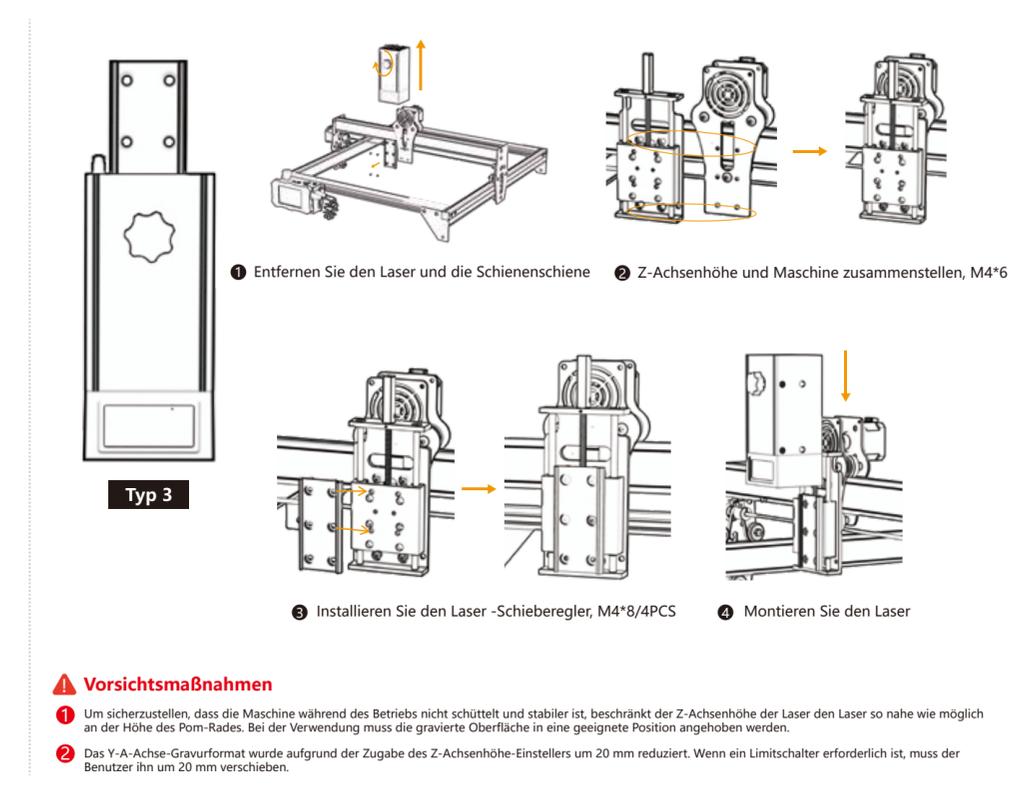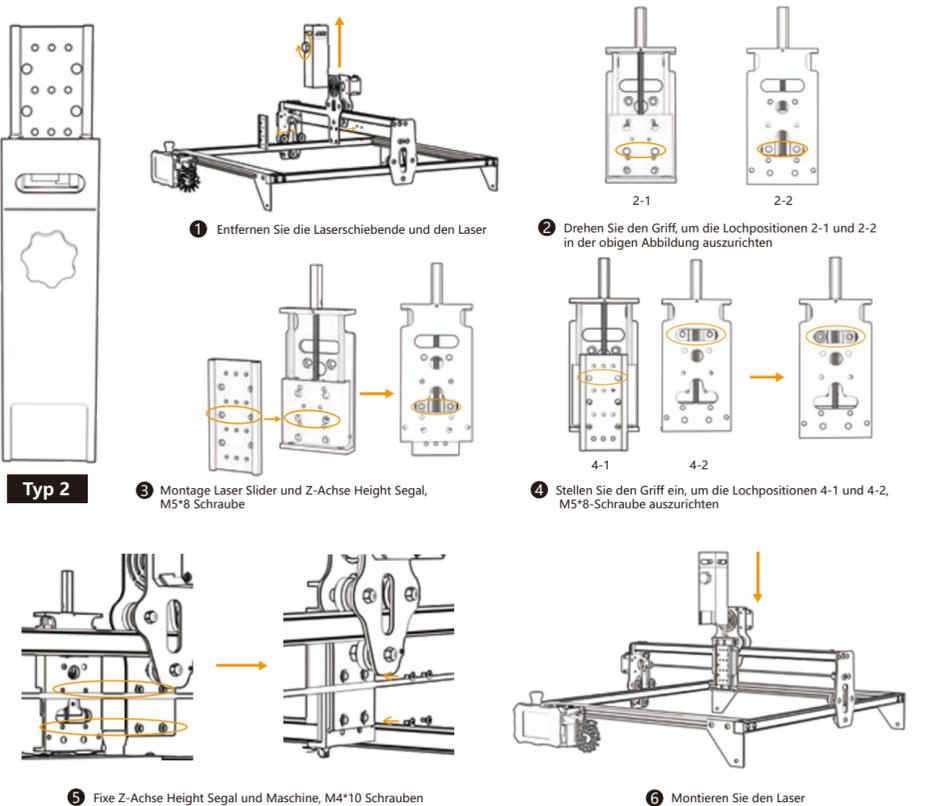

Ajusteur de hauteur de l'axe Z Installation Manuel


Liste des accessoires

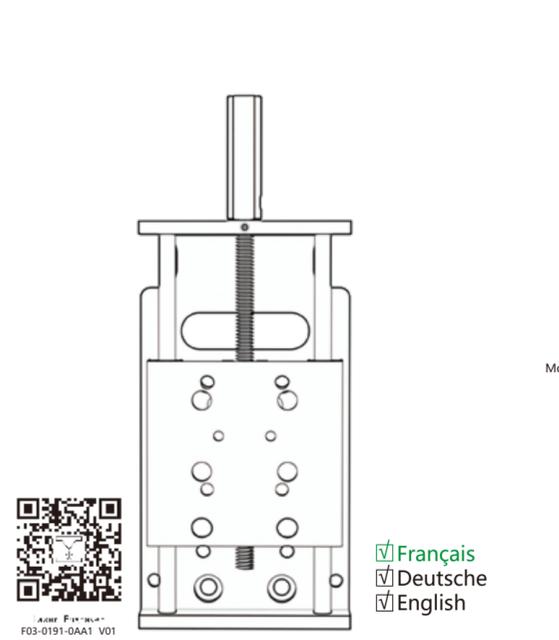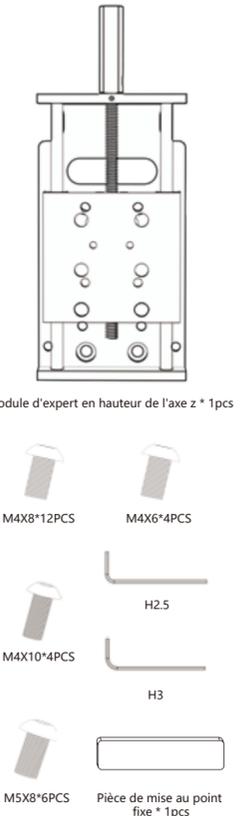


Remarque: l'image est pour référence uniquement, Le produit réel doit prévaloir. Pour plus d'informations, Veuillez analyser le code QR.

Français
 Deutsche
 English

Type 1 Si votre laser est dans le formulaire illustré dans la figure ci-dessous, veuillez suivre ces étapes pour installer le module de réglage de la hauteur de l'axe Z.

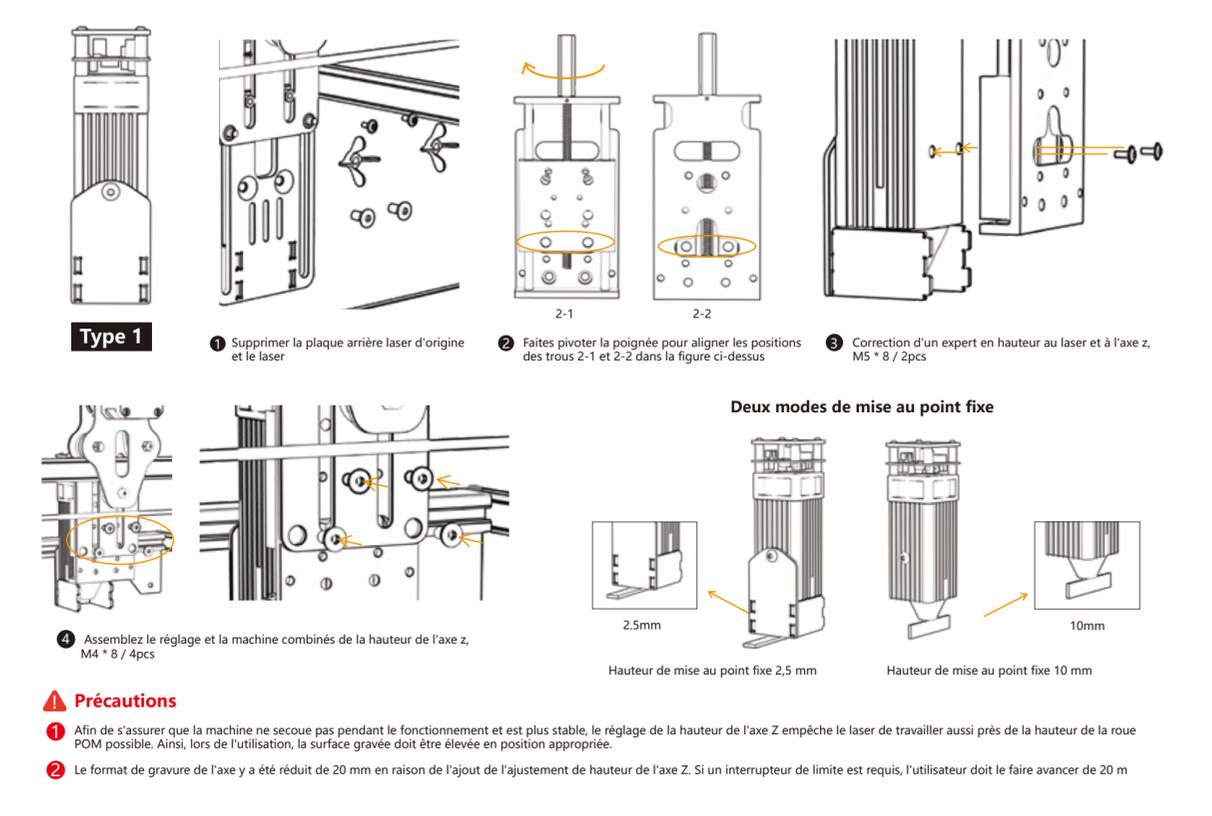

Type 2 Si votre laser est dans le formulaire illustré dans la figure ci-dessous, veuillez suivre ces étapes pour installer le module de réglage de la hauteur de l'axe Z.

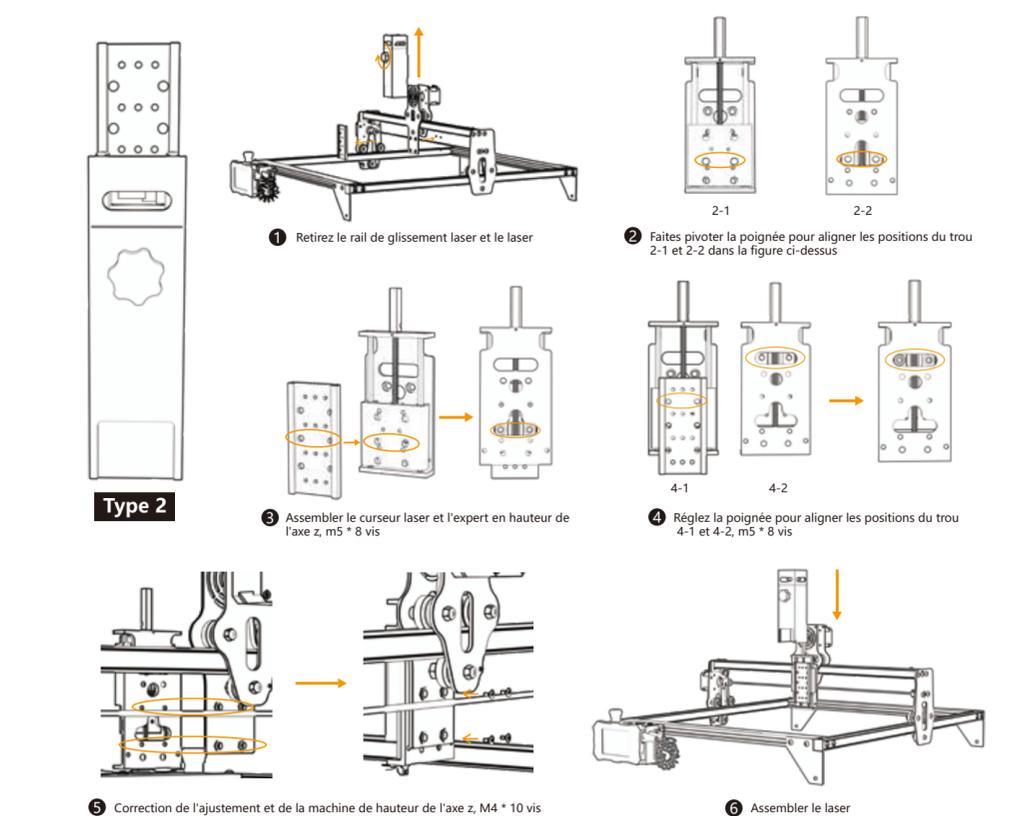

Type 3 Si votre laser est de 20W ou 30W, veuillez suivre ces étapes pour installer le module de réglage de la hauteur de l'axe Z.

