 


TOP SECRET

SENTRY GAMING DESK PRODUCT MANUAL

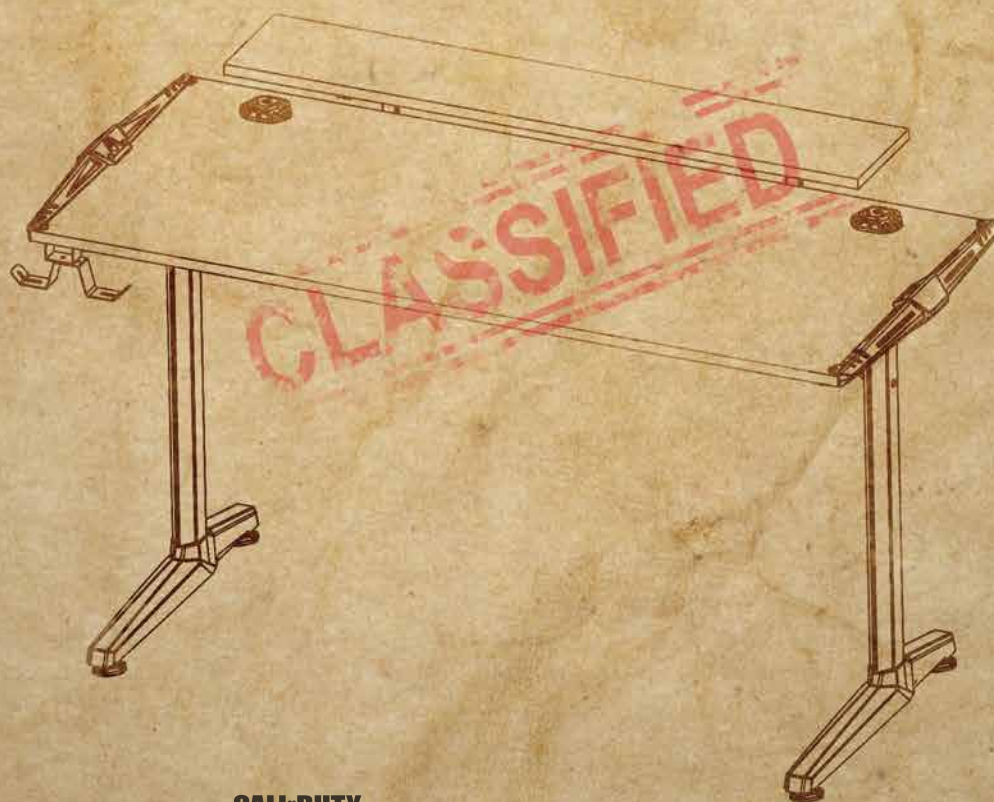

CALL OF DUTY
WARZONE™



EUREKA®
ERGONOMIC



MODEL #

COD-001-GB-US

Questions?

GIVE US CALL: 1-844-416-2090

MON-FRI 8:30AM - 5:30PM (PT)

customerservice@eurekaergonomic.com

Sentry Gaming Desk

 
ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



Allen Wrench K4

(Included)



Screwdriver

(Included)



**2 - People
Recommended**

ASSEMBLY RATING



EASY —————> DIFFICULT

VERSION#21-10-19



Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come. This product has been crafted with today's lifestyles in mind.

Our commitment to providing quality products does not end after you have purchased our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:00 AM – 5:00 PM Pacific Time to assist with any assembly questions. If necessary, we can also replace any damaged or missing parts. To help us resolve your issue as quickly as possible, please have these assembly instructions and your order receipt readily available.

The maximum recommended weight allowance is 200 lbs (90.7 kg) for top surface.

For non-US customers, please contact the seller or place of purchase for support.



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 5-6 are accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

 
☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

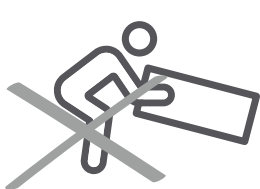

Teamwork

ALWAYS have at least two people when transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.



 
Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

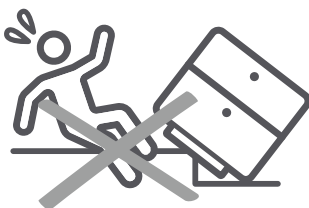

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



 
Position each part correctly and insert screws or bolts into their respective holes.



Save the instructions and store any supplied tools for later maintenance.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

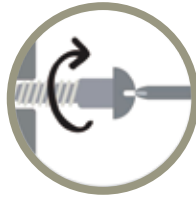

Turn clockwise to tighten and only tighten when all assembly steps are completed.

CARE / MAINTENANCE

CARE AND MAINTENANCE

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Using any kind of solvents on your furniture may damage the finish. Water and rubbing alcohol are safe to use.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately, as it may damage the furniture. Use a soft, clean cloth blot the spill gently. Avoid rubbing.
- Do not place hot dishes or plates directly on the surface of the furniture. Heat can cause chemical changes that may create spotting within the furniture.
- Heavy objects placed on the desktop should be positioned to distribute the weight as evenly as possible to avoid tilting.
- If desk wobbles on flat floor, first check that all screws are tightened and adjust leveling feet. Then, check the floor is flat. If not, adjust the desk feet to appropriate levels.

GAMING DESK

COD-001-GB-US

 


Please keep instructions for future reference.

Check the quantity and irregularity of parts and hardware before you start.




PARTS

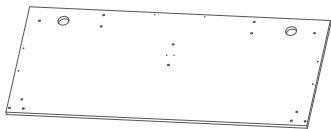


(P1)X1



 (P2)X1



(P3)X1

 


(P4)X2




(P5)X1



 (P6)X1

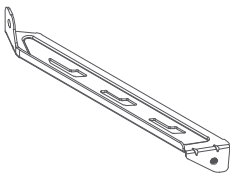


(P7)X1

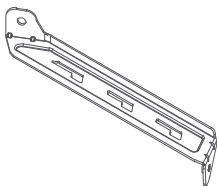 


(P8)X1



 
(P9)X1




(P10)X1

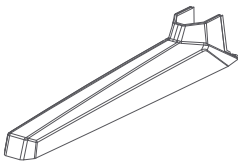 


(P11)X2

 

(P12)X2

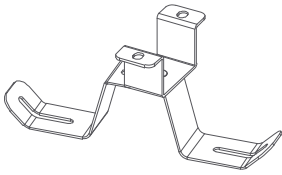 


(P13)X1

 

(P14)X4




 (P15)X5

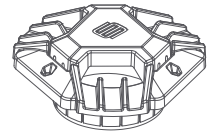


(P16)X2

 
HARDWARE



 
(1)X4



 
(2)X8



 
(3)X6

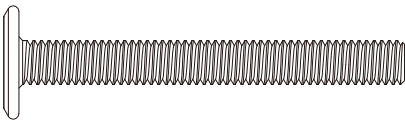

 
(4)X2



 (5)X8



 
(6)X12




(7)X8



 (8)X1




 
(9)X1

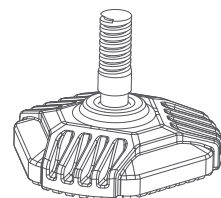



(10)X4

ASSEMBLY INSTRUCTIONS

  1

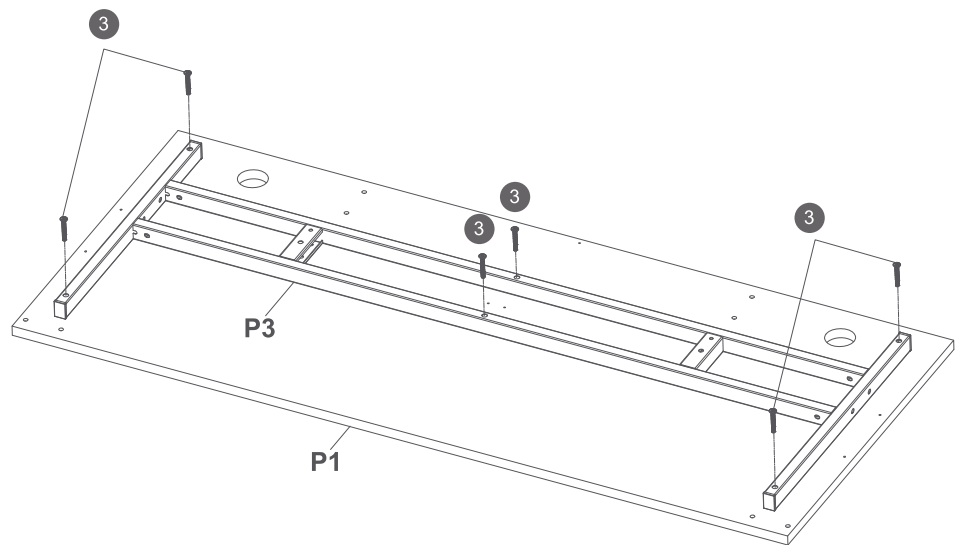
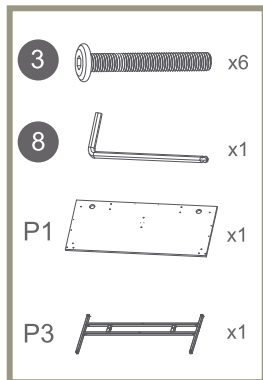


2

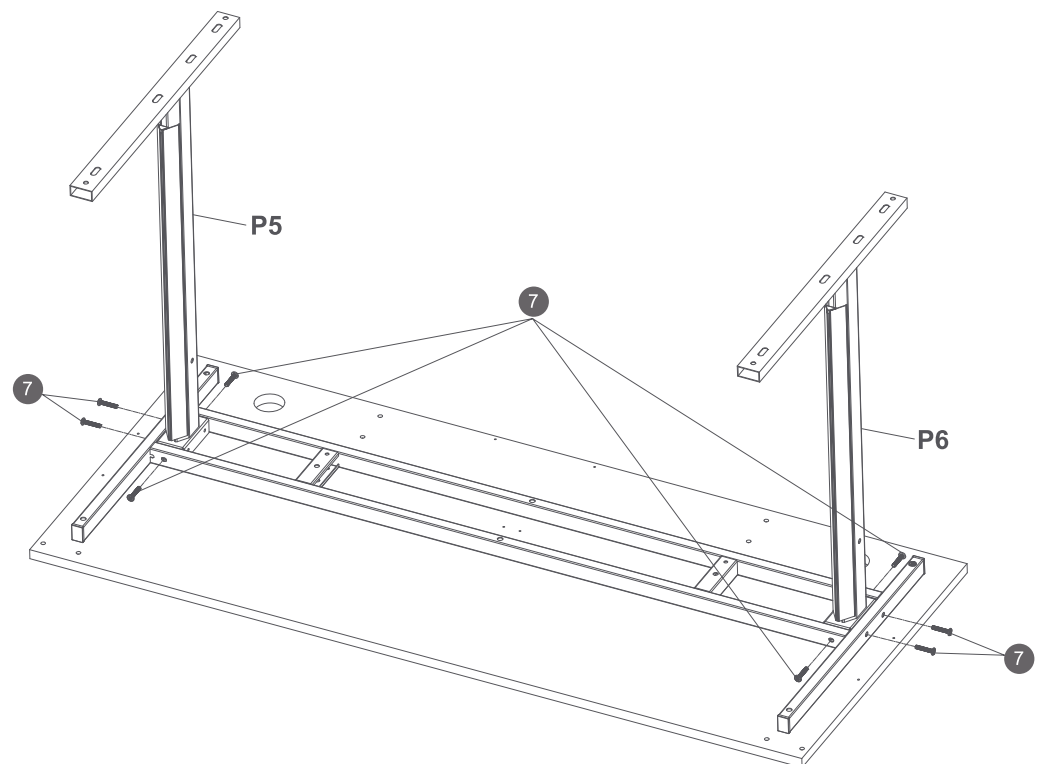 
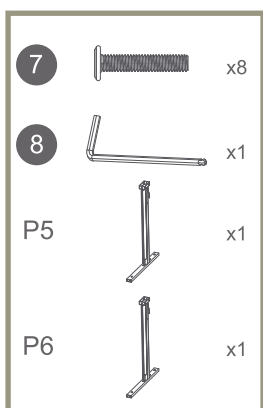 


ASSEMBLY INSTRUCTIONS

  3

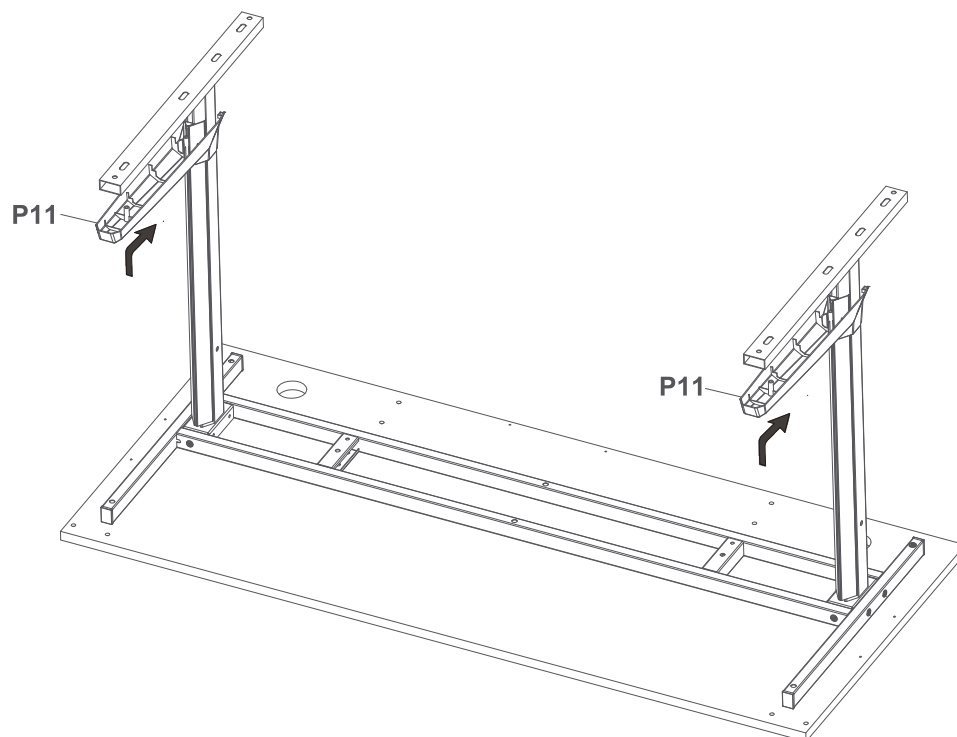
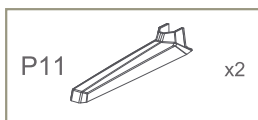


4

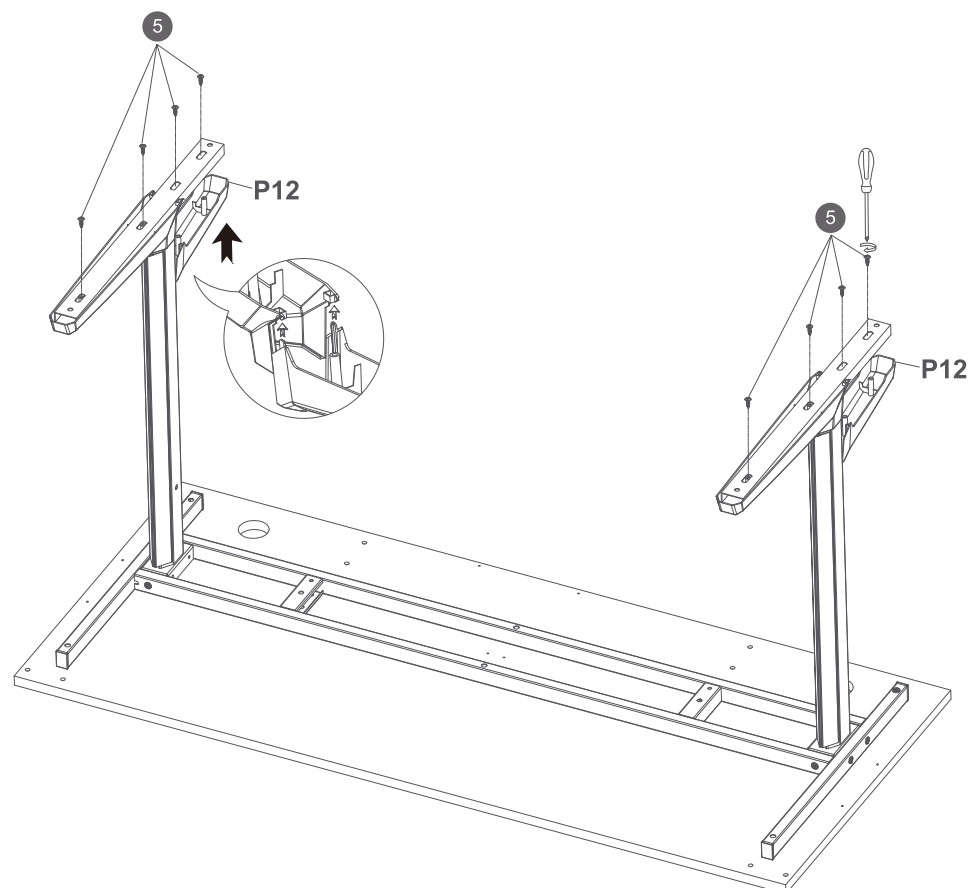 
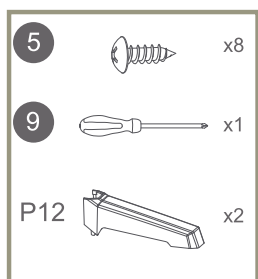 


ASSEMBLY INSTRUCTIONS

  5

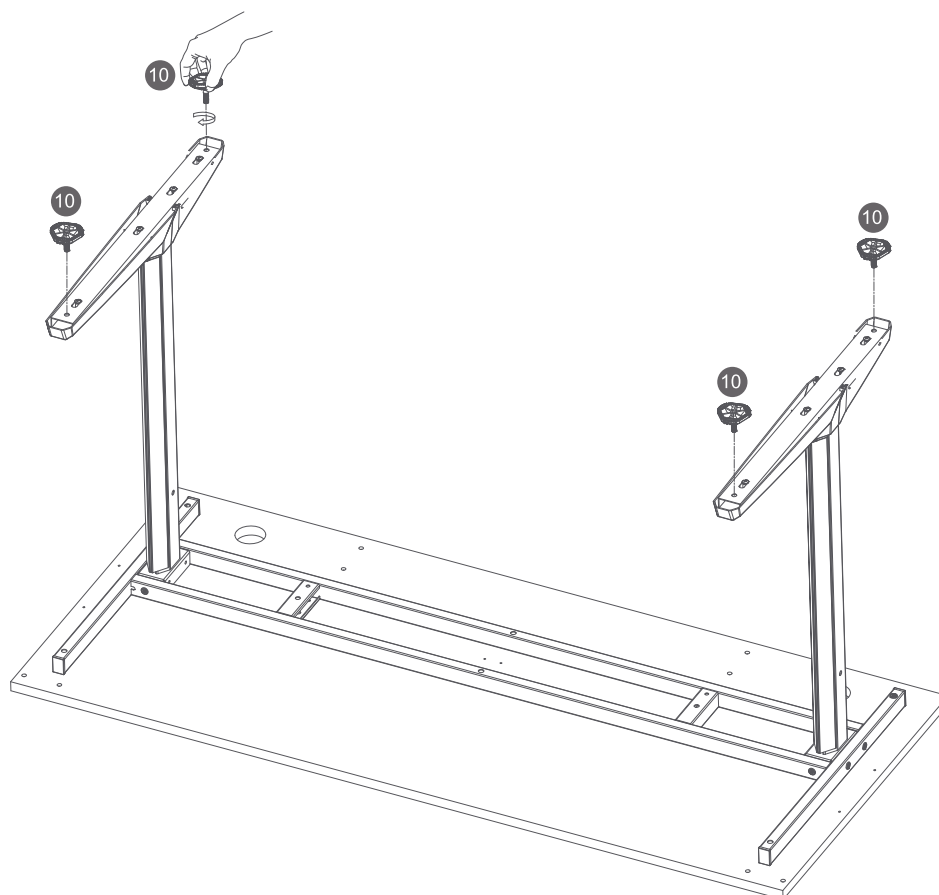
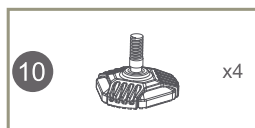


6

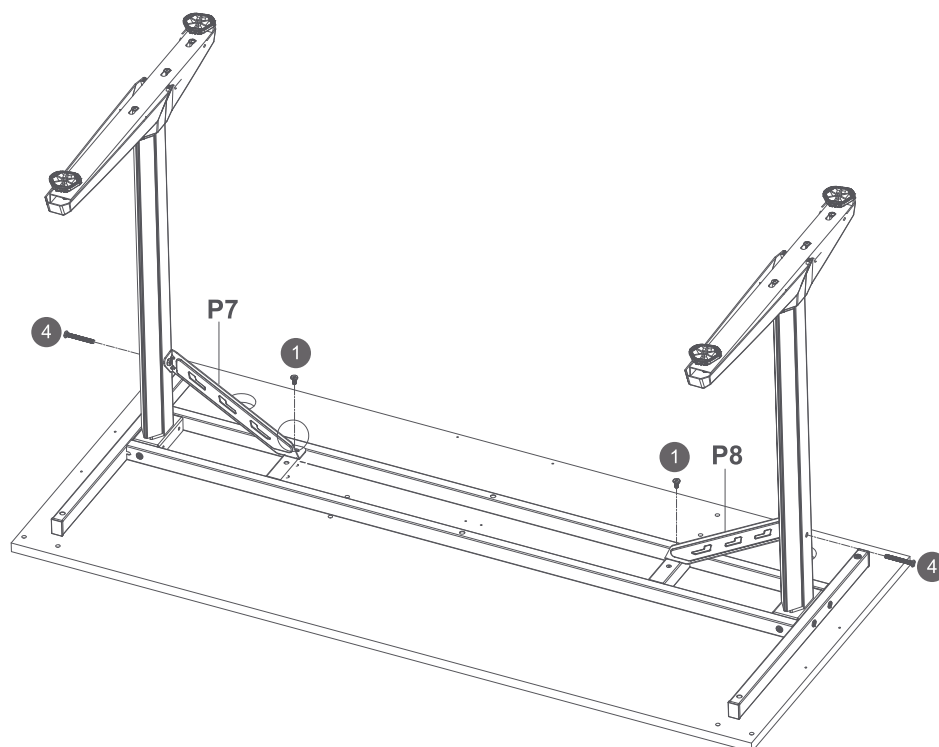 
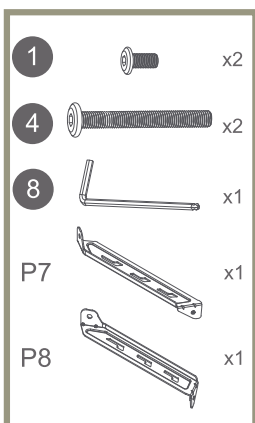 


ASSEMBLY INSTRUCTIONS

  7






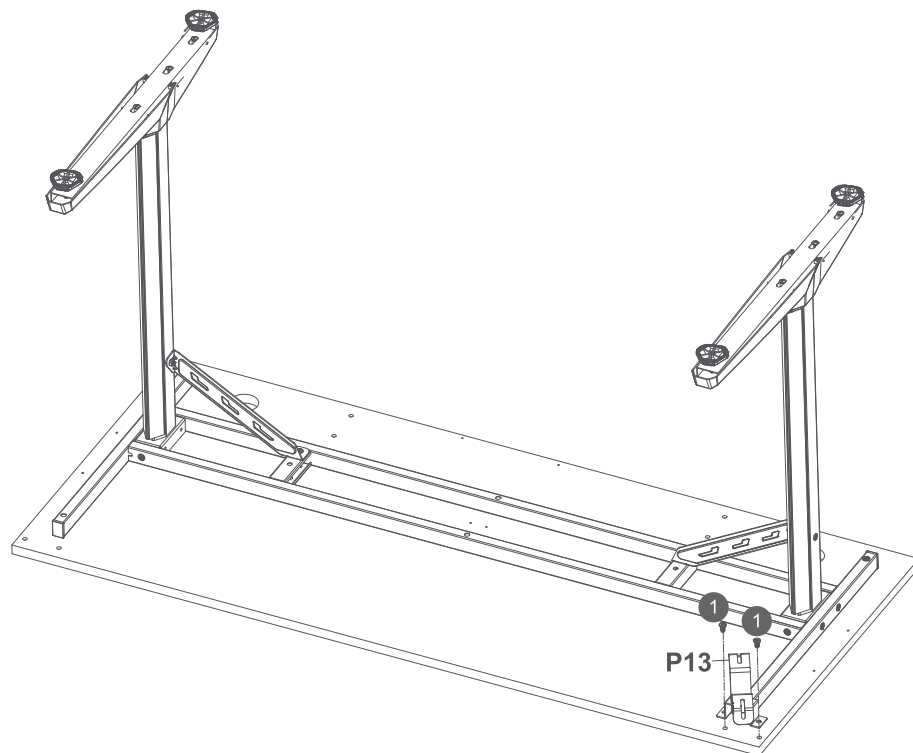
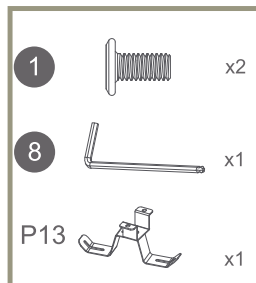


8

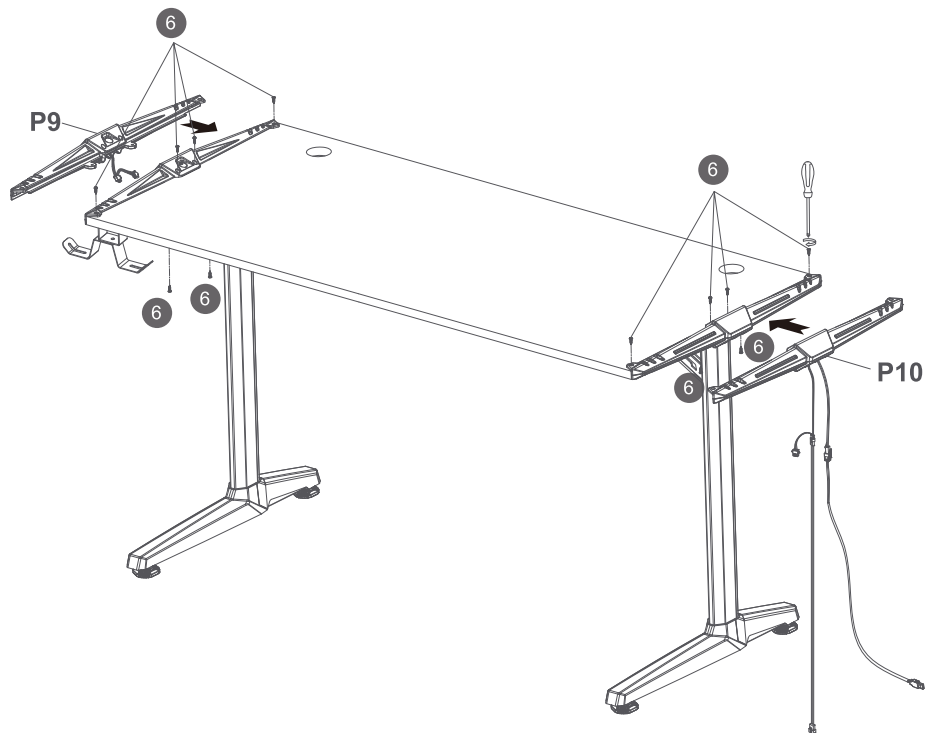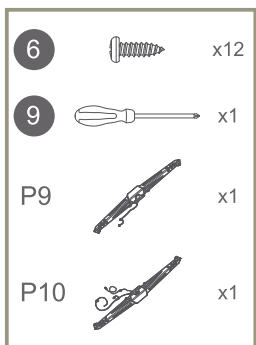  



ASSEMBLY INSTRUCTIONS

       9

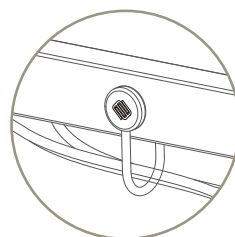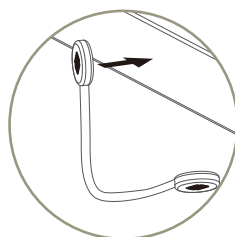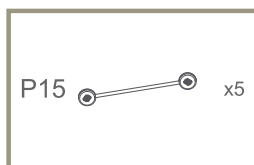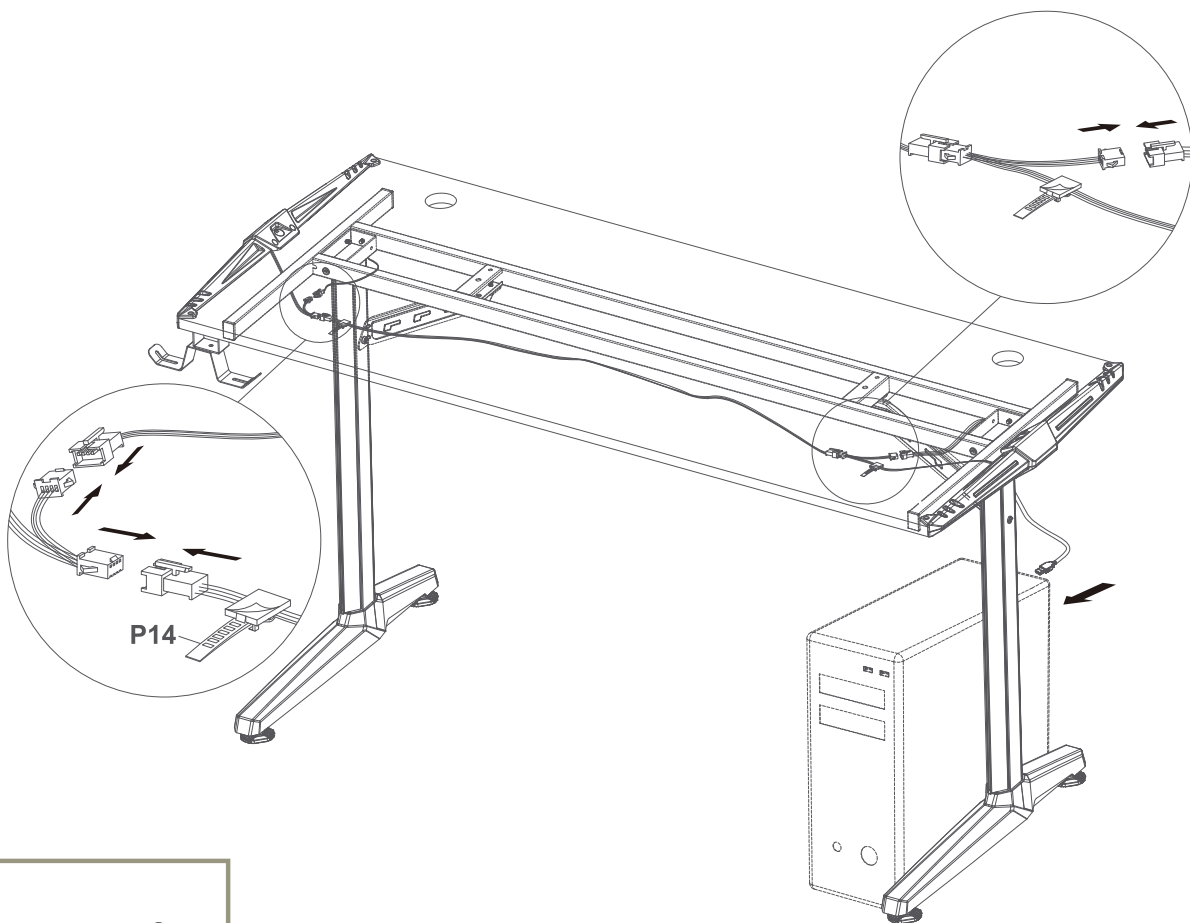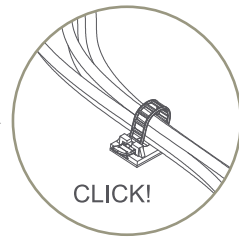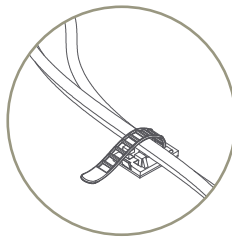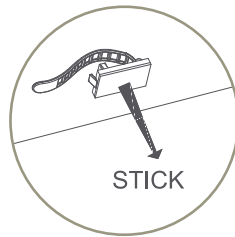



ASSEMBLY INSTRUCTIONS

  10

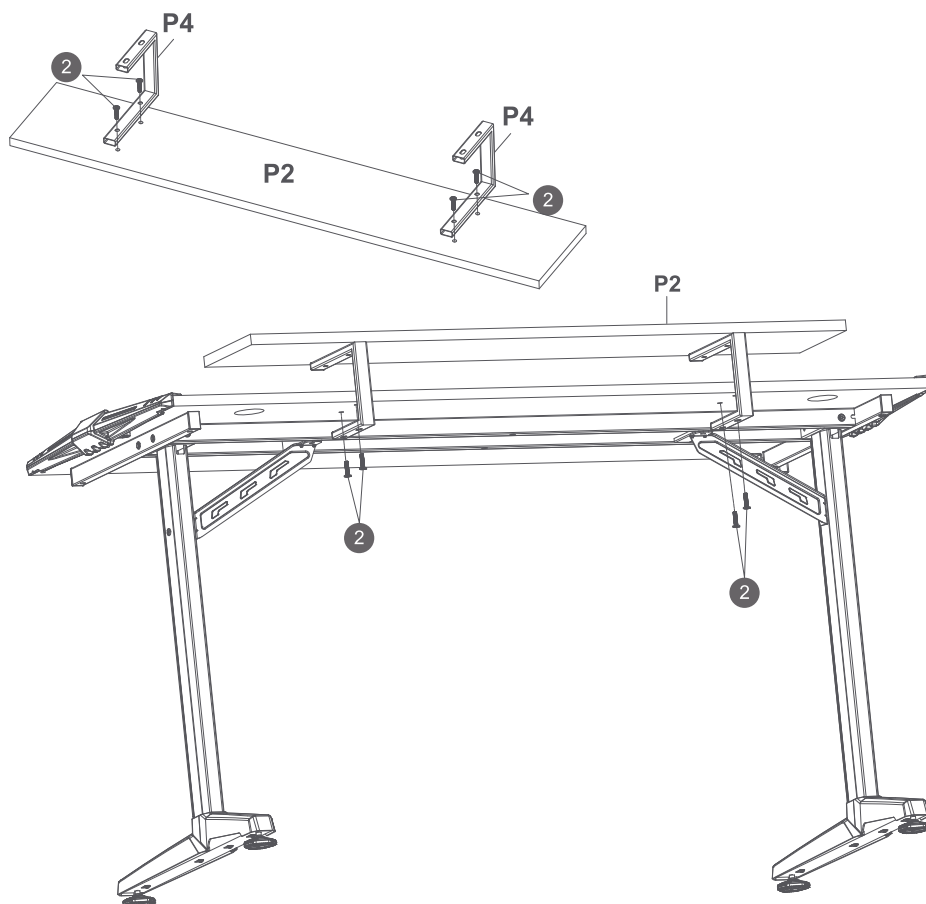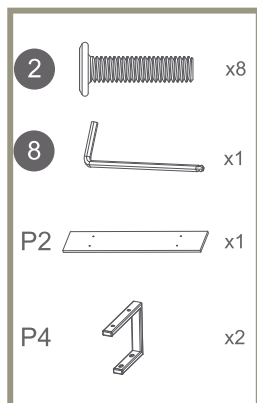

11

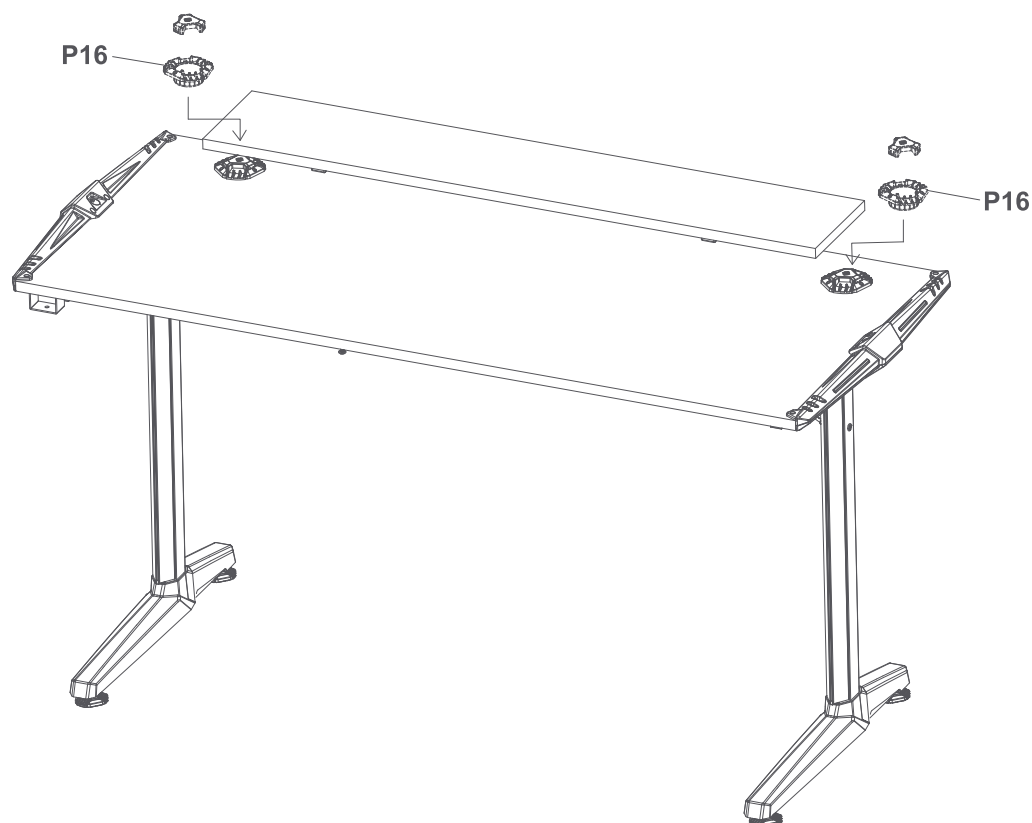 

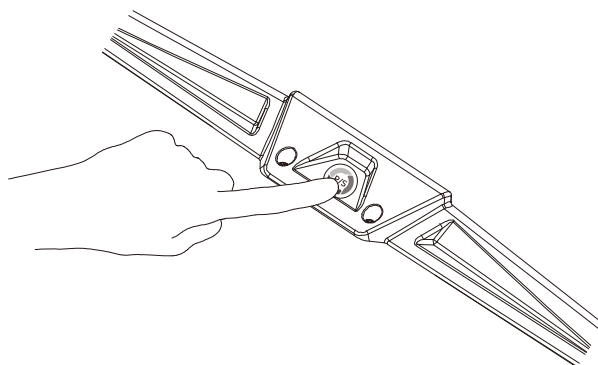 

MAIN TECHNICAL PARAMETERS

Parameters	Min	Normal	Max	Test Condition	Unit
Rated voltage(DC)	4.45	5	5.20		V
Rated power		0.8			W
Maximum power		0.925			W
Maximum current		189			mA
Environment temperature	-20		60		°C

Function

1. Changing Lighting Modes: Make sure the desk light is on, then press the right button "PS" to change modes. There are total 8 lighting modes.
2. Switching On/Off Lights: Press the button "PS" for 5 seconds then the light will be off. If want to switch on the light, just repeat the operation.

Trouble Shooting

1. When the light flashes unexpectedly, please try to reboot it (turn it off and then on). If a reboot doesn't work, please check if the adapter work normally.
2. If the light isn't on, please check if the power is on, or all the cables are connected correctly and tightly.

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and Flat surface. If desk wobbles, another step that needs to be included with troubleshooting the wobbling is to adjust the feet.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product when transporting, please lift instead of dragging the product.



www.eurekaergonomic.com

TOP SECRET

CALL OF DUTY
WARZONE



EUREKA[®]
ERGONOMIC