





CARE AND MAINTENANCE

Descaling the Kettle

You should descale the kettle at least once a week if you use it frequently. Descaling removes anymineral deposits that have built up inside the kettle. Always descale the kettle after it has beenstored for long periods of time and before storing it.

- 1. Fill the kettle with 1 cup of distilled vinegar or lemon juice and 2 cups of water (1:2 ratio)
- 2. Boil the mixture, then let it soak in the kettle for 2 hours
- 3. Pour out the solution, then wipe the limescale away with a cloth or non-abrasive sponge $\,$
- 4. Rinse the kettle with clean water, and dry with a soft cloth
- 5. Repeat as needed.

OPERATION GUIDE



1. Open the lid of the electric kettle.

NOTE:

Please clean the kettle by boiling water 3 times before using it.



level must be in the range of the minimum and maximum scale lines.



3. Put the kettle on the base and plug-in power.



4. Press the switch on the bottom of the kettle to start work.