





 
Product model: STONE M1

 
Specifications

Play time: about 8 hours Wireless Version: 5.3 (60% of the volume) Distance: 10M Stand time: about 300 hours Speaker Impedance: 32Ω±15% Charging time: about 1.5 hours

Charge interface: Type-C Frequency: 20Hz-20KHz Speaker receiving sensitivity: Battery capacity:

300mAh for charging case 108±3dB





- Please follow the instruction to operate.
- Please charge the earbuds with input power below 5V/300mA, in order to protect the battery.
- Please store or use the earbuds in a normal temperature environment
- Please do not use this product near the water. Do not immerse this product in any liquid or splash any liquid on this product.
- Please keep the earbuds from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments As it is not anti high temperature.
- Don't jam the ports of the earbuds, such as charger port, LED port and microphone etc..
- In order to protect your hearing and extend the speaker service. life, it is not recommended to adjust the volume to the maximum level for a long time.
- Whatever reasons damage the earbuds, please feel free to contact our after-sales staff in time rather than repair by yourself. Otherwise, you will accept without after-sales service.



Method of operation

Gently cram the earbuds into the cochlea, adjust the appropriate angle to keep the earbuds stable.

Power on & Bluetooth connection

Follow the steps (Please confirm that your phone is built-in Bluetooth function)

Method 1: Open the charging case and take earbuds out of the case, earbuds will be turned on automatically.

Method 2: If earbuds are power off outside the case, touch and

hold MFB for 5 seconds on both sides to turn them on. After one earbuds indicators flashing with white and green alternately, the other earbud indicator doesn't flashing. The product is ready for use.

- 2. Turn on Bluetooth function on your smart device and select 'STONE M1' referring to your device's instructions.
- 3. Pairing mode can just last 180 seconds, if you miss the pairing

04





time, you need to restart the device and operate follow the procedural steps mentioned above.

1. M1 remembers previously connected devices. When turned on, buds attempts to reconnect to previously connected devices 2. M1 will lose the connection when deviate the working range of

Bluetooth. The earbuds will reconnect automatically if you come back to the range in 3 minutes.

Power off

Method 1: Put the earbuds into the charging case and close the cover, they will automatically power off.

Method 2: Touch and hold MFB for 5 seconds. The indicator

flashing in white 3 times and the earbuds are turned off.

Answering incoming calls

Tap the left or right MFB once to answer incoming calls.

End the call

Double tap the left or right MFB to end the current call.

Refuse incoming calls

Touch and hold the left or right MFB for 2 seconds to reject a call.

One key for voice assistant

Touch and hold the left or right MFB for 3 seconds to activate voice

- 1. Play/Pause.Tap the left or right MFB once.
- Double tap left MFB to switch to the previous song.
- Double tap right MFB to switch to the next song.
 Triple tap the left MFB to decrease volume.
- 5. Triple tap the right MFB to increase volume.

Charging

Charge the case using the Type-C cable connected to a computer or wall charger. The charging case flashes red when charging. 2. Earbuds

Put the earbuds back into the charging case for charging. While charging, the indicator will light in red.

(take out any earbuds as a unilateral bluetooth earbud)

(note: single channel mode only needs to remove one of earbuds from the charging box, If two earbuds are removed before connection, the earbud will be used in TWS mode by default, and the TWS connection will be automatically realized.)

1. Take out a earbud from charging case, the earbud automatically turn on and reconnect to previously connected devices.

2. Switch from one earbud to the other when playing music, taking out the other earbud from the charging case and these two earbuds will connected automatically. Both earbuds will play music automatically and then put the earbud which do not need anymore into the charging case and the switching process completes. (note.Call mode 1s applicable)

3. Please refer to the TWS mode for more functions.

Restore factory settings

If the earbuds cannot pair or disconnect frequently, please restore the factory settings.

Four-click without pairing and no connection under the power-on state when flash with green and white, then in white 3 times, the reset is completed

This manual is for reference only, the actual product may vary. Please refer to the



Warranty card

Customer information	Seller information
Name	Name
Add.	Add.
E-mail	Purchase Date
P.C.	Product model
Tel	Invoice number

Date	Malfunction	Process result