



**WARNING**

**PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION**


- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -30° c to 40° c and to be horizontally mounted with the LEDs facing down.
- Wall pack only.

### 1、Unpacking


Thoroughly inspect the fixture for freight damage. Freight damage should be reported to the delivery carrier.

### 2、Installation

- 1) . Take off the screw of the heat sink and take off the front lid carefully from the back. The angle between the front cap and the back cap should be 0-45 degrees.

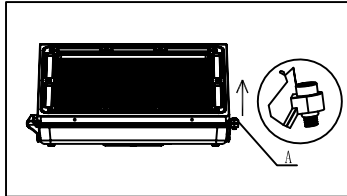


- 3). Connect wire AC with wire (The black one is L, white one is N, and the green one is ground wire), installing the front cap .

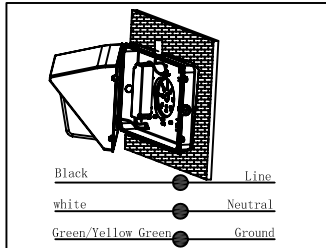

### 3. Field-Adjustable Wattage & CCT & photocell



- 2) . A: After determining a place to put a conductor, take off the 1/2" cap and make a hole according to the example (B). Fix it on the wall with an appropriate screw. (Please use glue to block the hole to prevent water leakage. )

- 2) . B: When installing the junction box, take off the 1/2" cap of the C wire in the middle. This product supports standard 3 1/4" and 4" junction box. After installing the back cap on the wall ,use waterproof sealer to seal it.

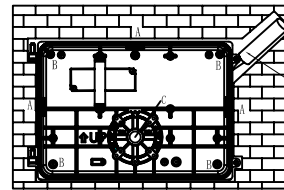

Daub waterproof glue

- 4). Make sure all wires are connected correctly, and lock up with the screw.

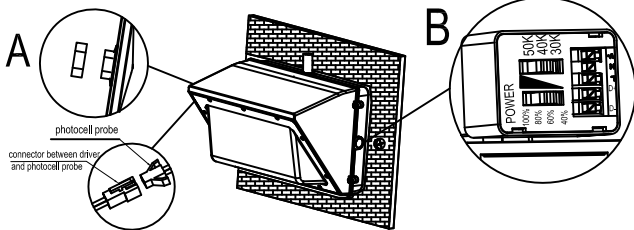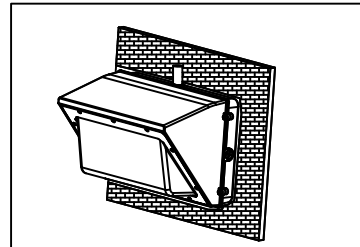

- 1) .If you need the light photocell function, remove the light control cover A.
- 2) .Like picture B, Unscrew the plug, adjust wattage and cct as desired, and tighten the plug .

### CCT & Wattage Adjustable installation instructions

### 4. Checking

- 1). Does all the wires connect in a correct way as the pictures show below?
- 2). Is the ground lead installed appropriately?
- 3). make sure the photocell function well.

