 


6-INCH MINI CHAINSAW

USER MANUAL (MODELS:OCST6)

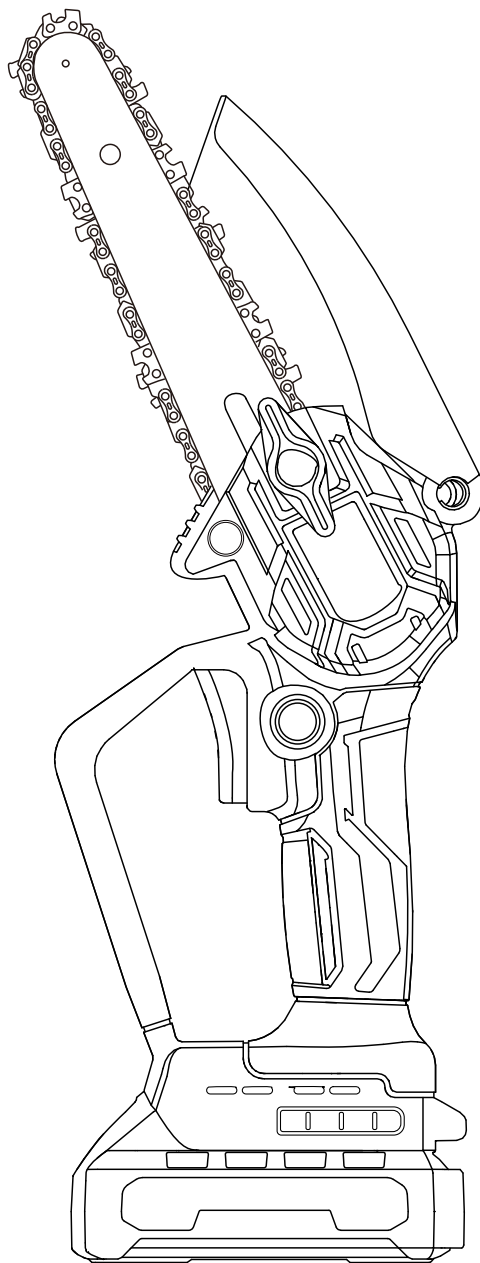

Dear Customer:

Please read all safety rules and instructions carefully before operating this tool.

Product Questions or Concerns? Contact US: support@orblontool.com

CATALOG

Electrical Safety	EN.1
Product Information	EN.1
Understanding the composition of your chainsaw	EN.2
How to properly use the security lock	EN.3
How to lubricate the chain	EN.3
How to replace and adjust the tension of a chain	EN.4
How to charge the battery with the charger	EN.5
How to troubleshoot	EN.6
The use and care of chainsaws	EN.7
The use and maintenance of battery tools	EN.8
Safety Warnings for Charger	EN.8
Maintenance & Cleaning	EN.9
Extended functions	EN.9

Electrical Safety



Always check the voltage of the power supply corresponds to the voltage on rating plate.

Product Information

Technical Specifications

6 INCH MINI CHAINSAW

Model No.	OCST6
Max. Cutting Diameter	100 mm
Guide Plate Length	6 Inch

BATTERY PACK


Battery Pack Type	LI-Ion
Voltage	20 V
Capacity	1.5 AH

Intended Use

This machine is suitable for garden pruning, shrub pruning, small branch pruning, wood cutting, widely used in gardens, parks, farms, roads, pastures, orchards, greenhouses.

NOTICE: Any other uses or modifications to the machine are deemed to be improper usage and may result in serious physical injury. The manufacturer accepts no responsibility for damages attributable to misuse.

 Understanding the composition of your chainsaw

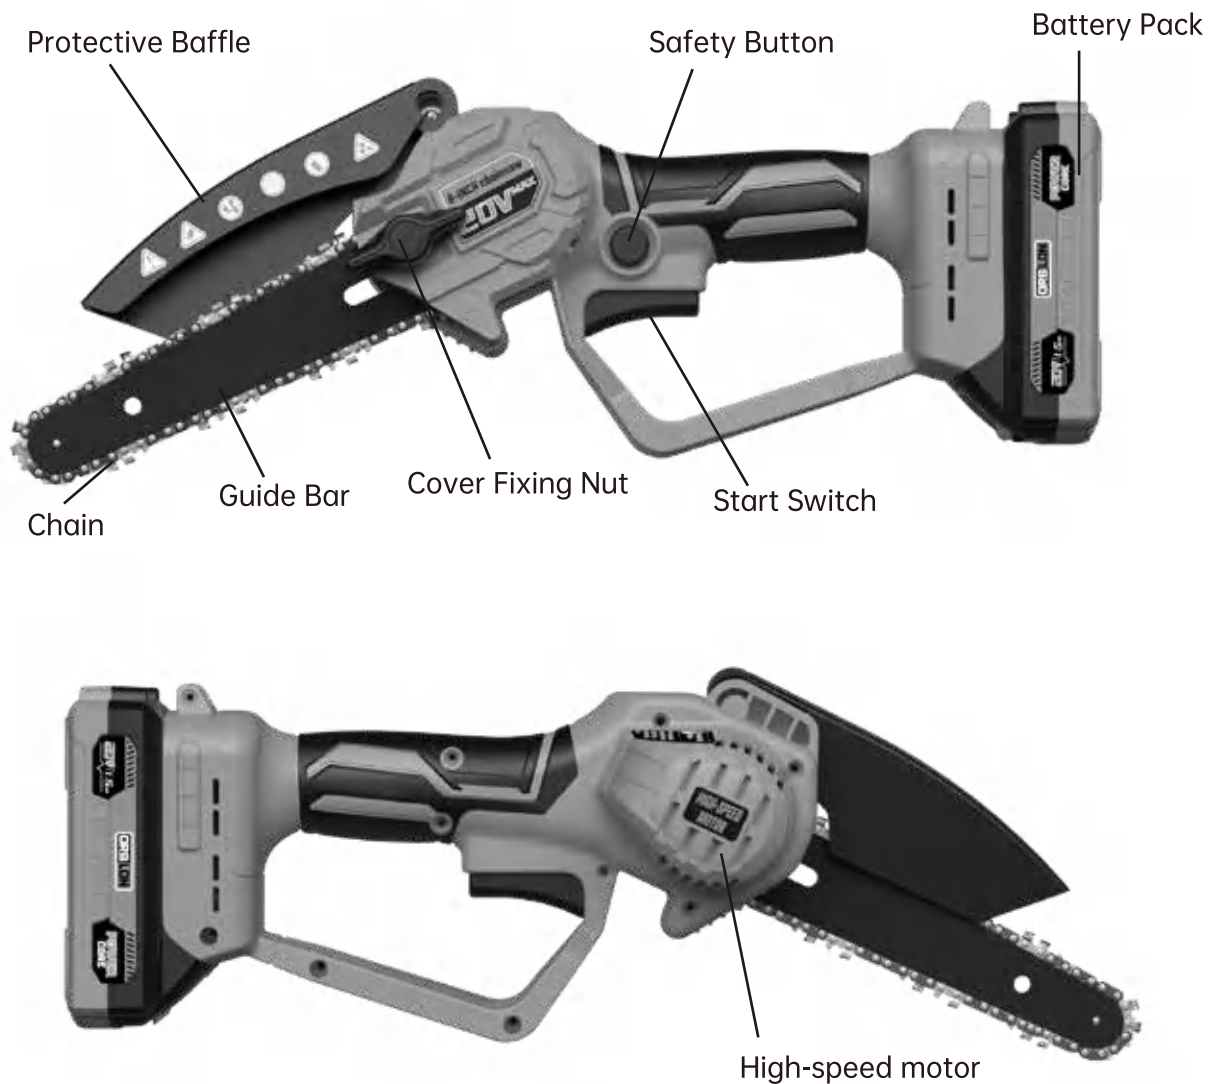

! NOTICE:

To reduce the risk of serious personal injury, turn the unit off and remove the battery pack before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

How to properly use the security lock



⚠ NOTICE:

When not using the chainsaw, please move the safety lock to the "Lock" position to prevent accidental injuries.

Our Safety Switch Advantages:

To operate the machine, both the safety button and the start button must be pressed simultaneously, preventing accidental activation and potential injury.

How to lubricate the chain

 


Angle the chainsaw downward and drip oil from the top down using an oil can. Once refueled, start the chainsaw briefly to ensure the chain is thoroughly lubricated.

⚠ NOTICE:

We recommend lubricating every 10 cuts.

How to replace and adjust the tension of a chain

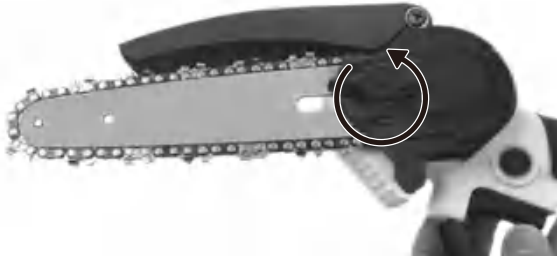


1. Unscrew the screw to open lid.



2. Remove the cover.

 The sawtooths are facing forward, indicating that the installation is correct.

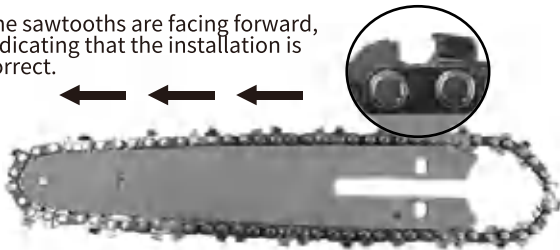

3. Take out the guide plate, install the chain. Attention put the chain's direction correctly!



4. Use the screwdriver to adjust the position of the pin to install the guide plate.



 
5. Use the screwdriver to adjust the pin to adjust the tightness of the chain.



6. When the chain can be slightly pulled apart, the tightness is appropriate.




7. Put the lid on.

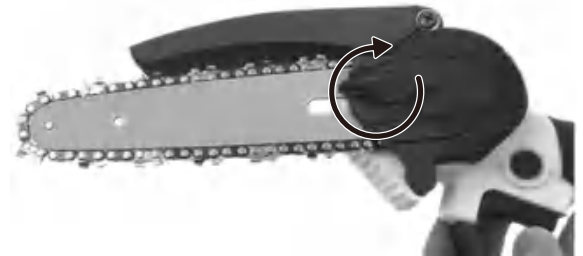

8. Tighten the screws.

How to charge the battery with the charger

 - Before using for the first time, the battery needs to be fully charged.
- Do not expose the battery to extreme conditions such as high temperature or shock, otherwise there is a risk of personal injury due to electrolyte leakage.
- Before charging, please check the surface of the battery to make sure it is clean and dry.

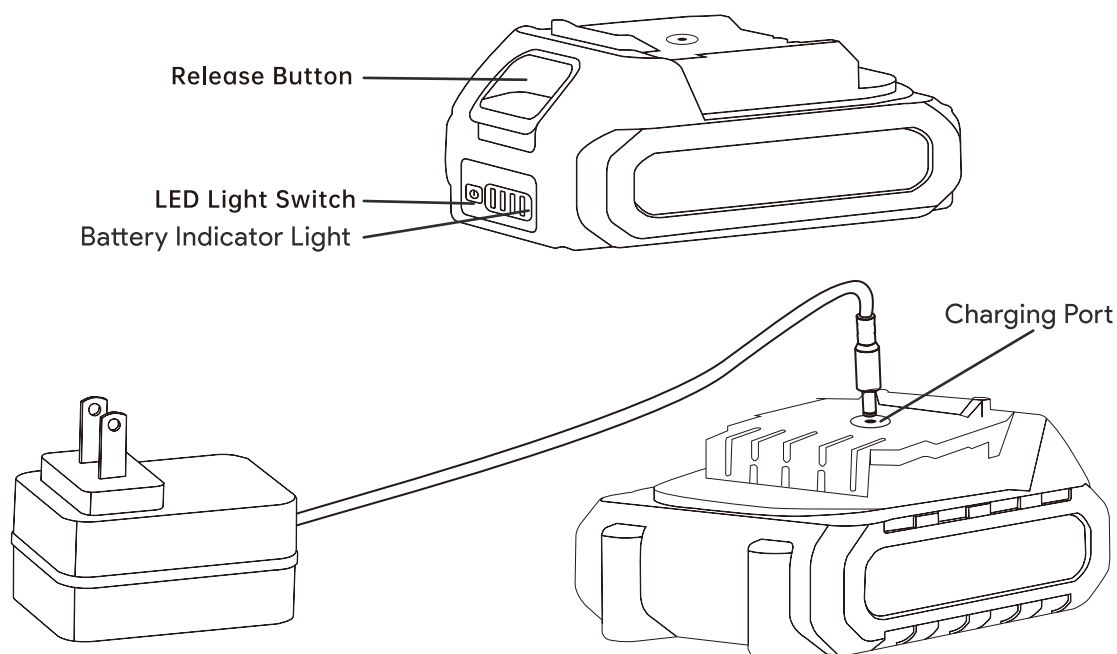

Indicator Light	Status
Red	Charging
Green	Charging completed

How to troubleshoot

Problem	Possible Reason	Possible Solution
How do I tighten the chain when it is slightly loose while cutting?	The chain is not installed in place / the chain is slightly loose due to too much torque when cutting	Dear, you can check the user manual EN.4, which has detailed instructions on how to tighten the chain.
	The guide bar did not fixed completely	Firmly tighten the bar locking knob
I give the battery fully charged state, the chainsaw can not start properly, how should I solve it?	Battery causes	For the above problems, there may be a variety of reasons leading to, we recommend direct message our after-sales email: support@orblontool.com , we let the professional team dock with you, to give you a satisfactory solution.
	Chainsaw causes	
Is it normal for the chainsaw to stop automatically when I am cutting for a long time?	Low battery	Check whether the battery power is sufficient, if the battery indicator shows only 1 cell of electricity, we recommend that the battery is fully charged before continuing to work.
	Chainsaw overheating protection	When the chainsaw is working for a long time, the motor may automatically trigger the overheating protection function to stop cutting, effectively protecting the life of the chainsaw and allowing it to continue normal use after cooling down.
How should I solve the problem when the chain gets stuck when the chainsaw is cutting?	There are too many wood chips inside the cover, causing the chain to get stuck	We will remove the cover, clean the wood chips inside can be used normally, there are instructions in the user manual EN.6 how to remove the cover.

The use and care of chainsaws

1. Do not forced use the chainsaw. Apply the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
2. Do not use the chainsaw if the switch can not be turned on and off. Any chainsaw that cannot be controlled with the switch is dangerous and must be repaired.
3. Disconnect the plug from the power source and/or the battery pack from the chainsaw before making any adjustments, changing accessories, or storing chainsaw. Such preventive safety measures reduce the risk of unexpected start.
4. Store unused chainsaws out of the reach of children. Do not allow people unfamiliar with chainsaws or these instructions to operate them. Chainsaws are dangerous in the hands of untrained users.
5. Maintain the chainsaw. Check for misalignment or binding of moving parts, broken parts and any other conditions that may affect chainsaw operation. If there is damage, have the chainsaw repaired before use. Many accidents are caused by poorly maintained chainsaws.
6. Keep cutting tools sharp and clean. Properly maintained cutting tools have sharp cutting edges that are less prone to knotting and easier to control.
7. Use the chainsaw and accessories in accordance with these instructions, taking into account the working conditions and the work to be performed. Using the chainsaw for operations different from its intended use may result in hazardous situations.
8. Children should be supervised to ensure that they do not play with chainsaws.

The use and maintenance of battery tools

1. Whenever possible, use the manufacturer-provided battery or compatible Dewalt batteries with this device to avoid issues such as improper functionality or even potential device burnout caused by other batteries.
2. Try to use the charger specified by the manufacturer for charging. A charger suitable for one battery pack may create a fire hazard when used with another battery pack.
3. Do not disassemble the battery pack to prevent damage to the battery or even the risk of short circuit.
4. Protect the battery from heat, such as continuous strong sun-light, fire, water and moisture. Prevent the danger of explosion.
5. Use the chainsaw only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
6. When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or fire.
7. Under abusive conditions, liquid may be ejected from the battery, please avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help immediately. Liquid ejected from the battery may cause irritation or burns.



CAUTION! RISK OF EXPLOSION!
Never charge non-rechargeable batteries!
Protect the rechargeable battery from heat, such as continuous strong sun-light, fire, water and moisture.
Prevent the danger of explosion.
Max. 50°C

Safety Warnings for Charger

- Do not allow any liquid to come into contact with the charger. Danger of electric shock may occur.
- Do not place tools or chargers near the sink, washbasin, toilet, or any other places near water.
- Do not spill liquid of any kind on the chainsaw or the charger. Doing so may short out parts, cause damage to the product and create the risk of fire or electric shock.
- The most suitable temperature to charge the battery packs are between 68°F-77°F. During charging, batteries must be placed in well ventilated area.
- The chainsaw is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision instructions.
- Children must be supervised not to play with the appliance.
- Do not recharge non-rechargeable batteries!

Maintenance & Cleaning

 


Before cleaning and maintenance, always switch off the chainsaw and remove the battery.

- Clean the chain carefully after each use.
- Wipe the chain with lubricating oil and spray with metal protection spray.
- Do not spray the equipment with water or break it into the water, otherwise it may cause electric shock.
- Clean the machine casings regularly with a soft cloth, preferably after each use, keep the ventilator, motor room and equipment handle clean.
- Remove persistent dirt using a soft cloth moistened with soapsuds. Do not use any solvents such as gasoline, alcohol, ammonia, etc. Chemicals such as these will damage the synthetic components.

Extended functions

This product can be combined with a tall pole to form a Pole saw, allowing you to use the most cost-effective cost to meet the needs of users in different scenarios:

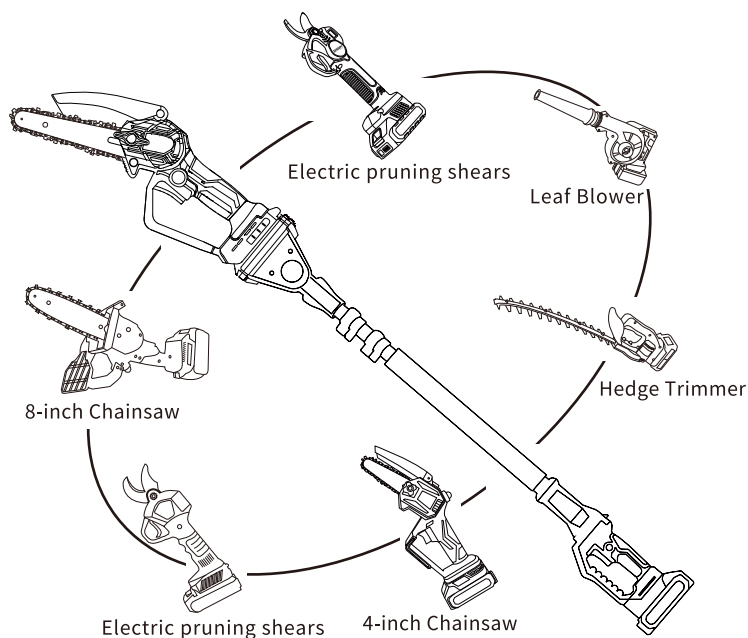

NOTE

The package does not include the high rod, you can visit the ORBLON brand in the amazon store to buy this accessory!



Contact Us: support@orblontool.com

Brand: ORBLON

Product name: 6-INCH MINI CHAINSAW

Model number: OCST6

Manufacture: Chongqing Dianche Technology Co., Ltd.

Address: 4-24-0082, No. 111, Fuzhuangcheng Avenue, Huixing district, Yubei District, Chongqing, 401120



C&E Connection E-Commerce (DE) GmbH

Zum Linnegraben 20, 65933, Frankfurt am Main, Germany

E-Mail: info@ce-connection.de



MADE IN P.R.C.