

Specification:

Voltage: AC110-220V, 50-60HZ

Power: 100W

Light Source:

LED:10w*8PCS+5050*96PCS

Operation: DMX, Sound, Master-slave, Auto

LED Light Equipment User Manual



Please read the instructions carefully before us

Attention: Please read the instructions carefully which includes important information about the installation, operation and maintenance.

DMX512 control:

16 Channel		
Channel	Explain	value
1	Level	0-255
2	Vertical	0-255
3	Level Vertical speed	0-255
4	The dimmer	0-255
5	Strobe	0-255
6	Red 1	0-255
7	Green 1	0-255
8	Blue 1	0-255
9	White 1	0-255
10	Red 2	0-255
11	green2	0-255
12	Blue 2	0-255
13	The color <small>Auto</small>	0-255
14	The motor <small>Auto</small>	0-255
15	Auto speed	0-255
16	Reset	250-255 (5S)

Menu management:

Addr	A001-A512	512
<u>SLnd</u>	Auto	Auto
	<u>Soun</u>	Sound
	SL 1	Console mode
	SL 2	Vice machine model
<u>SHnd</u>	SH 0	No effect
	SH 1	effect1
	SH 2	effect2
	SH 3	effect3
<u>SEnS</u>	0-99	Acoustic sensitivity adjustment
<u>bLAnd</u>	<u>bLAc</u>	No 512 No effect
	Auto	No 512 <small>Auto</small>
	<u>Soun</u>	No 512 Sound
	<u>HoLd</u>	No 512Signal remains in last console mode
<u>LEd</u>	OFF	After 5 seconds No effect
	ON	The screen stays on
<u>dISP</u>	no	Reverse speed
	YES	Forward speed
<u>rPAN</u>	no	X Forward speed
	YES	X Reverse speed
<u>rTiL</u>	no	Y Forward speed