

LED CONFETTI MACHINE USER MANUAL

1. This machine has 3 control ,digital control, wireless remote control and DMX control.
2. The remote control function is 4 key control, the function is as follows: R key is the LED frequency flash key, according to the flash of A seven color frequency, according to the second white light flash, press the third time to close. FOGkey is the control key for the relay switch. Press the first time to press the second. B key for R, G and B color color selection, press the red, press the second green, press the third blue, and then close. R key to jump, gradient select key, press one hop, press the second gradient, and then close again. Note: when the DMX512 signal is connected, the address code of A001 is beating, the remote control is not working, DMX is the priority.
3. Digital keys function: A menu button, the B key (A: control relay to open the key), C minus key (control relay for close key), D save or confirm button (from left to right).
4. Digital tube display content description: (1), a001-512 -- -dmx152 address code setting. (2) the OFF relay is OFF, the switch is connected by the + key relay, shows ON, the break relay is broken, and the OFF is displayed. (3) R - - 000-255 red light. (4) G - -000-255 green light. (5) B - -000-255 blue light. (6) cc00-99 - jump. (7) cp00-99 - gradient. (8) cf00-99 -- -seven color flash. (9) ff00-99 - white light frequency flash (this frequency is controlled by R, G, and B trichromatic brightness).
5. DMX512 function: no. 1 channel 50 begins to control the relay; Channel 2 red brightness control; Channel 3 green brightness control; Channel 4 blue brightness control; The fifth channel is strobe.