


600W Haze Machine User Manual

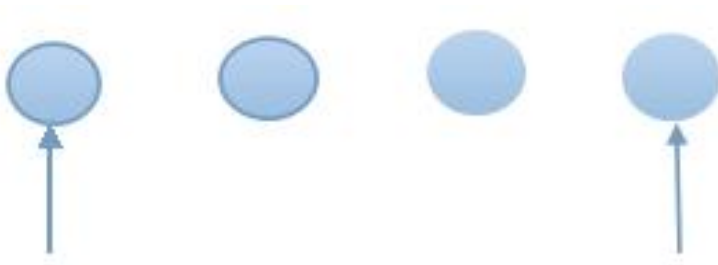

MENU UP (ON/OFF) DOWN(ON/OFF) ENTER

Digital tube code

A 1-511 add:512DMX
P 1-100 1-100 can Spray but smoking can not to move
F 1-100 Fan 1-100 0 stop
D 1-200 Duration 1-200
1 1-200 interval 1-200

Digital tube stroke cycle Said standby

- 1.Spray smoke: press the up button (on/off) work/stop;.According to the menu display P, then press the up or down key, 1-100 range are blowing smoke, smoke not to move, and then determine the key save.
- 2.Spray smoke time to adjust: according to the menu display d then press the up or down key, range 1-200 seconds, and then determine the key. Such as 8 d is blowing smoke 8 seconds.
- 3.The time gap to adjust: according to the menu display 1 again press the up or down key, range 1-200 seconds, and then press save determine key. 1 5 is clearance for five (5) seconds.
- 4.Timing quantitative: press down key (timing)/stop work. Smoke opportunities in accordance with the smoke injection time and interval time set numerical automatic cycle of work. In item 3.4 above regulation, belching smoke eight seconds interval for 5 seconds, so cycle.
5. DMX: Automatic priority DMX, a total of 2 channels, The first is for spraying smoke, The second is for the fan; Have a DMX other function is invalid, press menu button to press the up or down key, set the address code, according to determine the key.
- 6.Remote control: With smoke and fan is by setting the parameters of the work.