


8	LED4 Dimming	0-255	0---100%
9	LED5 Dimming	0-255	0---100%
10	LED6 Dimming	0-255	0---100%
11	LED7 Dimming	0-255	0---100%
12	LED8 Dimming	0-255	0---100%
13	LS1 Dimming	0-255	0---100%
14	LS2 Dimming	0-255	0---100%
15	Ring1	0-255	Ring1 Effect
16	Ring2	0-255	Ring2 Effect
17	Effect	0-7	No Effect
		8-17	Effect 1
		18-27	Effect 2
		28-37	Effect 3
		38-47	Effect 4
		48-57	Effect 5
		58-67	Effect 6
		68-77	Effect 7
		78-87	Effect 8
		88-97	Effect 9
		98-107	Effect 10
		108-117	Effect 11
		118-127	Effect 12
		128-136	Effect 13
		137-146	Effect 14
		147-156	Effect 15
		157-166	Effect 16
		167-176	Effect 17
		177-186	Effect 18
		187-196	Effect 19
197-206	Effect 20		
207-216	Effect 21		
217-226	Effect 22		
227-236	Effect 23		
237-246	Effect 24 self-propelled multi-effects		
247-255	Effect 25 Sound		
18	Effect speed	0-255	From slow to fast
19	Reset	241-250	For 5 seconds to reset

LED PROFESSIONAL STAGE LIGHT EQUIPMENT

LED MINI SPIDER LIGHT + light band+Laser

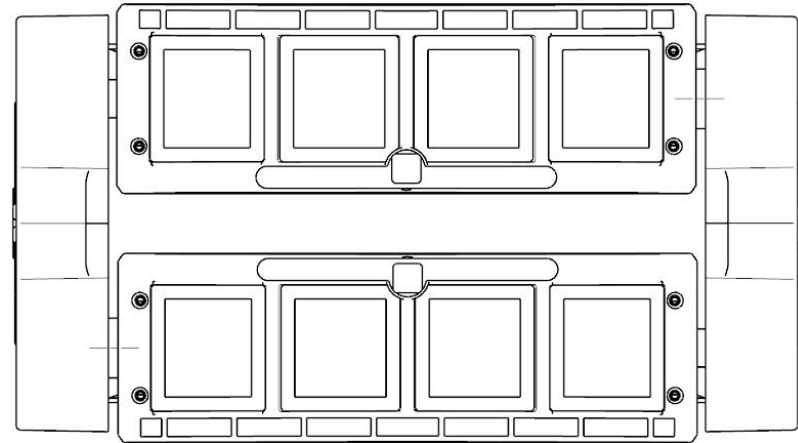

Please Read Over This Manual before Operating the Light Fixture

Menu:

ADDR	A001-A512	Address setting
CHND	9CH	11Channel option
	19CH	19 Channel option
SLND	MAST	Master option
	SLAV	Slave option
	Soun	Sound control selected
SHND	Sh1---sh24	Effect selected. Sh24 auto effect;SPED
SOUD	ON,OFF	Sound control Switch
SENS	0-100	Sound Sensitivity(0 close,100 the
LED	OFF	Background Light Switch
	NO	Background Light Switch
LISP	NO	Reverse Display
	YES	Reverse Display
TIL1	NO	Y1 Motor reverse
	YES	Y1 Motor reverse
TIL2	NO	Y2 Motor reverse
	YES	Y2 Motor reverse
TEST		Automatically Test
RSET	YES,NO	Reset

DMX Channel Function

9 Channel Mode

Chann	Function	Value	Instruction
1	Motor1 route	0-255	60°---150°
2	Motor2 route	0-255	60°---150°
3	Sum Dimmer	0-255	0---100%
4	Strobe	0-9	No strobe
		10-255	Strobe speed from slow to fast
5	LS1 Dimming	0-255	0---100%
6	LS2 Dimming	0-255	0---100%
7	Ring1	0-255	Ring1 Effect
8	Ring2	0-255	Ring2 Effect
9		0-7	Effect1

		8-17	Effect2
		18-27	Effect3
		28-37	Effect 4
		38-47	Effect 5
		48-57	Effect 6
		58-67	Effect 7
		68-77	Effect 8
		78-87	Effect 9
		88-97	Effect 10
		98-107	Effect 11
		108-127	Effect 12
		128-136	Effect 13
		137-146	Effect 14
		147-156	Effect 15
		157-166	Effect 16
		167-176	Effect 17
		177-186	Effect 18
		187-196	Effect 19
		197-206	Effect 20
		207-216	Effect 21
		217-226	Effect 22
		227-236	Effect 23
		237-246	Effect24 Self-propelled multi-effects
		247-255	Effect 25 Sound

19 Channel Mode

Chann	Function	Value	Instruction
1	Motor1 route	0-255	60° ---150°
2	Motor2 route	0-255	60° ---150°
3	Sum Dimmer	0-255	0---100%
4	Strobe	0-9	No strobe
		10-255	Strobe speed from slow to fast
5	LED1 Dimming	0-255	0---100%
6	LED2 Dimming	0-255	0---100%
7	LED3 Dimming	0-255	0---100%