

Product Name: LED 400W strobe
Voltage: AC110V ~ 240V 50-60Hz
Power: 400W
Source: LED COB integrated lamp beads
Lamp quantity: 4 PCS
Lamp beads power: 100W / PCS
Color: white
Color temperature: 6500 ~ 7200K
Channels: 8 ch/ 6 ch / 2 ch mode
Control mode: DMX / AUTO / Sound
Function: Strboe / Lighting/ Photography lighting
Strobe Speed: 0~20/S
Packing: pearl cotton or flight case
Protection class: IP20
Size: 54 * 32 * 20.5CM
Weight: 7.5KG

LED ATOMIC 400W STROBE

menu Manual



8-channel mode		
channel	channel data	Functional Description
CH1	0	Dimmer Close
	1-255	Dimmer From dark to bright
CH2	0-4	Sprobe Speed Close
	5-253	Sprobe Speed from slow to fast
	254-255	Sprobe Speed Spikes
CH3	0-4	Chase Close
	1-255	Chase from slow to fast
CH4	0-4	Effect Close
	5-46	Dancing
	47-89	Lightning
	90-130	Random Strobe
	131-170	Ramp up
	171-214	Ramp up-down
	215-255	Ramp down
CH5	0-4	Effect Speed Close
	5-255	Effect Speed Close from slow to fast
CH6	0-4	Auto Close
	5-255	Auto Open
CH7	0-4	Sound Close
	5-255	Sound Open
CH8	0-4	Lighting Close
	5-255	lighting From dark to light
6-channel mode		
channel	channel data	Functional Description
CH1	0-4	Brightness Close
	5-255	Dimmer From dark to light
CH2	0-4	one fourth Brightness Close
	5-255	one fourth Dimmer From dark to bright
CH3	0-4	one fourth Dimmer Close
	5-255	one fourth Dimmer From dark to bright
CH4	0-4	one fourth Dimmer Close
	5-255	one fourth Dimmer From dark to bright
CH5	0-4	one fourth Dimmer Close
	5-255	one fourth Dimmer From dark to bright
CH6	0-4	Strobe Speed Close
	5-255	Strobe Speed from slow to fast
2-channel mode		
CH1	0	Dimmer Close
	1-255	Dimmer From dark to bright
CH2	0-4	Sprobe Speed Close
	5-255	Sprobe Speed from slow to fast

<Address>		0-512	DMX Address
<Display>	< LigtOff >	Ligh	Always lit.
		1Min	1 minute Close
		2Min	2 minute Close
		3Min	3 minute Close
	< MenuBak >	Off	No return
		1Min	1 minute returns
		2Min	2 minute returns
	< LigtFlh >	3Min	3 minute returns
		Off	off
	< Retern >	Open	open
<Special>	< ChuMode >		Return to main menu
		DMX1	1-channel mode
		DMX2	6-channel mode
		DMX3	7-channel mode
	< RunMode >	Detn	Controller Mode
		Slve	Slave(DMX mode requires choosing)
		Mast	Hosts
		Aotu	Auto
		Soud	Soud
	< DmxClea >	Off	off
		Open	open
	< ResetDf >	Yes	Restore Default Settings
		No	No
	< Retern >		Return to main menu
< Control >	CH01 - CH04	0 - 255	Manually Channel Control
< ChValue >	CH01 - CH04	0 - 255	Channel level inquiry
< Version >		V003	The software version number
Exit			Exit menu

Buttons S1: return to the previous menu interface; (<,>, <Sub>)

Buttons S2: turn on the menu (or value -); (longpress 1S even after reduction)

Buttons S3: turn down menu (or numerical +); (longpress 1S even after adding)

Buttons S4: enter menu settings or save the settings and return to the previous menu

<: Menu selection instruction

>: Function selection instruction

<Sub>: have a summer menu instructions