

# **SANIBEL 7PIECE DINING SET**

INSTRUCTION MANUAL



# THANK YOU FOR PURCHASING OUR MIRADOR SANIBEL 7PIECE DINING SET!

This manual will provide you with clear and detailed instructions on how to safely and correctly assemble and maintain your dining set, to ensure it brings you many years of use and enjoyment.

#### IMPORTANT

Please read the entire manual carefully before assembling and using your dining set, and please ensure the manual is kept in a safe place for future reference.

Any use or modification to the dining set not included in this manual shall be considered as improper use, which may cause considerable danger to users and property and will void the product warranty.

Please only use this product for its intended purpose within a residential environment. Failure to do so will void your warranty.


We reserve the right to make changes for product improvements.

For parts and customer service, please call +1 (877)-506-4777 in the U.S. and Canada (English and Spanish) Monday - Friday: 6:30 am - 4:30 pm, Saturday – Sunday: 8:30 am – 4:30 pm, Pacific Time. Or email: support@miradoroutdoor.com

Digital instruction manual is also available on our official website **www.miradoroutdoor.com** for your reference.

# **TABLE OF CONTENTS**

- Minimun Overall Size
- Minimun Recommended Outdoor Space

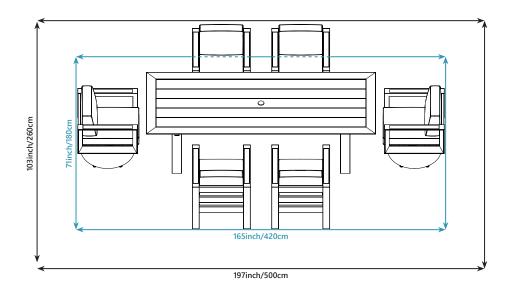

- Before Assembling Your Dining Set	3
- Important Safety Advice	3
- List of Parts	5
- Assembly	6
- End of Assembly	7
- Enjoy Your Dining Set	8
- Care & Maintenance	9
- Warranty & Complaints Procedure	10
- Disassembly & Disposal of the Product	11

# BEFORE ASSEMBLING YOUR DINING SET

WARNING: Important safety instructions. Follow all instructions, since incorrect assembly can lead to severe injury.

#### Check to ensure there are no missing parts:

Before you begin assembly, please check that you have all the parts required to assemble your dining set. Please also carefully check that the quantity of parts match with that of the model you have purchased.

If any parts are missing, please refer Warranty & Complaints Procedure to contact customer service before beginning the assembly.

#### Prepare the parts you will need for each step:


In the **Assembly** section of the manual, each step indicates the necessary parts and quantities required to complete the step. We recommend that you prepare the parts you will need for each step. Doing this will save you time and effort during assembly. If possible, place the parts on cardboard or other soft surface to protect from scratching the painted surfaces.


### **IMPORTANT SAFETY ADVICE**

For the safety of all persons assembling and using the dining set, it is important to follow the safety guidelines below.

Adjust and secure the height of the swivel chair and table before using.	Always wear appropriate work shoes, gloves and eye protection when working.	Work well away from power lines, particularly when handling metal parts.	If using power tools or a ladder, always follow the manufacturer's safety instructions.	If damage is visible, stop using it immediately and contact authorized personnel for repair.

Always keep the entire base of the chair in contact with the ground. If the chair is wobbly, tilted, or unstable do not continue using the chair until it is fixed or replaced.	Keep children, body parts and clothing away from the swivel parts to prevent them from getting caught in it.	Do not exceed the weight limit when using the dining set. (chair: 352lbs/160kg, table: 440lbs/200kg)	Please recycle packaging where possible.	Only use replacement parts that are approved by the manufacturer.
		MAX	(A)	Approved

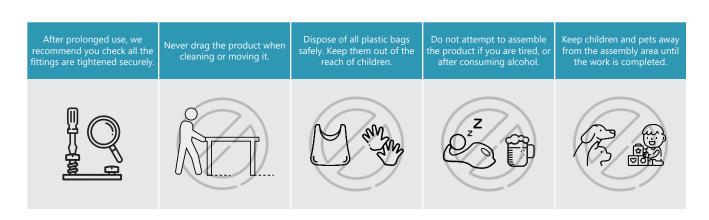

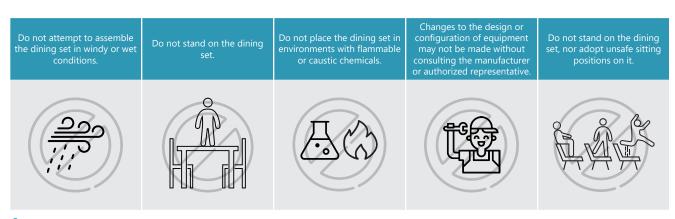


# **LIST OF PARTS**

		REF	PART NAME	QTY
Α			Table top	1
В			Table leg (bottle opener)	1
C			Table leg	1
D	D E	0	Umbrella hole ring cap	1
E			Umbrella hole inner ring (φ38mm/φ1.5'')	1
F	Umbrella hole ring sub- assemboies		Umbrella hole inner ring (φ48mm/φ1.9")	1
G			Umbrella hole outer ring	1
н			Bolt M8x20	10+2
1			Washer Ф8х1.5	10+2
M			Hex wrench	1
0			Captain chair	2
Р			Dining chair	4
Q			Furniture cover	1

## **ASSEMBLY**




Use a hex wrench M to secure the table leg B and C , table top A together with washers I and bolts H .

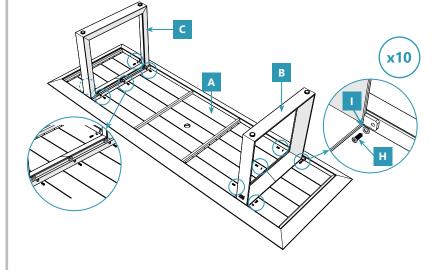






The umbrella hole ring sub-assemboies is pre-assembled to the table top. If found loose, reposition according to the illustrations on the right.

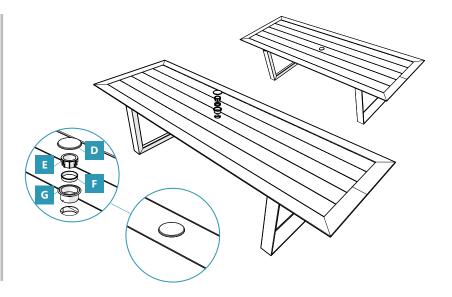



# **END OF ASSEMBLY**

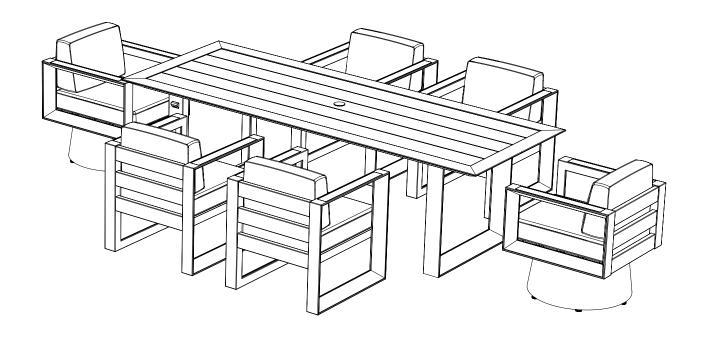

## **ENJOY YOUR DINING SET**

#### **Bottle opener:**

Find the bottle opener at the location shown in the illustration.

#### **Umbrella hole:**

Find the corresponding umbrella hole ring to adapt to outdoor umbrellas with different pole diameters.

Notice: A heavy-duty base is always required to stabilize the umbrella in this using scenario.

#### **Height adjustment:**

Adjust the height of the furniture by finding the leveling feet screws at the bottom of the dining table leg and the captain chair.

urn the screw clockwise to lower the chair/table.
Turn the screw counter clockwise to raise the chair/table.


#### **Swivelling:**

Remove the seat cushion, lay cardboard box or soft cloth on the floor, flip the captain chair over and cut the cable ties.

#### **Handy mobility:**

The wheels at the bottom of the dinning chairs help you move the chair more easily when needed.

#### **Enjoy your Mirador Sanibel Dinning Set!**

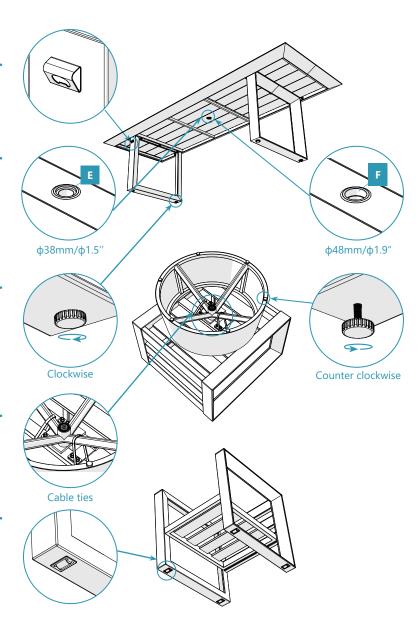

## **CARE & MAINTENANCE**

#### FRAME

- Dust and dirt will collect on the frame and will require periodic cleaning.
- Use water or mild soap to clean.
- · Be sure to drain any water accumulated inside the frames. Air dry or wipe with a soft clean cloth.



- When the cushion becomes water-saturated, unzip the cushion cover to allow for ventilation and facilitate the drying process. Place the
  cushions upright with the zipper facing down to drain excess moisture more quickly.
- Store cushions indoors during inclement weather and rainy seasons.



#### SUNBRELLA CUSHION FABRIC

- Dust and dirt will collect on the sunbrella fabric sunbrella and will require periodic cleaning.
- · Store it in a dry area and out of the elements when not in use or cover with commercially available outdoor furniture covers.
- Blot (don't rub) liquid spills with a clean, dry cloth.
- Brush off dirt before it becomes embedded in the fabrics and wipe up spills or clean soon after a spill occurs. The quicker you clean spills, the easier they can be to remove.
- Use water or mild soap to clean.
- Not machine washable.
- · Solutions for fabric wrinkling.
  - 1. Use an iron on the synthetic setting. Avoid using steamers or the steam setting.
  - 2. Test a small, hidden area before ironing the whole piece due to varying iron temperatures.

#### Cleaning methods for different stains

- · Oil-based spills.
  - 1. Apply an absorbent such as corn starch, then remove with a straight edge.
  - 2. Spray on a mild cleaning solution of soap and water.
  - 3. Rinse the fabric thoroughly to remove all soap residue.
  - 4. Air dry.
- Mildew.
  - 1. Prepare a solution of 1 cup of bleach and 1/4 cup mild soap per gallon of water.
  - 2. Spray on entire area and allow to soak into the fabric for 15 minutes.
  - 3. Clean entire surface area with a sponge, clean towel or very soft bristle brush.
  - 4. Rinse thoroughly to remove all soap residue.
  - 5. Air dry.

# WARRANTY & COMPLAINTS PROCEDURE

For terms and conditions of our limited warranty, please visit www.miradoroutdoor.com or contact your local Mirador sales representative.

#### Complaints procedure:

- The complaint must include an order number or transaction number. Goods without an order number or transaction number are not covered under the warranty.
- The complaint must include a detailed description of the defect, the name of the company which assembled the product if 3rd party was used and the date when the defect was discovered.
- At Sorara Outdoor Living USA Inc's discretion, customer must offer supplier the photos/videos of the issue/damaged parts. Otherwise, supplier reserves the right to refuse replacement parts or credit.
- Please save a copy of your purchase receipt.

#### Contact:

**Customer Service:** support@miradoroutdoor.com **Need Assistance? Call** +1 (877)-506-4777

#### **Hours of Operation:**

Phone Support: Monday - Friday: 6:30 am - 4:30 pm, Saturday - Sunday: 8:30 am - 4:30 pm, PST.

Email Support: We are available 24 hours a day. Please allow up to 24 hours for a response.

Chat With Us Online: miradoroutdoor.com, Monday - Friday: 5:30 am - 2:00 pm, Saturday - Sunday: 8:30 am - 4:30 pm, PST.

**Note:** Our team is available to assist you during these hours. If you have any inquiries or require support outside of these hours, please leave a voicemail, send an email, or use our online contact form. We will get back to you promptly during the next available support hours. Thank you for choosing Mirador Outdoor!

# DISASSEMBLY & DISPOSAL OF THE PRODUCT

Incorrect disassembly of the dining set may lead to serious injury and product damage.

Disassembly should be assigned to qualified personnel with adequate training within the scope of occupational health and safety and knowledge within the scope of recycling.

When the service life of the Mirador Sanibel Dining Set is over, it is necessary to disassemble it for disposal and to sort the individual materials and components in compliance with the local regulations of your state, city and county.

# more to enjoy



