


ENJOY SMART LIFE

EPLO®

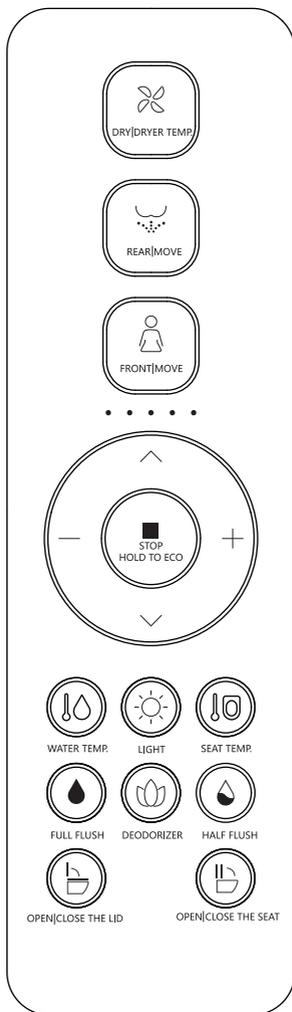

Remote Control Instructions

■ Model: EP-U8PRO/U9PRO

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

E-mail: service@eplo.com

Content

Installation preparation

- 01. Remote control installation _____ 01
- 02. Battery installation _____ 01

Usage instruction


- 01. Remote control illustration _____ 02
- 02. Rear/Front washing _____ 03
- 03. Drying/Dryer temperature _____ 04
- 04. Water volume adjustment _____ 04
- 05. Nozzle position adjustment _____ 04
- 06. Energy saving _____ 04
- 07. Water temperature adjustment _____ 05
- 08. Seat temperature adjustment _____ 05
- 09. Night light _____ 05
- 10. Full flush/Half flush _____ 05
- 11. Auto lid open/close _____ 06
- 12. Auto deodorization _____ 06
- 13. Water tank flush volume adjustment _____ 06
- 14. User code _____ 06
- 15. Other operations _____ 07

Installation Preparation

Remote control installation


Remote control holder installation 1:

1. Drill a 6 mm diameter hole in the wall to a depth of about 35 mm.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Install an anchor into the hole, stick the holder to the wall and secure with screws and then stick the patch with tape.

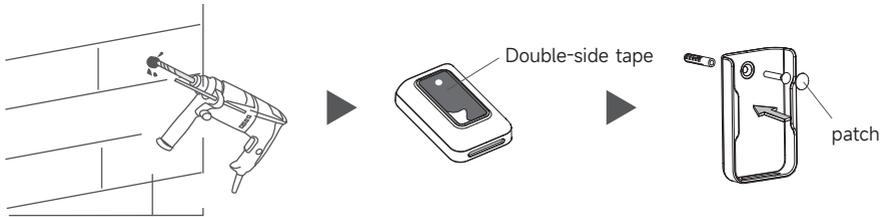


Remote control holder installation 2:

1. Clean and dry the pre-installation area of the holder.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Stick the holder to the wall vertically and then stick the patch with tape.

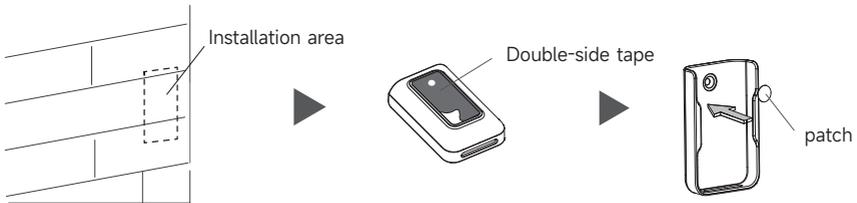

Battery installation:

1. Insert batteries into the remote control.
2. Put the remote control to the holder.

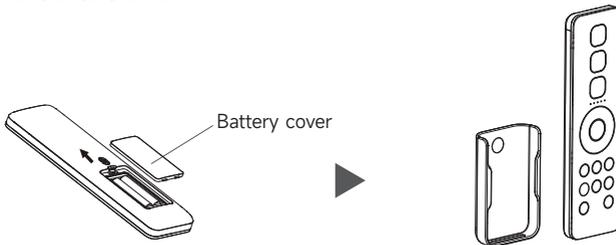


Notice:

1. Please ensure the remote control is within reach when a person on the seat.
2. Do not install and use the product in damp places such as a shower room.
3. Do not place the product in a place where it is easily exposed to water.

Installation Preparation

Remote control illustration

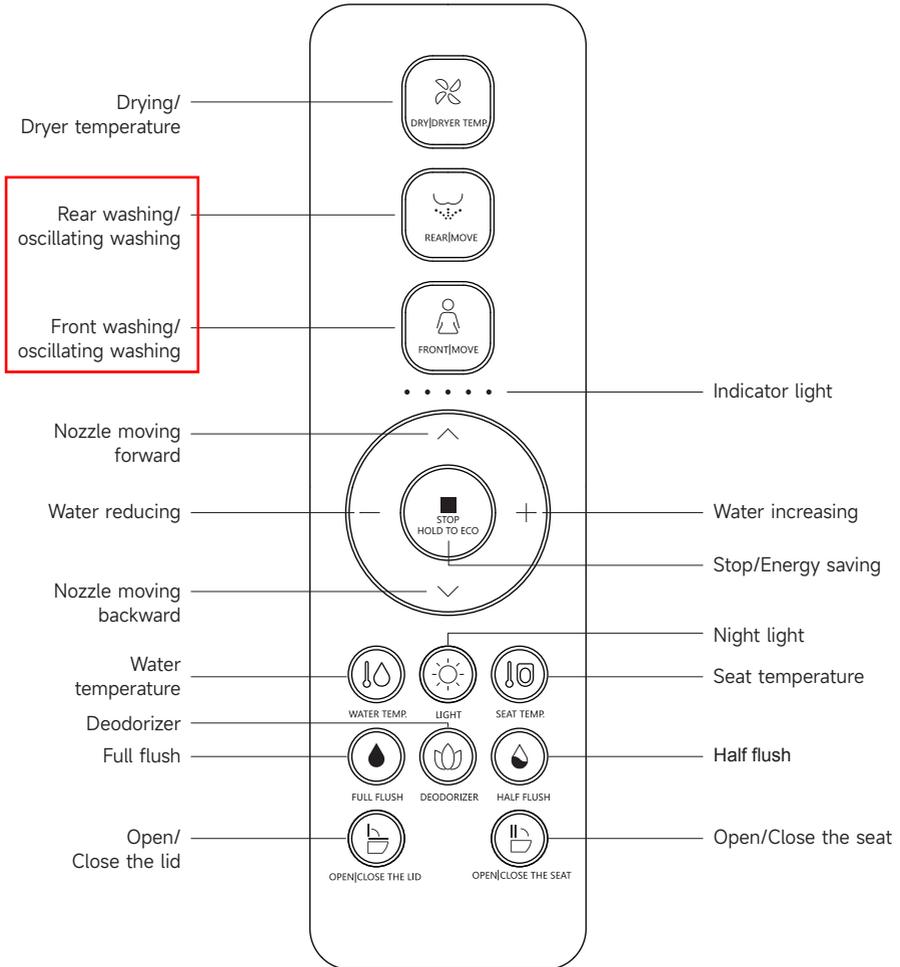

Usage Instruction

Notice :

- Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.
- Please sit backward on the seat for correct washing position and to avoid splashing.
- The nozzle will continue to spray for 1-2 seconds after user stands up during washing, so please press "STOP" button before standing up.

REAR|MOVE



- Press " " button, the indicator light is on showing current water temperature level, it starts rear washing; Press again " " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses " ■ " button.


FRONT|MOVE



- Press " " button, the indicator light is on showing current water temperature level, it starts front washing; Press again " " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses " ■ " button.

Pulse cleaning function (Only for the product with pulse cleaning function.)

- During front/rear washing, long press " " or " " button to turn on/off pulse cleaning mode.

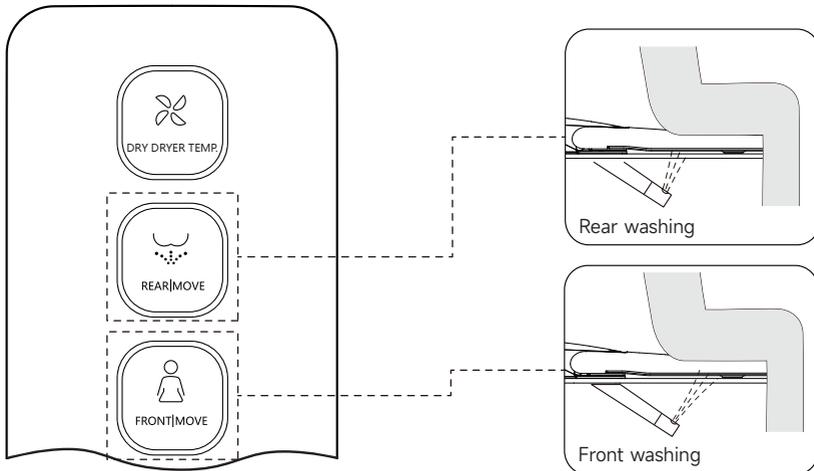


Usage Instruction

DRY|DRYER TEMP (Only for the product with drying function)



① Press "  " button, the indicator is on, showing the current air temperature level. It will stop drying automatically after one cycle or after leaving.

② Under drying, press "  " button to adjust the air temperature between 0-5 level, and the indicator light is on showing the air temperature level. When the indicator light is off, the temperature is at level 0 (room temperature).

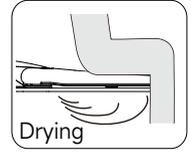

○ ○ ○ ○ ○
Room
temperature

● ○ ○ ○ ○
Level 1

● ● ○ ○ ○
Level 2

● ● ● ○ ○
Level 3

● ● ● ● ○
Level 4


● ● ● ● ●
Level 5

Water volume adjustment

· Press "+" or "-" button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted.

Nozzle position adjustment

· Press "A" or "V" button when it is under function of rear washing or front washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.

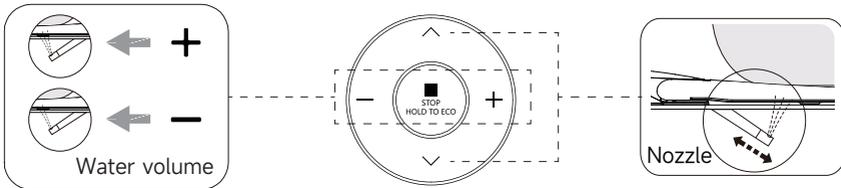

Energy saving



Long press "  " button to enter energy saving mode, long press "  " button again to exit energy saving mode.

Under energy saving mode, seat temperature is set to Level 1 for energy saving.

(Note: If the seat temperature before energy saving is neutral, then it will be neutral as well.)

Remark:

Energy saving mode will be suspended and the product will enter functional mode if the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and the energy saving mode is restored once the seat is no longer being used.

Water temperature adjustment



WATER TEMP.

Short press "  " button to adjust the water temperature between 0-5 level. The indicator light is on showing current water temperature level. When the indicator is off, the temperature is at level 0 (room temperature).


 
 
 
 
 
 Room Level 1 Level 2 Level 3 Level 4 Level 5
 temperature

Seat temperature adjustment



SEAT TEMP.

Short press "  " button to adjust the seat temperature between 0-5 level. The indicator light is on showing current seat temperature level. When the indicator is off, the temperature is at level 0 (room temperature).


 
 
 
 
 
 Room Level 1 Level 2 Level 3 Level 4 Level 5
 temperature

Night light



LIGHT

- Night light adjustment: Short press "  " button to turn on/turn off night light.
- Intelligent mode: Long press "  " button to enter into intelligent mode (Night light will be on or off depending on the surrounding light.). If the product is on intelligent mode, short press "  " button to exit intelligent mode. (Factory setting: intelligent mode)

Half flush/Full flush




HALF FLUSH

- Short press "  " button, the toilet starts half flushing.
- Short press "  " button, the toilet starts full flushing.
- Long press "  " button to turn on/off auto flush function.



FULL FLUSH

When the auto flush function is turned on, toilet will automatically flush after detecting user leaving the seat.

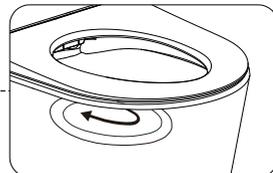

Usage Instruction

Auto lid open/close



Short press "  " button, open or close the lid.

Short press "  " button, open or close the seat.

OPEN/CLOSE THE LID

Long press "  " button to turn on/off auto lid open/close function.



OPEN/CLOSE THE SEAT

Auto deodorization



DEODORIZER

Short press "  " button to turn on/off auto deodorization function.

The deodorization function will be automatically turned on when the user is seated, and will stop after leaving. Under drying, deodorization will stop. (This function is turned on by default.)

Water tank flush volume adjustment

(Only for toilets with water tank flush volume adjustment function)

- Press and hold "  " button, and press the water volume " + " button to increase full flush volume by 1 level.
- Press and hold "  " button, and press the water volume " - " button to reduce full flush volume by 1 level.
- Press and hold "  " button, and press the water volume " + " button to increase half flush volume by 1 level.
- Press and hold "  " button, and press the water volume " - " button to reduce half flush volume by 1 level.

User code

- Radio frequency remote control

- ① Shut off the power supply of toilet
- ② Press and hold "  " button, then press "  " button, the indicator light will flash.
- ③ Re-connect the power plug and press "reset" button.
- ④ The indicator stops flashing and stays on for 2 seconds, indicating that the remote control and the toilet are matched successfully. It beeps once when the self-inspection completes. Then the remote control is ready for use.

Usage Instruction

· IR remote control

- ① Power on the toilet and the self-inspection starts. It beeps once when the self-inspection completes.
- ② Press and hold " ■ " button, then press "  " button, the indicator light will flash.
- ③ Press the Pressure " + " or " - " button to select user 1-9 (as shown below). The indicator light displays the corresponding user code and flashes.
- ④ Press " ■ " button, then press "  " button. The main unit beeps once, indicating that the remote control and the toilet are matched successfully.

● ○ ○ ○ ○ User 1	○ ● ○ ○ ○ User 2	○ ○ ● ○ ○ User 3	○ ○ ○ ● ○ User 4	○ ○ ○ ○ ● User 5	● ● ○ ○ ○ User 6
○ ● ● ○ ○ User 7	○ ○ ● ● ○ User 8	○ ○ ○ ● ● User 9			

Other operations

Quiet mode

- Press and hold the " ■ " button and press the "  " button to turn on/off quiet mode.

Sterilization function

- When no one seated and washing/drying is off, long press "  " button to turn on plasma sterilization function. This function will stop automatically after 2 hours. Under this mode, if any other button is pressed or user is seated, it will stop automatically. (Only for the toilet with sterilization function.)

Automatic pre-wetting function

- Press and hold " ■ " button and press "  " button to turn on or off automatic pre-wetting function. After the automatic pre-wetting function is turned on, the pre-wetting function will be performed when the user is detected to be seated. (Only for the toilet with automatic pre-wetting function.)

Foot sensor function

- Long press "  " button to turn on/off foot sensor function. Foot sensor is deactivated when the user is seated. (Only for the toilet with foot sensor function.)

Foot sensor indicator

- Press and hold " ■ " button, and press "  " button to turn on/off foot sensor indicator. (Only for the toilet with foot sensor indicator.)

APP code matching

- Press and hold "  " and "  " button simultaneously for longer than 3 seconds to start APP code matching. (Only for the toilet with APP)

Voice function


- Press and hold the "  " button and "  " button at the same time for more than 3 seconds to turn on or off the voice function. (This combination button is only available for toilets with voice function)

Electronic bidet tank flushing

- Press and hold "  " and "  " button simultaneously for longer than 3 seconds to start the flushing by water tank of electronic bidet. (Only for the toilet with electronic bidet tank flushing function.)

Remark:

- The buzzer will "BEEP" once when the user presses one button indicating that the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during nozzle spraying, the wand cannot be retracted, please wait until the power is restored. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.

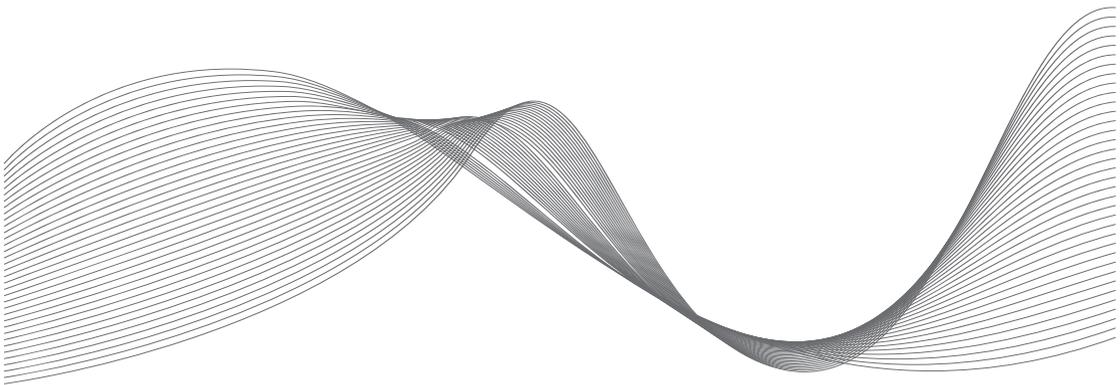

The picture of product may not entirely consistent with actual appearance and color because of product improvements, please in kind prevail.