
Item Number: A04018/A04119

WARNING (To reduce the risk of fire, electric shock, or personal injury):

- 1. We suggest installation by a licensed electrician.
- 2. Please read the instruction carefully and save it as you may need it at a later time.
- 3. Before you start, NEVER attempt any work without shutting off the electricity until the work is done.
 A). Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position.
 B). Place the wall switch in the "OFF" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
- 6. Make sure the voltage you are using is **120V**. The maximum wattage is **40W** per bulb.
- 7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
- 8. When replacing bulbs, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

IMAGE FOR FINISHED PRODUCT:

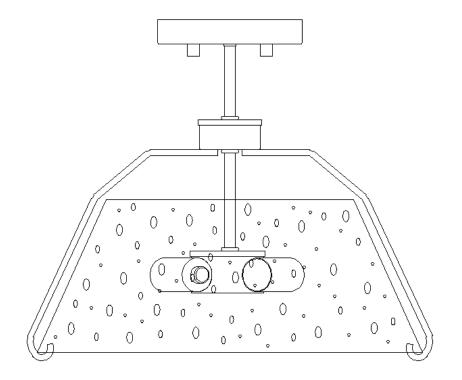

TOOLS REQUIRED (NOT INCLUDED):

Before starting assembly and installation please prepare the needed tools as below picture


				Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Constant Con
Ladder	Phillips head.flat blade screwdriver	Electrical tape	Pliers	Wire cutter/Stripper

PARTS TYPE & QTY INCLUDING:

- (C) Mounting plate (1)
- (D) Green ground screw (1)
- (E) Canopy (1)
- (F) Knob nut (2)
- (G) Tube (1)
- (H) Arms assembly (1)
- (I) Arm (3)
- (J) Stem (1)
- (K) Socket (3)
- (L) Glass shade (1)


ACCESSORIES & QTY ENCLOSED:

- (A) Plastic Wire Connector (3)
- (B) Mounting screw (2)

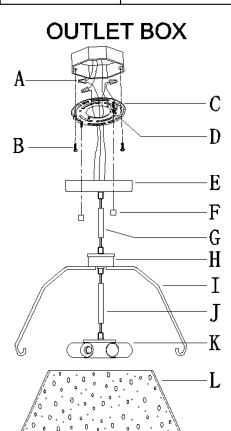

ASSEMBLY & INSTALLATION INSTRUCTIONS:

- 1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above figure.
- Unscrew the knob nuts (F) from canopy (E), then gently remove mounting plate (C) from canopy (E) and set them aside for later installation.

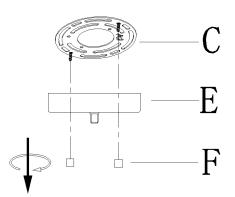

www.ihomeangel.com

3. Screw stem (J) and socket (K) onto arms assembly (H). Adjust arms (I) to the proper position.

4. Pass the fixture wires through stem (G) and canopy (E), then screw them onto arms assembly (H).

5. Turn off power

Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.

- A) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position.
- B) Place the wall switch in the "OFF" position.

6. Carefully pass supply wires through mounting plate (C). Secure mounting plate (C) to the outlet box with mounting screws (B). NOTE: the side of mounting plate marked"GND" must face out.

OUTLET BOX

GROUND

GREEN GROUND

SCREW

В

7. Make wire connections

А

OUTLET BOX

GROUND

GREEN GROUND

SCREW

 
Connect wires as below wires connection shown. **PLEASE NOTE THAT GROUND WIRE IS BARE COPPER WIRE, NEVER CONNECT OTHER WIRES TO GROUND WIRES.**



FIXTURE

GROUND

DIMPLES




FIXTURE


GROUND


CUPPED


WASHER

Connect wires according to the below chart

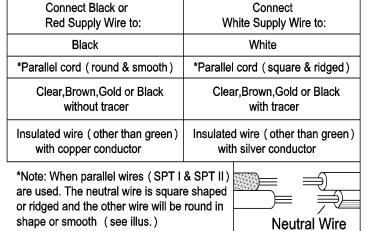

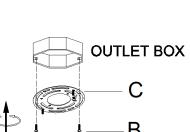

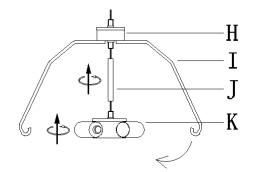

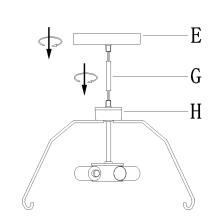

homecustomercare@outlook.com

+1 850 296 2377 Working hours : Mon - Fri 9:00 a.m. - 16:00 p.m. EST

8. Raise canopy (E) to the ceiling and secure canopy (E) in place by tightening knobs (F) onto the pre-assembled threaded nipples on mounting plate (C).

Note: The canopy (E) should be snug against the ceiling and the knob balls (F). If not, adjust the length of the pre-assembled threaded nipples on mounting plate (C) by unscrewing the pre-assembled hex nuts and then screwing the threaded nipples in or out of the mounting plate (C) until the secure length is achieved. Tighten the hex nuts and back to step 8.

 Install the bulbs (not included) (Please do not exceed the maximum wattage recommended on the socket.)
 Hang the glass shade (L) on arms (I).

10. Check everything is already installed properly, then you could turn on the light. Enjoy!


CLEANING.

To clean, wipe the fixture with a soft cloth. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

ORDERING PARTS.

Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts.

CEILING

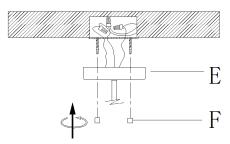

homecustomercare@outlook.com

