IQUNIX A80 Driver Installation Guide

- Two firmware needs to be updated first to successfully use the driver for A80.
 Step 1: Update the firmware on Windows via wired mode.
 Step 2: Update the firmware on Android via BlueTooth mode.
 Step 3: Install and apply the driver
- Please make sure to do Step 1 and then Step 2. If not, the keyboard will be completely UNRESPONSIVE.
- If the Android firmware does not upgrade successfully at step 2, the keyboard will remain UNRESPONSIVE.
- If you only update it on one of the systems, the keyboard will remain UNRESPONSIVE.

******Very important*****

Please note that there is a chance that the files are reported by your computer or your protection software as risky files or files with a virus. It will make the system delete the downloaded application. You will have to change the security setting of your computer to download successfully. Our source is safe to download. You will need to update the firmware on **TWO** different systems to finish. Please make sure to prepare BOTH no matter which system you use on a daily basis.

Please have the following devices with you to begin.

- Android phone, and
- Windows 7 (or later) system

Step 1:

Please follow the instructions below to update the firmware of your A80 On WINDOWS system.

The Windows firmware can only be installed in wired mode.

Download Link for Firmware on Windows:

https://drive.google.com/file/d/1J9dC-XNx4I8idH2gKCLLKImKYqm3zRrG/view?us p=sharing

Guide of Firmware on Windows

Please click the labeled black button and wait for the progress to be completed as below:

级包			3
开始更新	>		
设备信息	VID:	REV:	
Checksum : CC47 开始更新 更新成功	Once the	loading is full, the	update is complete.
	Once the	loading is full, the	update is complete.

Step:2

Please follow the instructions below to update the firmware of your A80 On

the Android system.

Preparing to Update the Firmware on Android:

[Click the link and download the **nRF Connect for Mobile** from App Store]

https://play.google.com/store/apps/details?id=no.nordicsemi.android.mcp

[Download the A80 Android Firmware Zip on your phone] https://drive.google.com/file/d/1XyDNDKlyMcaZeROxc3Wxhceujz5vGziA/view ?usp=sharing

Guide For Firmware on Android

1. Toggle the keyboard Mode Switch to the wireless side.

Press and Hold FN+1 for 5 seconds to enter Bluetooth pairing mode.

2. Launch nRF Connect, allowing for data networks and Bluetooth.

Click **Scan** on the top right.



3. Click Connect when IQUNIX-A80 BT1 appears, and then click Connect.

*If you cannot find the corresponding keyboard device in the list, you can try the following operations to troubleshoot.

- Pull down to refresh and search for keyboard devices again. It might take a while (up to several minutes) for the device to appear. Please keep refreshing the page and ensure the keyboard is in pairing mode.
- Check if the keyboard is in pairing mode (the Bluetooth indicator flashes in blue quickly)
- Check whether the keyboard device has been connected to the mobile phone, if it is connected, you need to ignore/remove the device first from your phone's Bluetooth device list.
- 4. After connecting successfully, click DFU at the top right. Select

File type ZIP, and choose the file A80 Android Firmware.zip

downloaded.

^{100 0} ",⊪",⊪1 奈 ◘ ④ ℕ № % 465 / ⊄ 11:45	题 8 "대 "대 完 🖁 👁 🕅 🗭 🖗 🕼 🖉 🖉 11:09	
≡ Devices DISCONNECT 💮 :	E Devices DISCONNECT 💮 :	
DNDED ADVERTISER DFUTARG ×	NDED ADVERTISER IQUNIX A80 BT1 ×	
CONNEC NOT CLIENT SERVER	CONNEC BONDED CLIENT SERVER	
Generic Access UUID: 0x1800 PRIMARY SERVICE	Generic Access UUID: 0x1800	
Generic Attribute	C Select file type	
UUID: 0x1801 PRIMARY SERVICE	Distribution packet (ZIP)	
Secure DFU Service UUID: 0xFE59 PRIMARY SERVICE	O Soft Device	
FRIMART SERVICE	E O Bootloader	
	P O Application	
	H INFO CANCEL OK	
	Nordic UART Service UUID: 6e400001-b5a3-f393-e0a9-e50e24dcca 9e PRIMARY SERVICE	
	Secure DFU Service UUID: 0xFE59 PRIMARY SERVICE	



Q : **File Manager** Internal storage > Download > and the second 1 IN THE REPORT OF A DESCRIPTION OF A DESCRIPANTO OF A DESCRIPTION OF A DESCRIPTION OF A DESCRIPTION OF A DESC A80 Android Firmware.zip ---53.68 kB 2022.09.14 the second se A REAL PROPERTY OF A where, Statistics 1, ee. 3. Statistics of They're he shares it man the start way a second second second and the second sec 4 = Ĥ Storage Categories FileDash Clean

3:58 @ 🛛 Ø

😯 🗱 🌇 🔊 🏕 🖓 🖧 🕅



5. The firmware should be ready to be updated right now.

If you see the line chart and the loading bar below, it is in the process now.





It means it is **finished** when the chart states that it is **Done** as in the image above.

6. There is a chance that it still shows *Connecting* after a while and there is no loading bar available. Please close the chart.



Click Scanner and find [Dfu Targ], and click Connect.

7. After connecting to it, repeat step 4: Click DFU and select the file to update.





Once it shows *Done,* the update is successfully finished.

Step: 3 Installation of AL80 Driver

The firmware updates are now finished. Please download and follow the instruction of the driver to install. You will only be able to use this driver on Windows.

Download Link for AL80 Driver

https://drive.google.com/file/d/1gqPaGrrNSLvIZ2BRpLUN4SGpjbxXUSs4/view?usp= sharing

*Please note that there is a chance that your computer or your protection software reports the file as a risky file or file with a virus. It will make the system delete the downloaded application. You will have to change the security setting of your computer to download successfully.



Opt for English (the left one) as the installation language, the following steps will be in English.

Thank you for your time reading this guide.