



Instruction Manual



TW-630

UHF Wireless Microphone

CONTENTS

Accessories	1
Operating Environments & Notes	2
Specifications	2
Microphone Operation Instruction	3
Receiver Instruction	5
Troubleshooting	6

ACCESSORIES



OPERATING ENVIRONMENTS & NOTES



When using this device, keep it away from water.



Use the device in ventilated environment, keep it away from fire.



Since it's a wireless device, please keep it away from other interfering sources.



Don't take apart the device.



Please use the standard power supply, high voltage may damage the device.



Please place the used batteries into the recycle bin, don't litter them.

SPECIFICATIONS

Frequency Response: 50Hz–15Khz

Operating Frequency: 902.8-927.6MHz

Operating Range: Up to 60m

Frequency Stability: ± 0.0005 MHz

SNR: 96dB

Sound Distortion: $\leq 0.5\%$

Mic Input Sensitivity: -51dBV

RF Sensitivity: -95dBm

Operating Temperature: -0°C to +55°C

MICROPHONE OPERATION INSTRUCTION



As shown in above pictures:


- ① Display Screen ② On/Off Switch ③ Tail Tube
④ H/L/O Button ⑤ Battery Compartment



Install 2*AA batteries before using the wireless microphone and installing instruction is as follows:


1. Take down the tail tube of mic.
2. Install the batteries and tighten tail tube of mic.

Note: The positive and negative polarity of battery cannot be reversed.

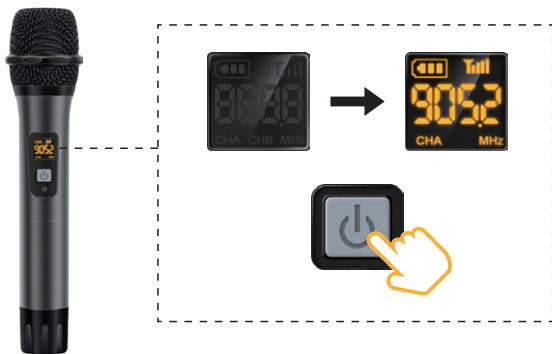


Instruction:

1. Press button ② for 2s to turn it on/off.

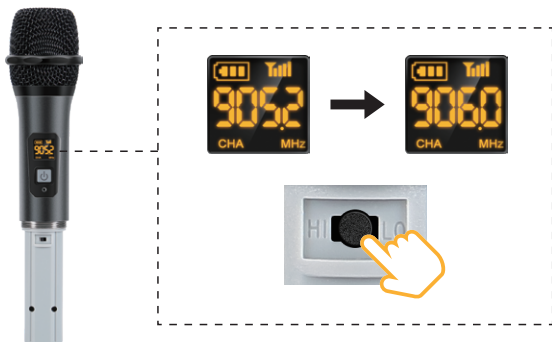

2. Press the HI-LO button ④, then the frequency on the screen will be changed.

RECEIVER INSTRUCTION

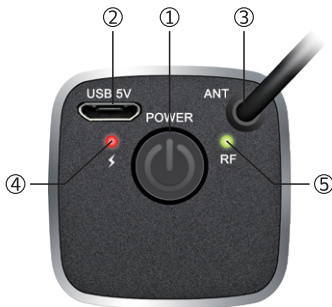

- ① POWER BUTTON
- ② USB CHARGING PORT
- ③ SIGNAL ANTENNA
- ④ BATTERY INDICATOR
- ⑤ RF LIGHT

LIGHT INSTRUCTION

Battery indicator ④	Turns red and flashes quickly	The power of the receiver is in a low battery status.
	Stays on	The receiver is in charging model.
	Turns off	The receiver is fully charged.
RF light ⑤	Flashes slowly	The receiver is not connected to the microphone.
	Stays on	The receiver and microphone are successfully connected.
	Flashes quickly	The receiver and microphone are successfully connected, and the microphone is transmitting audio signals.

TROUBLESHOOTING

Problem	Solution
<p>No sound (The batteries of the two microphones have already been installed, but one of the microphones has no sound.)</p>	<p>Please turn off the microphone which can work normally, then you will find that the RF light on the receiver will not stay on but flashes slowly.</p> <p>Then, please follow the steps below to pair the microphone (no sound) with the receiver:</p> <p>Wireless Microphone ID Pairing Steps:</p> <ol style="list-style-type: none">1. Make sure that the receiver and microphone are turned OFF.2. Unscrew the microphone tail tube and install the batteries into the mic's battery compartment.3. Make sure that the microphone is OFF, press and hold the HI/LO button ④ and the power button ② simultaneously, do not release them, until the microphone screen flashes quickly, then release two buttons simultaneously.4. Turn on the receiver's power button, wait for 5 seconds or so, then press the HI/LO button ④ (on the microphone) once, until the microphone screen becomes steady and no longer flashes, the RF light on the receiver turns steady, indicating that the pairing is successful.5. Turn off the microphone, then tighten the microphone tail tube. Pairing is now completed.

Problem	Solution
Received signal with noise or interference	Change to other channels; Check if receiving distance exceeds the maximum range.
Microphone cannot be turned on	Check if batteries are installed reversely; Change to new batteries.

 support@tonormic.com

 www.tonormic.com