





CNC VORON TAP V2 BUILD GUIDE

VERSION 2023-10-06



ATTENTION

Highlighted in blue are included in this CNC VORON TAP V2.

Highlighted in red are other accessories of the Voron printers, which are not included in this CNC VORON TAP V2 and will need to be prepared by yourself.



Any unauthorized disassembly of this product may cause damage and void the warranty. In particular, do not detach the slider from the rail yourself.

If disassembly is necessary, first loosen the screws securing the sensor, then remove the PCBA circuit board. Follow this sequence strictly to avoid sensor damage.

Note: The two screws for securing the sensor are CM2, not M2. CM2 screws use a 1.3mm hex key, unlike M2 which uses a 1.5mm hex key.

IMPORTANT WARNINGS! WWW.CHAOTICLAB.XYZ

XY TRAVEL INFLUENCE:

The thickness of the **CNC VORON TAP V2** is similar to that of the 2.4R2 X carriage, so no adjustments to the relevant settings are necessary.

HARDWARE REQUIREMENTS:

YOU MUST USE THE MGN12H X-AXIS

You must already be using the MGN12 based X-Axis. CNC VORON TAP V2 does not fit on the older MGN9 based X-axis.

CW2 STYLE MOUNTED EXTRUDER REQUIRED

CNC VORON TAP V2 replaces the X-carriage mount, and requires that the mounting screws come in from the front of the carriage like CW2, not the back like CW1. There are mounts for LGX and Galileo available.


BED MOUNT MUST BE SECURE

When **CNC VORON TAP V2** is probing, the nozzle will contact the bed with a force of approximately 500–800 grams. Your bed should not move during this. Bed motion compromises the accuracy of **CNC VORON TAP V2**, so it is not recommended for Voron 1.8, Legacy, or Switchwire designs.

If you want to know if CNC VORON TAP V2 is right for you, tap your finger on the bed firmly. If the bed moves, CNC VORON TAP V2 is not right for you.

GOOD MECHANICAL CONDITION

CNC VORON TAP V2 is far more precise than previous Z sensing systems, and we have found it can reveal previously unnoticed problems in a printer. If your printer has known mechanical issues (such as cracked components) fix them before.

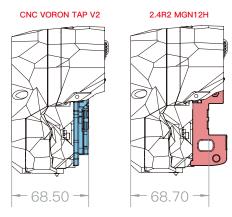

LUBRICATING LINEAR RAILS WWW.CHAOTICLAB.XYZ

Linear rails ship with oil that is designed to prevent corrosion during the shipping and storage process. This oil should be replaced with a lubricant of your choice. We recommend using an NLGI0 or NLGI1 rated grease. WD-40 makes a good white lithium grease with a spray applicat or nozzle that works well in this application.

FOLLOW THE STEPS BELOW TO GREASE YOUR RAIL WITHOUT DISASSEMBLY:


- 1. Use WD-40 degreaser or another degreaser of your choice and spray directly into the ball bearing area indicated by the arrow. Ensure that you spray liberally on both sides and run the block up and down the rail several times after spraying.
- 2. Drop a few drops of isopropyl alcohol down the rail on either side to flush out the WD-40 degreaser.
- 3. Spray your lubricant on either side of the rail liberally and run the block up and down the rail repeatedly to allow the lubricant to reach all of the balls within the block.




Packing List Limit Switch Bracket Installation


Limit Switch Bracket Installation			01
XY Belt Installation	<u></u>		02
			0.4
Install to MGN12H			04
			0.5
Install onto Voron StealthBurner		~	05
Install X-Switch			11
Wiring			12
Proper Magnet Positioning			13
Val.			1.1
Indicator Light			14
Accessory Installation Holes			15
	***************************************	0.000	

PACKING LIST WWW.CHAOTICLAB.XYZ

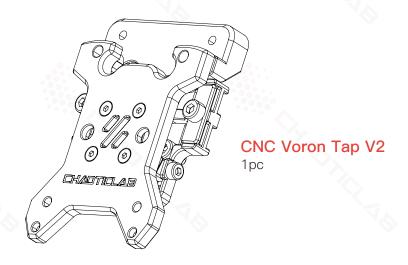

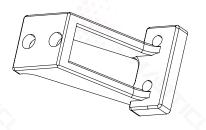

Limit Switch Bracket 1pc

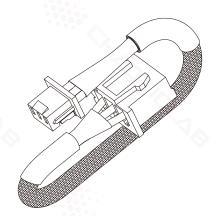

ZH1.5–3Pin to XH2.54–3Pin Cable (150 mm) 1pc




Socket Head Cap Screw (SHCS)


 M3x12
 2pcs


 M2x8
 2pcs

 M2x5
 2pcs

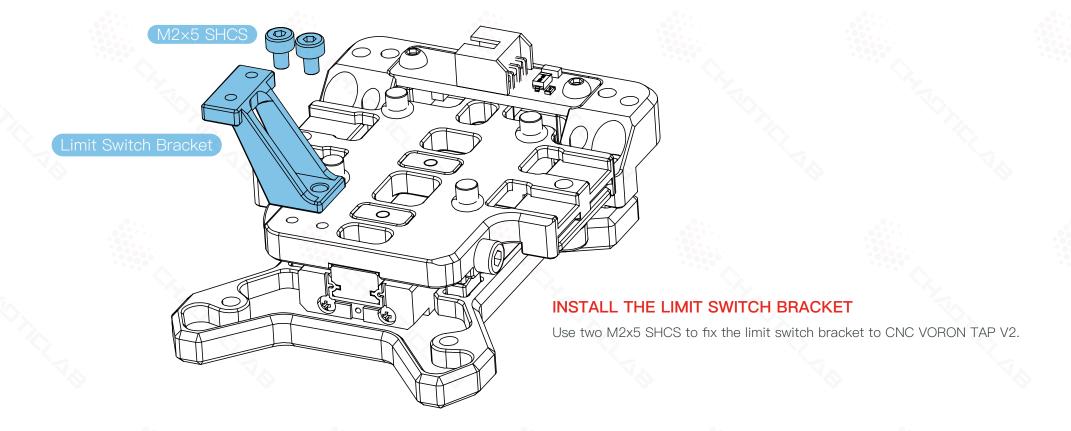

XY BELT INSTALLATION WWW.CHAOTICLAB.XYZ

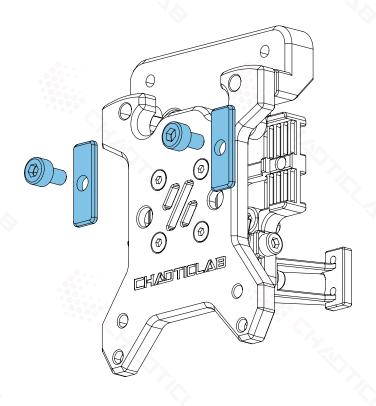


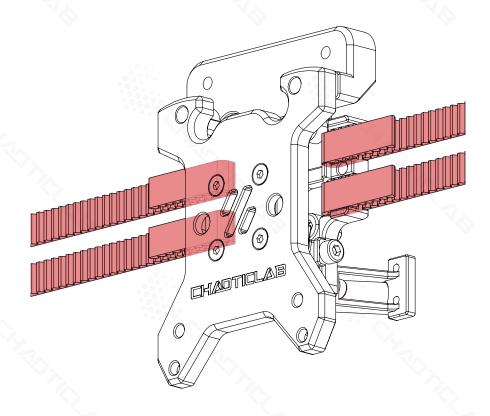

REMOVE THE BELT CLAMP

Before installing the belt, remove the M3x6 screws and the belt clamp.

XY BELT INSTALLATION WWW.CHAOTICLAB.XYZ

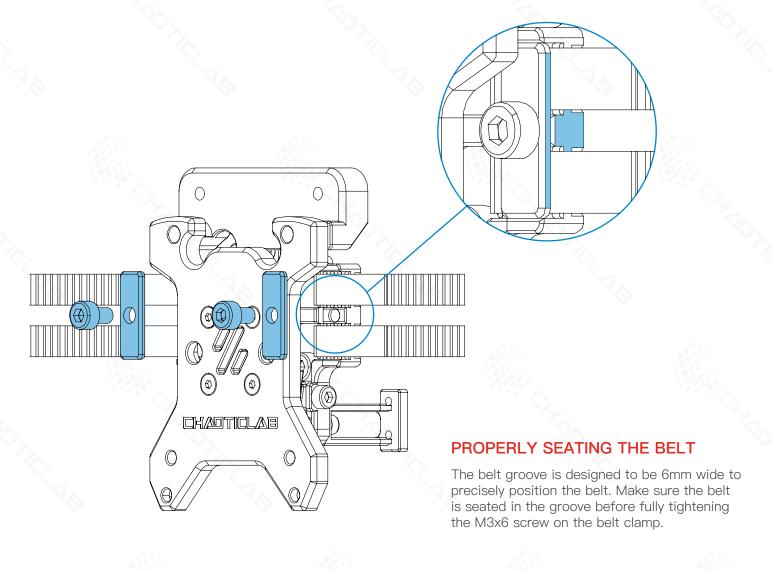


INSTALL TO MGN12H WWW.CHAOTICLAB.XYZ





DO NOT REMOVE RUBBER WASHERS

The four rubber washers on the back are there to prevent the screws backing out during installation. Do not remove them during assembly.

When tightening these screws, it is important to synchronize them and keep them locked at the same time. If you fully tighten one screw first, the other may not be able to tighten properly.

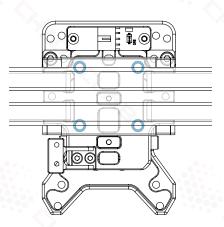

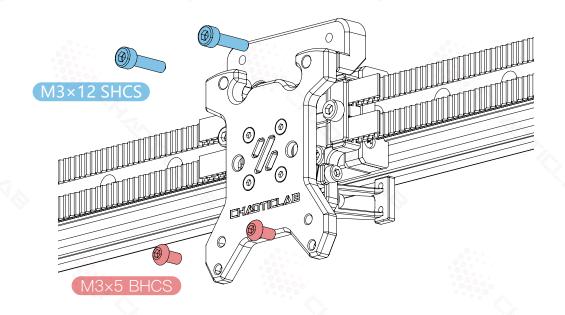

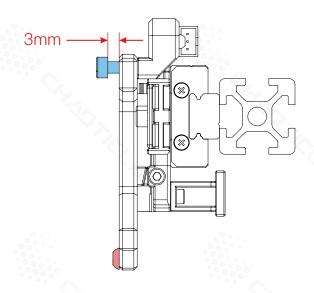



SCREWS FOR MOUNTING THE CW2


M3x5 BHCS is a commonly used size, M3x3 BHCS or even M3x2 BHCS may work better.

LEAVE ROOM FOR THE TOOLHEAD

Thread the M3 x 12 SHCS directly into the CNC part, but do not tighten fully. Leave approximately 3 mm of thread to allow clearance for mounting the toolhead.

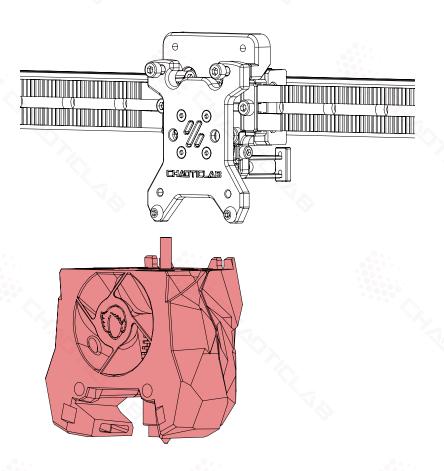

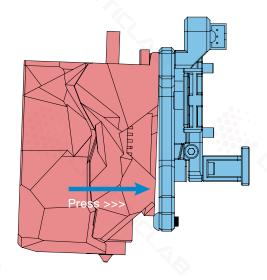

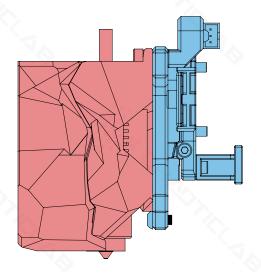



PRESS TOOLHEAD ONTO TAP


After inserting the tool head assembly into the 3mm gap left by the two M3x12 screws mentioned on page 05, please press the toolhead along the direction indicated by the blue arrow in the figure until the back of the tool head is completely attached to the TAP.


NOTE


Because CNC machining is more precise than printed parts riveting copper nuts, if the tool head assembly is not installed in place, it will cause the subsequent screws to be unable to lock in. Therefore, before proceeding to the next step, please check whether the tool head assembly is already installed in place as shown in the figure.

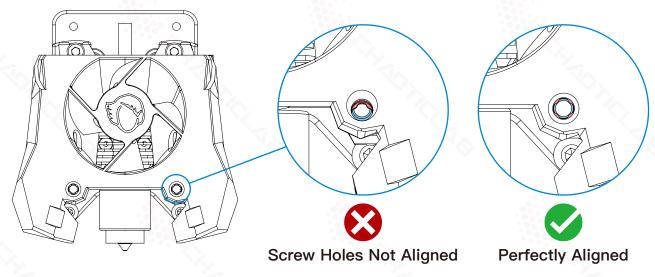

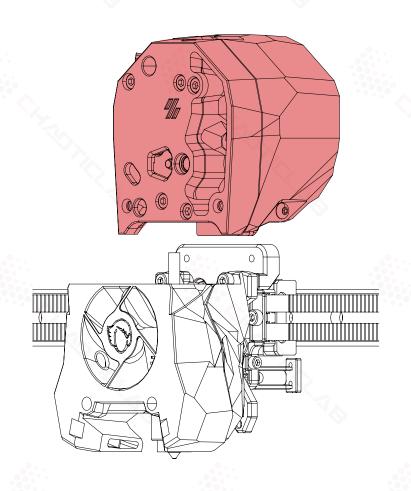


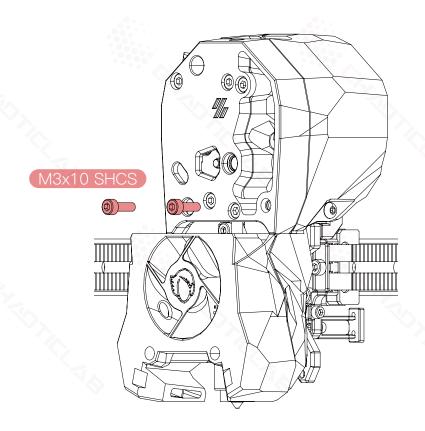


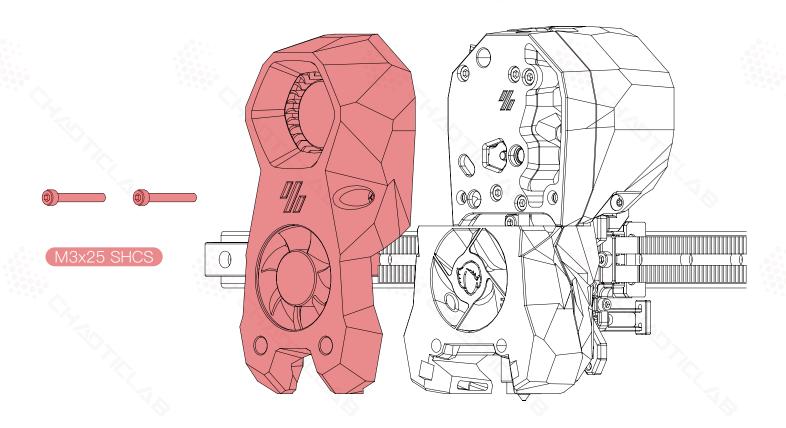

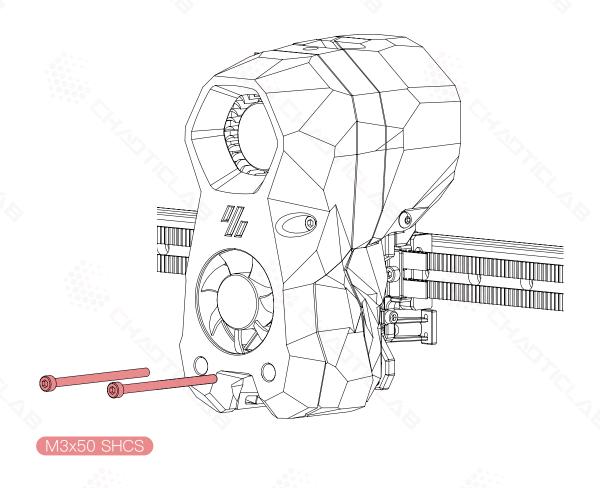

INSTALL X-SWITCH WWW.CHAOTICLAB.XYZ

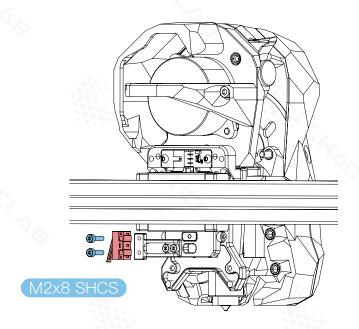


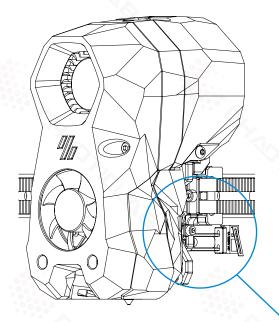

END-STOP SWITCH


Install the limit switch in the specified orientation, with the handle facing downward as shown.


WIRING WWW.CHAOTICLAB.XYZ

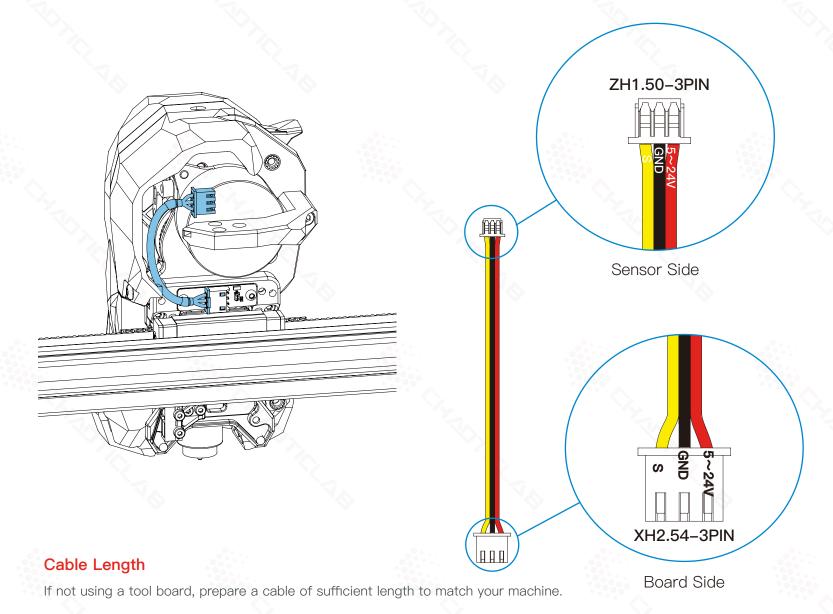


12

Proper Magnet Positioning WWW.CHAOTICLAB.XYZ

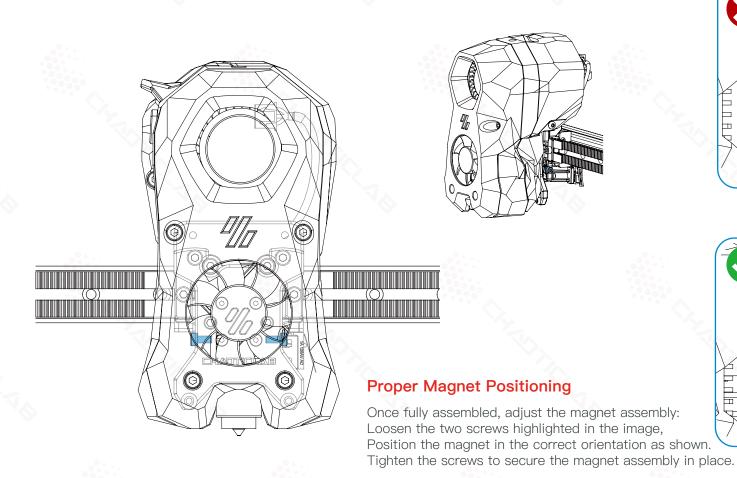

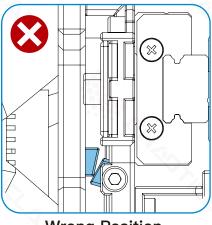


Wrong Position

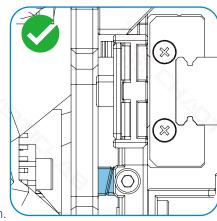


Correct Position

INDICATOR LIGHT WWW.CHAOTICLAB.XYZ

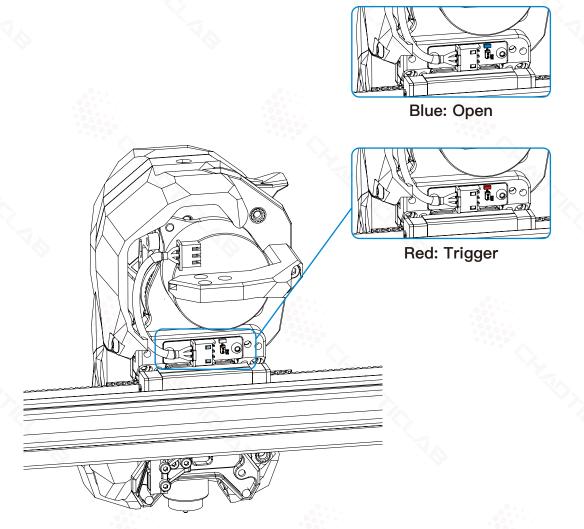

ACCESSORY INSTALLATION HOLES WWW.CHAOTICLAB.XYZ

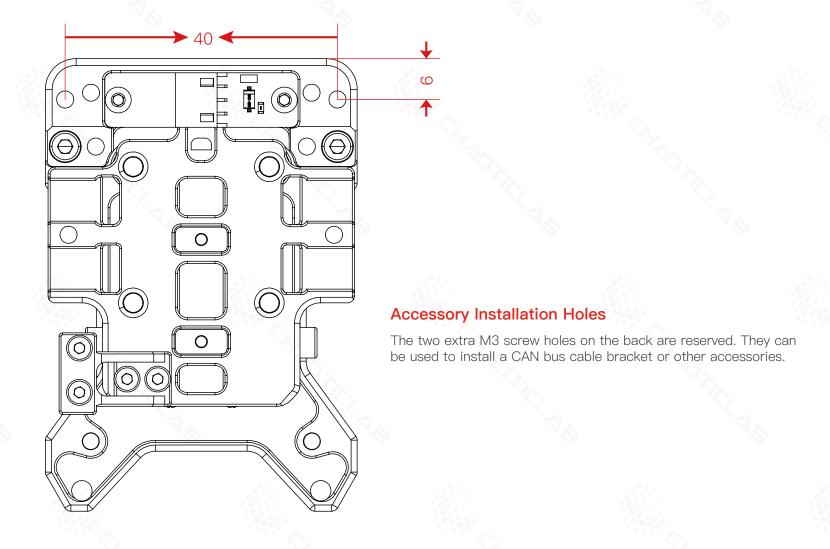





Website www.chaoticlab.xyz

GitHub github.com/chaoticlab Discord discord.gg/uUCX666tk2