

Guide of Riding

3

- Start by moving forward slowly
- Move the throttle wheel in small increments
- Keep a wide stance on the board
- Keep a low center of gravity
- Lean forward when accelerating
- Lean backwards when braking



Contact us

4

• Go to our Facebook page Meepo Electric Skateboard to discuss about esk8, check news and videos, and get to know riding buddies near you.

• If your unit needs service, contact our Customer Service by sending a mail to info@meepoboard.com

• Facebook Page: <https://www.facebook.com/meepoboard>

• Webstore: <https://meepoboard.com>


• YoutubeChannel: <https://www.youtube.com/c/kieraneboard>



Join us on Facebook
and get to know riding buddies near you

MANUAL

MEEPO MINI 2

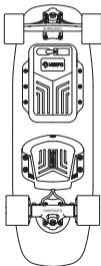



Product Introduction

• **YOUR BOARD MAY LOSE POWER AND BRAKES AT ANY MOMENT** due to radio interference, a malfunctioning battery, unintentional release of the engage button, downhill overcharging of a full battery, or other factors.

• **BRAKING DOWNHILL ON A FULL BATTERY MAY CAUSE BRAKES TO BE UNRESPONSIVE** since regenerative braking will overcharge the battery, don't start riding down-hill, instead look for flats. Go uphill to drain the battery before attempting going downhill. Don't go downhill if you can't footbrake.


• **ALWAYS WEAR A HELMET** other safety gear, like gloves, pads, and long sleeves are highly recommended.

• **WARNING:** Always wear a helmet when riding. Avoid wet surfaces, in the rain, on the slippery or uneven surfaces with steep hills, traffic, cracks, train tracks, gravel rocks or any obstacles that could cause a loss of traction. Avoid night riding in the areas with poor visibility and narrow spaces.

• **WARNING:** Never ride the board at speeds where you do not feel comfortable. In the event of wireless interference or battery fault, you may need to rely on skating techniques like footbraking or sliding to stop. So basically, you should learn FOOTBRAKE. Here is a video for you to learn footbrake.

<https://www.youtube.com/watch?v=I3EyJm2E6s>

M4 REMOTE 1

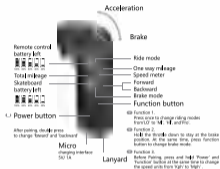

How to pair?

1. Turn on the board, then keep the switch pressed for 7 seconds.
2. Press the power button of the remote for 3 seconds, to turn it on.
3. Press the remote's power and function buttons at the same time.

• MINI 2

Beginner mode = 10 mph
 ECO mode = 15 mph
 Expert mode = 25 mph
 PRO mode = 25 mph

• MINI 2 ER

Beginner mode = 10 mph
 ECO mode = 15 mph
 Expert mode = 25 mph
 PRO mode = 29 mph

When the remote and the skateboard are off, press the remote's power button and the skateboard power button for 5 seconds at the same time. If the signal light turns red, it means they are connected.

MEEPO MINI 2 2

