 


名称: A3电视声霸说明书
 材质: 80G书写纸
 尺寸: 展开135*540 折叠135*90 mm
 印刷: 彩色
 装裱: 折页
 注: 成品没有黑色边框

正面 ▶

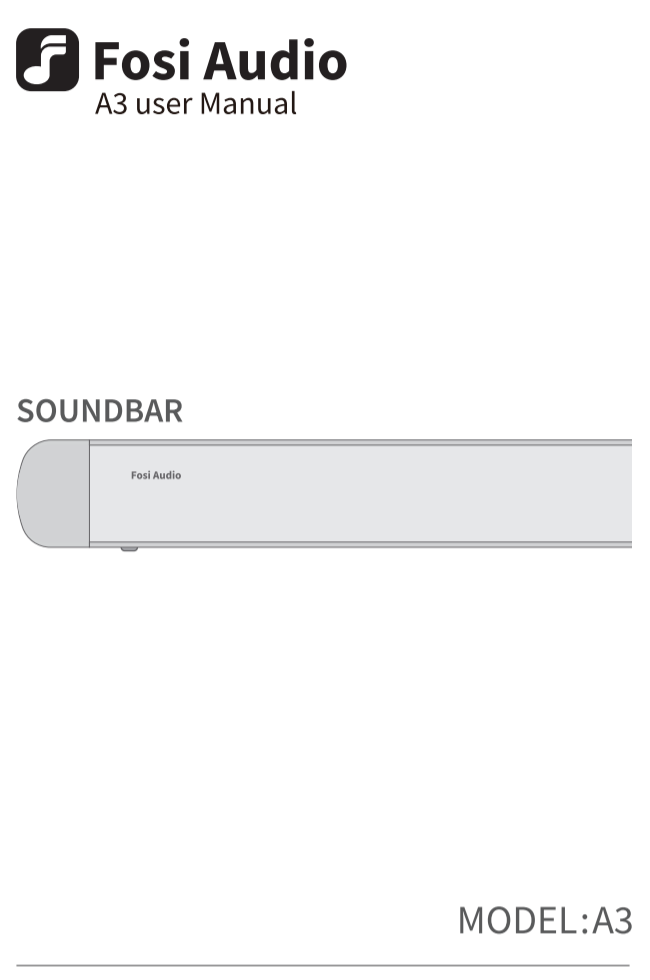

MODEL:A3

Foreword

Thank you very much for purchasing the A3 soundbar. Please read the instructions carefully before using this product.

If you have any problems or suggestions for the product, please contact us via support@fosiaudio.com.


Packing list

- A3 Soundbar x1
- Power Adapter x1
- 3.5mm audio cable x1
- 3.5mm to RCA cable x1
- Optical-fiber cable x1
- Remote control x1
- Wall mount brackets x1
- User manual x1

Remote control installation

Insert 2 pieces of AA batteries to activate the remote control. (batteries not included).

Note: 1) The remote control or other universal remote controls are not compatible with the soundbar.
 2) TV remote control or other universal remote controls are not compatible with the soundbar.

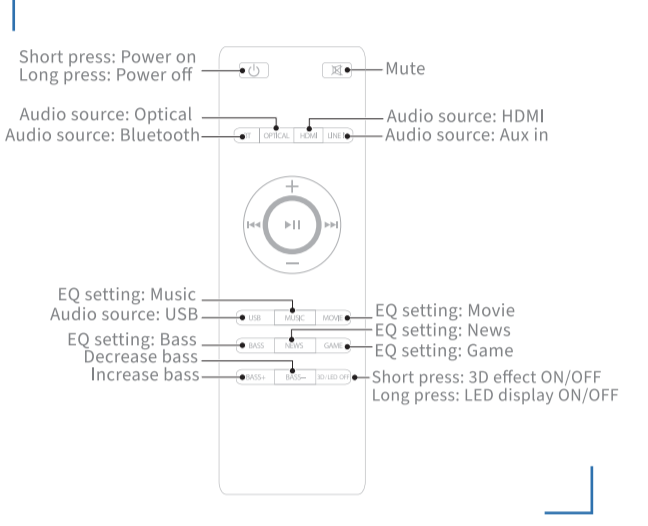


Short press: Power on
 Long press: Power off

EQ setting: Music, EQ setting: Bass, Decrease bass, Increase bass

EQ setting: Movie, EQ setting: News, EQ setting: Game, Short press: 10 affect ON/OFF, Long press: LED display ON/OFF


C/M

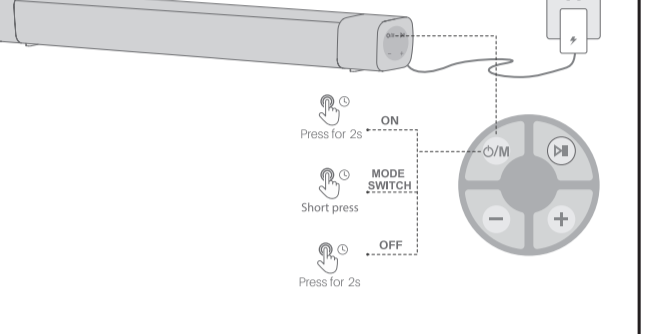


Note: 1) Please connect it to power before using.
 2) Short press the "C/M" SOURCE on unit or "C/M" on remote control to turn on the soundbar. The Bluetooth will light up.
 3) The Soundbar will enter the Standby Mode again if there is no operation for 20 minutes.

EQ Switch:

Double click "EQ" to switch the EQ modes.

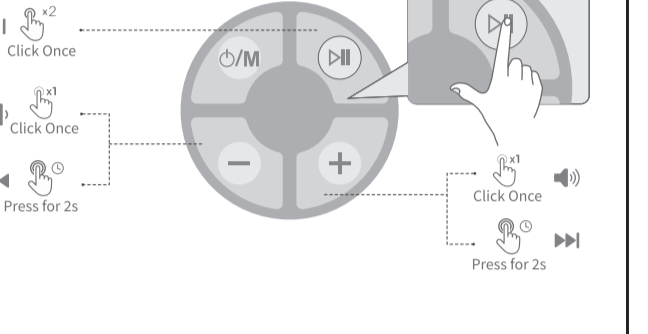

EQ

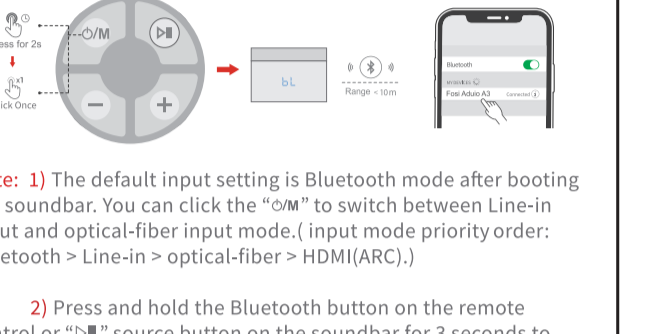


Note: 1) The default input setting is Bluetooth mode after booting the soundbar. You can click the "EQ" to switch between Line-in input and optical-fiber input mode. (input mode priority order: Bluetooth > Line-in > optical-fiber > HDMI(ARC).)
 2) Press and hold the Bluetooth button on the remote control or "EQ" source button on the soundbar for 3 seconds to remove the Bluetooth connection.

Fosi Audio

反面 ▶

OPTICAL IN Source

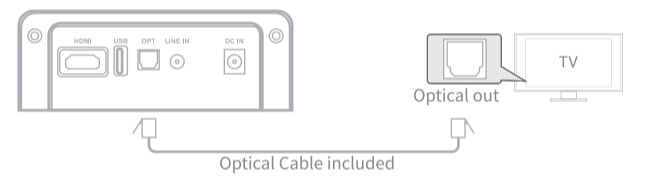


1. Ensure that the soundbar is connected to the TV or other audio devices via an optical cable.

2. Press the Optical button on the remote control to enter the Optical input mode. You can also short press the "C/M" source button on the soundbar to choose the Optical source.

Note: The playback is controlled by your device and the button on the remote control. Before use, you need to unplug the cover.

LINE IN Source

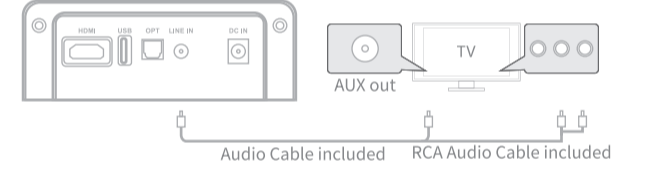


1. Ensure that the soundbar is connected to the TV or other audio devices via a 3.5mm/RCA audio cable.

2. Press the LINE IN button on the remote control to enter the mode. You can also short press the "C/M" source button on the soundbar to choose the LINE IN source.


Note: The playback is controlled by your device or buttons on the remote control.

USB playback

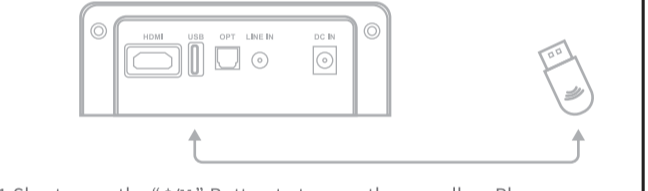

3. Short press the "C/M" button to turn on the soundbar. Plug your USB flash drive into the USB port and the soundbar will play the music in your USB flash drive. You can press "EQ" or "EQ" button on the remote control to switch between your music.


HDMI(ARC) source

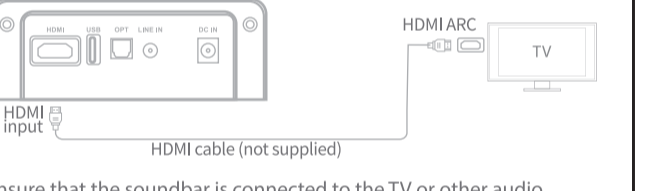

Ensure that the soundbar is connected to the TV or other audio devices via an HDMI(ARC) cable. Press the HDMI button on the remote and play.


Note: The device can synchronize the volume with the TV as well as the switch.

Wall mounting guide

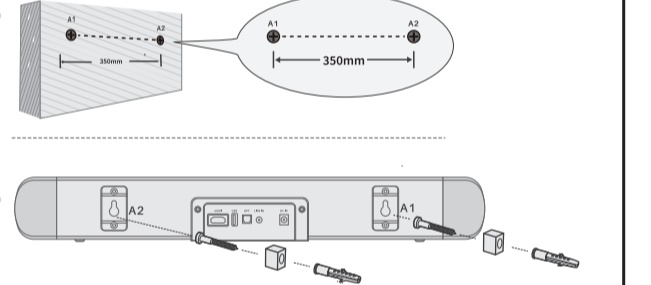

1. Mark the position points on the wall. Choose the mounting height and Mark A1, Mark A2 on the right of A1 on the same horizontal line. The distance between the 2 points should be 300mm exactly.

2. Drill the holes. Drill holes in the marked position.

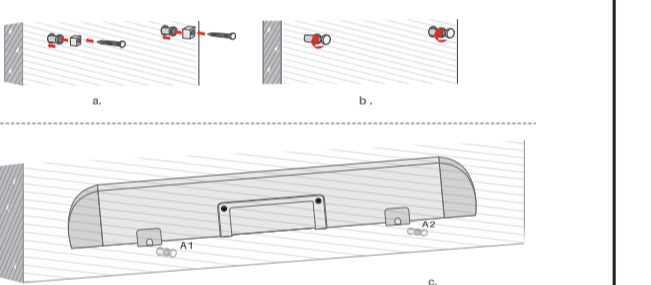

3. Hang up the soundbar. Insert the wall plugs into the holes. Tighten the screws into the plugs through the foam pads. Hang up the soundbar on the screws.

QA

Q1. Pairing connection via Bluetooth cannot be completed.

Once you connect a device to the soundbar, the connection will be stored. When you turn on the soundbar, the Bluetooth connection will be activated automatically. To connect another device to the soundbar, you need to disconnect the former connection first: turning off Bluetooth on your former device, or clearing the former connection by pressing and holding the Bluetooth button on the remote control for 3 seconds. After that, you can find and connect the other devices.

Q2. Why there is no sound output from the soundbar when I connect it to my TV set?

Please make sure that the TV has an audio output interface.
 Please set the TV to digital audio output and select PCM output.

Q3. The Bluetooth connection is not stable.

There should be some obstructions between the soundbar and your Bluetooth devices which interfere with the connection. Please remove them. The supported range for the Bluetooth connection is around 10 meters indoor. Please do not exceed that range.

Q4. Silent play after connection via Bluetooth.

After connections with mobile devices, Bluetooth device audio is off. Turn on the mobile's output volume.

Specifications

Product name	2.8 Soundbar
Output power	20W*2
AC/DC adapter	20V/1A
Speaker frequency	60Hz-20KHz
Bluetooth version	5.0, A2DP, AVRCP
Bluetooth range	Up to 15m
Included in the package	Soundbar, Remote control, AC/DC adapter, 3.5mm to RCA cable, Line in cable, wall mount brackets, User manual, optical-fiber cable
Dimensions	457*70*60mm

About Fosi Audio

Fosi Audio designs and builds innovative audio products with all your music in mind. Great sound, simple but elegant designs, high-quality materials, and truly useful features are what Fosi Audio is about. We sincerely hope you get as much enjoyment from our products as we've had to create them!

Our website: www.fosiaudio.com
 Amazon store: www.amazon.com/fosiaudio
 Our Youtube channel: Fosi Audio
 Our Facebook page: Fosi Audio

After-sale Service and Technical Support Email: support@fosiaudio.com

Fosi Audio



成品尺寸: 80X140 (mm)
 材质及工艺: 80g铜版纸双面印刷 过哑油
 装订方式: 折页
 印刷颜色: 四色印刷

设计师:
 日期: 2021-11-22
 备注:

本品牌及其所使用的标志、名称、图像以及所有内容设计, 其版权均均为本公司所有, 未经授权任何组织、个人、商业团体不得擅自使用、翻印, 本公司保留追究其法律责任的权利!