



DLC32 firmware programming instructions-V1.0

1. Install the software

(1) . Download "MKSLaserTool_setupV1.x.x.exe" double-click to open it.

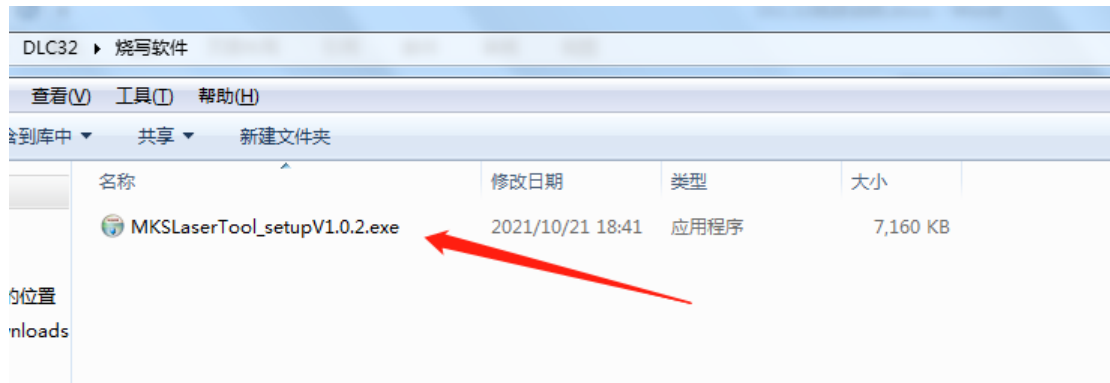


(2) . Click Continue and click Next until the installation is complete

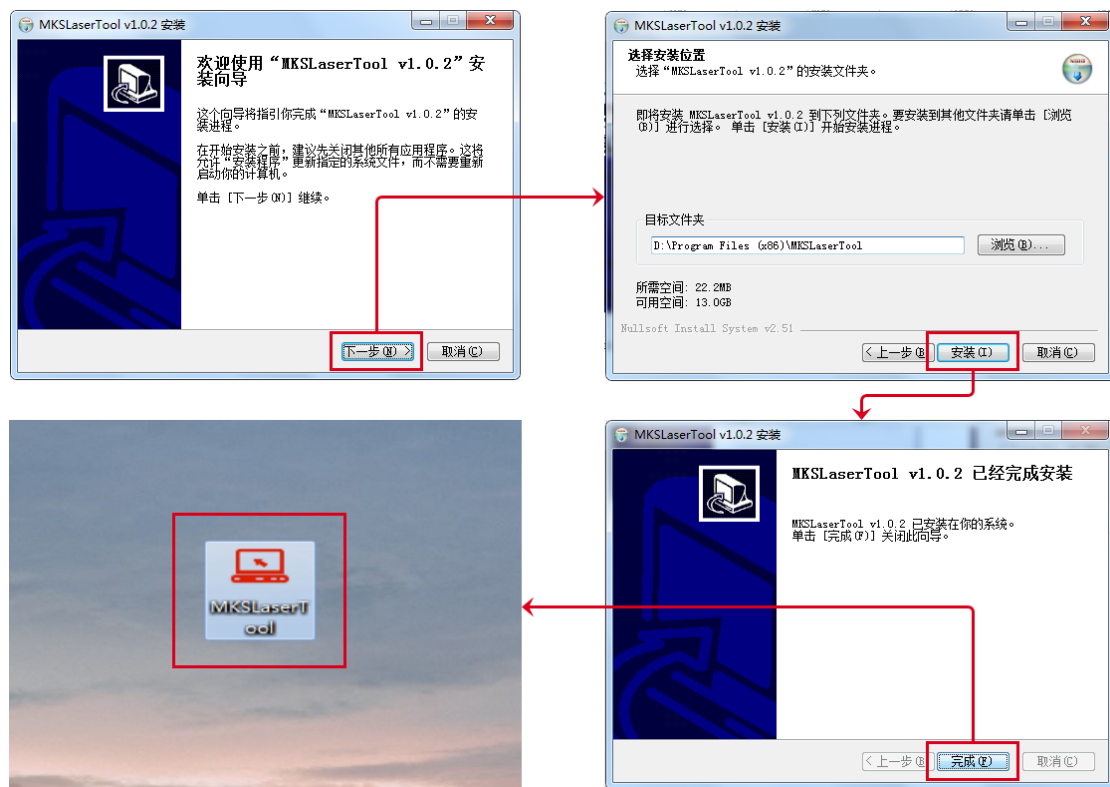

2. Introduction of programming software

(1) . Home

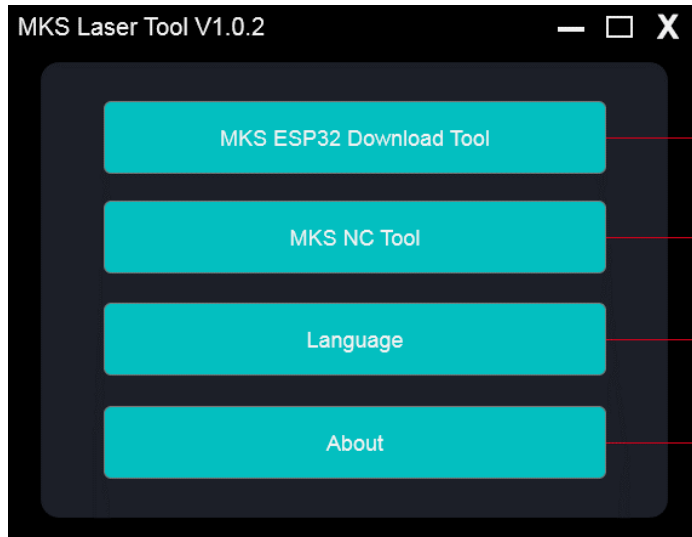

→ 主板烧写固件功能

Mainboard firmware programming function

→ 雕刻文件增加巡边功能

Added patrol function to engraving files

→ 语言设置

Language settings

→ 关于软件信息

Information about the software

(2) . Programming interface description



→ 1.选文件

1. Select file

→ 2.配置参数，DLC32参数如图所示

2. Configuration parameters, DLC32 parameters as shown in the figure

→ 3.COM口，需要安装CH340的USB驱动

3. COM port, you need to install the USB driver of CH340

→ 4.波特率，线长建议使用115200

4. Baud rate, line length is recommended to use 115200

→ 5.开始烧写

5. Start programming

→ 6.擦除固件

6. Erase the firmware

→ 7.烧写过程状态

7. Status of the programming process

→ 8.烧写过程信息显示栏

8. Burning process information display bar