OPEN**MOVE**

User Guide

How to Set Up OpenMove

1. Charge

Charge the headphones with the included USB-C charging cable. The LED indicator will change from red to blue when charging is complete.

2. Pair

Begin with your headphones powered off. Enter pairing mode by pressing and holding volume+ until Audrey says "pairing" and the LED indicator flashes red and blue.
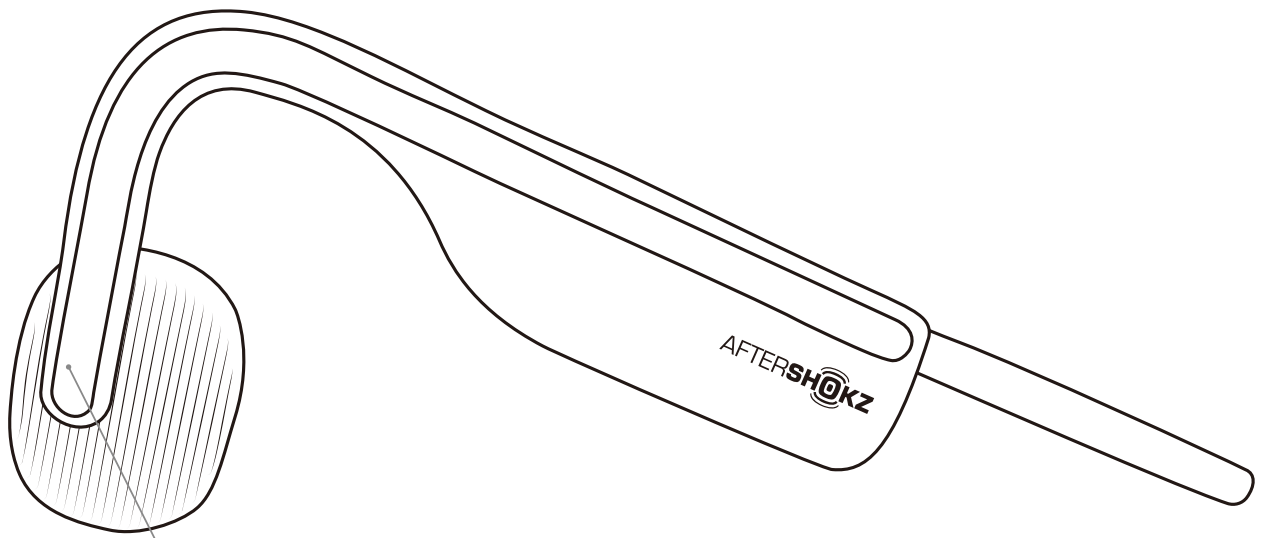
3. Connect

Open your device's Bluetooth® menu and select "OpenMove by AfterShokz." Audrey will say "connected" and the LED indicator will flash blue one time.
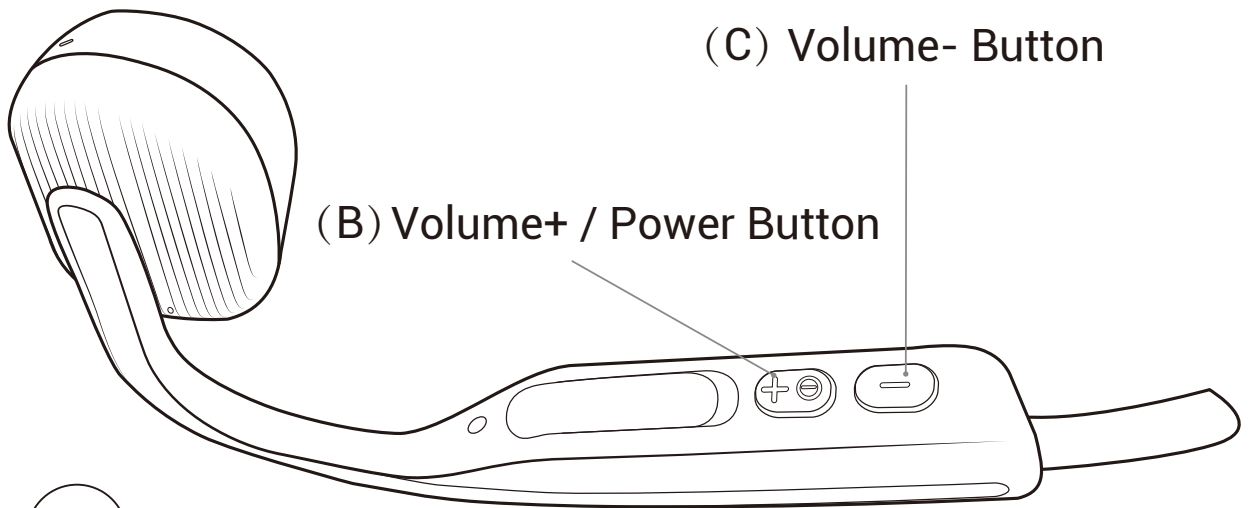
Let us take care of you! Protect your headphones against defects.
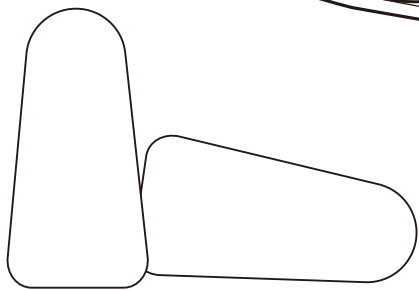Make sure to register your OpenMove at
Aftershokz.com

（A）Multifunction Button

（C）Volume- Button

（B）Volume+ / Power Button

（D）Earplugs

Multifunction Button (A)

Function	Action	Prompt / "Audrey Says™"
Play / pause music	Click once	One beep
Skip to next song	Double-click while music is playing	One beep
Skip to previous song	Triple-click while music is playing	One beep
Switch language	Double-click while on pairing	"English/中文/日本語/한국어"
Answer call	Click once	Two beeps
End call	Click once	One beep
Answer call waiting and hang up on current caller	Press and hold for 2 seconds	One beep
Reject a call	Press and hold for 2 seconds	Two beeps
Activate device's voice assistant	Press and hold for 2 seconds	Device beep
Redial last number	Double-click (when idle)	"Redial last number"

Volume+ / Power Button (B); Volume- Button (C)

Function	Action	Prompt / "Audrey Says™"
Power on	Press and hold volume+ for 2 seconds	"Welcome to AfterShokz"
Power off	Press and hold volume+ for 3 seconds	"Power off"
Mute	Press and hold both buttons for 2 seconds while on a call	"Mute on" or "Mute off"
Switch EQ	Press and hold both buttons for 3 seconds while music is playing	"Standard mode / Vocal booster mode / Earplug mode"
Check battery status	Click the volume+ or volume- button while music is paused	"Battery high/Battery medium/ Battery low/Charge me"
Adjust volume	Click the volume+ or volume- button to adjust volume while music is playing	One beep

Specifications

Model number	AS660	Frequency response	20Hz - 20kHz
Speaker type	Bone conduction transducer	Speaker sensitivity	96 ± 3dB

Bluetooth® version	Bluetooth® v5.0	Microphone sensitivity	-40 ± 2dB
Wireless range	10 m	Frequency band	2402 - 2480MHz
Battery	Rechargeable Li-Polymer battery	Battery capacity	135 mAh
Continuous play	Up to 6 hours	Standby time	Up to 10 days
Charge time	2 hours	Charge voltage	5.25V ± 5%
Charge type	USB-C	Speaker impedance	8.0 ± 0.5ohm
Water resistance	IP55	Maximum RF output power	4dBm
Weight	29 g	Warranty	2 years
Compatible profiles	HSP, HFP, A2DP AND AVRCP		

LED Indicator

Solid red	Charging
Solid blue	Charging complete
Flashes red and blue	Pairing mode
Flashes blue	Incoming call
Flashes red every 2 minutes	Low battery

Multipoint Pairing

Multipoint pairing allows OpenMove to be connected to two devices at once, allowing users to seamlessly transition between the two.

1. Begin with your headphones powered off.
2. Press and hold volume+ until Audrey says "pairing" and the LED indicator flashes red and blue.
3. Press and hold the multifunction button and volume+ button for 3 seconds. Audrey says "multipoint enabled".
4. Open your first device's Bluetooth® menu and select "OpenMove by AfterShokz." Audrey says "connected".
5. Turn your headphones off.
6. Re-enter pairing mode by pressing and holding volume+ until Audrey says "pairing" and the LED indicator flashes red and blue.
7. Open your second device's Bluetooth® menu and select "OpenMove by AfterShokz." Audrey says "connected".
8. Turn your headphones off.
9. Turn your headphones on. Your headphones are now connected to both devices. Audrey says "connected" and "device 2 connected".
10. To turn off multipoint pairing: Press and hold the multifunction and volume - buttons for 3 seconds when pairing. Audrey says"multipoint disabled".

More information: bit.ly/aftershokzpairing

How to Reset Your Headphones

1. Begin with your headphones powered off.
2. Enter pairing mode by pressing and holding volume+ until Audrey says "pairing" and the LED indicator flashes red and blue.
3. Press and hold the multifunction button, volume+ button and volume- button (all three buttons) simultaneously for 3-5 seconds, until you hear two beeps or feel vibrations.
4. Turn your headphones off. OpenMove is now reset and can be re-paired to your device.

Optional Accessories

Earplugs (D)

Use earplugs with headphones in environments where it is safe to block out ambient noise, such as on a train or airplane.

1. Roll earplugs firmly between fingers and place in ears.
2. To adjust EQ settings for earplugs, press and hold volume+ and volume- buttons simultaneously while music is playing. Continue through options until "earplug mode."
3. Switch EQ to other settings when you take out the earplugs.

Manufacturer

AfterShokz LLC

3200 Gracie Kiltz Lane, 4th floor, Austin, TX 78758

AFTERSHOKZ