

YUNZII

X75

X75: WIRED VERSION
X75 PRO: WIRELESS VERSION

MANUFACTURER:
HUNAN YUNXI E-COMMERCE CO., LTD.
PHONE:
086073182628114
E-MAIL:
SUPPORT@YUNZII.COM
WEBSITE:
WWW.YUNZII.COM
ADDRESS:
CHUANGGU INDUSTRIAL PARK,
TIANXIN DISTRICT,
CHANGSHA, HUNAN, CHINA



DISCORD



OFFICIAL STORE



INSTAGRAM

website: www.yunzii.com
For any support: support@yunzii.com

SCOPE OF APPLICATION:



X75 mechanical keyboard, 82 key design using RGB-light, Bluetooth-2.4G - wired three working modes and related equipment connection control, the product can run on the computer Windows2000,WindowsXP, Vista, Windows 7, doing, Win10 WIN11, OS2 - version 2.0 and above with bluetooth version phone system. Native Bluetooth Device Name X75 3.0 or X75 5.0

HARDWARE REQUIREMENTS:


A mobile phone or computer with Bluetooth and a USB port available for connecting devices.

NOTE: X75 has only wired connection. X75 PRO has wireless connection.

THREE-MODE CONNECTION DIAGRAM:

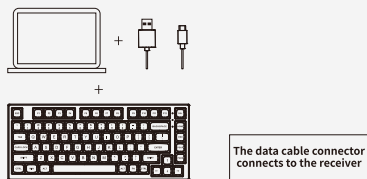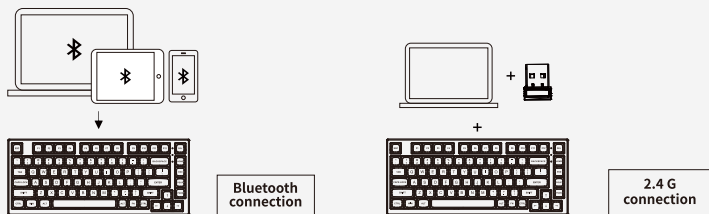

KEYBOARD SWITCH DIAGRAM:



- ① Switch between MAC and WIN
- ② TYPE-C Indicates the connection port
- ③ Bluetooth -- wired -- 2.4G three-mode switch
- ④ 2.4G receiver placement hole

X75-THREE MODE KEYBOARD INSTALLATION STEPS AND USE:

Bluetooth: FN+Q/W/E

1. Turn on the Bluetooth button
2. long press FN+Q/W/Eto pair device.

WIRED CONNETION

1. Turn on the wired button
2. Plug keyboard cable to device

2.4GHZ WIRELESS

1. Turn on the wireless button
- 2.Plug the 2.4G Dongle into keyboard
3. Long Press FN+R to pair device

X75-THREE MODE KEYBOARD FN FUNCTION AND LIGHT OPERATION INSTRUCTIONS:

- FN + [\] = switch light mode
- FN+END= Change the light color
- FN+← Backspace=turn off the backlight, then press to turn it on
- FN+ " ↑ / ↓ " = Increase or decrease of light brightness
- FN+ " ← / → " = Light breathing or changing speed adjustment
- FN+CAP= One key on white light, then press exit
- FN+ESC reset with one key, all Bluetooth/2.4G are cleared and restored to wired mode, and the light returns to the initial state.
- FN+right ALT press and hold to inquire whether the electric quantity is 1-3 bright red when the electric quantity is lower than 3V, or green when the electric quantity is higher than 3V

The keyboard supports light modes:

Go WITH THE FLOW - default, such as shadow, sinusoidal wave, rotating windmill, colorful waterfall, flowers, steady on mode, breathing mode, dream rainbow, trigger, walking in the rain, rainbow roulette, button ripples, stars, no trace of snow, flow.

The keyboard supports light colors:

Red - green - blue - yellow - pink - cyan - white - mixed eight colors.

FN MULTIMEDIA FUNCTION KEYS IN WINDOWS:

- FN + F1 Computer screen brightness -
- FN + F2 Computer screen brightness +
- FN + F3 Calculator (calculator)
- FN + WIN Lock the WIN key and press it again
- FN + F4 The computer
- FN + F5 player
- FN + F6 In a song
- FN + F7 The next song
- FN + F8 Play/Pause
- FN + F9 stop
- FN + F10 mute
- FN + F11 The volume -
- FN + F12 The volume +

FN MULTIMEDIA FUNCTION KEYS ON MAC:

- F1 Computer screen brightness -
- F2 Computer screen brightness +
- F3 CTRL + direction
- F4 Exhale siri (Command + spacean Press and hold for about 1s to release)
- F5 CTRL+arrow key down
- F6 Sleep function (key value 0x30)
- F7 In a song
- F8 The next song
- F9 Pause/Play
- F10 mute
- F11 The volume -
- F12 The volume +

Note: WIN/ALT will be interchanged when switching screens. Do not lock win

FN+F1=F1	FN+F2=F2	FN+F3=F3	FN+F4=F4
FN+F5=F5	FN+F6=F6	FN+F7=F7	FN+F8=F8
FN+F9=F9	FN+F10=F10	FN+F11=F11	FN+F12=F12

POINTS FOR ATTENTION:

- 1, X75 three-mode keyboard has intelligent power saving function: when the keyboard is still not 2-3 minutes or so, the keyboard will automatically turn off the backlight -, this is to press any key can restore the light.
- 2, in the use of X75 keyboard when plugged in the receiver, the computer can not identify the use, should consider the port contact caused by poor, need to replace the use of another computer USB port. When the keyboard is used, the backlight becomes dark or the product is not used normally, it should be confirmed that the product is caused by the lack of built-in power. There is a shortage of power to charge in time. When charging, it is necessary to connect the TYPE-C line with the keyboard to charge, and the charging time will vary according to the amount of power used by the charger. If the product is not used for a long time, please switch the product mode to the wired icon position.
3. When the product is stuck or suddenly stationary in use, in addition to excluding the reason of low battery voltage, it should be caused by the interference of the same frequency signal in the environment. At this time, TYPE-C line can be used to connect the computer to wired mode. You can also switch the Bluetooth channel and 2.4G channel again to solve the problem. The code switching method is as shown above (the operation can be repeated if the code is not matched once).
- 4, new Alliance wireless products are built-in lithium design, X75 keyboard uses (3300-4000 mah lithium) so for the safety of users, products can only be used at room temperature, please do not use in high temperature or close to the fire source place.
5. Discard product damage: If the product is damaged and cannot be repaired, do not disassemble or throw it into the fire by yourself, so as to avoid accident danger. Should be sent to a professional waste disposal station or special recycling bin for processing.

LIST OF ITEMS:

1. X75 transparent keyboard
2. TYPE-C data cable
3. pull shaft pull key two in one tool
4. Warranty card instruction
5. 2.4G receiver


一、产品适用范围：

YUNZHI X75 机械键盘，设计 82 键采用 RGB- 灯光，蓝牙 -2.4G- 有线三种工作模式与相关设备连接操控，产品都可运行于电脑 Windows2000,WindowsXP, Vista, Win7, Win8, Win10, WIN11, OS2-2.0 版本以上及带蓝牙版本手机系统。
本机蓝牙设备名称《X75 3.0 或 X75 5.0》

二、硬件要求：

带蓝牙的手机或电脑并有连接设备可用的 USB 端口。


三、三模式连接示意图：



蓝牙连接




接收器 2.4G 连接



数据线接头连接

键盘开关示意图：



- ① MAC 与 WIN 系统切换开关
- ② TYPE-C 连接端口
- ③ 蓝牙 --- 有线 --2.4G 三模式切换开关
- ④ 2.4G 接收器放置孔

四、X75- 三模键盘安装步骤及使用：

1. X75 三模键盘蓝牙模式连接对码安装步骤及使用：键盘在蓝牙频道按 FN+Q/FN+W/FN+E 组合键是键盘蓝牙广播对码键，当要使用键盘的蓝牙频道时，要把键盘的模式切换开关打到蓝牙图标位置，再长按 FN+Q，键进行蓝牙广播，这时 键盘模式灯会快闪青色灯光，当蓝牙对码连好时灯长亮青色，如是长按 FN+W 蓝牙广播键时，键盘模式灯会快闪粉色灯光，当蓝牙对码连好时灯长亮粉色，当长按 FN+E 蓝牙广播键时，键盘模式灯会快闪黄色灯光，当蓝牙对码连好时灯长亮黄色，产品是采用长按组合键进行蓝牙对码，短按组合键进行频道切换。产品采用三通道 蓝牙对连方式进行智能识别蓝牙 3.0-5.0 标准通信。例如：在电脑 WIN-7 上使用时，应在电脑上点击《开始》选《控制面板》再点《添加设备》这时电脑会出现添加设备介面，这时把键盘的模式切换键打到 - 蓝牙图标位置，再长按键盘的 FN+Q、W、E 进行对码广播，当电脑介面出现键盘图标时，再选点一下《键盘图标》后要点击《添加设备》的《下一步》对话框按提示操作，那电脑可以同键盘蓝牙连接好。在电脑 WIN-10 上安装步骤：在电脑上点《开始》选《设备》选《蓝牙》再在列表选《键盘图标》点配对介面对话操作可完成。
2. X75 三模键盘 2.4G 模式安装步骤及使用：键盘还可用配带接收器同电脑连接，在打开键盘模式开关在 2.4G 图标的状态下，长按 FN+R 键，这时键盘模式灯会快闪蓝色灯光，那就要把接收器插到电脑空闲的 USB 端口上，这时电脑会自动确认对码并安装好相应适配软件，一般电脑会提示；安装完成并可以使用。这时的键盘模式灯会变成长亮蓝色，这说明键盘同电脑对码成功可以使用了。
3. X75 三模键盘有线模式安装步骤及使用：键盘还可用配带的 TYPE-C 线同电脑连接，在插好线的状态下，把键盘的模式切换键打在中间有线图标档位时，键盘模式对码灯会亮白色灯光，接着会同电脑自动连接完成并可以使用。（当键盘电量不足时灯会亮红色 - 说明键盘也在充电状态），这说明键盘同电脑是用 TYPE-C 线连接成功使用了。
4. X75 三模键盘初次使用时，建议先用产品配带的充电线连接电脑 USB 端口或 DC-5V 充电器对键盘进行充满电后再使用。充电时要观察连接线 TYPE-C 头的方向小心插进键盘的充电座内，当插好充电时键盘模式灯亮绿灯，充满电时会恢复当前模式下指示灯颜色。键盘在使用中当静止不用 2-3 分钟左右，键盘会自动关掉背光灯，这时按任意键可恢复灯光。

五、X75-三模键盘 FN 功能及灯光操作说明:

- FN+|= 切换灯光模式
- FN+END= 切换灯光颜色
- FN+ ←退格键 = 关背光灯, 再按打开
- FN+ “↑/↓”= 灯光亮度加减调节
- FN+ “←/→”= 灯光呼吸或变化快慢调节
- FN+CAP= 一键常亮白光, 再按退出
- FN+ESC 一键复位, 蓝牙 /2.4G 全部清除恢复到有线模式, 灯光恢初起状态
- FN+ 右 ALT 按住查询电量 电量低于 3V 时 1-3 亮红色, 大于 3V 以上亮绿色

键盘支持灯光模式具有:

随波逐流 - 默认、如影随行、正弦光波、旋转风车、七彩瀑布、花开富贵、常亮模式、呼吸模式、梦幻彩虹、一触即发、雨中漫步、彩虹轮盘、按键涟漪、繁星点点、踏雪无痕、川流不息。

键盘支持灯光颜色具有:

红色 - 绿色 - 蓝色 - 黄色 - 粉色 - 青色 - 白色 - 混色共八种颜色。

六、键盘在 WIN 系统时 FN 多媒体功能键说明:

- FN + F1 电脑屏幕亮度 -
- FN + F2 电脑屏幕亮度 +
- FN + F3 Calculator (计算器)
- FN + WIN 锁 WIN 键再按解除
- FN + F4 电脑
- FN + F5 播放器
- FN + F6 上一曲
- FN + F7 下一曲
- FN + F8 播放 / 暂停
- FN + F9 停止
- FN + F10 静音
- FN + F11 音量 -
- FN + F12 音量 +

七、键盘在 MAC 系统时 FN 多媒体功能键说明:

- F1 电脑屏幕亮度 -
- F2 电脑屏幕亮度 +
- F3 ctrl+ 方向上
- F4 呼出 Siri(Command+spacean 按住 1s 左右释放)
- F5 CTRL+ 方向键下
- F6 休眠功能 (键值 0x30)
- F7 上一曲
- F8 下一曲
- F9 暂停 / 播放
- F10 静音
- F11 音量 -
- F12 音量 +

注意: WIN/ALT 会在切换界面时互换, 不要锁 win

FN+F1=F1	FN+F2=F2	FN+F3=F3	FN+F4=F4
FN+F5=F5	FN+F6=F6	FN+F7=F7	FN+F8=F8
FN+F9=F9	FN+F10=F10	FN+F11=F11	FN+F12=F12

八、注意事项:

1. X75 三模键盘都有智能省电功能: 当键盘静止不用 2-3 分钟左右, 键盘会自动关闭背光灯, 这是按任意键可恢复灯光。
2. 在使用 X75 键盘当插上接收器, 电脑无法识别使用时, 应考虑端口接触不良造成, 需要更换插另一个电脑 USB 端口使用。当键盘使用中背光灯变暗或产品使用不正常时应确认是产品内置电量不足造成。出现电量不足要及时进行充电。充电时要把配送的 TYPE-C 线同键盘连接好才能充电, 充电时间会根据充电器功率大小所用的时间会有所长短。如产品长时间不用, 请把产品模式开关打到有线图标位置。
3. 当产品在使用中出现卡顿或突然不动, 在排除电池电压低的原因外, 应是所在环境有同频信号干扰造成, 这时可用 TYPE-C 线连接电脑变有线模式使用。也可把蓝牙频道同 2.4G 通道重新对码切换解决, 对码方法如上面所示 (一次对不上码可重复操作)。
4. YUNZII 无线产品都是内置锂电设计, X75 键盘采用 (3300-4000 多毫安锂电) 所以为了使用者安全, 产品只能在室内常温下使用请不要在高温或靠近火源地方使用。
5. 产品损坏丢弃处理: 如产品损坏不能修复时, 请勿自行拆解或丢到火中, 以免发生意外危险。应送专业废品处理站或专用回收箱进行处理。

九、物品清单:

1. X75 透明键盘 x1
2. TYPE-C 数据线 x1
3. 拔轴拔键二合一工具 x1
4. 保修卡说明书 x1
5. 2.4G 接收器 x1

適用範囲：



X75 機械的なキーボード、設計 82 キー採用 RGB- ライト、 bluetooth-2.4G- 有線の 3 種類の仕事モードと接続して操作して、製品はすべてコンピュータで動作することができます Windows2000、WindowsXP、WindowsXPvista win7、ウィンドウズ 8、win10、win11、os2-バージョン 2.0 以上や bluetooth を携帯電話のシステム。本機の bluetooth デバイス名『X75 3.0 または X75 5.0』

ハードウェア要件：


Bluetooth付きの携帯電話やパソコンには、デバイスを接続できる USB ポートがあります。

ご注意： X75は有線接続のみです。X75 PROは無線接続可能です。

3 パターン接続の概略図：

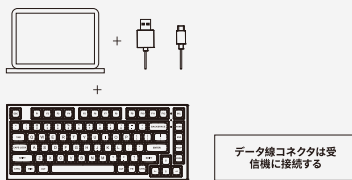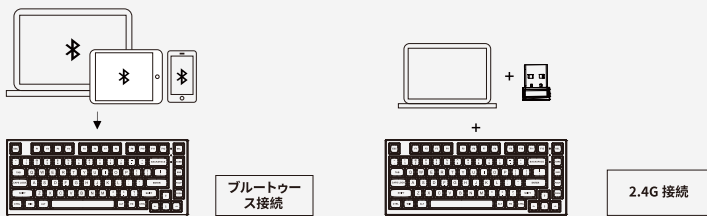

キーボードスイッチの概略図



1. MAC と WIN のスイッチを切り替える
2. Type-c 接続ポート
3. Bluetooth --- 有線 ---2.4G の 3 モード切替スイッチ
4. 2.4G 受信機配置穴

X75 3 モードキーボードのインストール手順と使用：

Bluetooth: FN+Q/W/E

1. Bluetooth ボタンをオンにしてください。
2. FN+Q/W/E を長押ししてデバイスを接続してください。

有線接続:

1. 有線ボタンをオンにしてください。
2. キーボードケーブルをデバイスに差し込んでください。

2.4GHZ 無線:

1. 無線ボタンをオンにしてください。
2. 2.4G ドングルをキーボードに差し込んでください。
3. FN+R を長押ししてデバイスを接続してください。

X75 3 モードキーボード FN 機能とラ

イト操作説明：

- FN + | \ = 光モード
- FN + END = ライトの色を切り替える
- FN + ← 退格 = バックライトを消し、を押して開く
- FN + 「↑/↓」 = 照明の加減調整
- FN + 「+/-」 = ライトの呼吸や変化の速さ調整
- FN + CAP = ボタンで常にかかり、更に押すと退出する
- FN + ESC = ワンクリックリセット、Bluetooth/2.4 G はすべてクリアして有線モードに復帰し、ライトは初期状態に復帰した。
- FN + 右 ALT はクエリ電力量を 3V 未満に抑えた場合 1-3 明り赤色、3V 以上明り緑色

具体的には、キーボードがライト・モードに対応する：

漂流・黙認、如影随行、正弦光波、回転風車、七色の滝、花開富貴、

常亮モード、呼吸モード、夢幻虹、一触即発、雨中慢歩、虹輪盤、

キーのさざ波、星々点々、踏雪無痕、川流不働。

具体的には、キーボードが照明の色に対応する：

赤・緑・青・黄・ピンク・青・白・混色の八色。

WIN システムの時にキーボード FN マルチメ

ディア機能キー説明：

- FN + F1 コンピュータの画面の明るさ
- FN + F4 パソコン
- FN + F7 次の曲
- FN + F10 静粛
- FN + F2 パソコン画面の明るさ+
- FN + F5 プレーヤー
- FN + F8 再生 / 一時停止
- FN + F11 ボリューム-
- FN + F3 Calculator(電卓)
- FN + F6 前の曲
- FN + F9 停止
- FN + F12 ボリューム+
- FN + WIN WIN キーをロックしてから解除する

キーボードは MAC システムの時 FN マルチメ

ディアの機能キー説明します：

- F1 コンピュータの画面の明るさ
- F4 Siri を呼び出す (Command+spacean) Is ぐらい押さえて放つ)
- F7 前の曲
- F10 静粛
- F2 パソコン画面の明るさ+
- F5 CTRL+ 方向キー下
- F8 次の曲
- F11 ボリューム-
- F3 ctrl+ 方向に
- F6 スリープ機能 (キー値 0 x 30)
- F9 一時停止 / 再生
- F12 ボリューム+

注意 :WIN/ALT は切替時に交換します。WIN はロックしないでください。

FN+F1=F1	FN+F2=F2	FN+F3=F3	FN+F4=F4
FN+F5=F5	FN+F6=F6	FN+F7=F7	FN+F8=F8
FN+F9=F9	FN+F10=F10	FN+F11=F11	FN+F12=F12

注意事項：

- 1、X75 の 3 モードキーボードはすべてスマート省電力機能があります；キーボードが静止して 2-3 分ぐらい使わないで、キーボードは自動的にバックライトを消します -、これは任意のキーを押してライトを回復することができます。
- 2、X75 キーボードを使用するとき受信器を挿して、コンピュータは使用を識別することができない時、ポートの接触不良を考慮すべきで、別のコンピュータの USB ポートを挿し替えて使用する必要があります。キーボード使用中にバックライトが暗くなったり、製品の使用が正常でない場合は、製品内蔵電力が不足していることを確認する。バッテリー不足になったら充電しましょう。充電するには、配送された type-c ケーブルとキーボードを接続する必要がありますが、充電器のパワーに応じて充電時間が短くなります。製品を長時間使用しない場合は、有線アイコンの位置に製品モードスイッチをオンしてください。
- 3、たり、製品の使用中でカードが食や、突然不動、排除は電気バッテリーを原因の外に、環境はあるべき乏信号と妨害がある、その可用 type-c 線連結のパソコンがケーブルモードで使用。もできるチャンネルに bluetooth 2.4 g の通路と再び、ヤード換解決に対するヤード方法上の通り (一度ではないヤード重複操作できる)。
- 4、新血盤無線製品デザインは内蔵リチウムポリマー電、x75 キーボード採 (3300—4000 余り毫安リチウム電) ユーザーの安全のために、室内の製品は常温で使う高温や近づいて鑑識地使用しないでください。
- 5、製品が壊れて捨てて処理します；もし製品が壊れて修復することができない時、自分で分解しないでくださいあるいは火の中に投げて、事故の危険が発生しないようにします。専門の廃品処理ステーションまたは専用の回収箱に送って処理しなければならない。

アイテムリスト：

- 1、X75 クリアキーボード
- 2、type-c ケーブル
- 3、軸抜きキー抜き 2 in1 ツール
- 4、保証書の説明書
- 5、2.4G レシーバ