



# EMEET GeniusCall HS50



## User Manual

English | 日本語

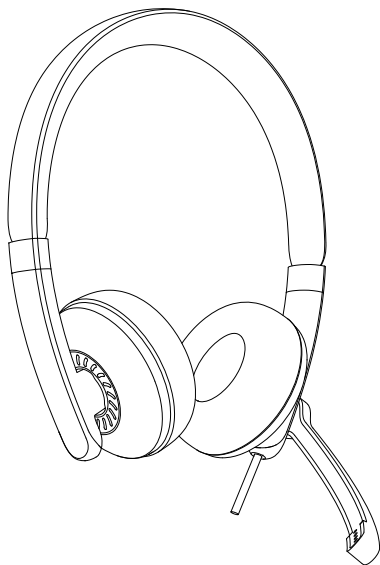




## Wearing / 付け方

Both-sided wearing available. Adjust the headband to fit the head after wearing. When using the microphone, the tip of it should be close to the mouth.


装着時に左右の耳を区別する必要はない。装着後、ヘッドバンドを頭にフィットするように調整して、マイクの先端を口元に近づけてください。

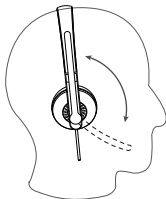

## Connection / 接続

Plug in the headset to the USB port and make sure the EMEET GeniusCall HS50 is selected as the output and input device in "sound settings"

ヘッドセット端子をコンピューターのUSBポートに差し込んで、オーディオ設定でEMEET GeniusCall HS50をスピーカー/マイクのデフォルトオーディオデバイスとして設定ください。

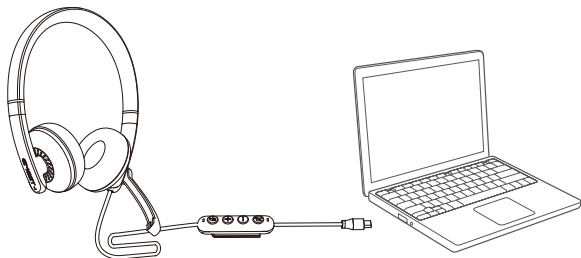

# English

## **EMEET Two(2) Year Limited Warranty**

Limited Two(2) Year Warranty with EMEET proof of purchase. The warranty does not cover normal wear and tear or damage caused by accidents or misuse. To protect your rights, please keep the proof of purchase.

## **Safety Guide**

### **Caution:**

To avoid electrical shock, do not open the housing of this product. In addition, users do not need to use the product's internal parts. To repair the product, please contact qualified maintenance personnel or mail the product to our after-sales department.

- 1) Please read this guide carefully.
- 2) Please keep this guide.
- 3) Please observe all warnings.
- 4) Please follow all instructions.
- 5) When cleaning this product, use a dry cloth only.
- 6) Choking hazard - This product contains small parts. It is not suitable for children under the age of 3.
- 7) Do not put this product near a heat source, such as a heating radiator, hot air regulator, stove, or loudspeakers (including amplifiers) that produce heat.
- 8) Do not use this product if you must remain alert of your surroundings, for example, while driving a car or riding a bike.
- 9) Do not submerge this product in water or expose it to a damp environment for a long period of time. Do not use this product when engaging in water sports, such as swimming or surfing.
- 10) Please protect the power cable and audio cable. Do not step on or apply pressure on them. Do not pull on the product's plug, socket, or cable outlet.
- 11) It is recommended that users use the accessories that have been specified by the vendor.
- 12) Do not expose the battery to environments with excessive heat, such as direct sunlight or sources of fire.
- 13) Connect a power supply within the specified voltage range.
- 14) If a power cable that is connected to the product is not currently being used to charge the product, please

disconnect the power cable from the port and shut off the power supply.

15) To repair the product, please contact our professional maintenance personnel. If the product is damaged, the product should be repaired. For example, if the power cable or plug is damaged, liquid has flowed into the product, an object has fallen into the product; the product has come into contact with rain or moisture, the product cannot operate properly, or if the product has fallen.

## **Regulatory Compliance Information**

### **FCC Compliance:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

## 日本語

EEMEETの購入証明書には2年間の保証が付属しています。

障に限り、無償で本製品を修理または交換いたします。

製品に関する自然の消耗や劣化など時間の経過とともに生じた不具合や、購入後の落下、衝撃、改造、浸水などお客様過失による不具合の場合は、本保証の対象外とさせていただきます。ご購入が証明できる書類（納品書や販売店が発行の書類等）と本取扱説明書を一緒に保管してください。

## 安全上のご注意

注意:

製品の分解や改造などをしないでください。火災、やけど、感電などの原因となります。製品に不具合がありましたら、弊社のサポートセンターにご連絡してください。ご使用の前に、下記の注意事項をよくお読みの上、正しくお使いください。

1) お手入れは乾いたやわらかい布で拭いてください。シミや製品の印刷が消えるなどの原因になります。

2) 3歳以下の子供の手の届かない場所に保管してください。製品に小さい部品もあるので、誤って飲み込むと窒息や障害などの原因となります。

3) あらゆる熱源になる場所で使用、保管、放置

しないでください。例えば、ラジエーターやヒートレジスターやストーブや熱源になる可能なスピーカー（または増幅器）などです。火災、やけど、感電などの原因となります。

4) 車の運転やサイクリングなど集中力が必要な場合は、使用しないでください。事故の原因となります。

5) 水などの液体をかけないでください。長期間、湿気環境に放置しないでください。水泳やサーフィンなど水上運動をする時、使用しないでください。電子回路のショート、または腐食で故障する原因となります。

6) USBケーブルを無理に曲げたりしないでください。プラグやコネクタとUSBケーブルの接続部を無理に曲げたり引っ張りしないでください。故障の原因となります。7) メーカー指定の付属品を使用してください。

8) 必ず定格の入力電源電圧範囲内でご使用ください。

9) 直射日光の当たる所や火気等の高温環境で、バッテリーの使用、保管、放置しないでください。

10) 製品を電源ケーブルを使用し充電しない時は、USBケーブルを抜いて、パワーオフにしてください。

11) 製品に不具合が発生しましたら、弊社のサポートセンターに連絡してください。

12) 直射日光下や火の近くなど極端な高温になる環境にバッテリーを置かないでください。

13) 指定された電圧の電源を供給してください。

14) 製品を充電していないときは、電源ケーブルを取り外して電源の供給を停止してください。

15) 製品の修理については弊社の専門のメンテナンス担当者にご連絡ください。例えば電源ケーブルやプラグが破損した場合、製品内部に液体が侵入した場合、製品が雨や湿気に接した場合、製品が正常に動作しない場合、または製品が落下した場合など、製品が破損した場合には修理が必要です。