



Gaming is winning.™

GameSir F5

User Manual ▶

IF YOU LIKE TO



EXTEND WARRANTY PERIOD OF 6 MONTHS



TAKE ADVANTAGE OF OUR SPECIAL OFFERS



ACCESS TO ABUNDANT GIVEAWAYS



SCAN THE QR CODE AND REGISTER!



#mygamesir



#GameSir



#mygamesir



#mygamesir



gamesir.hk



cs@gamesir.hk

COMPATIBLE SIZES

Phone thickness: within 10.5 mm

COMPATIBLE GAMES

Games that support custom virtual buttons.

IN THE BOX



GameSir F5 Game Controller X 1

USB Charging Cable X 1

Certification X 1

User Manual X 1


DEVICE LAYOUT

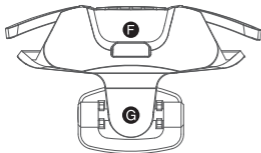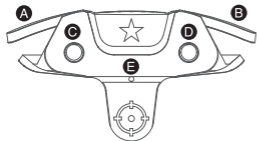

- A** L button
- B** R button
- C** L Burst Mode Key
- D** R Burst Mode Key
- E** Indicator light
- F** USB charging port
- G** Buckle


STEP 1

Put F5 vertically down to the side of the phone

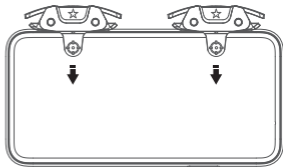


STEP 2

Press down the F5 buckle to make it fit on the phone



STEP 3

Enter the game's custom settings, move the virtual button of shooting, aiming or jumping to the location of the touch point, remove the overlapping virtual buttons, make sure that the location of the touch point corresponds to only one virtual button, and then save the settings.

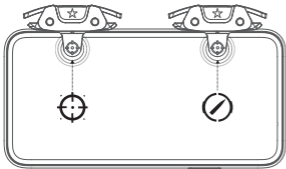

SWITCH BURST MODE

The Burst Mode Key on the left and right of F5 respectively control the burst mode of the "L" and "R" buttons

It can be switched cyclically in 3 different burst modes. The color of the indicator light will change when switching to indicate the current burst mode.

Indicator	Description
Orange	Fire 9 times randomly
Red	Record Fire Times
Green	Cancel

How to switch	Description
Long press Burst Mode Key+ "L" or "R"	Cycle through in 3 burst modes
Click Burst Mode Key	Cycle through "current burst mode / cancel"

RANDOM 9 BURST MODE

Press the burst mode key to switch to the "Random 9 shots / 1 second" burst fire mode, the indicator color will change to yellow after switching.

RECORD BURST MODE

It means that you can record the frequency of pressing the fire button. After entering the burst mode, long press the L or R to trigger the recorded Burst Mode cyclically.

Press and hold the burst mode button for 3 seconds to enter the recording mode, the indicator flashes in red. Press the 'L' or 'R' button to start recording, the next 10 presses will be recorded.

After the recording is completed, click the burst mode key again, the red light will go out, which means the recording is successful. Long press the 'L' or 'R' button to trigger the recording action cyclically.

SCREEN-OFF CORRECTION

During use, if there is no response or it disconnects, try to turn off the phone screen and then turn it on again for troubleshooting.

CHARGE THE F5

Use the charging cable to connect the USB port on the back of F5 to the USB charging port.

BATTERY

Charging Indicator	Description
Red Flashes	Charging
Red Flashes Quickly	Lower than 5%
Green Stays On	Fully Charged

⚠ NOTICE Please read this Precautions carefully.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

コンパクトサイズ

電話の厚さ:10.5mm以内

コンパクトゲーム

カスタム仮想ボタンをサポートするゲーム。

パッケージ内容:



GameSir F5ゲームコントローラ X 1

USB充電データケーブル X 1

取扱説明書 X 1

合格証 X 1


設備レイアウト

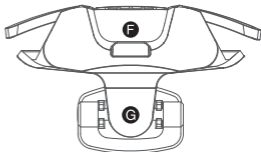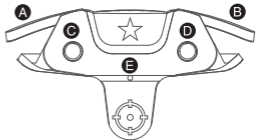

- A Lボタン
- B Rボタン
- C L連発モードボタン
- D R連発モードボタン
- E インジケータライト
- F USB充電ポート
- G バックル


ステップ1

F5を電話の側面に垂直に置きます

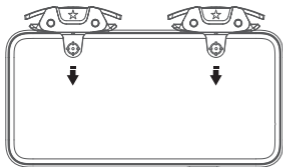


ステップ2

F5バックルを押し下げて電話にフィットさせます



ステップ3

ゲームのカスタム設定を入力し、仮想ボタンを撮影、照準またはジャンプのために接触位置に移動し、重複する仮想ボタンを削除し、接触位置が1つの仮想ボタンのみに対応することを確認して、設定を保存します。

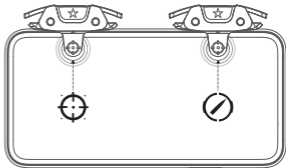

連発切り替え

F5の左側と右側の連発モードボタンは、それぞれ「L」ボタンと「R」ボタンの連発モードの頻度を制御します。

3速連発モードで周期的に切り替えることができ、切り替え時にインジケータライトの色が変化して、現在の連発モード状態を示します。

インジケータライト	説明
オレンジ	ランダム9連発
赤色	連発の記録
緑色	連発モードなし

切り替える方法	説明
連発モードボタン+ 「L」・「R」ボタンを長押し	3速連発モードのサイクルスイッチ
連発モードボタンをクリックします	現在の連発モード/連発モードなし

ランダム9連発モード

連発モードボタンを押して、「ランダム9ショット/1秒」の連発モードに切り替えます。切り替え後、インジケータの色がオレンジに変わります。

連発モードの記録

つまり、発射ボタンを押す頻度を記録できます。連発モードに入った後、L/Rを長押しすると、記録された連発モードが周期的にトリガーされます

連発モードボタンを3秒間押し続けると、記録モードになり、インジケータが赤く点滅します
「L」・「R」ボタンを押して記録を開始します。次の10回の押す頻度が記録されます
記録が完了したら、連発モードボタンをもう一度クリックします。赤色のライトが消え、記録が成功したことを意味します
「L」・「R」ボタンを長押しして、周期的に記録アクションをトリガーします

画面消光補正

使用中に、ボタンが応答しない/接触が壊れる/故障がある場合は、電話スクリーンをオフにしてから、オンに戻して復元してください

F5を充電する

充電ケーブルを使用して、F5の背面にあるUSBポートをUSB充電ポートに接続します

バッテリー

充電インジケータ	説明
赤色に点滅する	充電中
赤色ライトがすばやく点滅する	5%以下
緑色ライトが点灯する	充電完了

▲ご注意:保護者の方へ必ずお読みください。

- 小さいな部品がありますので3歳未満のお子様には絶対に与えないでください。
- 乳幼児の手の届くところに置かないでください。万一飲み込んだ場合は、すぐに医師に相談してください。
- 火気のある場所では絶対に使用しないでください。
- 長時間直射日光当てたり、高温となる場所に置かないでください。
- 本品を湿気やホコリの多いところに置かないでください。
- 本品に物を当てたり、落下させるような強い衝撃を与えないでください。
- 故障の原因になりますので、USB端子を直接手で触らないでください。
- ケーブル部を強く曲げたり引っ張ったりしないでください。
- お手入れの際には、乾いた柔らかい布を使用してください。
- ペンジン、シンナーなどの薬品は使用しないでください。
- 分解や修理、改造は絶対にしないでください。
- 本来の目的以外には使用しないでください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
- 光学式ライトの光を直接見ないでください。強い光より、目を痛める可能性があります。

호환 휴대폰 사이즈

휴대폰 두께:10.5mm미만

호환 휴대폰 게임

가상 버튼을 사용자 지정으로 이동 가능한 게임

포장 내용 :



GameSir F5게임 제어기 X 1

USB충전 데이터코드 X 1

사용 설명서 X 1

합격증 X 1


설비 배치

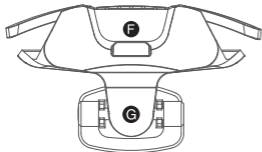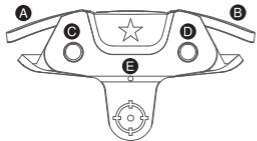

- A** L버튼
- B** R버튼
- C** L콤보 버튼
- D** R콤보 버튼
- E** 표시등
- F** USB 충전 포트
- G** 뒷부분 걸림턱

제1단계

F5를 수직 하부로 휴대폰 한측에 삽입

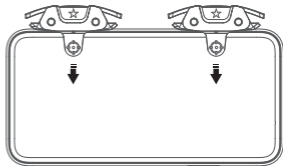


제2단계

F5의 뒷부분 걸림턱을 아래로 눌러 F5를 휴대폰에 완전히 밀착 시킴



제3단계

게임 사용자 지정 설정에 진입하여 사격, 모준 또는 점프의 가상버튼을 접촉점 위치로 이동하며 중첩된 가상 버튼을 제거하고 접촉점 위치에 오직 1개 가상 버튼만 대응시킴을 확보한후 설정을 저장함.

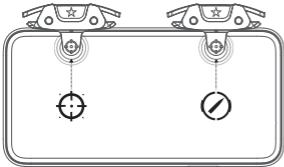

콤보 전환

"L" "R"버튼 하부의 콤보 버튼을 눌러 대응하는 버튼의 콤보 주파수를 각각 제어함.

3단 콤보 모식중에서 순환 전환 가능하며 전환할때 표시등 색상은 변화되면서 현재 콤보 상태를 제시함.

표시등	등색
등색	무작위 9콤보
빨강색	콤보 녹화
녹색	콤보없음

전환 방식	설명
콤보 버튼+"L"또는"R"버튼을 길게 누름	3단 콤보 모식중 순환 전환
콤보 버튼을 클릭	현재 콤보 모식/ 콤보없음, 순환 전환

무작위 9콤보 모식

콤보 버튼을 눌러"무작위 9회/초"콤보 모식으로 전환하며 전환후 표시등 색상은 등색으로 변함.

콤보 모식을 녹화

임의 버튼 주파수를 녹화 가능하며 콤보 모식에 진입한 후 L버튼 또는 R버튼을 길게 눌러 순환 재생함.

콤보 버튼을 3초간 길게 눌러 녹화 모식에 진입하며 표시등이 적색으로 깜박임

"L"또는"R"버튼을 눌러 녹화를 시작하며 10회 버튼 누름 주파수를 기록함

녹화 완성후 콤보버튼을 클릭하며 적색등이 꺼지면 녹화 성공을 표시
"L"또는"R"버튼을 길게 눌러 녹화 동작을 순환 가능

스크린 끄고 교정

사용 과정에서 버튼이 반응하지 않거나/접촉 차단/ 무효 등 현상이 나타나면 휴대폰 스크린을 끄고 다시 시작하여 회복 가능

F5에 충전을 진행

충전 코드를 이용하여 F5뒷부분의 USB 포트를 USB 충전잭과 연결

전력 제시를 요해

충전 상태 표시등	설명
적색 깜박	충전중
적색 빠른 깜박	5%전력 미만
녹색 켜짐	충전 완성

▲ 한국KC 경고문구:

- 1.강렬한 진동을 피하고 사사로이 해체,개조,수리를 하지 마십시오.
- 2.습한곳,고온,오일과 연기가 있는 장소를 피하여 보관하십시오.
- 3.물 혹은 기타 액체가 컨트롤러 내부로 들어가면 컨트롤러 기능에 영향을줄수 있습니다.
- 4.배터리가 내장되었기에 컨트롤러를 물속에 넣지 마십시오,폭박할 수 있습니다.
- 5.본 제품충전 전압은 USB3.7-5.5V, 직류전원(보통 안드로이드 휴대폰충전원이면 바로 사용할 수 있음)이고, 아닐 경우 충전에실패하거나,제품 훼손을 초래할 수 있습니다.
- 6.어린이는 성인의 보호하에 본 제품을 사용하십시오.
- 7.임의의 품질 문제거나 건의 사항은 판매업체거나 소비자 상담실에 연락하십시오,연락처는 제품 겉면 포장에 있습니다.

兼容的手机尺寸

手机厚度:10.5mm以内

兼容的手机游戏

虚拟按钮可自定义移动的游戏

包装内容

盖世小鸡F5游戏控制器 X 1

USB充电数据线 X 1

使用说明书 X 1

合格证 X 1

官方网站


www.xiaoji.com

微信公众号

扫码关注小鸡游戏



设备布局

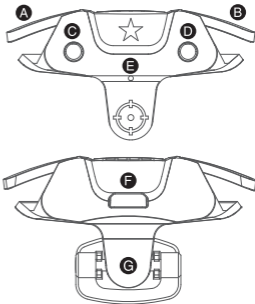


A L 按键 **B** R 按键 **C** L 连击按键 **D** R 连击按键

E 指示灯 **F** USB 充电口 **G** 背部卡扣


第一步

将F5垂直向下装入手机一侧

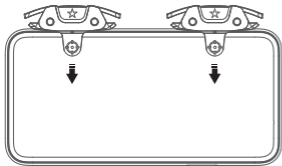


第二步

将F5的背部卡扣向下压，使F5完全贴合在手机上



第三步

进入游戏自定义设置，移动射击，瞄准或跳跃的虚拟按钮至触点位置，挪开重叠的虚拟按钮，确保触点位置仅对应1个虚拟按钮，保存设置。

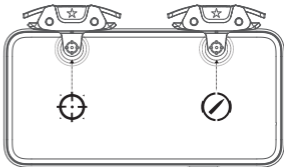

连击切换

F5左右2侧的连击按键，分别控制“L”和“R”按键的连发模式

可3档连击模式中循环切换，切换时指示灯颜色将会变化，提示当前连击状态。

指示灯	说明
橙色	随机9连击
红色	录制连击
绿色	无连击

切换方式	说明
长按连击按键+“L”或“R”按键	3档连击模式中循环切换
点击连击按键	当前连击模式/无连击循环切换

随机9连击模式

通过按压连击按键，可切换至随机“9次/秒”连击模式，切换后指示灯颜色将会变为橙色。

录制连击模式

指可录制任意按键频率，进入连击模式后，通过长按L键或R键循环触发录制动作。

长按连击按键3秒，进入录制模式，指示灯红色闪烁，按下“L”或“R”键开始录制，将记录10次按键按压频率。录制完成后，再次点击连击按键，红灯熄灭表示录制成功。长按“L”或“R”键即可循环触发录制动作。

熄屏校正

使用过程中，按键若出现没反应/断触/失灵等现象，尝试将手机屏幕关闭后重新打开进行恢复。

为F5进行充电

使用充电线缆，将F5背部的USB接口连接到USB充电端口。

了解电量提示

充电状态指示灯	说明
红色闪烁	充电中
红色快速闪烁	低于5%电量
绿色常亮	充电完成

⚠ 注意事项

1. 若商品有质量问题, 请首先联系我们的客服进行登记。

联系方式:

QQ: 800082537

电话: 400-8828035(时间: 9:00-18:00)

官网: www.xiaoji.com

出品: 广州小鸡快跑网络科技有限公司

地址: 广州市天河区建业路华翠街68号301A-1

2. 如需退、换商品, 请确保商品完好无损(包括商品外包装、附赠品、说明书、售后卡、标签等), 不影响二次销售。

3. 如要保修商品, 请务必完整填写用户姓名、联系电话、联系地址, 正确填写售后要求与详细说明售后原因, 将售后卡随货寄回(如不完整填写保修卡信息, 恕无法提供任何售后服务)。

保修卡

(售后政策: 非人为损坏, 3个月包换、1年保修)

用户姓名	
联系电话	
联系地址	
售后要求	<input type="checkbox"/> 退 <input type="checkbox"/> 换 <input type="checkbox"/> 保修
售后原因	
订单编号	

(注: 非小鸡官网途径购买的产品, 售后问题请直接与购买商家联系)

